



# TYGER®

## TYGER KOBRA

TG-KB2T25002

Scan to Download the  
Latest Digital Version



### BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: [WWW.TYGERAUTO.COM/CONTACT](http://WWW.TYGERAUTO.COM/CONTACT)

### TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126


- |  |  |
|--|--|
| <b>x1</b> Driver/Left Tyger Kobra                              | <b>x3</b> Passenger/Right Center/Rear Mounting Brackets <b>[D]</b> |
| <b>x1</b> Passenger/Right Tyger Kobra                          | <b>x16</b> 8mm Lock Washers  |
| <b>x1</b> Driver/Left Front Mounting Bracket <b>[A]</b>        | <b>x16</b> 8mm x 24mm x 2mm Flat Washers                           |
| <b>x1</b> Passenger/Right Front Mounting Bracket <b>[C]</b>    | <b>x16</b> 8-1.25mm x 30mm Hex Bolts                               |
| <b>x3</b> Driver/Left Center/Rear Mounting Brackets <b>[B]</b> | <b>x16</b> 8-1.25mm x 25mm Combination Bolts                       |

### Parts List

### Top View

**ATTENTION:** Refer to **D** and **P** labelling on the side of the tubes to determine Driver and Passenger TYGER Kobra

#### **P** Passenger Side TYGER Kobra

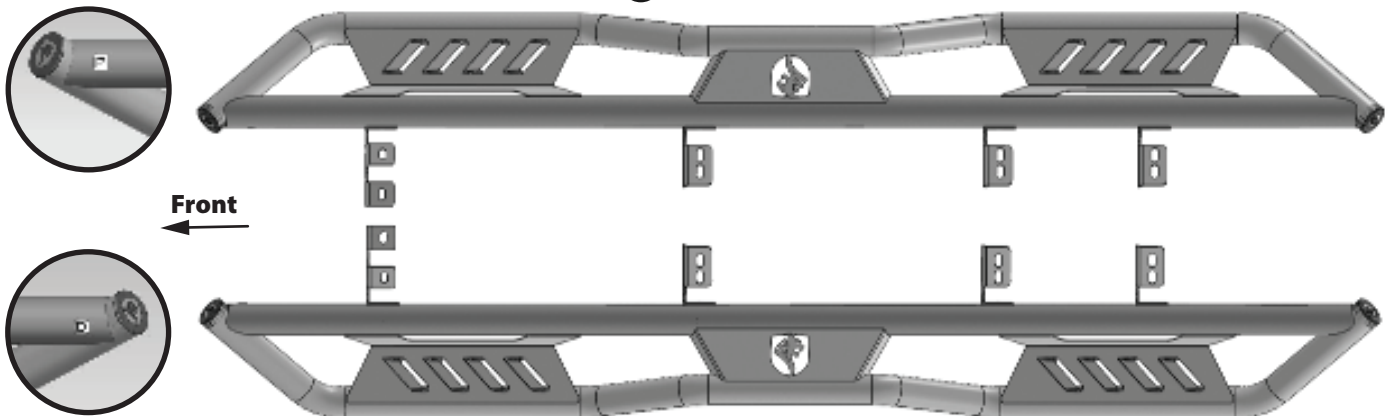



#### **D** Driver Side TYGER Kobra



Reference the letters printed on the brackets to determine mounting locations

## Top View



**D** Driver Side TYGER Kobra

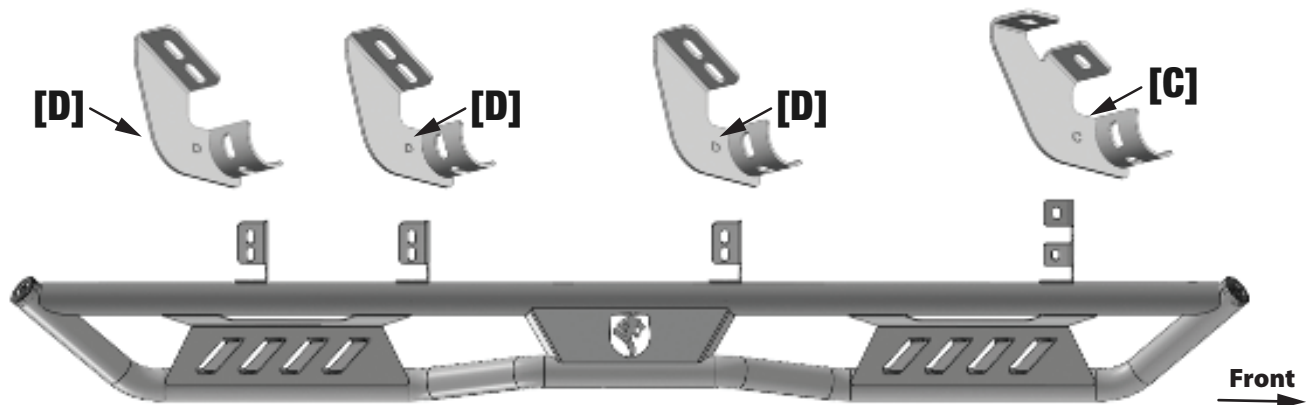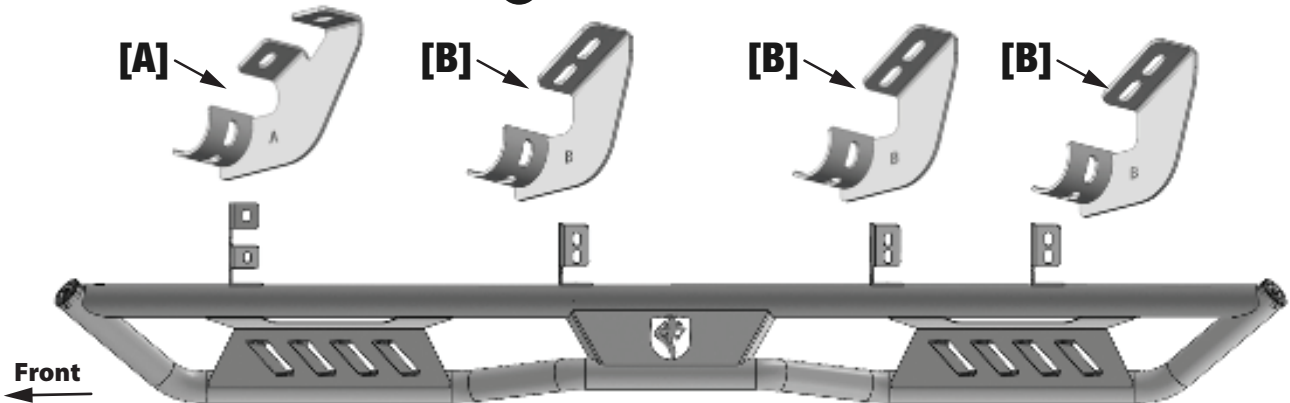

**P** Passenger Side TYGER Kobra


## Bottom View

**D** Driver Side TYGER KOBRA

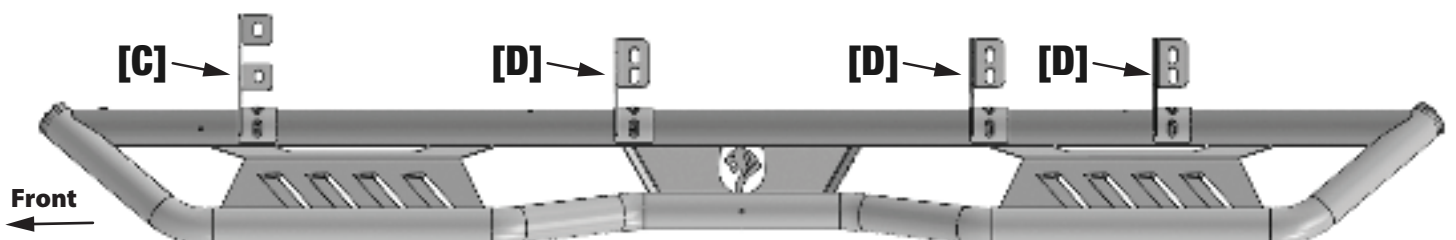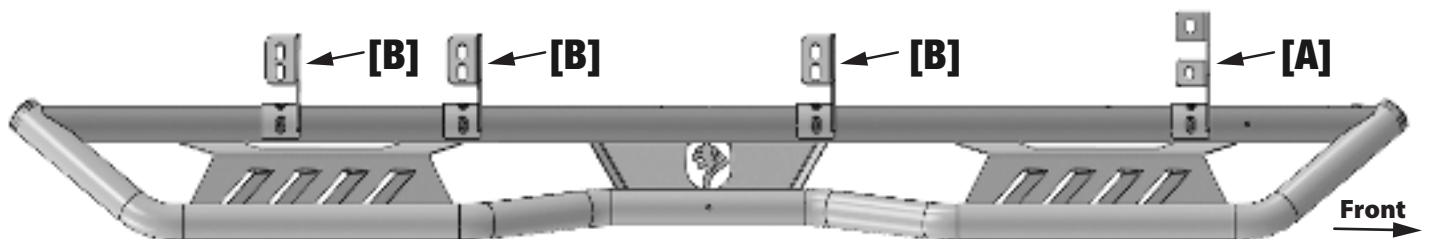


**P** Passenger Side TYGER KOBRA

## TOOLS REQUIRED

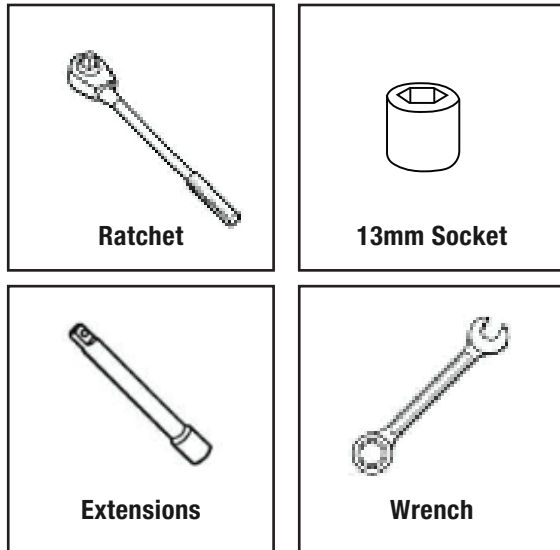


## STEP 1 MOUNTING BRACKETS


Follow (Fig 1 – 12) to attach the brackets to the Passenger/Right Side. Ensure all hardware is hand tightened at this point.

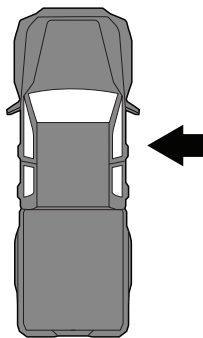


Passenger-side Front Mounting Area

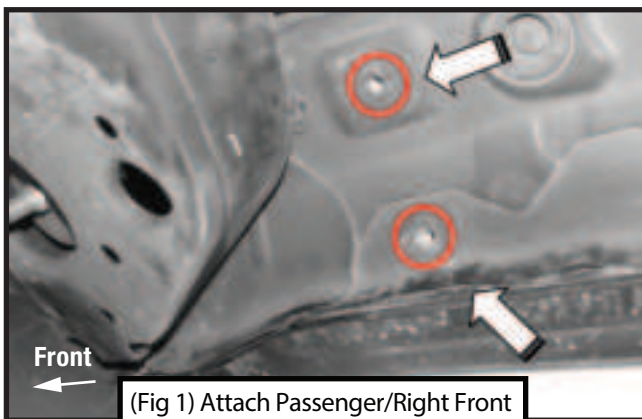

(Fig 1) Attach Passenger/Right Front Bracket [C] to **front** threaded inserts

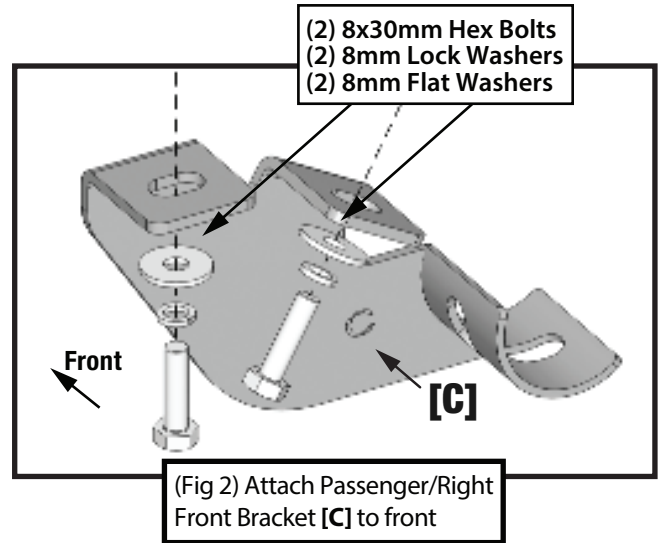


(Fig 2) Attach Passenger/Right Front Bracket [C] to front

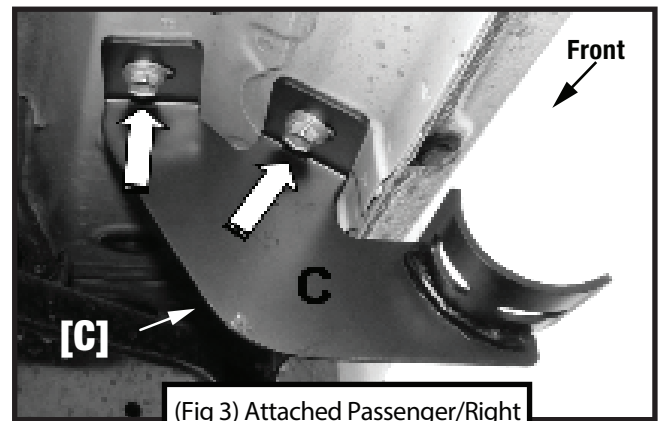




(Fig 3) Attached Passenger/Right Front Bracket [C]




Passenger-side 1<sup>st</sup> Center Mounting Area

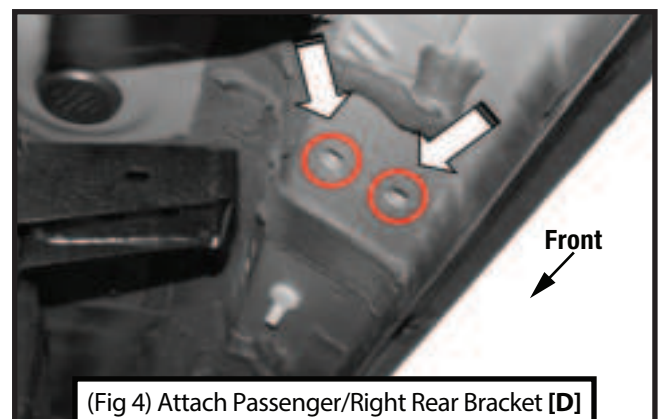


(Fig 4) Attach Passenger/Right Rear Bracket [D] to **1<sup>st</sup> center** threaded inserts

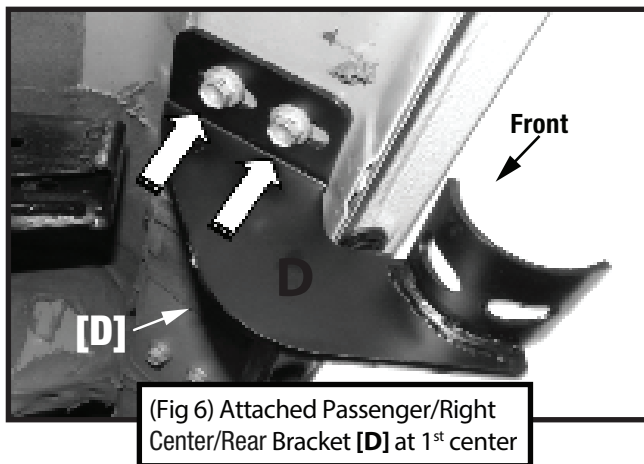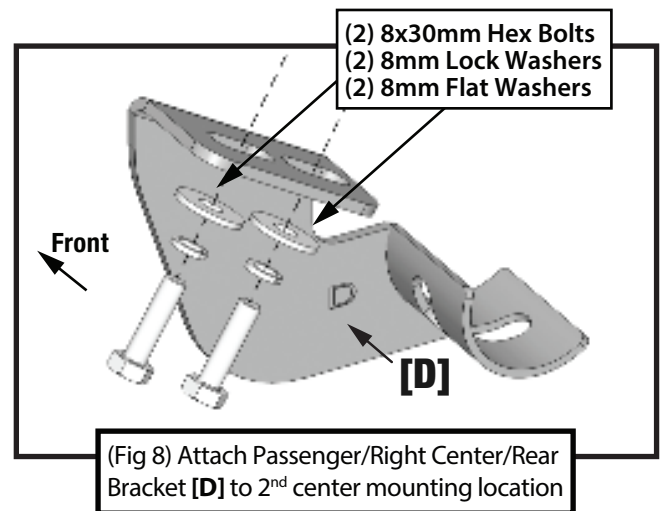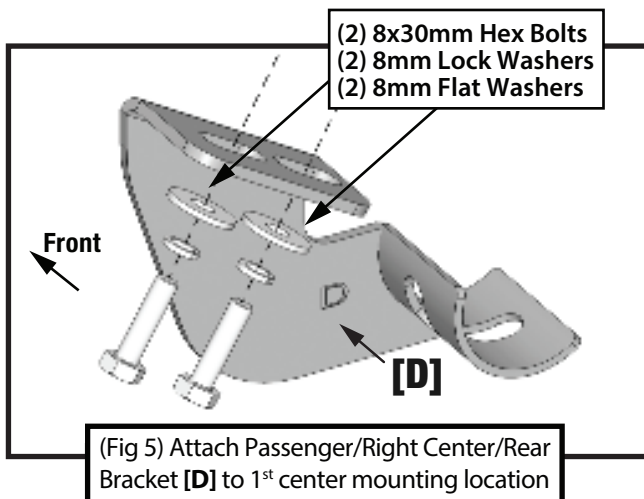


### Passenger-side 2<sup>nd</sup> Center Mounting Area

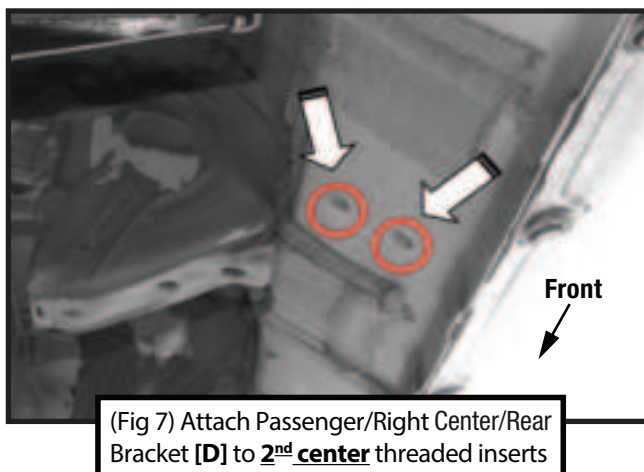


### Passenger-side Rear Mounting Area

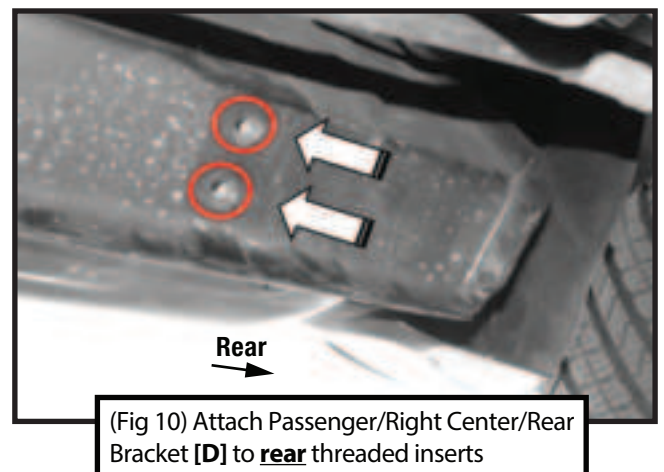


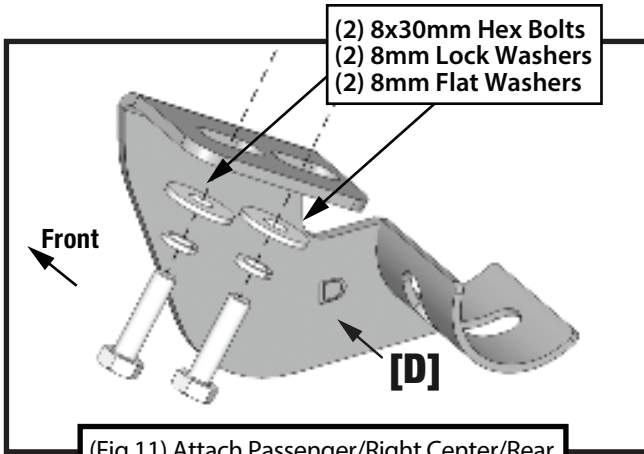

(Fig 11) Attach Passenger/Right Center/Rear Bracket [D] to rear mounting location

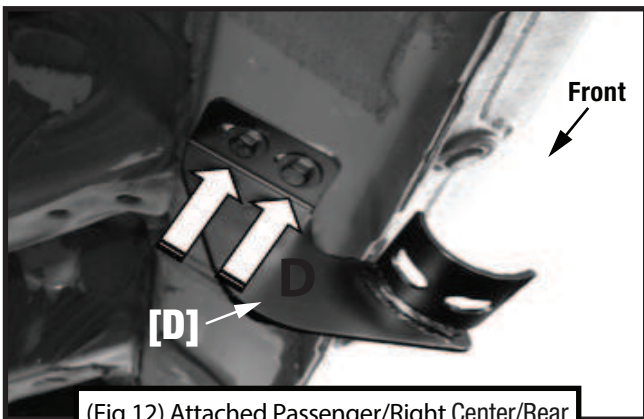


(Fig 12) Attached Passenger/Right Center/Rear Bracket [D] at rear mounting location

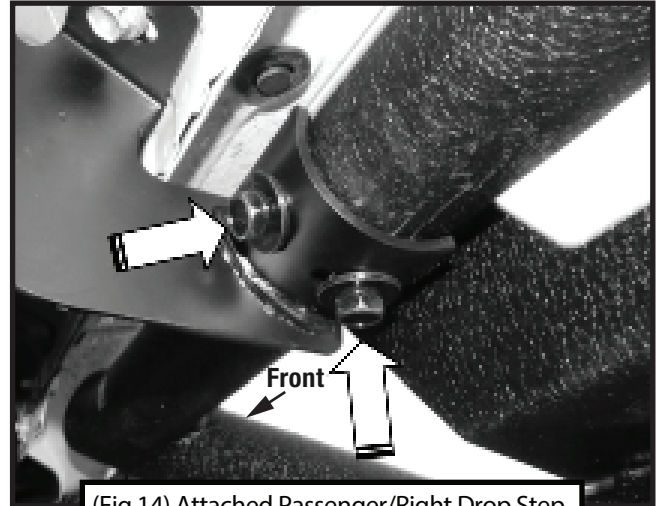

(Fig 14) Attached Passenger/Right Drop Step


## STEP 3 DRIVER SIDE

Repeat **STEPS 1-2** for driver side installation.  
Use Front Mounting Bracket [A] instead of [C];  
Use Center/Rear Mounting Brackets [B] instead of [D].

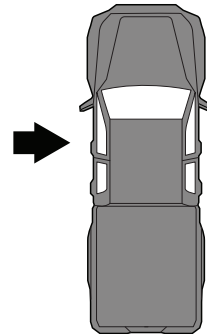

## STEP 2 MOUNTING RUNNING BOARD

Follow (Fig 13 – 14) to install the Kobra Drop Step on the Passenger/Right Mounting Brackets. Ensure all hardware is hand tightened at this point.

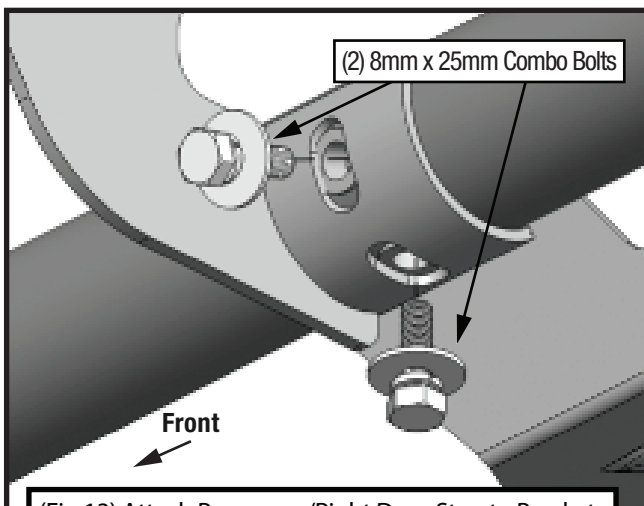

(Fig 13) Attach Passenger/Right Drop Step to Brackets

## STEP 4

Ensure Tyger Kobra Drop Step is level and straightened, then tighten all fasteners. Installation is complete. Perform periodic inspections to the installation to make sure that all hardware is secure and tight.



Complete Installation