

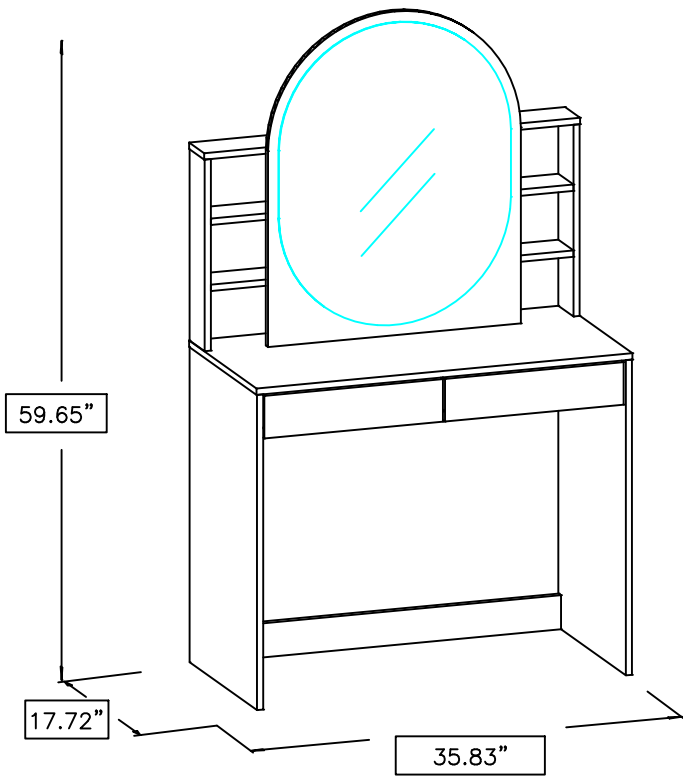


ASSEMBLY INSTRUCTIONS

 **Warning –**
CHOKING HAZARD – Small Parts Not for children under 3 years. Adult assembly required.

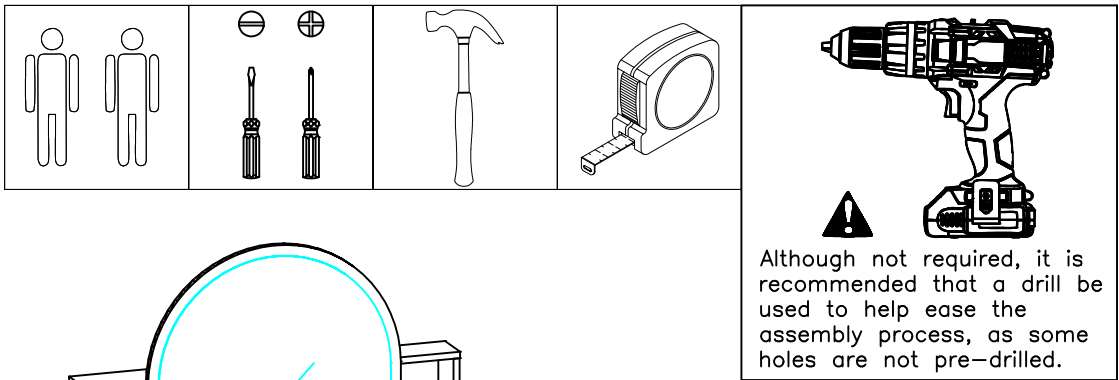


Part Identification


















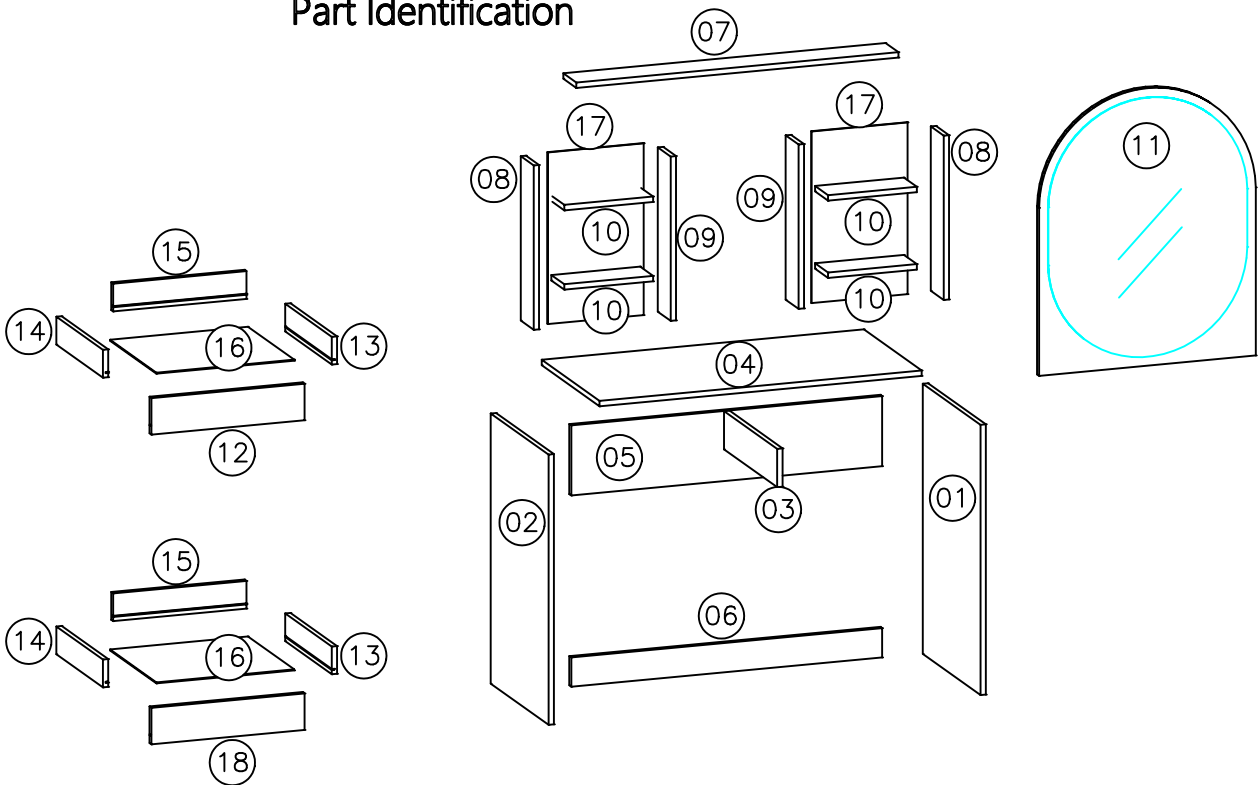












List of pieces							
Code	Description	Descrição (Internal production data)	Amount	Length (in.)	Width (in.)	Thickness (in.)	Box
01	Right side	Lateral direita	1	29.13"	17.60"	.59"	A
02	Left side	Lateral esquerda	1	29.13"	17.60"	.59"	A
03	Division	Divisória	1	16.18"	4.13"	.59"	A
04	Top bottom panel	Tampo	1	35.71"	17.60"	.59"	A
05	Strengthening	Reforço	1	34.45"	7.56"	.59"	A
06	Back baseboard	Rodapé	1	34.45"	3.15"	.59"	A
07	Top bottom panel	Tampo superior	1	35.71"	3.94"	.59"	A
08	Top side	Lateral superior	2	17.72"	3.94"	.59"	A
09	Upper partition	Divisória superior	2	17.72"	3.94"	.59"	A
10	Shelf	Prateleira	4	9.84"	3.94"	.59"	A
11	Mirror part	Costa do espelho	1	29.92"	24.02"	.59"	A
12	Front drawer righth	Frente de gaveta direita	1	16.97"	3.94"	.59"	A
13	Right drawer side	Lateral de gaveta direita	2	14.17"	2.99"	.59"	A
14	Left drawer side	Lateral de gaveta esquerda	2	14.17"	2.99"	.59"	A
15	Back drawer	Cabeceira de gaveta	2	14.76"	2.99"	.59"	A
16	Bottom drawer	Fundo de gaveta	2	15.28"	14.09"	.12"	A
17	Back panel	Costa	2	18.50"	10.63"	.12"	A
18	Right drawer side	Frente de gaveta esquerda	1	16.97"	3.94"	.59"	A












We Recommend you use the Box that your furniture came in as the base for your work space. This can help prevent and unnecessary damages from occurring.

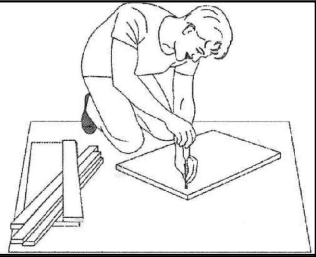

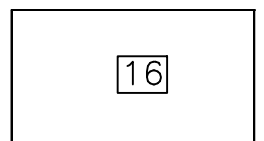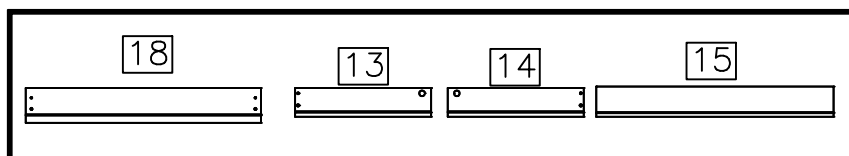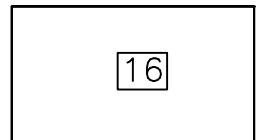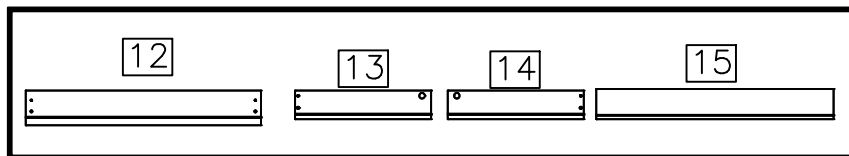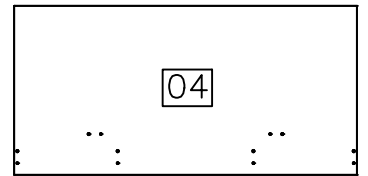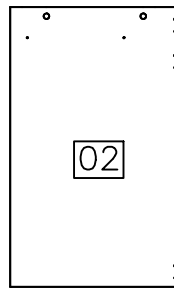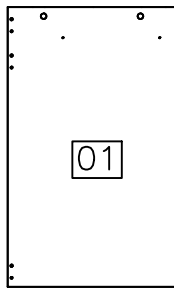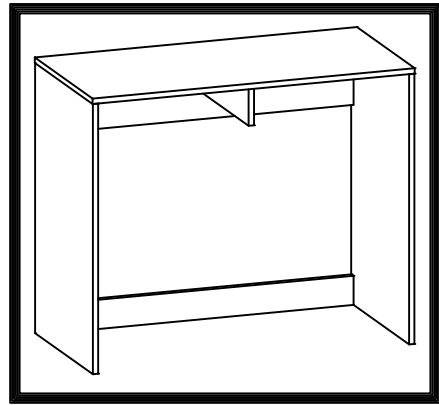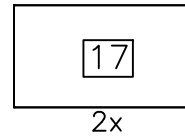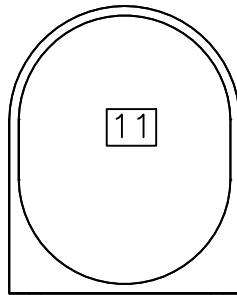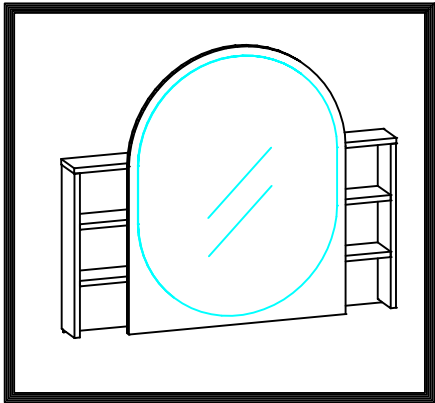

Hardware			
	Code	Description	Amou.
PM	30945	 Cam Screws	10
TM	30950	 Cam Locks	10
PE18	75515	 Screw 5x40	28
PC5	5256	 Screw 4x20	4
PC3	4214	 Screw 3,5x14	22
C1	1802	 Dowel 6x30mm	34
C2	1925	 Dowel 6x50mm	2
PR1	107	 Nail 10x10	30
PR2	108	 Nail 12x12	4
Anti-tipping installation Warning: For Measures of Safety, it is recommended that this item be fixed to the wall, to avoid overturning, if this happens it can cause serious or fatal injuries. ATENCION: Por medidas de seguridad se recomienda fijar el mueble a la pared para evitar Volcamiento del mismo, si esto llegase a ocurrir puede causar lesiones graves o fatales.			
SF	55606	 Mounting bracket	2
ANY	55607	 Clamp	1
PC10	51980	 Screw 4,5x50	2
PF4	1178	 Screw 3,5x16 BC	2
BG	32069	 Adapter sleeve	2

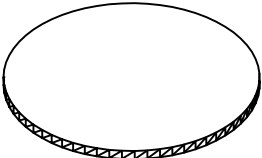


SD	1901		Shoe black	4
CM1	169		350mm metal slide set	2
CM1A			Right Drawer slide	
CM1B			Left drawer slide	
CM1C			Metallic slide for left sided panel	
CM1D			Metallic slide for right sided panel	
TP1	BR=45292		Tap hole 19mm	4
TP2	BR=8010		Tap hole 13mm	14
S5	18458		Black triangular support	4
LZ	8578		angle bracket "L"	3
ET	55712		Mirror 710x560x3mm	1
CZ3	58788		Allen key	1




1A

Drawer Preassembly

This process is repeated twice

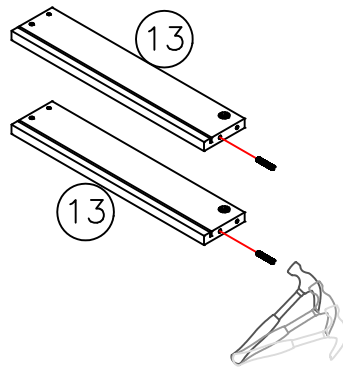

C1




8


1B

Drawer Preassembly

This process is repeated twice

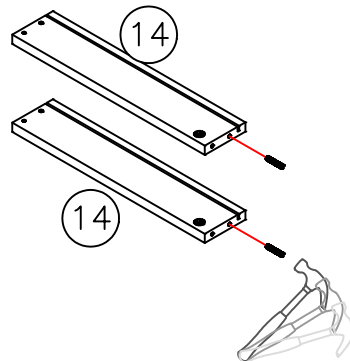


C1

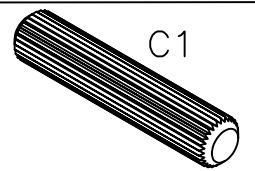

1C

Drawer Preassembly


This process is repeated twice


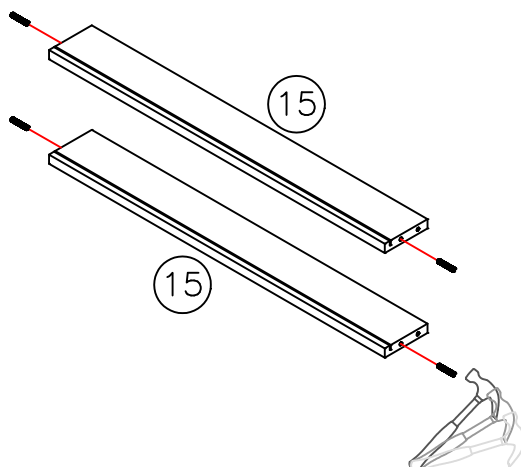


1D

Drawer Preassembly

This process is repeated twice

PM			4
----	---	---	---

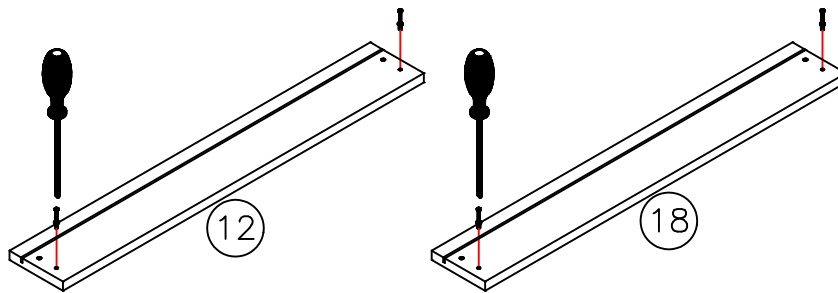
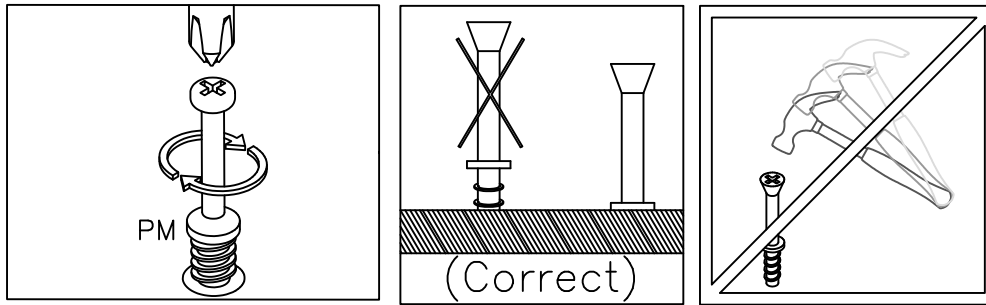


2

Drawers Mounting

This process is repeated twice


TM			4
TP1			4

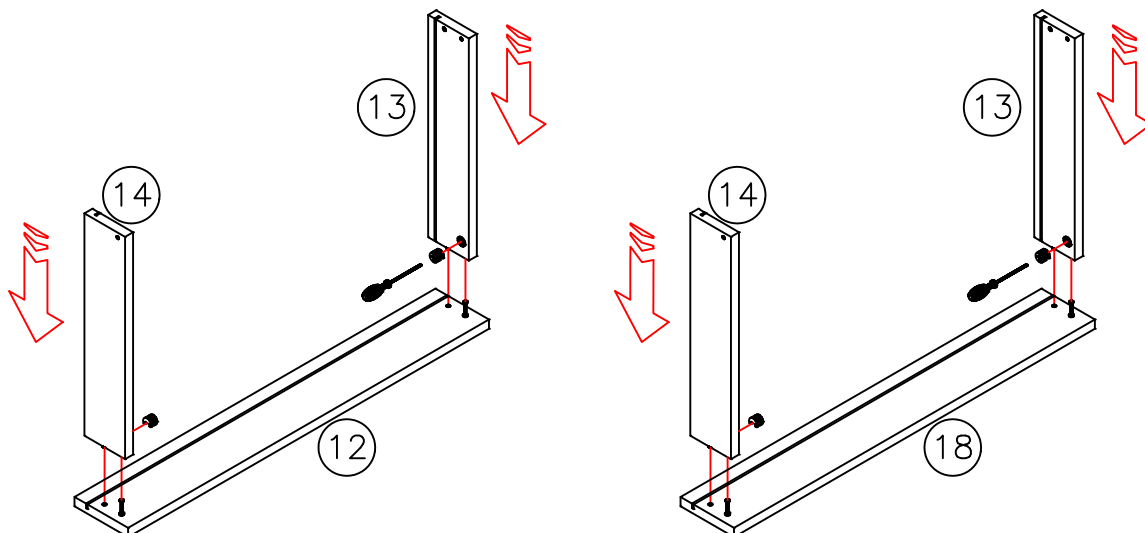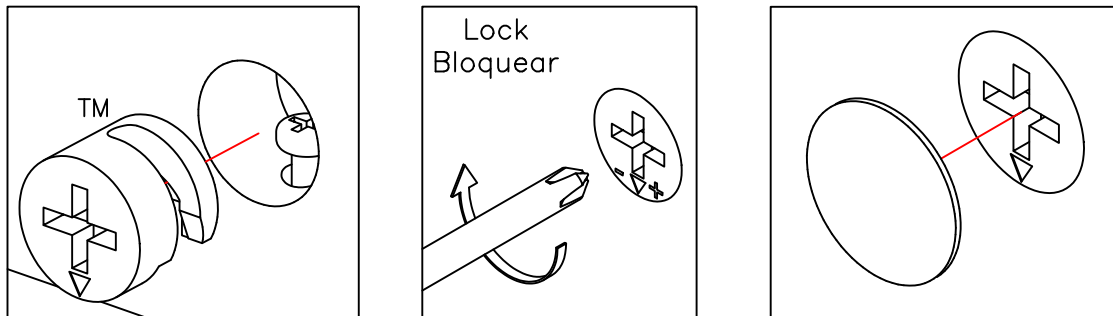

3

Drawer Preassembly

This process is repeated twice

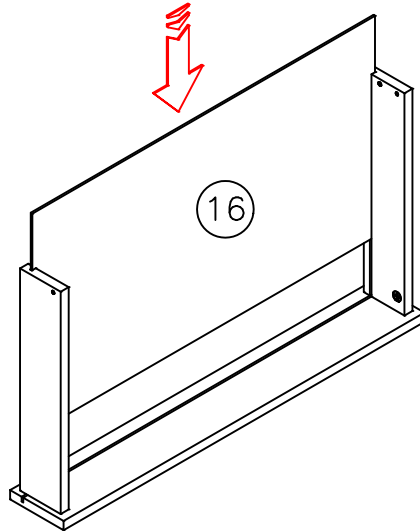


x2

4

Drawer Preassembly

This process is repeated twice

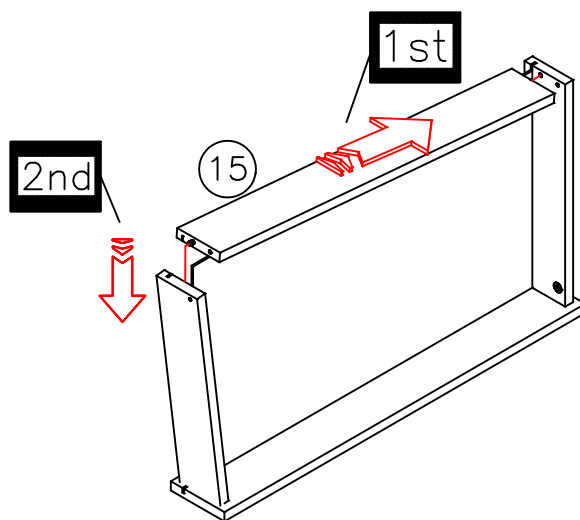


x2


5

Drawers Mounting

This process is repeated twice

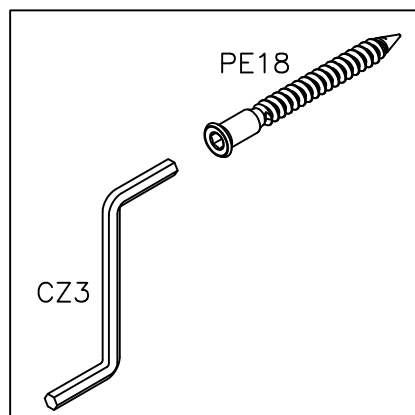


PE18		4
CZ3		1


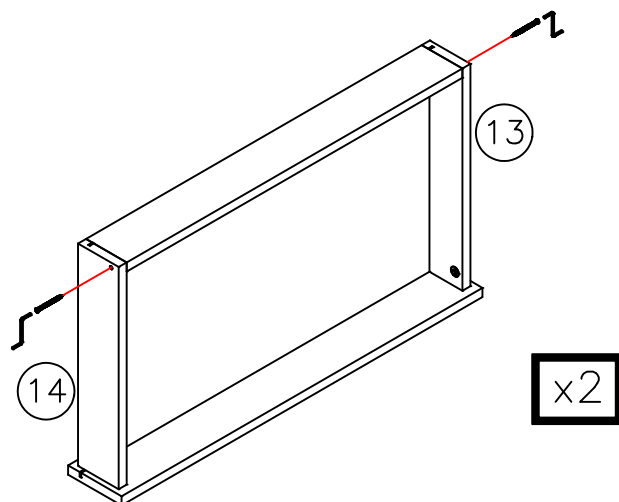


6

Drawers Mounting


This process is repeated twice


PC5		4
S5		4

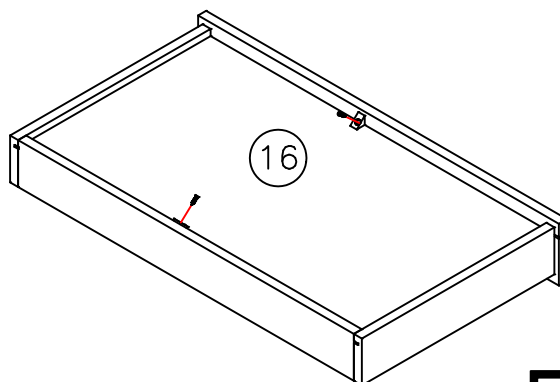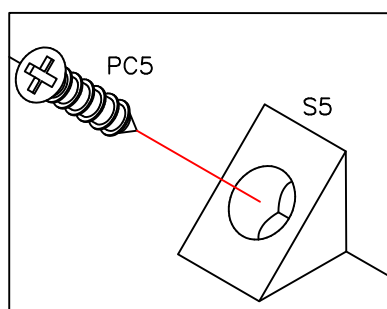

x2

Drawers Mounting




CM1A		2
CM1B		2
PC3		8













Please ensure that these screws are complete screwed in. As failure to do so could cause issues when installing the drawer.






Wheels should Always be towards the back of the Drawers



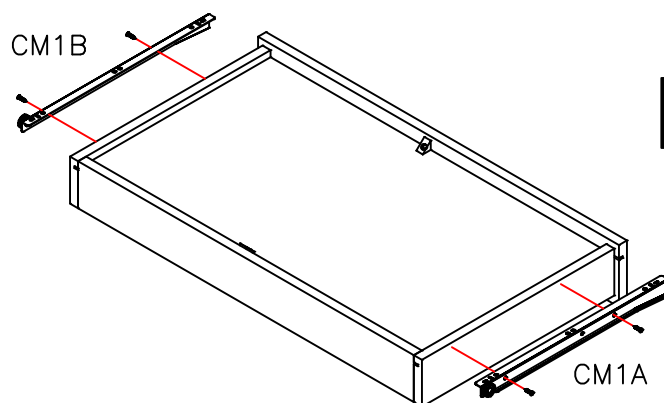
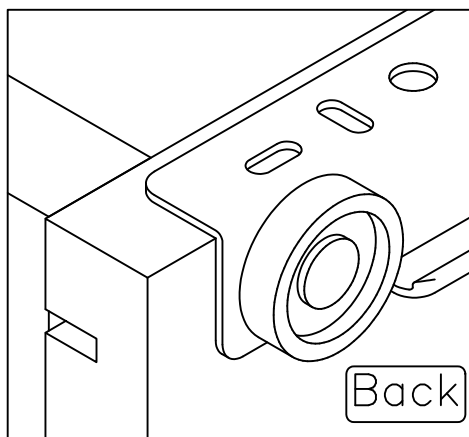
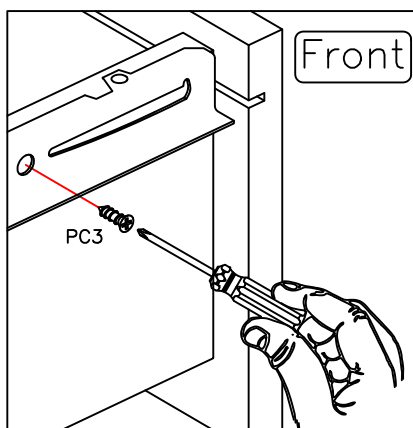


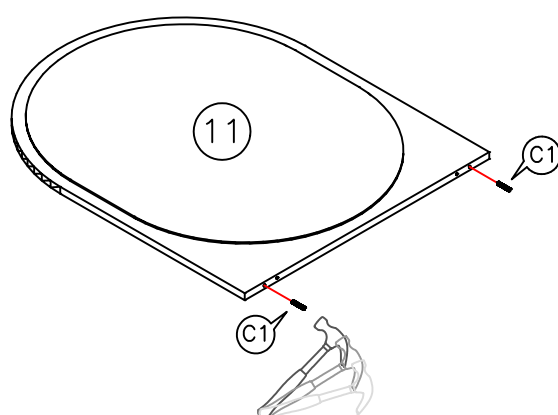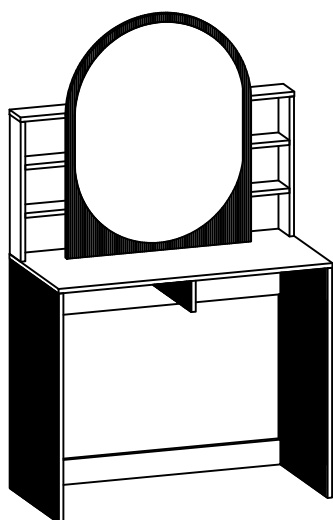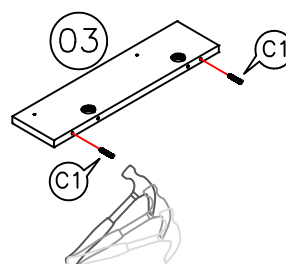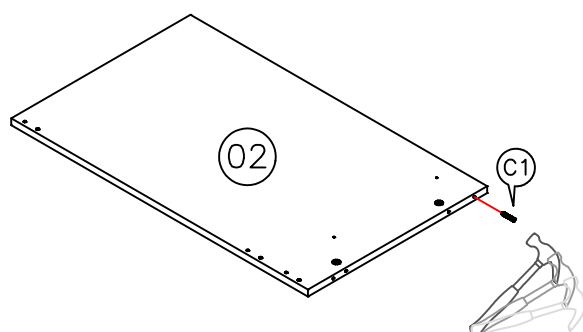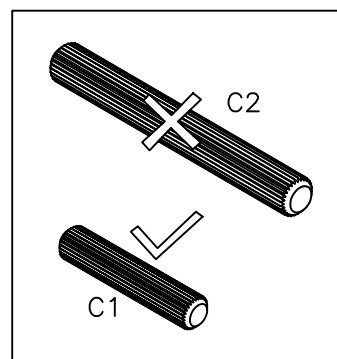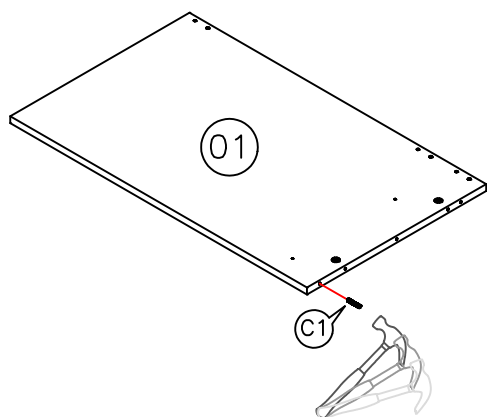

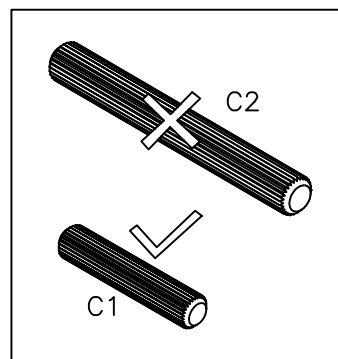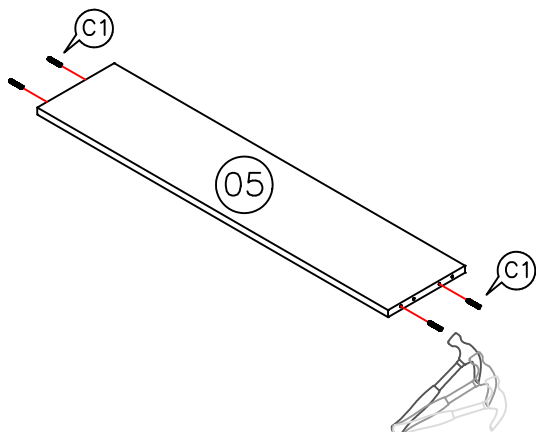

x4

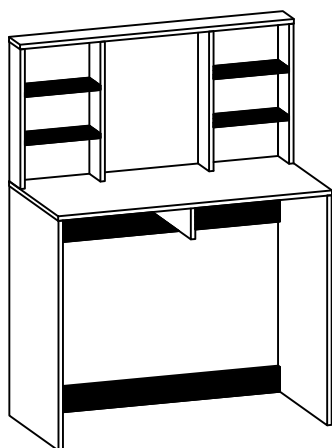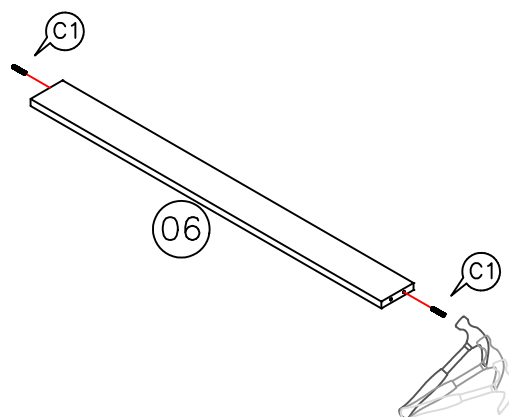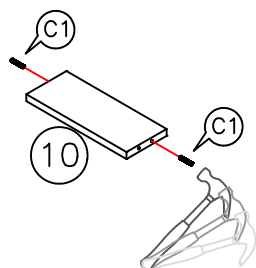


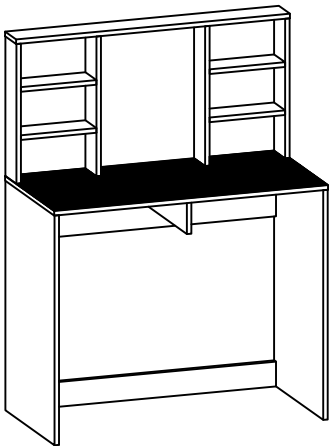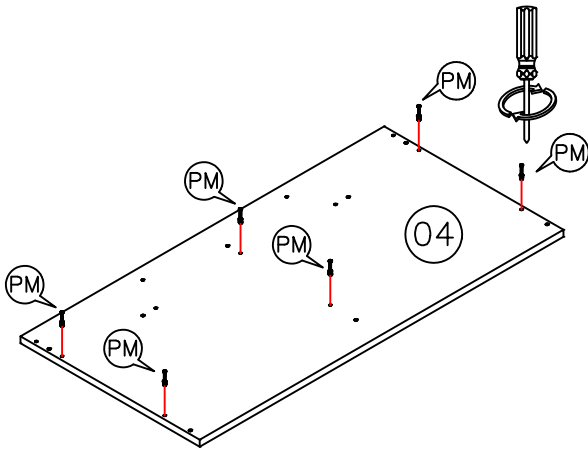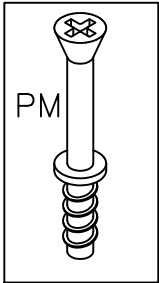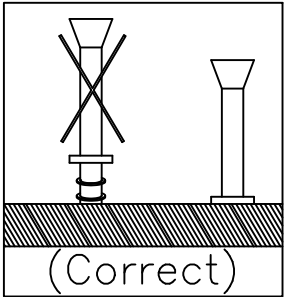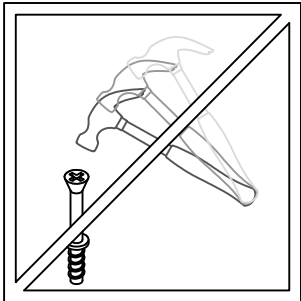

1 1

Top view of the finished part







Front
←

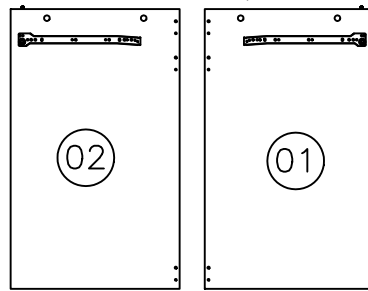


Front
→

PC3		4
CM1C		1
CM1D		1






Detailed view of CORRECT hole location in the rail for the "PC3" Screw

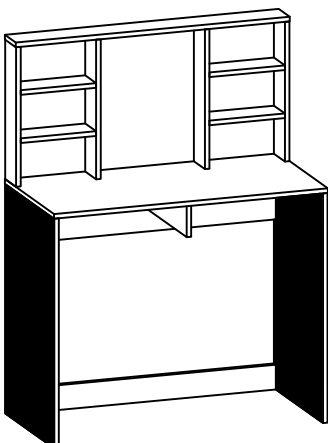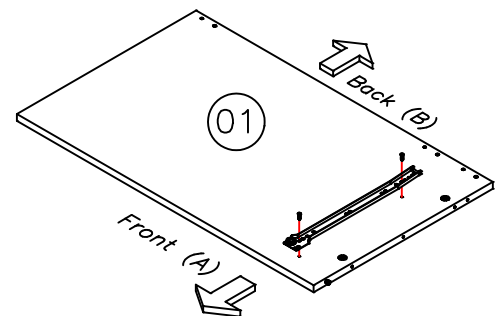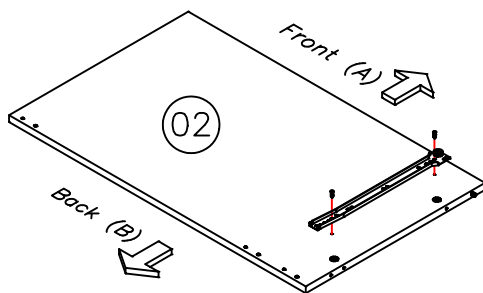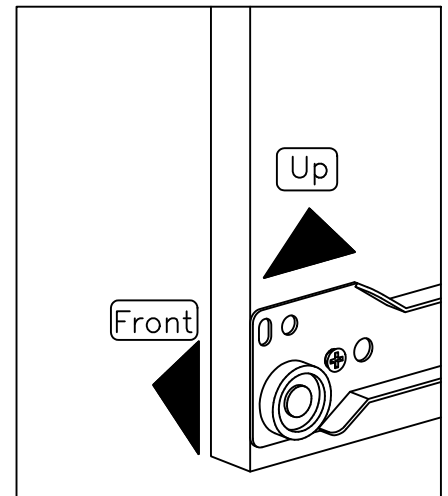
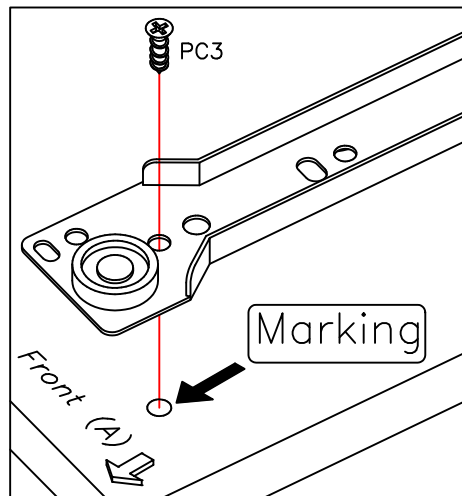
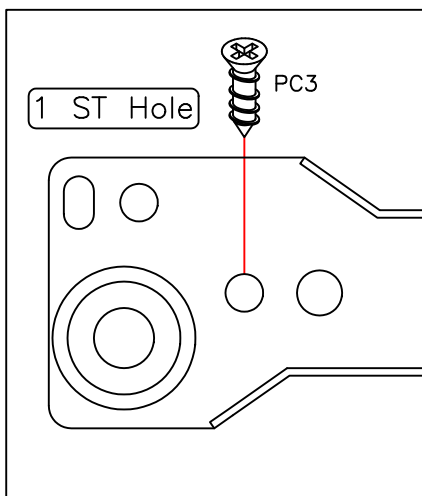






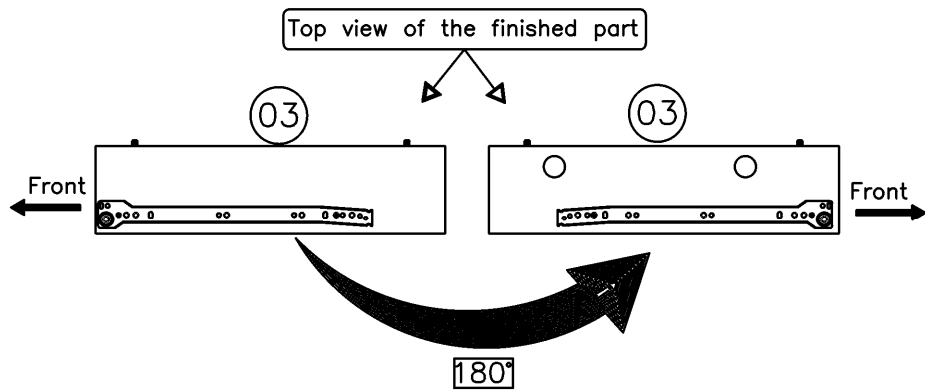


PC3		4
CM1C		1
CM1D		1

Detailed view of CORRECT hole location in the rail for the "PC3" Screw

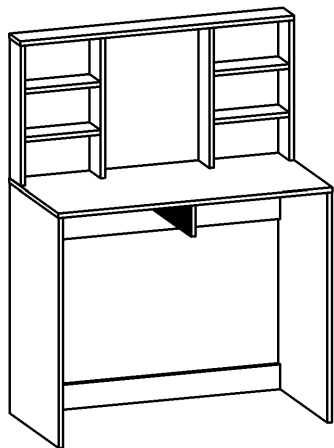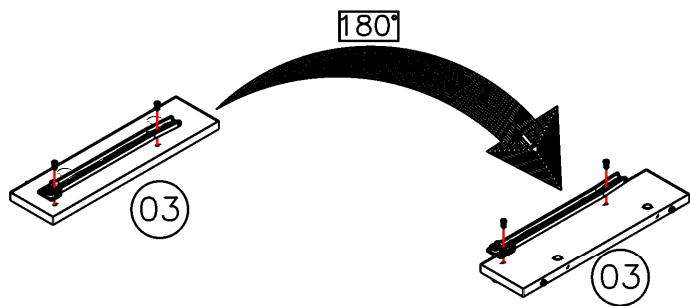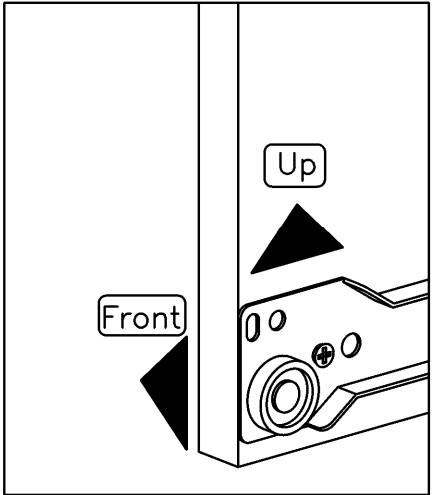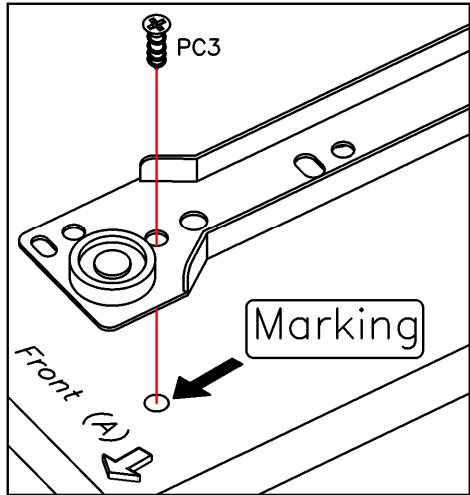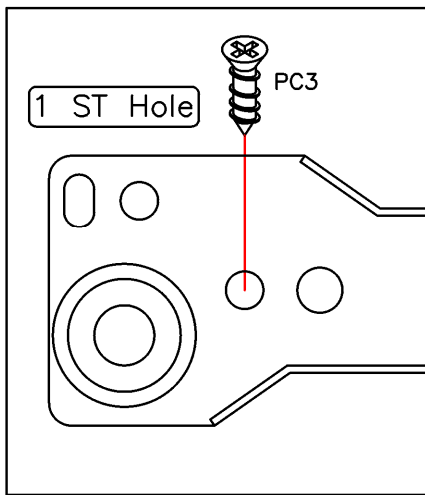


PE18		8
CZ3		1
TP2		8

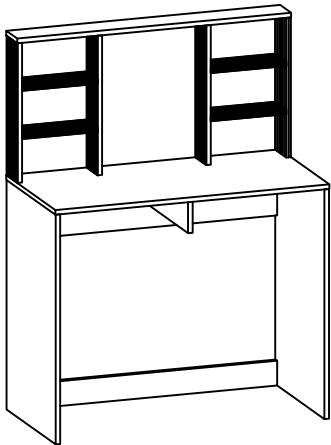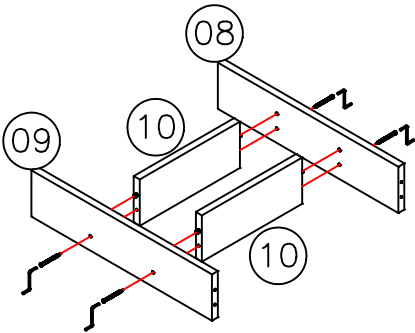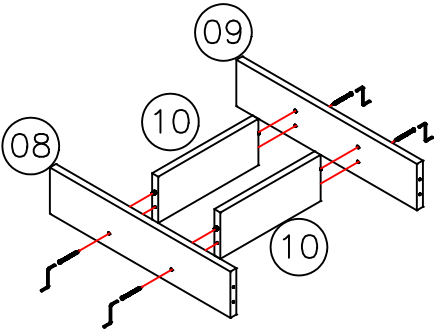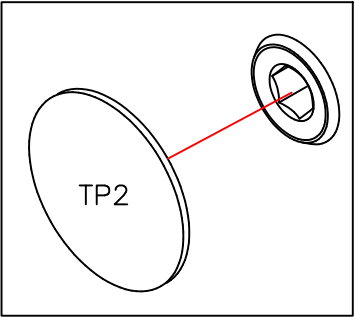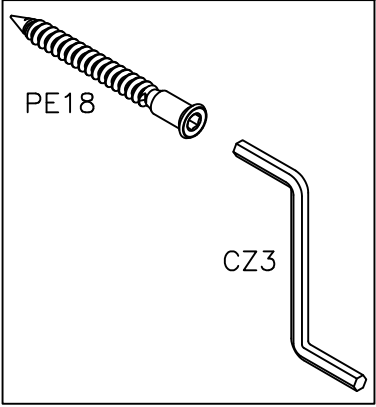


14A

Product Assembly




C1



6

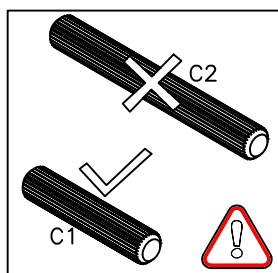


PLEASE: Ensure that you are installing the correct Wooden Dowel Part C1 – the shorter of the wooden dowels in this step.

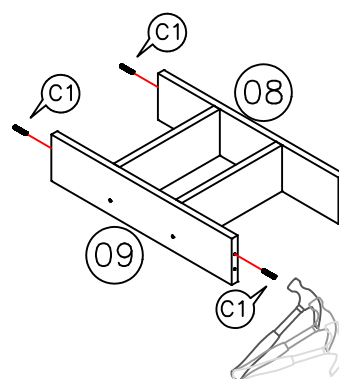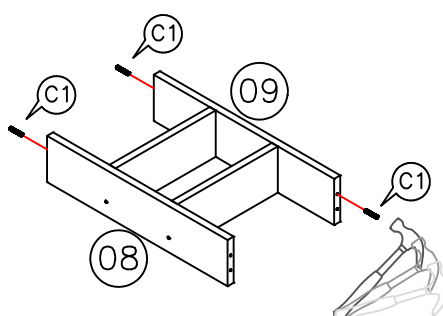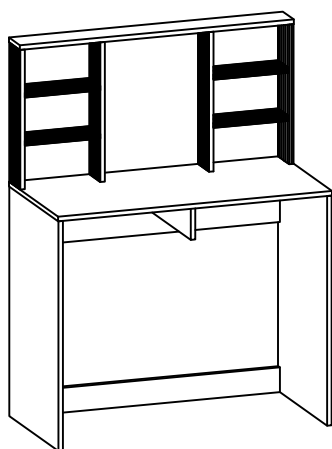


14B




C2








2

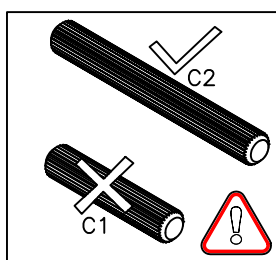

PLEASE: note that this step requires that you install the longer Wooden Dowel Part C2 – Please be sure that the proper wooden dowel is being installed.

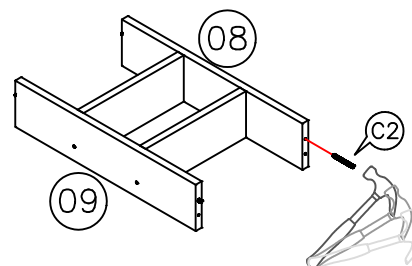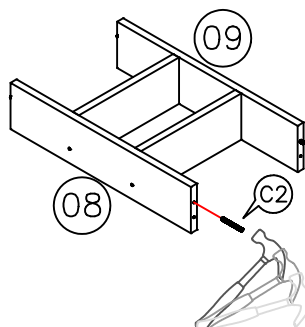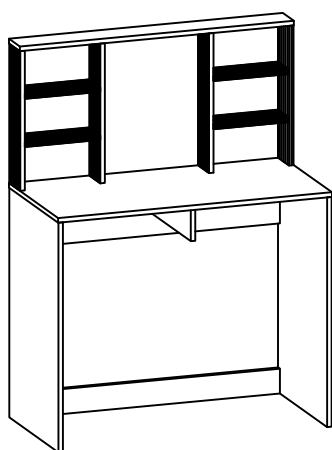



PE18		4
CZ3		1
TP2		4

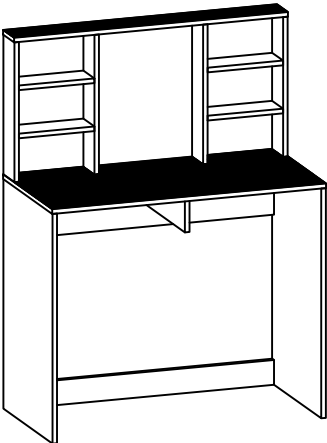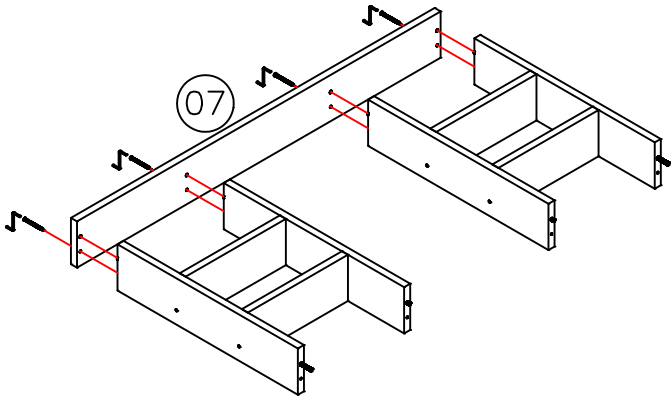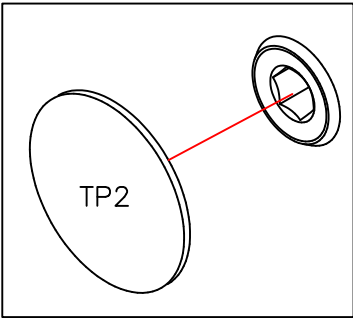
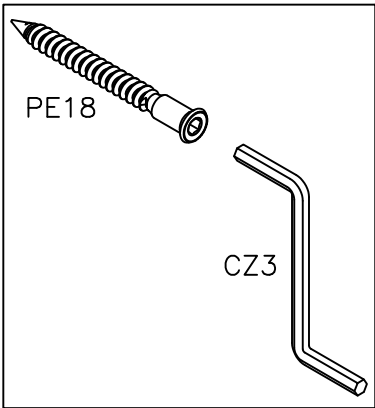


16



Product Assembly


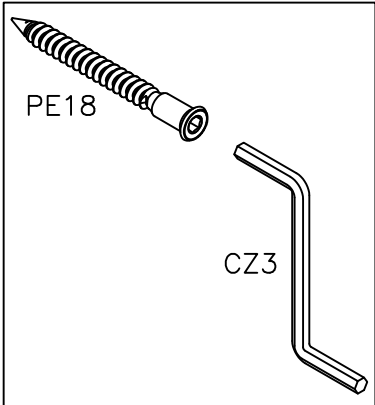




PE18		4
CZ3		1

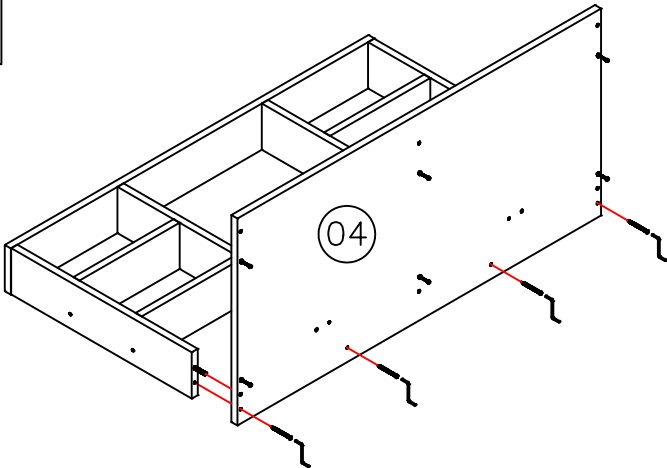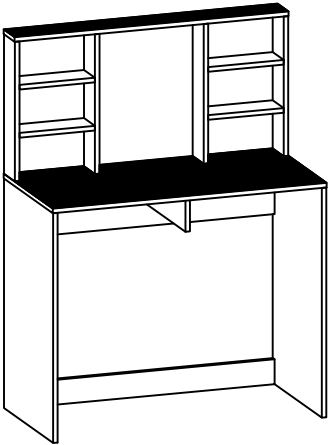

17

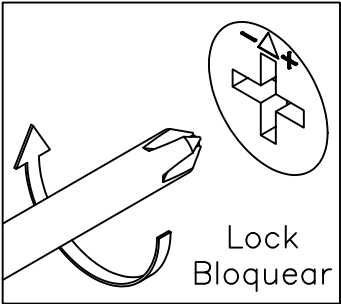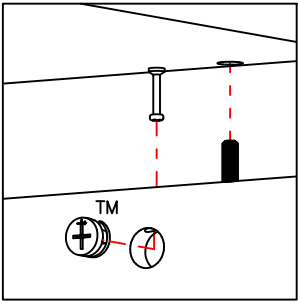





TM			2
----	---	---	---

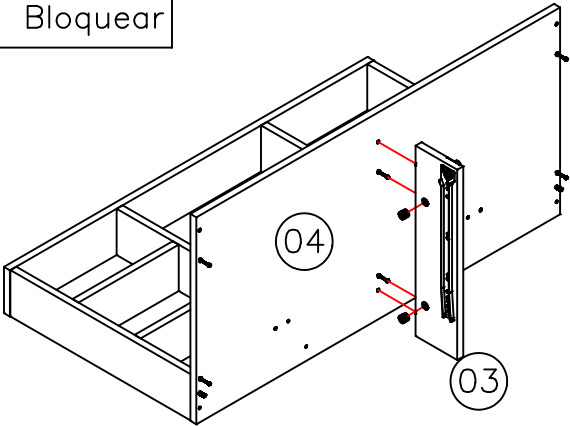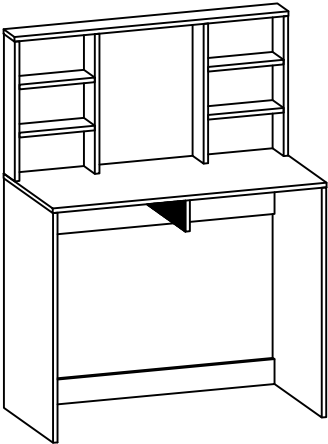


18




Product Assembly





PE18		6
CZ3		1
TP2		6

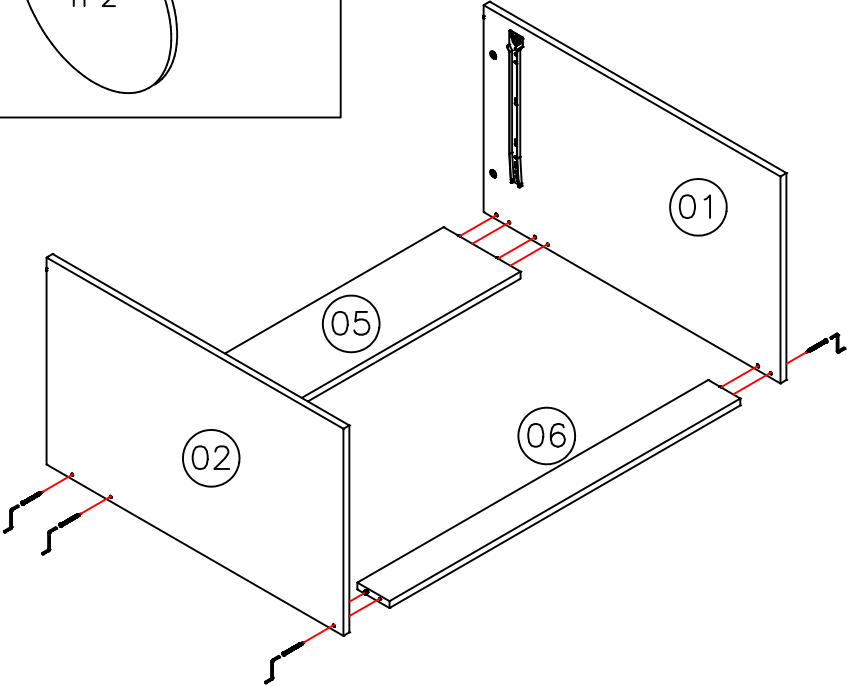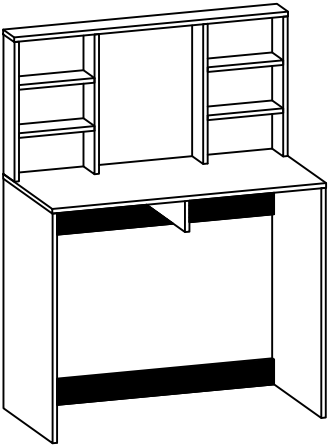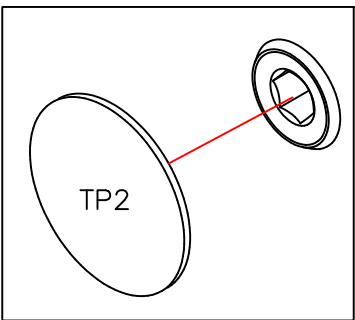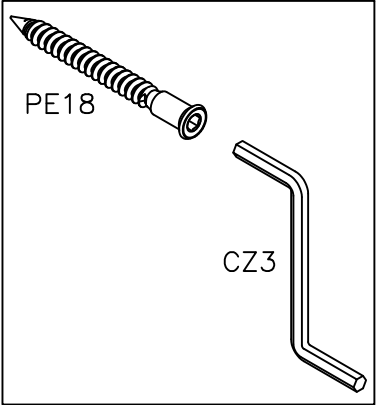




19

PR2		4
SD		4

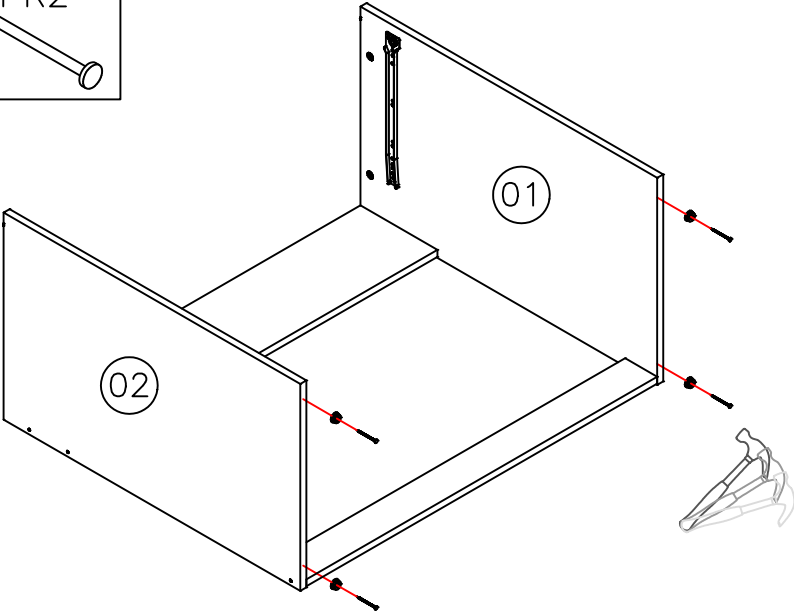
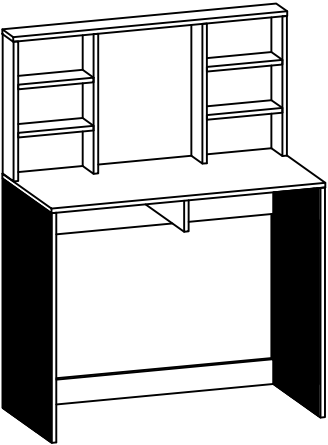
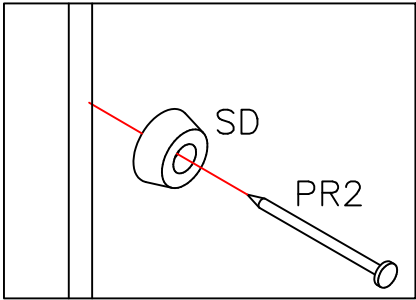


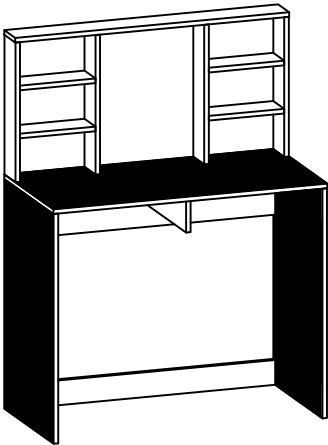
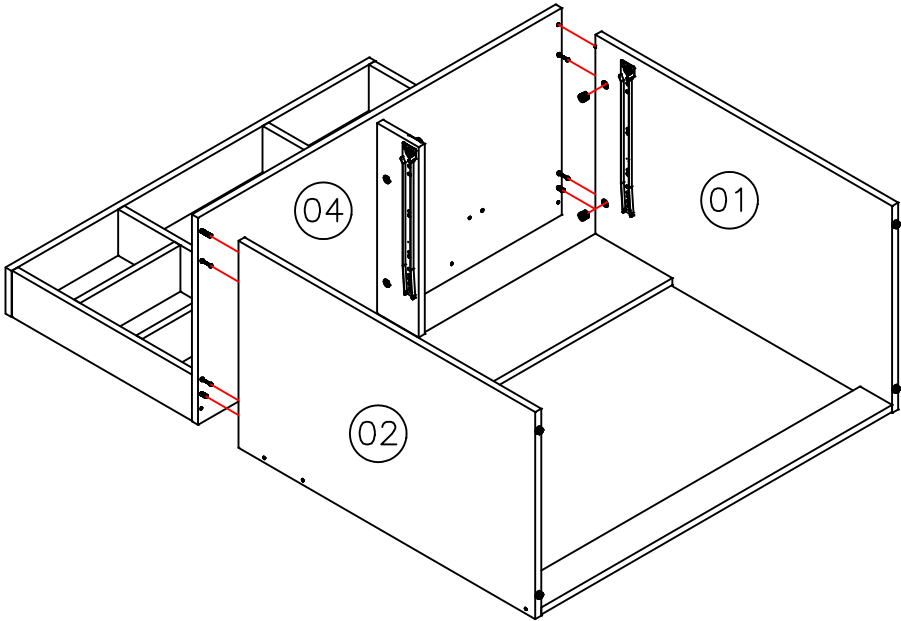
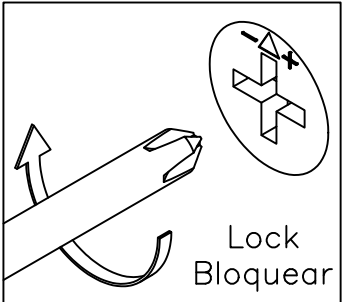
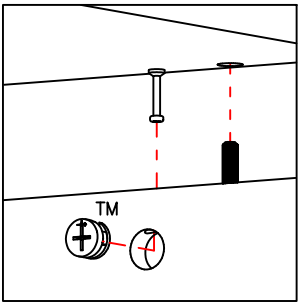


PE18		2
CZ3		1

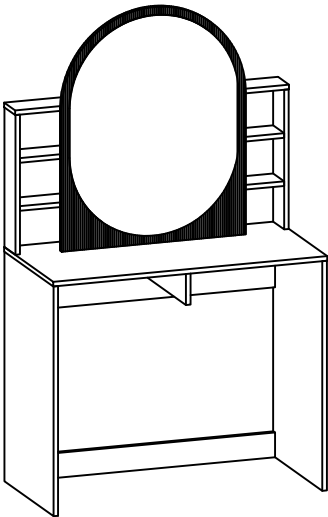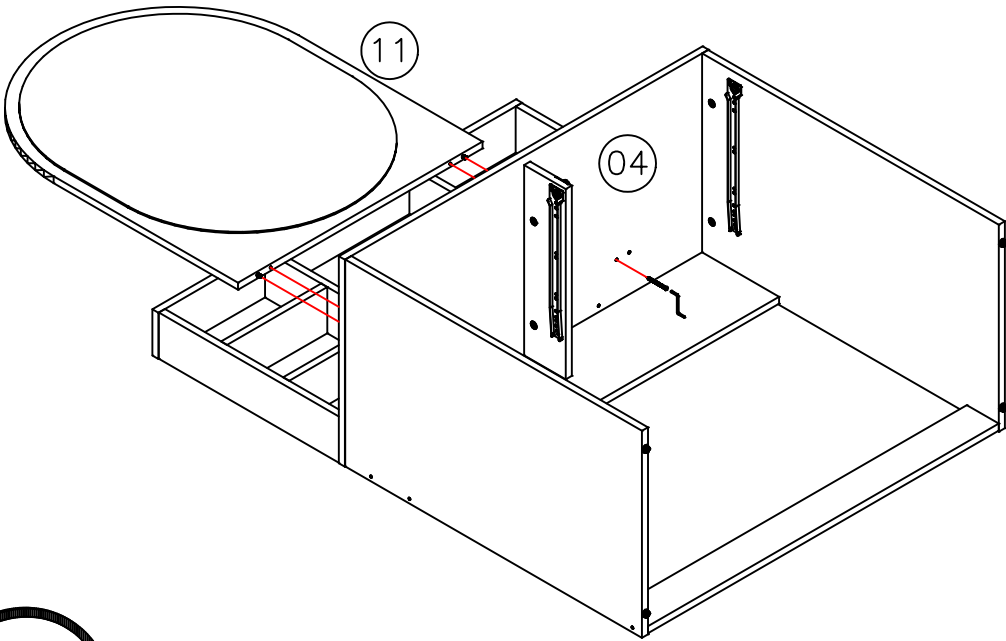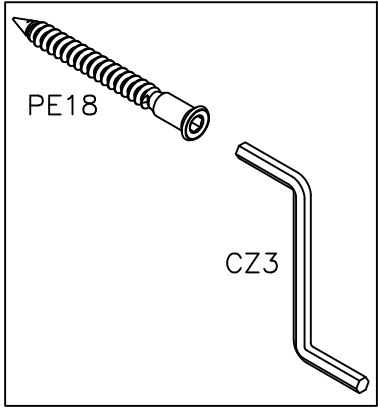

PC3		6
LZ		3

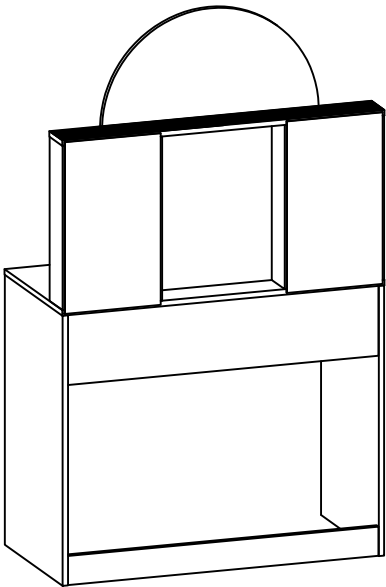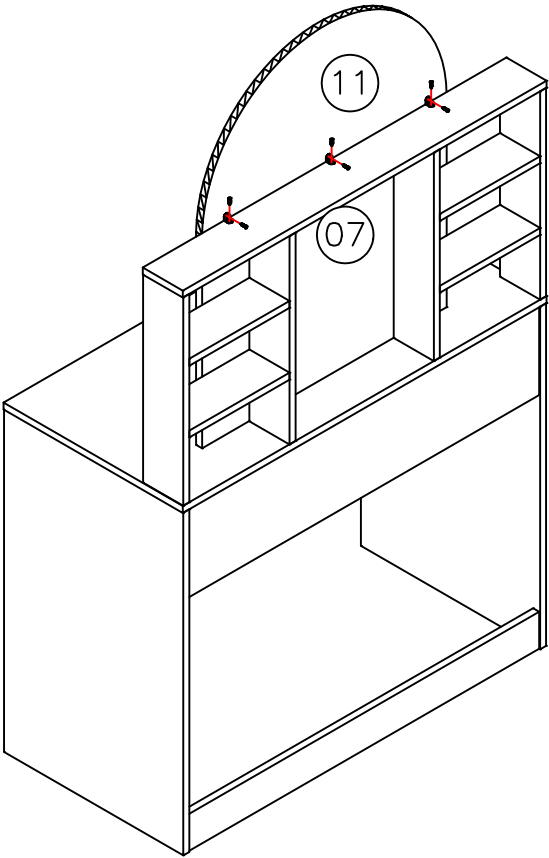
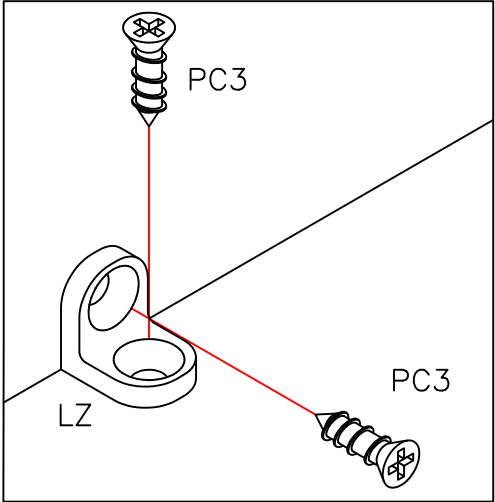


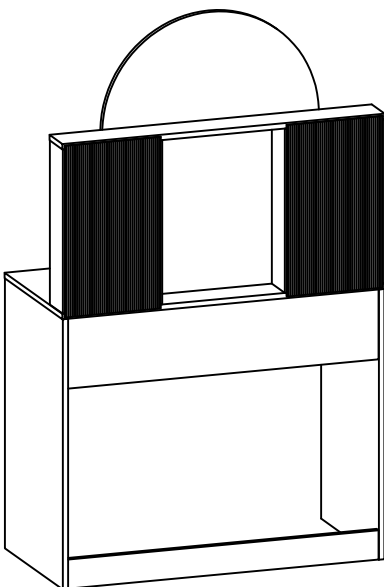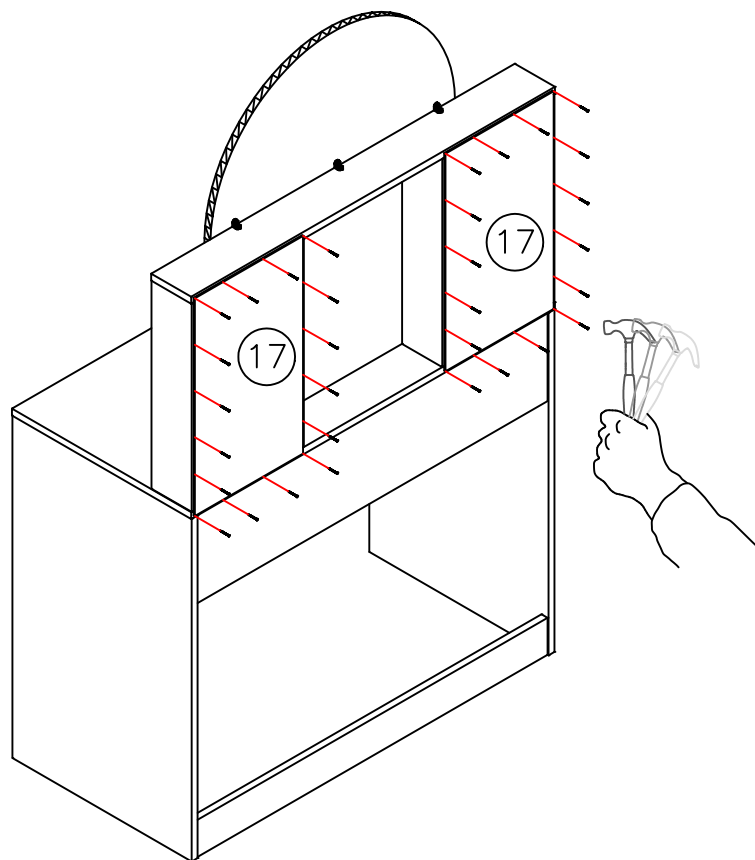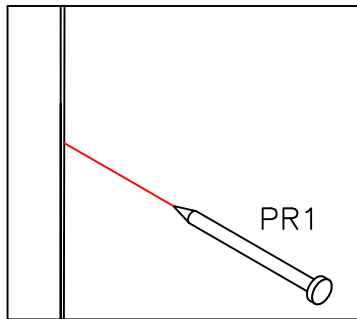





Drawer installation

Insert the slide into the profile and close the drawer to finish locking the clip.

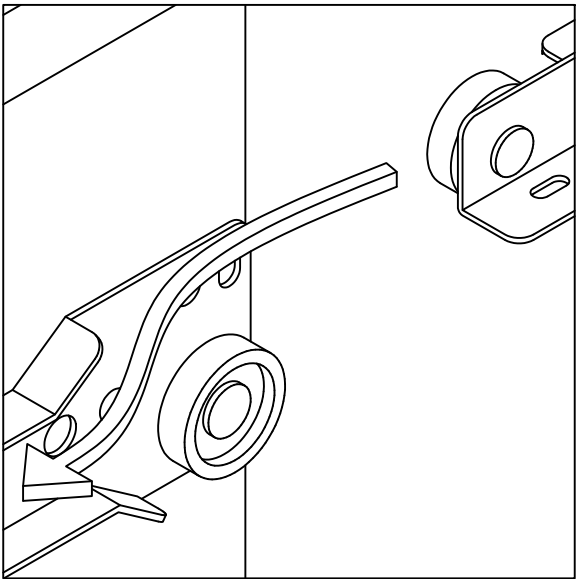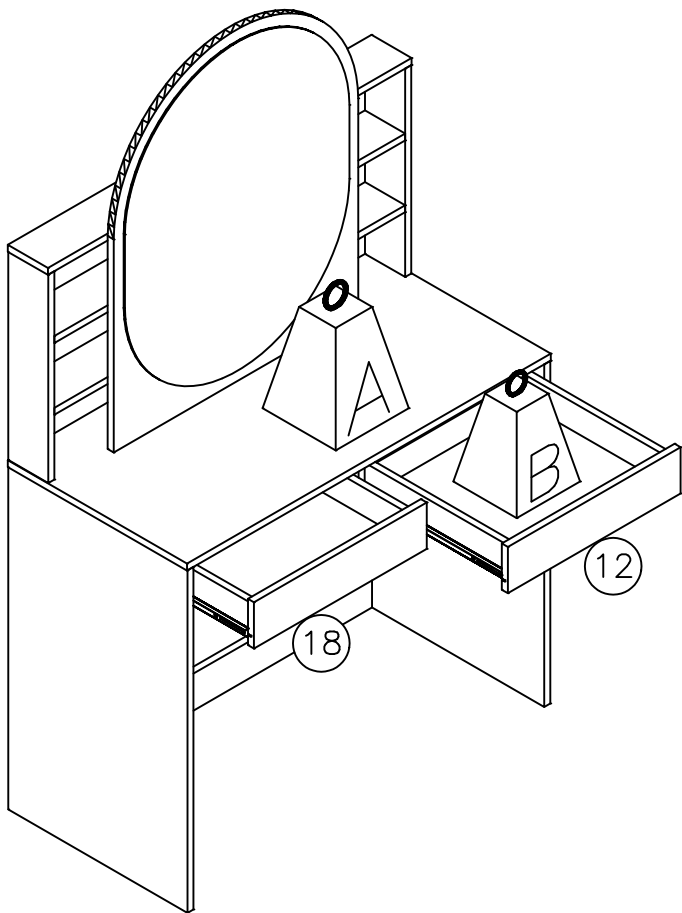


	Kg	lb
A	35	77.16lb
B	6	13.23lb

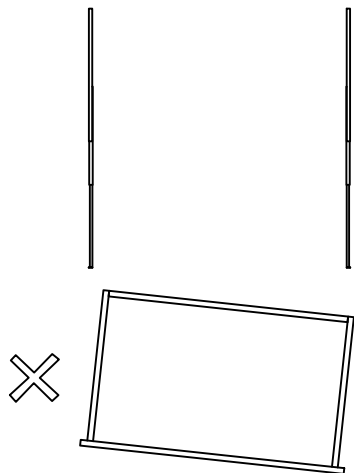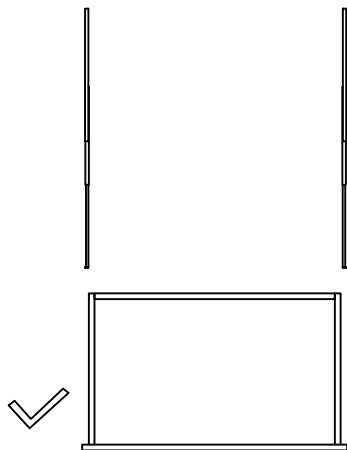


25 NOTE: Do not turn the DRYWALL ANCHOR into a wall stud. If you prefer to fasten the SAFETY ANTI-TIPPING to a wall stud, go to your local hardware store for proper hardware.


Compress the wings of anchor before inserting.

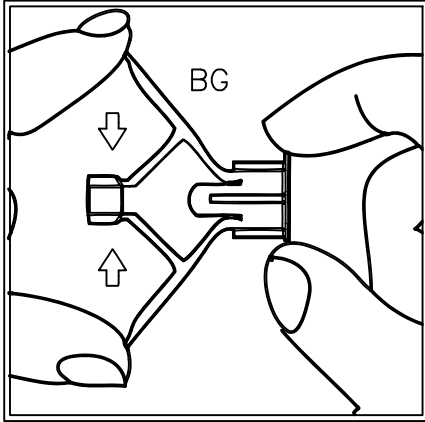

Insert the chuck into the hole of the base material.

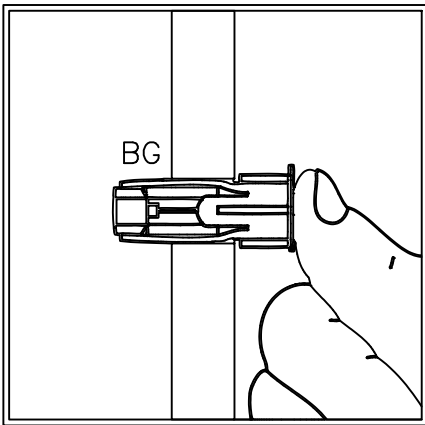

Position the object over the bushing and secure it with a screw.

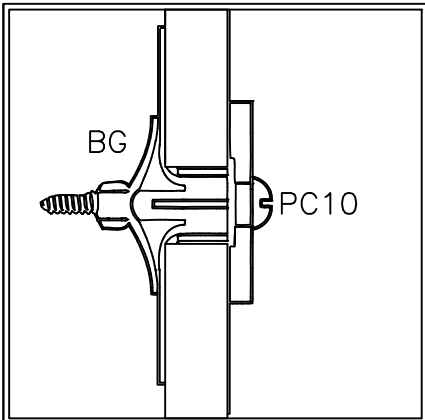

A WARNING - Anti-Tip Advisory

Potential of serious fatal crushing injuries may occur from furniture tip-over. To help prevent tip-over:

ALWAYS INSTALL the tip-over restrain that came with your furniture. This tip-over restrains only reduces but does NOT completely eliminate the risk of tip-over

- ALWAYS Place the heaviest items in the lowest/bottom drawer.
- NEVER place heavy objects on top of this product.
- NEVER allow children to scale/climb/hang on the drawers, doors, or shelves.
- NEVER open more than one drawer at a time.


B ADVERTENCIA - Aviso antivuelco

Pueden producirse lesiones graves por aplastamiento mortales debido al vuelco de los muebles. Para ayudar a prevenir vuelcos:

- SIEMPRE INSTALE el sistema de retención que viene con sus muebles. Este sistema antivuelco solo reduce pero NO elimina por completo el riesgo de vuelco.
- SIEMPRE coloque los artículos más pesados en el cajón más bajo /inferior.
- NUNCA coloque objetos pesados encima de este producto.
- NUNCA permita que los niños escalen, trepen o se cuelguen de los cajones, puertas o estantes
- NUNCA abra más de un cajón a la vez


Anti-tipping installation




SF		Mounting bracket	2
ANY		Clamp	1
PC10		Screw 4,5x50	2
PF4		Screw 3,5x16 BC	2
BG		Anchor	2

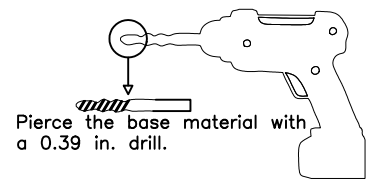

Important

- The minimum length of the screw must be the bushing length + object thickness that will be fixed.
- To guarantee the wing expansion function of the bushing, after the screw head is at the object to be fixed, one must continue to rotate the screw until maximum torque is reached.

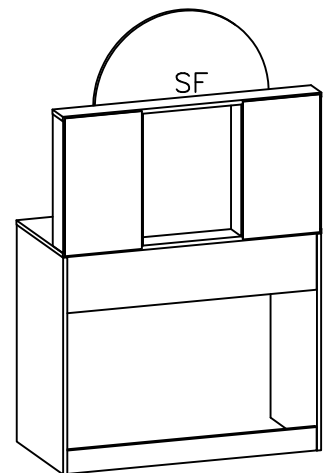

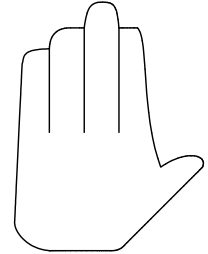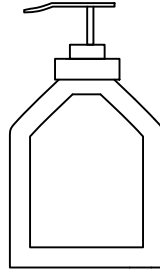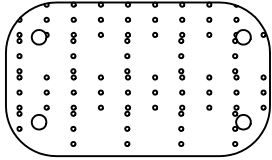

To Remove the printed number, apply a small amount of Glass Cleaner or Hand sanitizer and wipe with a paper towel.

