



MAKE A DIFFERENCE

Side Steps

BXG.8287

(INSTALLATION INSTRUCTION)

ATTENTION • Please verify all parts are present and read instructions carefully before starting installation.
• Please feel free to contact your distributor if you have any kind of question about your purchase.



1 CONTENTS



×6

A1&A2: Side Steps

B: Brackets

Qty	Part Name	Size(mm)	Picture	Qty	Part Name	Size(mm)	Picture
12	Hex Bolts	M10*25		12	Flat Washer	M10*25*1.5	
12	Split Lock Washer	D10					

2 TOOLS REQUIRED

 Drive Socket Ratchet Wrench 15mm Wrench

To view online instruction, please
scan the QR code.








INSTALLATION INSTRUCTION

Driver Side Installation

Step 1

Find the factory installation Bolts.

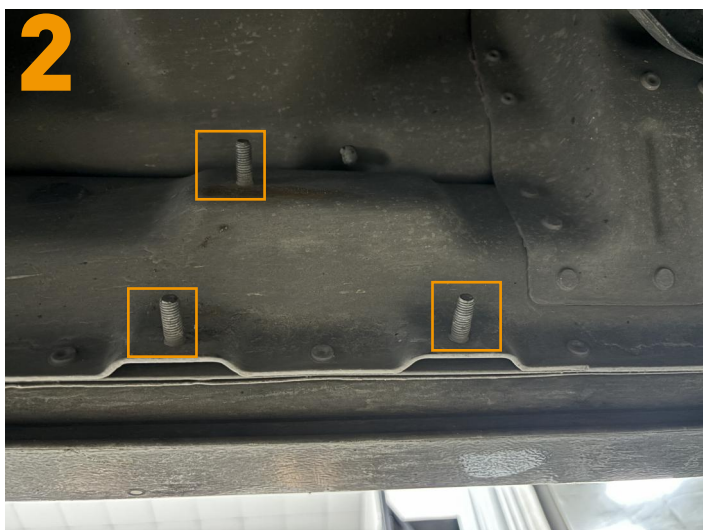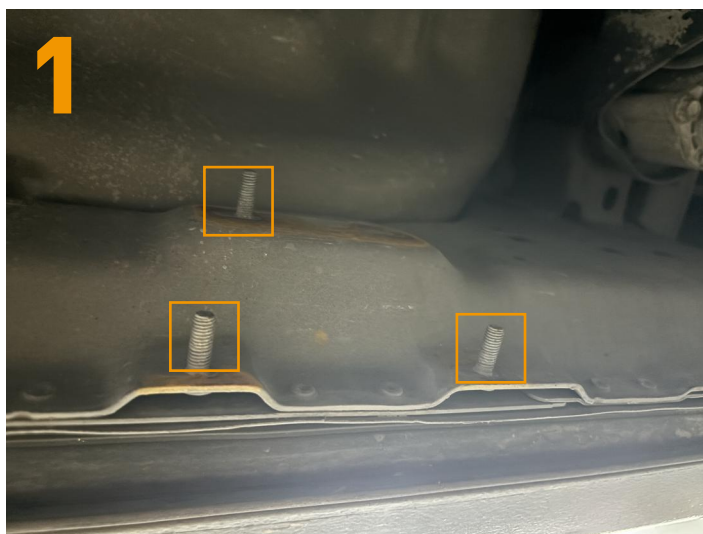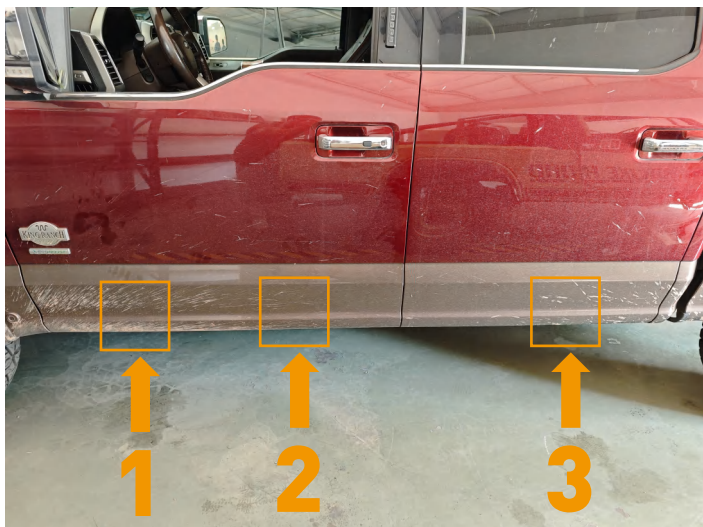

Step 2

Secure the mounting brackets to your vehicle. Repeat this step on the other brackets.

•(18) Factory Nuts




Step 3

Assemble the mounting brackets and side steps. Repeat this step on the other brackets. **Tighten all bolts.**

•(12) M10*25 Hex Bolts

•(12) M10*25*1.5 Flat Washer

•(12) D10 Split Lock Washer

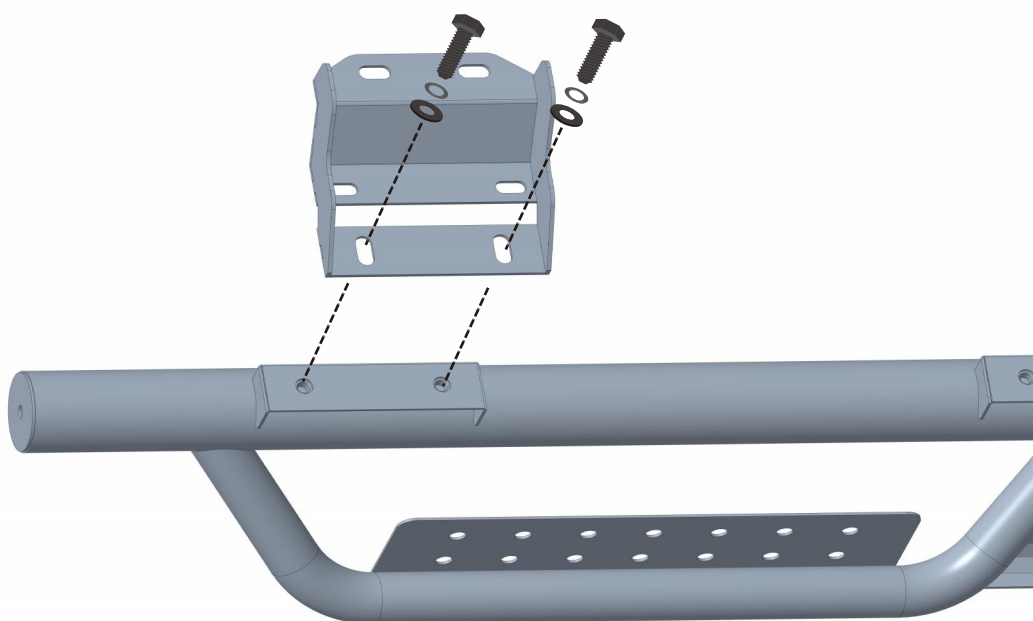**Step 4**

Repeat all steps on the other side of the vehicle.

Step 5

The installation is complete. We hope you enjoy a wonderful off-road life with this quality Hooke Road product!

