



MAKE A DIFFERENCE

Side Steps

BXG.8287

(INSTALLATION INSTRUCTION)

ATTENTION • Please verify all parts are present and read instructions carefully before starting installation.
• Please feel free to contact your distributor if you have any kind of question about your purchase.

CONTENTS



Qty	Part Name	Size(mm)	Picture	Qty	Part Name	Size(mm)	Picture
12	Hex Bolts	M10*25		12	Flat Washer	M10*25*1.5	
12	Split Lock Washer	D10					

TOOLS REQUIRED

◆ Drive Socket Ratchet Wrench

◆ 15mm Wrench

To view online instruction, please scan the QR code.






3 INSTALLATION INSTRUCTION

Driver Side Installation

Step 1

Find the factory installation Bolts.

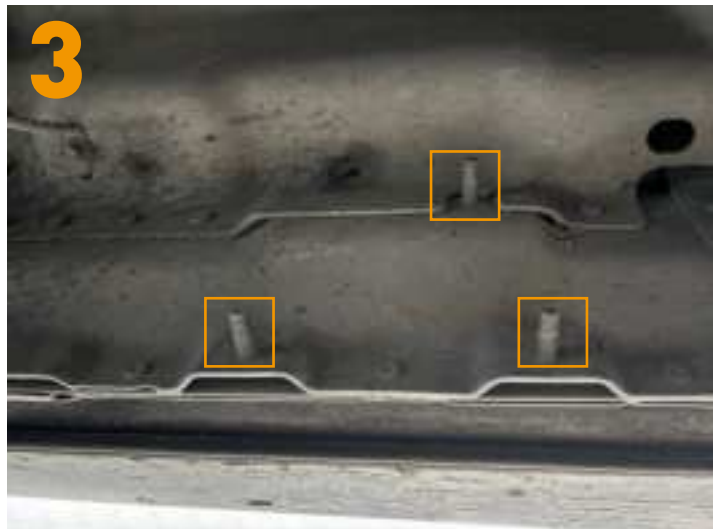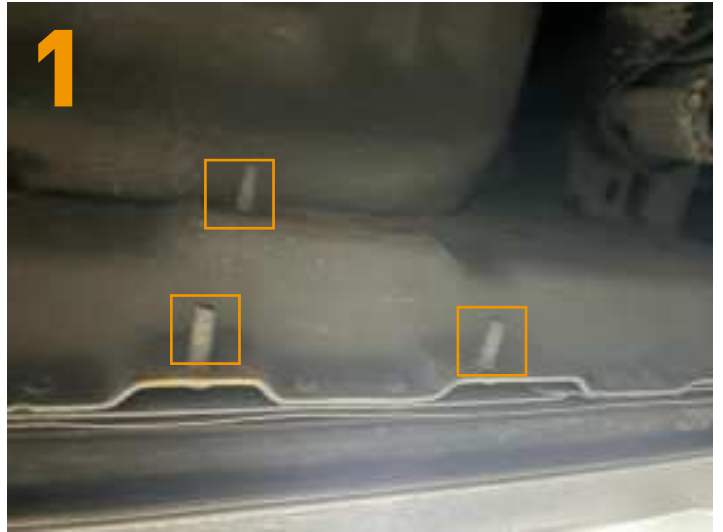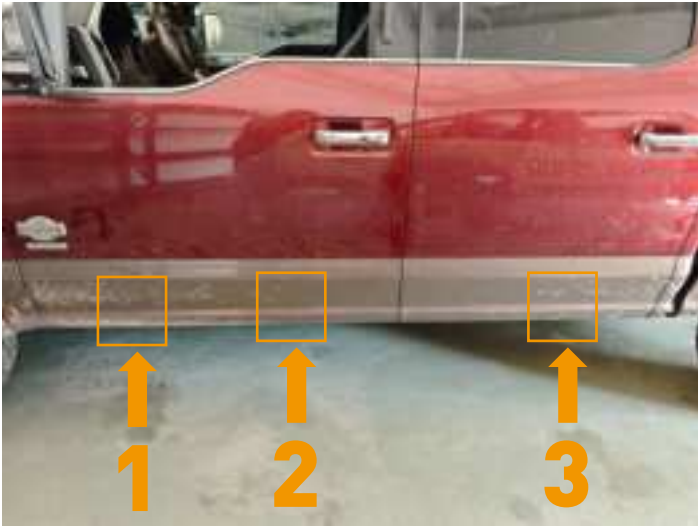

Step 2

Secure the mounting brackets to your vehicle. Repeat this step on the other brackets.

•(18) Factory Nuts




Step 3

Assemble the mounting brackets and side steps. Repeat this step on the other brackets. **Tighten all bolts.**

•(12) M10*25 Hex Bolts

•(12) M10*25*1.5 Flat Washer

•(12) D10 Split Lock Washer

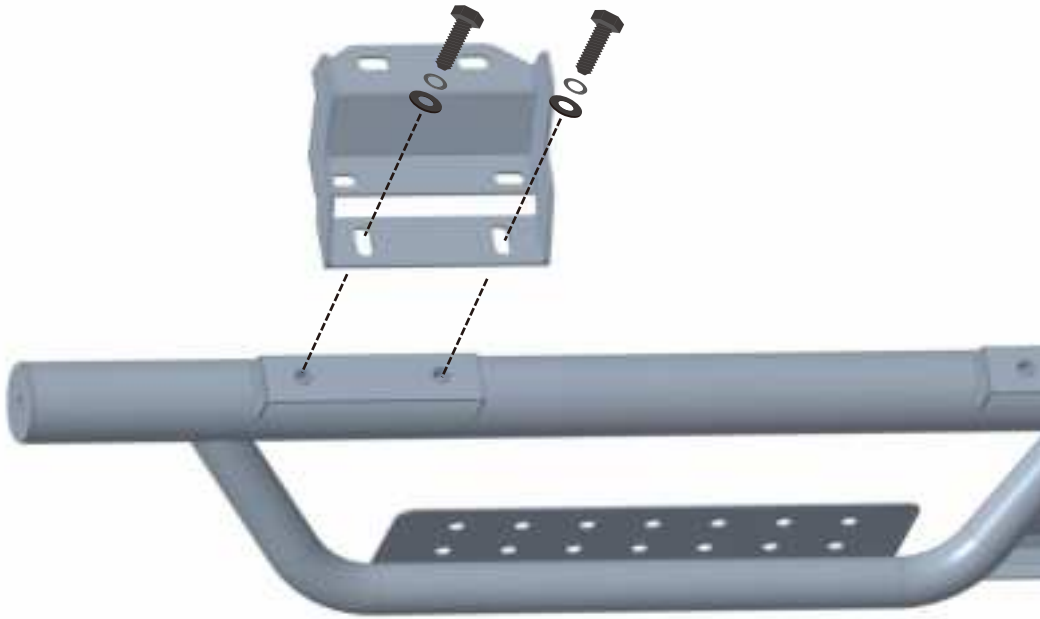**Step 4**

Repeat all steps on the other side of the vehicle.

Step 5

The installation is complete. We hope you enjoy a wonderful off-road life with this quality Hooke Road product!

