


Front Bumper

BXG.1011-S

(1) Contents:

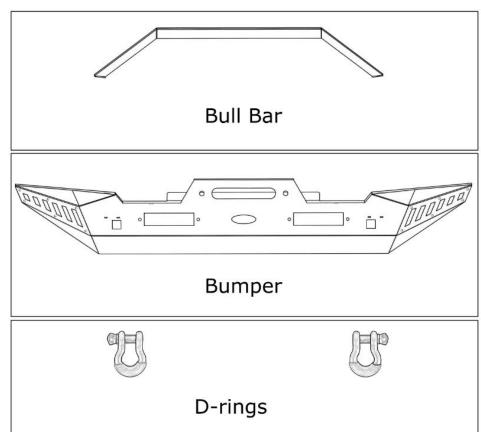



Qty	Part Name	Size(mm)	Picture
6	Hex Bolt	M12*30	
2	Hex Bolt	M8*20	
6	Split Lock Washer	D12	0
2	Split Lock Washer	D8	0
6	Flat Washer	M12*30*2	0
2	Flat Washer	M8*16*1.2	0
2	Flange Hex Lock Nuts	M8	0

(2) Tools required:

- a.19mm Wrench;
- b.19mm Socket Wrench;
- c.7mm HEX Socket Wrench;



(3) Installation time:

About 1 hour, 2-3 people may be needed. Installation time may differ according to your mechanical skill level.

(PLEASE VERIFY ALL PARTS ARE PRESENT AND READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION!)

To view the electronic version (BXG.1011-S), please scan the QR code.



Step 1:

Remove the original front bumper.



Step 2:
Install the bull bar with the Hex Bolt (M8*20), Split Lock Washer (D8), Flat
Washer (M8*16*1.2), Flange Hex Lock Nuts (M8).








Step 3:

Install the bumper on the vehicle.


As shown on the RIGTH.

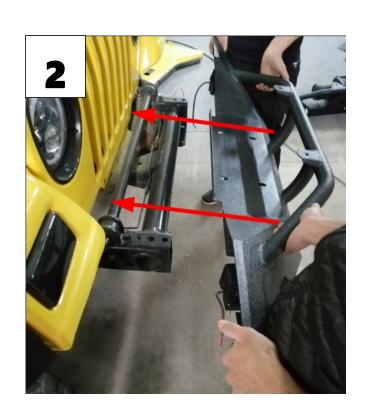

Step 4:

Use 19mm Socket Wrench or 19mm Wrench to tighten the bumper with the Hex Bolt (M12*30), Split Lock Washer (D12), Flat Washer (M12*30*2).

(1) First, Install the upper bolt holes.

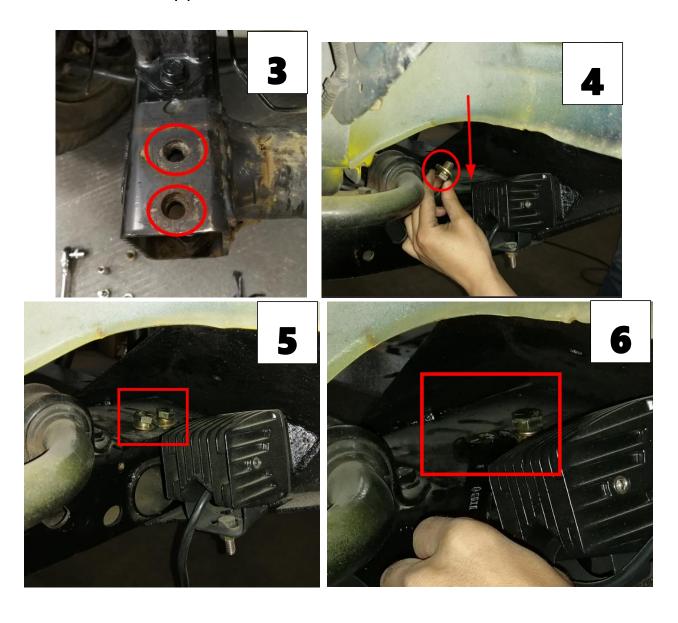

(2)Second,install the bottom bolt hole with the Hex Bolt (M12*30), Split Lock Washer (D12), Flat Washer (M12*30*2).





Step 5: Install another side in the same method.

Step 6:

Install the D-rings.

Step 7:

The installation is complete. We hope you enjoy a wonderful off-road life with this quality Hooke Road product!



Attention:

1. The product parts in this instruction may differ slightly from the actual product contents but generally does not affect the installation of the product.

(The figure 2 & figure 4-6 above are slightly different from the actual one, but the installation method is the same.)

2.Please feel free to contact your distributor if you have any kind of question about your purchase.

Google Hooke Road to find your parts



Post Your Jeep/Truck w/Hashtag #hookeroad to Win Discount Every Week