

TWO INSTALLATION METHODS


HOLE INSTALLATION METHOD



STEP1:
Drill holes, then
knock expansion
bolt inside



STEP2:
Tighten the nut,
then install the
door stop base

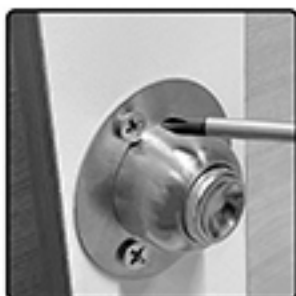

STEP3:
Install 3 screws
to fix the base




STEP4:
Installation is
complete, test
back and forth



STEP1:
Install expansion
rubber plugs and
screws to fix the
base accessories



STEP2:
Install the
door stop base

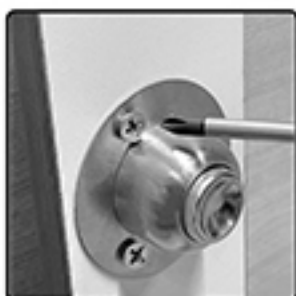

STEP3:
Install 3 screws
to fix the base



STEP4:
Installation is
complete, test
back and forth


ADHESIVE INSTALLATION METHOD



STEP1:
Unscrew the base
screws



STEP2:
Install stainless
steel gasket

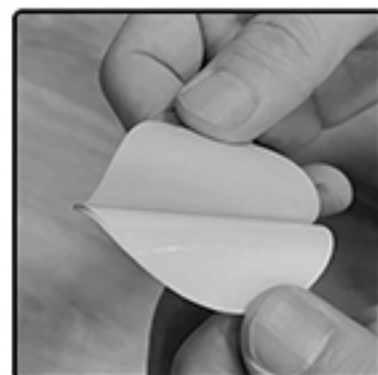

STEP3:
Tear off glue on
one side



STEP4:
Put the adhesive on
the gasket



STEP5:
Put the adhesive on
the 2nd base



STEP6:
The installation
is complete