



Welcome to the Kwikset family!



This guide will get you ready to install your handleset.

If you have any issues, please visit our support center: kwikset.com/support or call us at 1-800-327-5625.

Installation and Reference Guide

This manual can be used to install a variety of handlesets.

Recommended Tools



wood block




*Tools will depend on install type

[Door Prep:](#) If you need help in preparing your door


[Drilling Instructions:](#) If you need help in drilling your door

Screw Reference

Interior Trim




Handleset


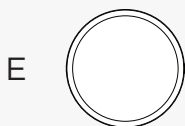


1 Install handleset

A Install handleset.


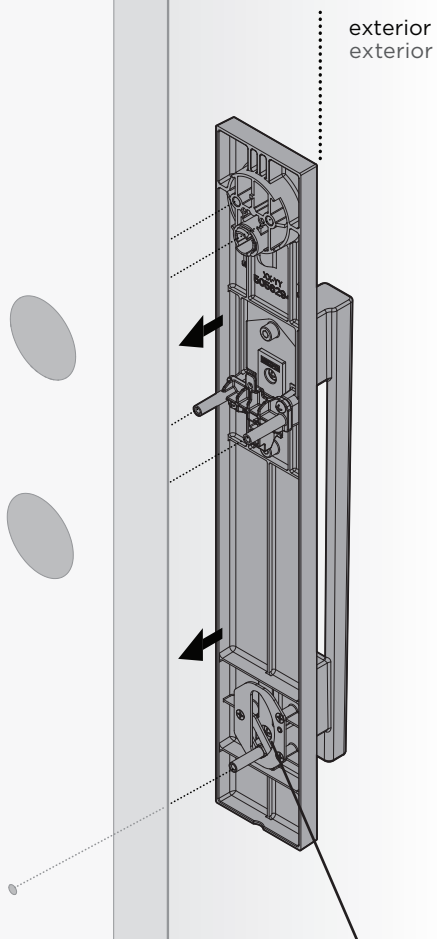


Post is adjustable and can be moved to any position within the slot.

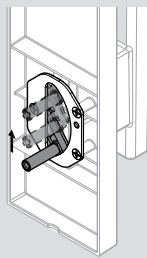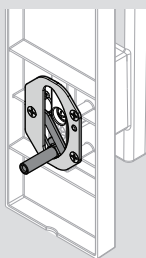



1 Install handleset

- B** Attach the bottom of the handleset using the washer and screw. Once secured, snap the cover into place.

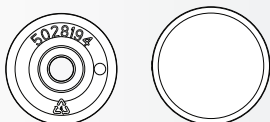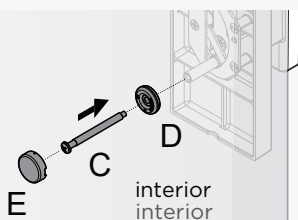


2 Install interior trim and lever

- A** Install interior trim. Secure with top mounting screws.

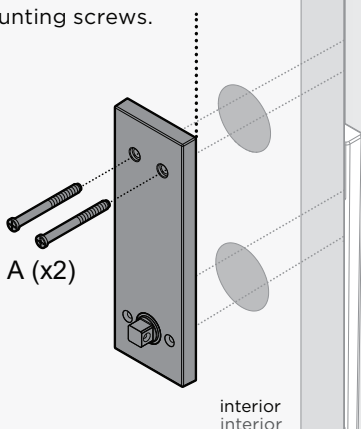

- B** Secure with lower mounting screws.


Keep
parallel




B (x2)

2 Install interior trim and lever

C Install lever.

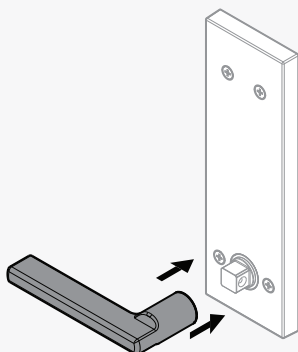

D Tighten the pre-installed set screw.

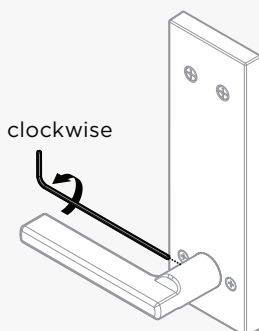

⚠ Fully tighten the set screw using the long end of the Allen wrench.