

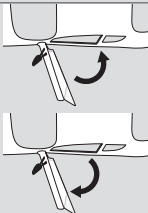

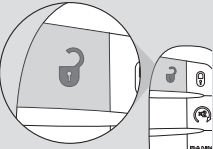
















FIRSTECH, LLC.
SUPPORT - 1(888) 820-3690, EXT. 203

BLADE FEATURE COVERAGE	
IMMOBILIZER DATA	○
PRIORITY UNLOCK	○
DOOR LOCK	○
DOOR UNLOCK	○
ARM OEM ALARM	○
DISARM OEM ALARM	○
TRUNK/HATCH RELEASE	○
DOOR STATUS	○
TRUNK STATUS	○
BRAKE STATUS	○
E-BRAKE STATUS	○
HATCH OUTPUT	○
DATA/MUX IGN/ST	○
LOW PLUG STATUS	○
SECURE TAKEOVER	○
PARKING LIGHTS	○
HAZARD LIGHTS	○
DISCO BALL	○



MODULE PROGRAMMING PROCEDURE - WITH KLON

- 1  Close driver door.
 Re-open driver door to wake up data bus.
- 2  Press UNLOCK on OEM remote.
If the vehicle is not equipped with an OEM remote, press the module programming button.
- 3  Wait, LED will flash BLUE once [1x].
- 4  Turn key to ON position.
- 5  Wait, LED will turn solid RED.
- 6  Turn key to OFF position.
- 7  Remove key.
- 8  Insert key into ignition.
- 9  Turn key to ON position.
- 10  Wait, LED will flash BLUE.

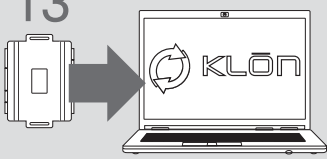- 11  Turn key to OFF position.
- 12  **WARNING:**
Disconnect power last.
Disconnect RS from vehicle.
- 13  Connect RS to computer and proceed with extended programming.
- 14  **WARNING:** Do not press RS programming button.
Connect power first.
Connect RS to vehicle.
- 15  Turn key to ON position.
- 16  Wait, LED will turn solid BLUE for 2 seconds.
- 17  Turn key to OFF position.
- 18  Turn key to START position.
- 19  Turn key to OFF position.
- 20  Module Programming Procedure completed.

WARNING: READ BEFORE REMOTE STARTING THE VEHICLE

IMPORTANT

- All vehicle doors must be closed and locked prior to remote start sequence. Failure to comply will result in remote starter malfunction.

TAKE OVER PROCEDURE - TO THE VEHICLE OWNER

NOTE

- All vehicle doors must be closed and locked prior to remote start sequence.




TIME RESTRICTION COMING UP !

1



Press UNLOCK on after-market remote.

2

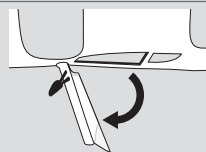

TIME RESTRICTION

Within 45 SECONDS from previous step:

Open vehicle door.
Enter vehicle.
Close vehicle door.
Insert key into ignition.
Turn key to ON position.
Press and release BRAKE pedal.

3

Take over procedure completed.



Failure to follow procedure within time restriction will result in vehicle engine shutdown.