


fingers.co.in

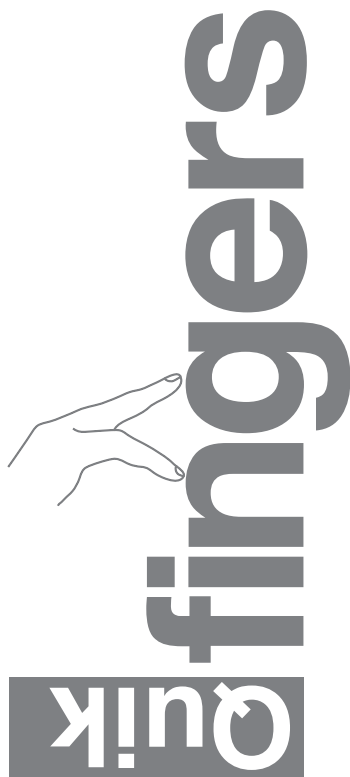

FullThrottle-G7

FASHION PC CASE


Installation Guide

Hard Disk Installation Steps

1. Remove the left side glass panel and right side metal panel of the cabinet.



2. Place the HDD/SSD in the HDD/SSD slot provision and fix it with screws

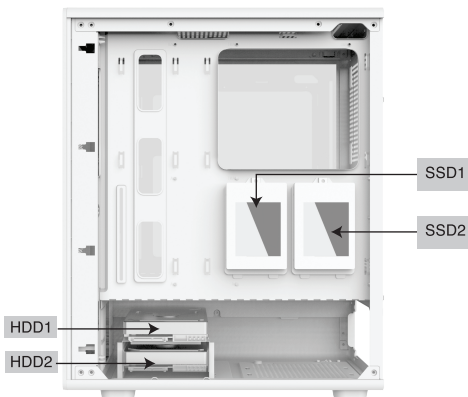

3. Cover the panel and fix it with the thumb screws.



Ver.: 1.0.0

• Images shown may vary from actual product. • Specifications, features and appearance are subject to change without notice. • All logos, brands, trademarks and product names are properties of their respective owners. • Product warranty is governed by warranty terms mentioned on www.fingers.co.in • This product falls under e-waste (Management & Handling) Rules, 2011. For proper disposal method, visit our website www.fingers.co.in