


Assembly Instructions











List of pieces

Code	Description	Descrição (Internal production data)	Amount	Length (in.)	Width (in.)	Thickness (in.)	Box
01	Right Side Panel	Lateral direita	1	29.13"	14.65"	.59"	A
02	Left Side Panel	Lateral esquerda	1	29.13"	14.65"	.59"	A
03	Right Divider	Divisória direita	1	29.13"	14.65"	.59"	A
04	Left Divider	Divisória esquerda	1	29.13"	14.65"	.59"	A
05	Top	Tampo	1	46.46"	15.35"	.59"	B
06	Side Panel—Upper	Lateral superior	2	25.75"	2.99"	.59"	B
07	Top	Chapéu	1	46.46"	3.03"	.59"	B
08	Back of Mirror	Costa do espelho	1	46.46"	26.38"	.59"	B
09	Baseboard	Rodapé	4	10.08"	3.15"	.59"	A
10	Crosspiece	Travessa	1	23.86"	3.15"	.59"	A
11	Support	Reforço	1	23.86"	10.08"	.59"	A
12	Larger Front of Drawer—Large	Frente de gaveta maior	1	23.70"	4.31"	.59"	A
13	Larger Front of Drawer—Small	Frente de gaveta menor	2	11.10"	4.31"	.59"	A
14	Right side of the smallest right-hand drawer	Lateral de gaveta menor direita	3	13.78"	3.15"	.59"	A
15	Left side of the smallest right-hand drawer	Lateral de gaveta menor esquerda	3	13.78"	3.15"	.59"	A
16	Back of Drawer—Large	Cabeceira de gaveta maior	1	21.69"	3.15"	.59"	A
17	Back of Drawer—Small	Cabeceira de gaveta menor	2	7.91"	3.15"	.59"	A
18	Front of Drawer—Largest	Frente do gavetão	4	11.10"	10.63"	.59"	A
19	Right Side of Drawer—Largest	Lateral do gavetão direita	4	13.78"	5.51"	.59"	A
20	Left Side of Drawer—Largest	Lateral do gavetão esquerda	4	13.78"	5.51"	.59"	A
21	Back of Drawer—Largest	Cabeceira do gavetão	4	7.91"	5.51"	.59"	A
22	Back Panel—Lower	Costa inferior	2	29.31"	10.87"	.12"	B
23	Base of Drawer—Small	Fundo de gaveta menor	6	8.43"	13.70"	.12"	B
24	Base of Drawer—Large	Fundo de gaveta maior	1	22.20"	13.70"	.12"	B





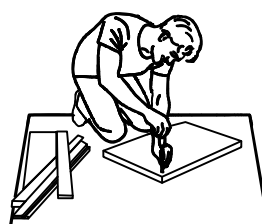











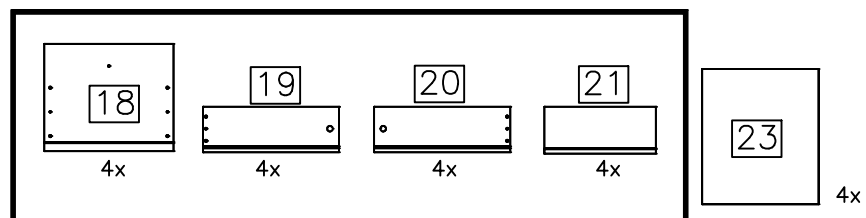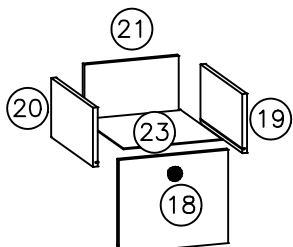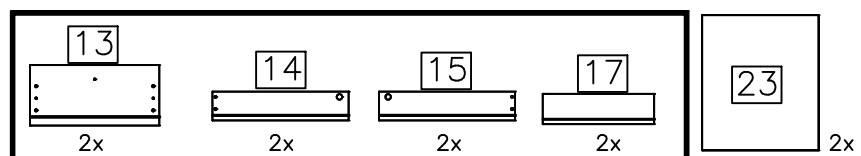
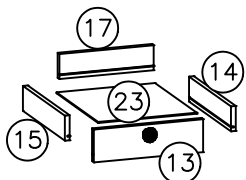
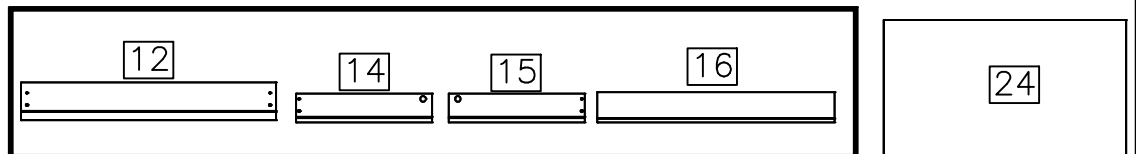
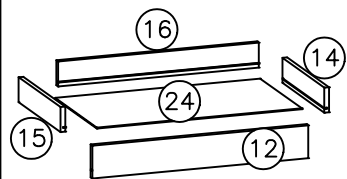
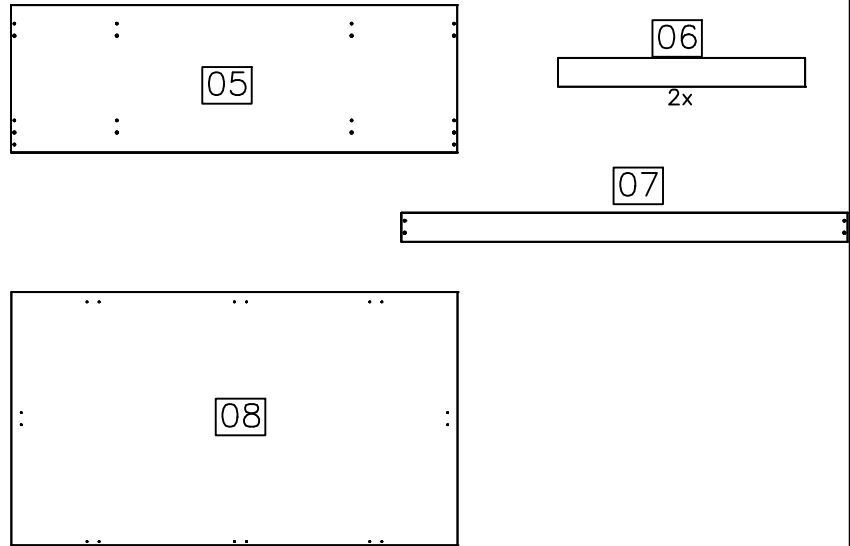
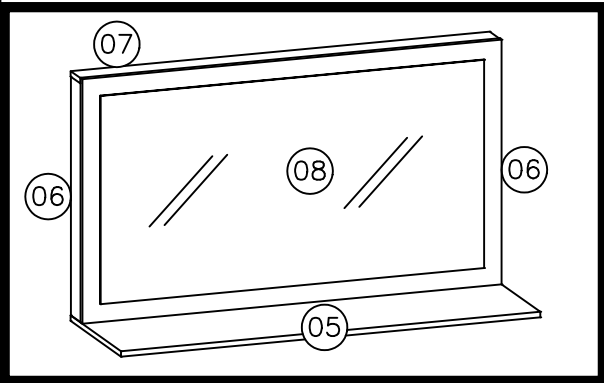
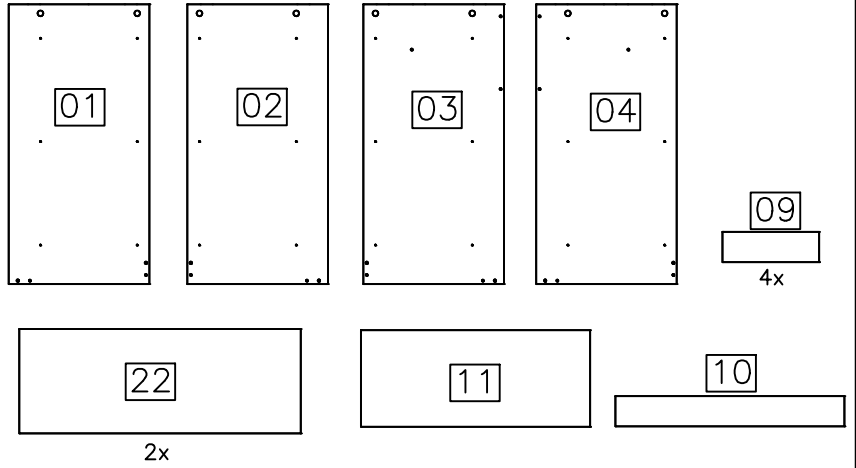
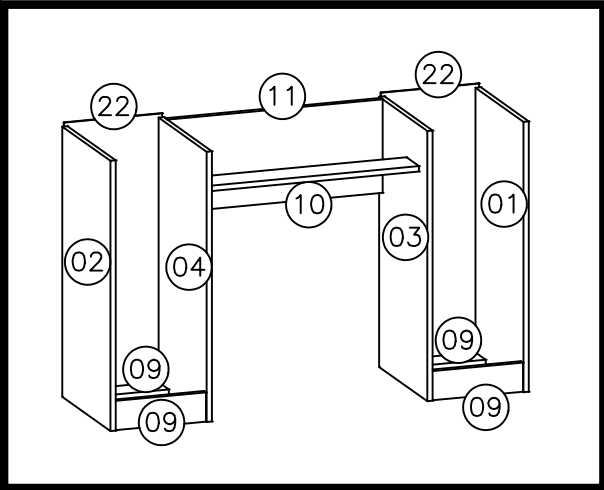






We Recommend you use the Box that your furniture came in as the base for your work space. This can help prevent and unnecessary damages from occurring.





Hardware

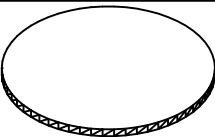
	Code	Description	Amou.
PM	30945	 Cam Screws	22
TM	30950	 Cam Locks	22
PE18	75515	 Screw 5x40	32
PC5	5256	 Screw 4x20	14
PC3	4214	 Screw 3,5x14	88
C2	1925	 Dowel 6x50mm	2
C1	1802	 Dowel 6x30mm	62
PR1	107	 Nail 10x10	41
PR2	108	 Nail 12x12	8
<h3 style="text-align: center;">Anti-tipping installation</h3> <p>Warning: For Measures of Safety, it is recommended that this item be fixed to the wall, to avoid overturning, if this happens it can cause serious or fatal injuries.</p> <p>ATENCION: Por medidas de seguridad se recomienda fijar el mueble a la pared para evitar Volcamiento del mismo, si esto llegase a ocurrir puede causar lesiones graves o fatales.</p>			
SF	55606	 Mounting bracket	2
ANY	55607	 Clamp	1
PC10	51980	 Screw 4,5x50	2
PF4	1178	 Screw 3,5x16 BC	2
BG	32069	 Adapter sleeve	2

SD	1901		Shoe black	8
CM1	169		350mm metal slide set	7
CM1A			Right Drawer slide	
CM1B			Left drawer slide	
CM1C			Metallic slide for left sided panel	
CM1D			Metallic slide for right sided panel	
TP1	BR=45292		Tap hole 19mm	14
TP2	BR=8010		Tap hole 13mm	16
S5	18458		Black triangular support	14
ET	56076		Mirror	1
CG	899		Angle bracket	8
PX	62448		Handle	6
G			Screw	6
CZ3	58788		Allen key	1

Helpful Tips


INSTALLING CAM

Identify arrow on head of cam. Arrow **MUST** point toward hole in edge of panel. Push cam all the way down into hole.

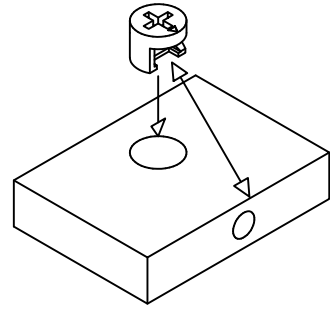



CAM AND DOWEL ALIGNMENT

Ensure the arrow on the cam points toward hole and insert cam dowel into hole. Make sure pieces join together.

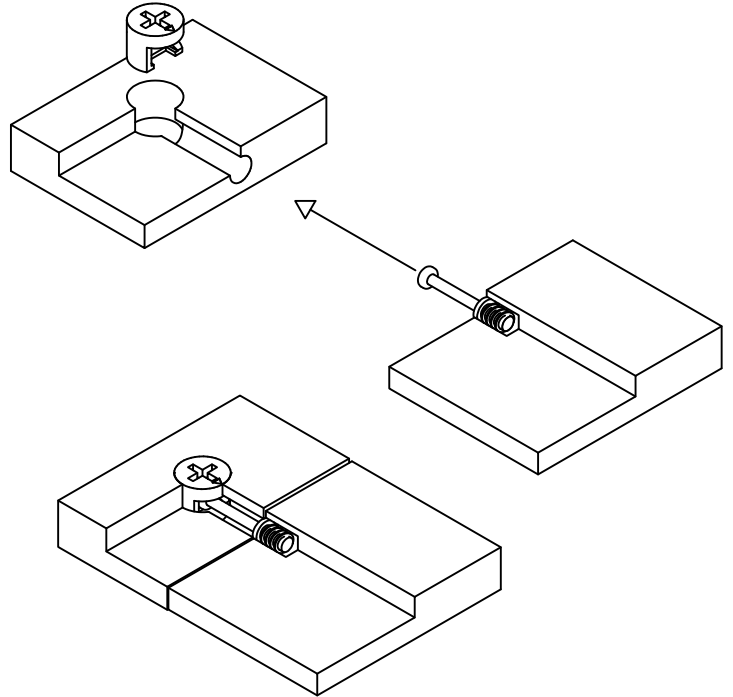

TIGHTENING CAM


Use screwdriver to turn cam. Turn cam (clockwise) until fully tightened. Slightly more than half a turn.

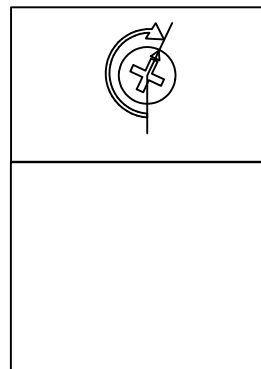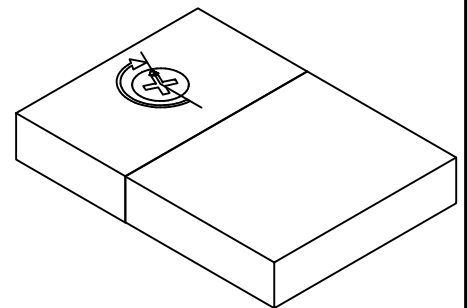


1A

Drawer Preassembly


This process is repeated three times

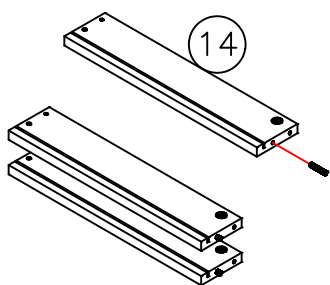

This process is repeated three times

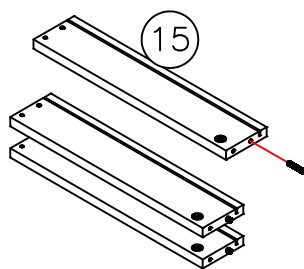

C1




22




1B

Drawer Preassembly


This process is repeated four times

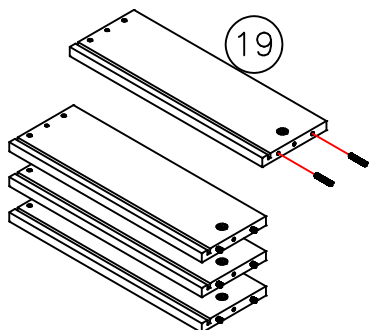

This process is repeated four times



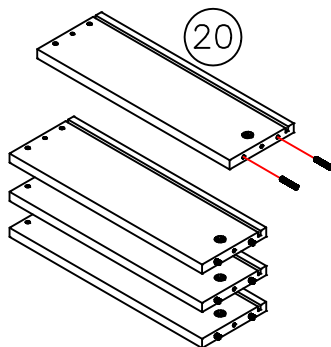


C1

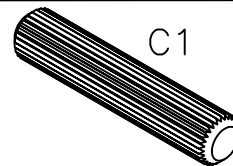



1C

Drawer Preassembly

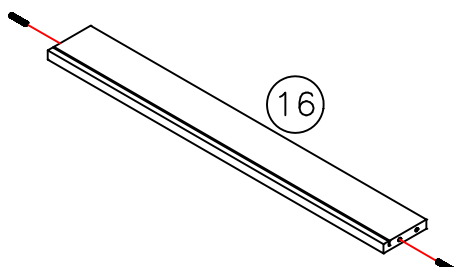


1D

This process is repeated twice

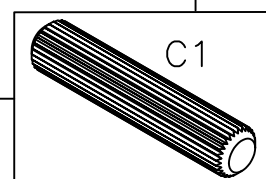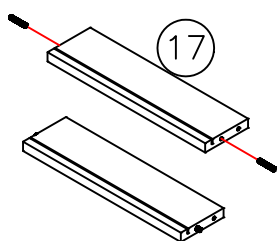




1E

This process is repeated four times

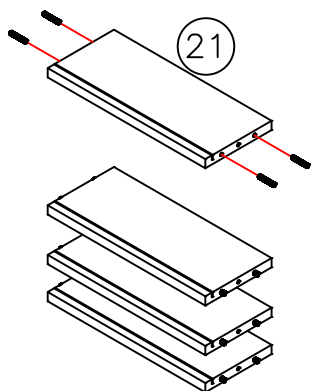




1F

Drawer Preassembly

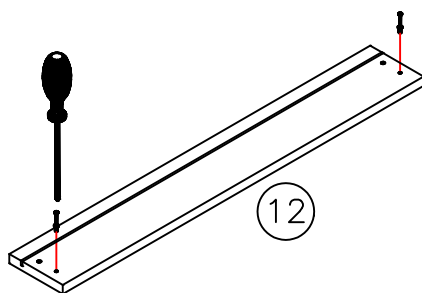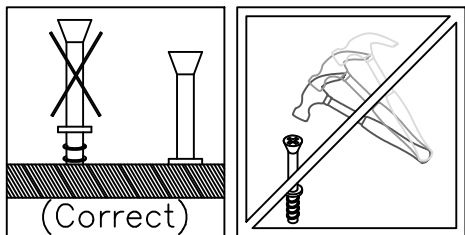





1G

This process is repeated twice

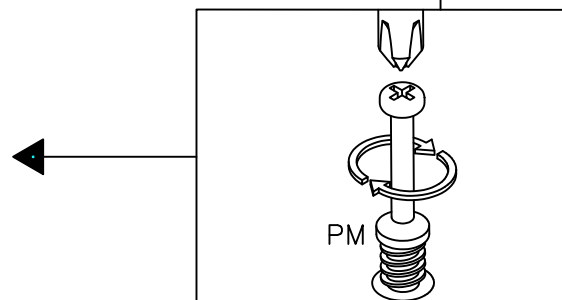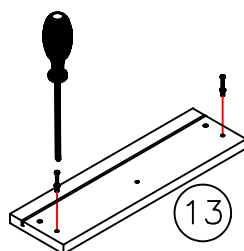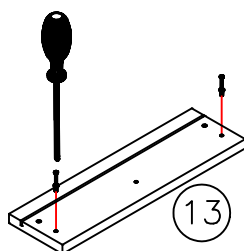


1H



This process is repeated four times

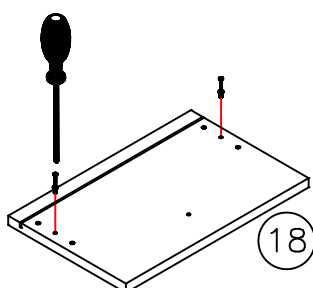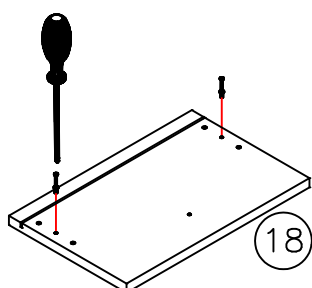
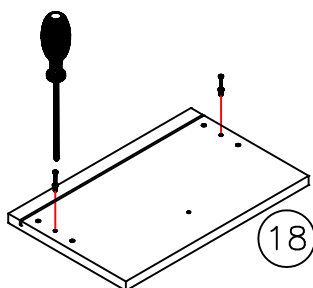
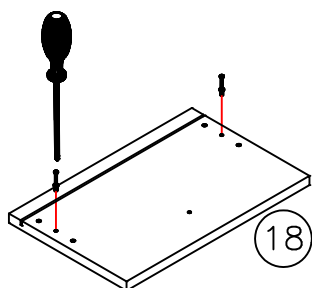


2




Drawers Mounting


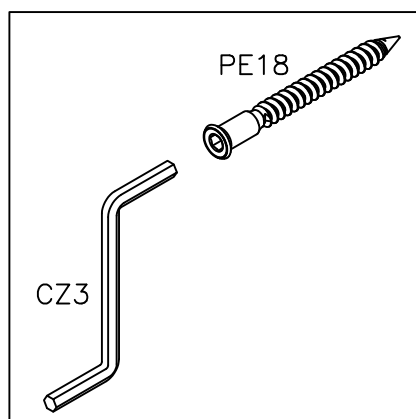


PE18		14
CZ3		1

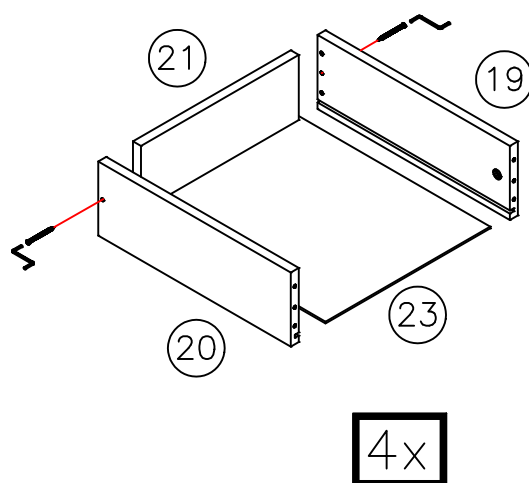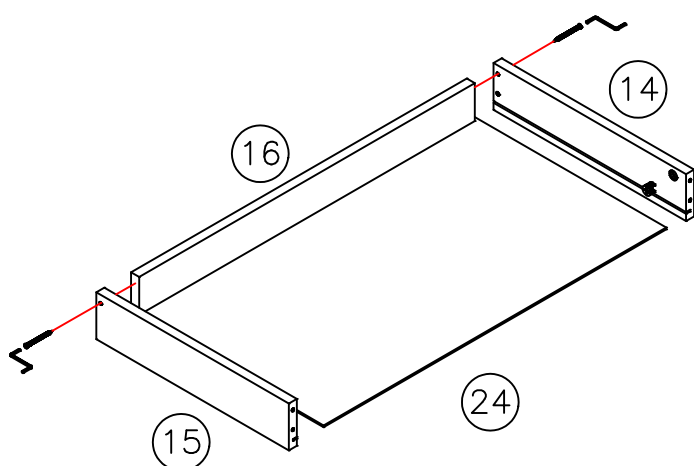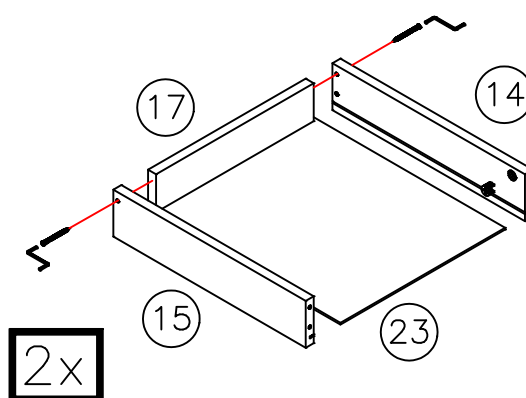


3

TM			14
TP1			14

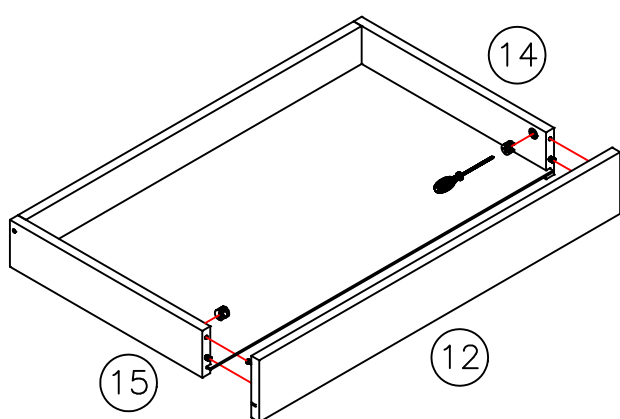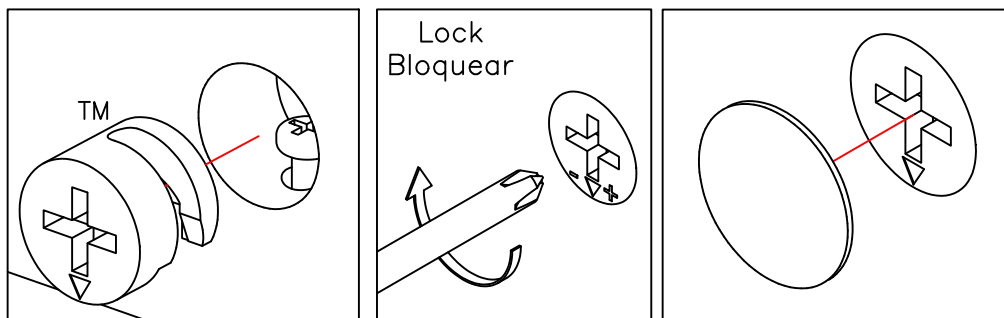


This process is repeated twice

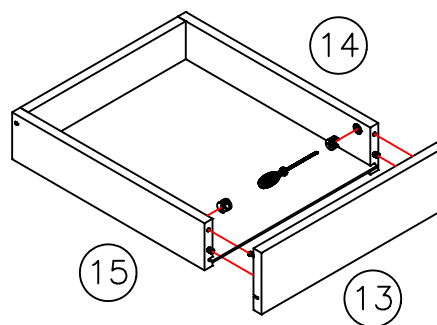

2x




This process is repeated four times



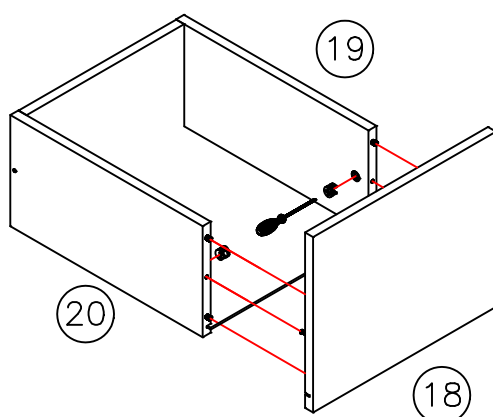


4x


4

Drawers Mounting

PC5			14
S5			14

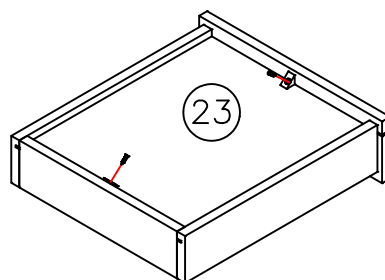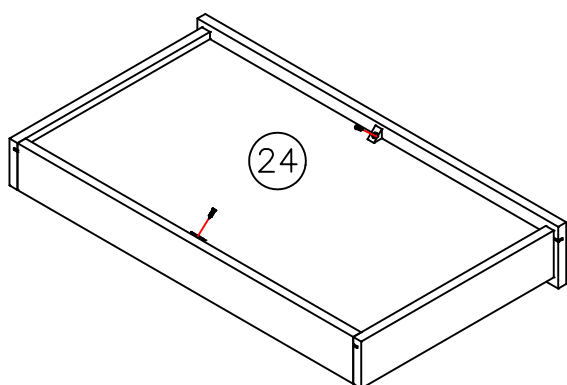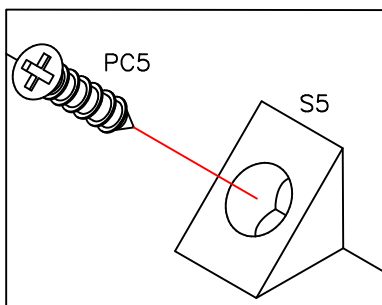


2x

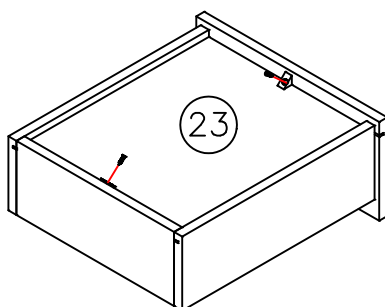

4x

5

Drawers Mounting




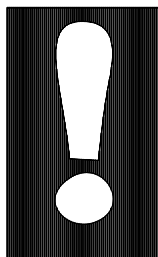


Please ensure that these screws are complete screwed in. As failure to do so could cause issues when installing the drawer.




Wheels should Always be towards the back of the Drawers


CM1A		7
CM1B		7
PC3		28

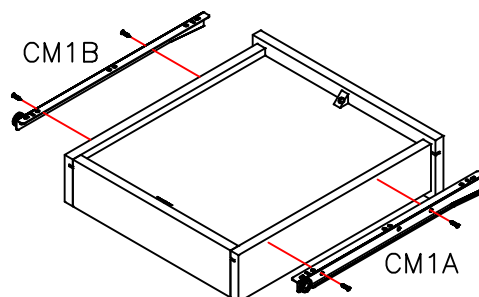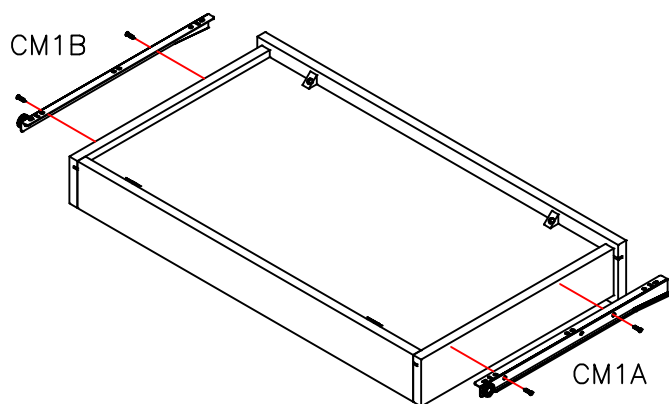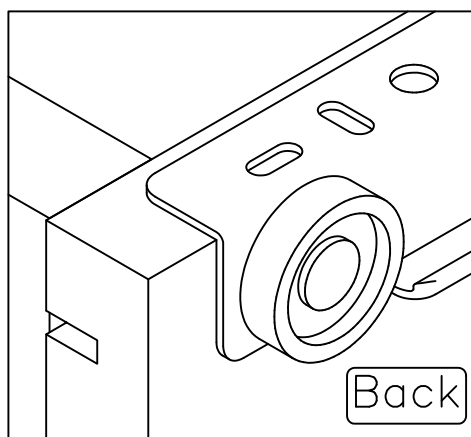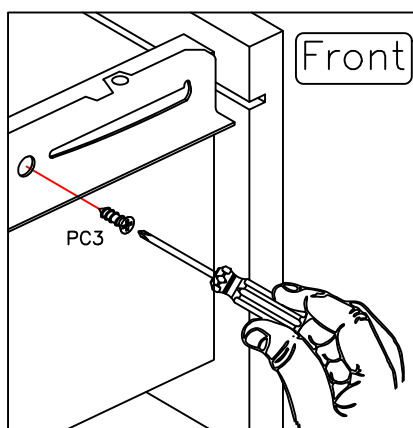

2x

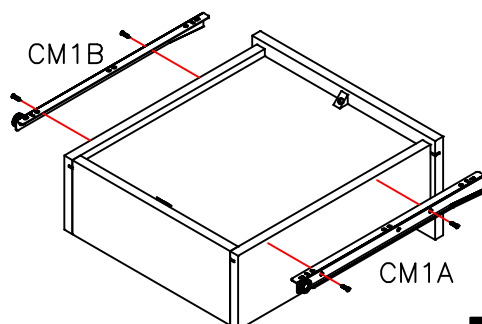



4x

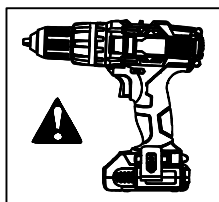


6

Drawer final assembly

PX		6
G		6

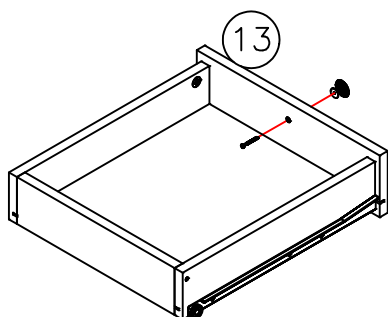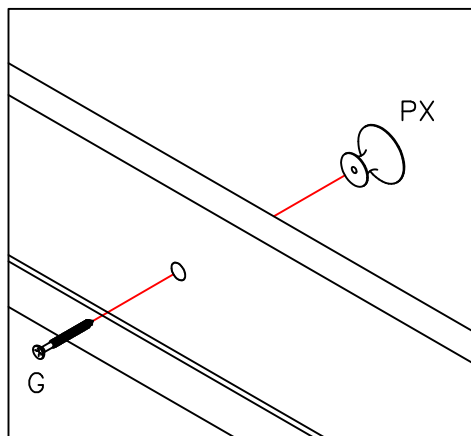


2x

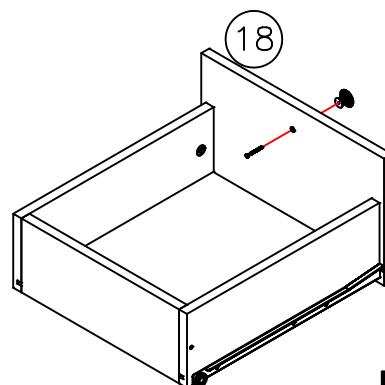








4x

Preassembly of parts

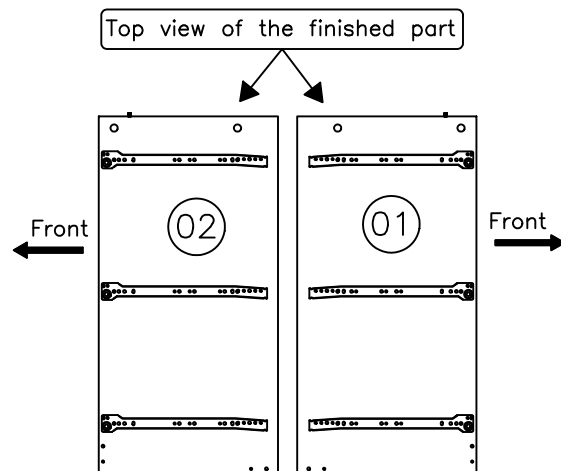


C1		2
PC3		12
CM4C		3
CM4D		3

Detailed view of CORRECT hole location in the rail for the "PC3" Screw

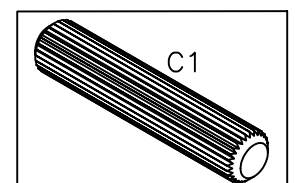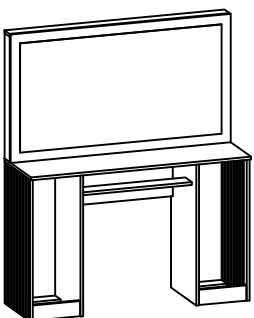
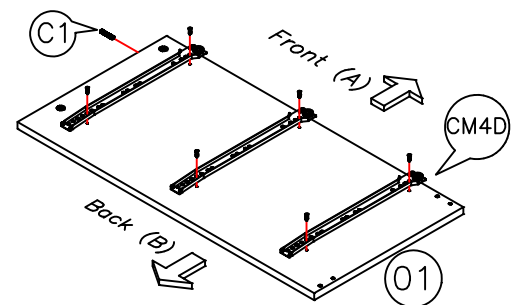
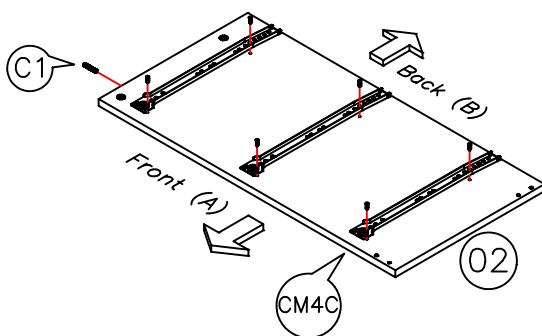
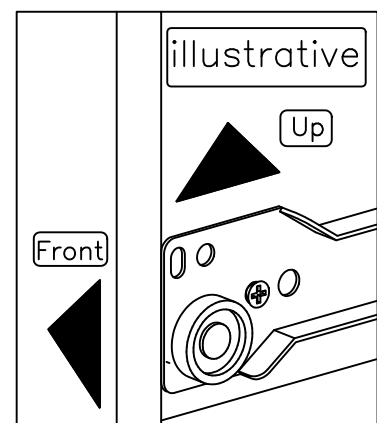
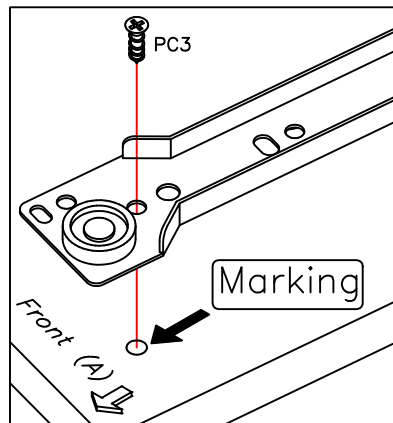
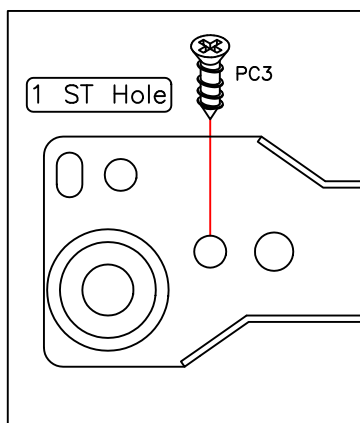


Preambly of parts

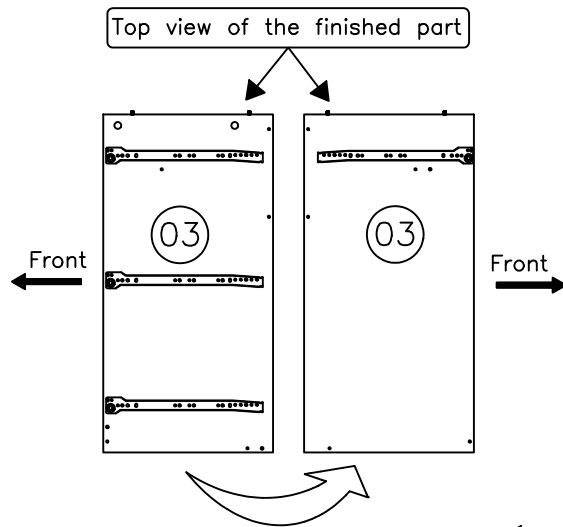


C1		2
PC3		8
CM4C		3
CM4D		1

Detailed view of CORRECT hole location in the rail for the "PC3" Screw

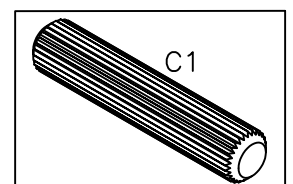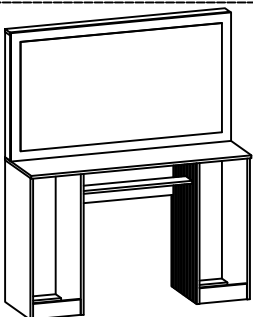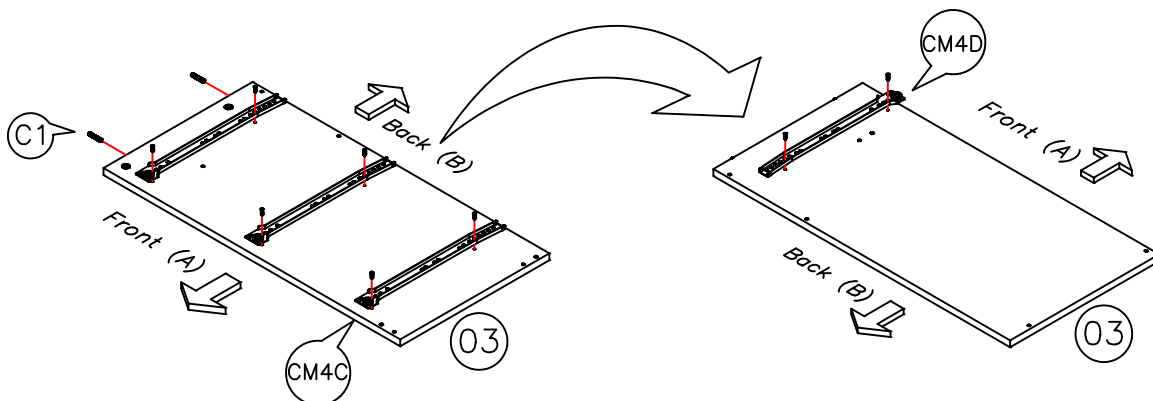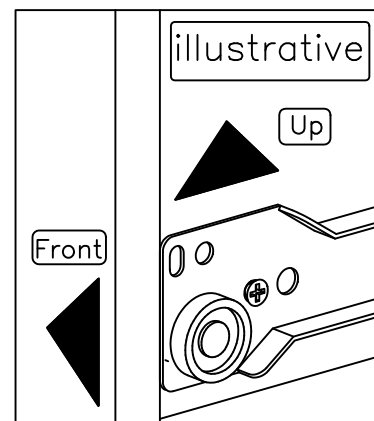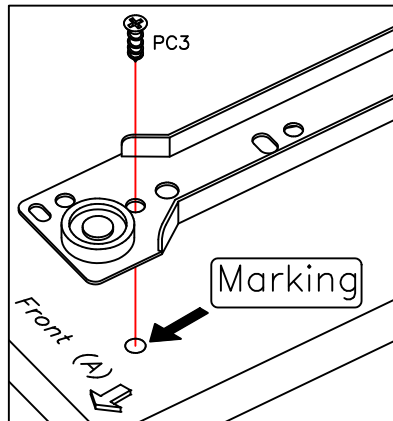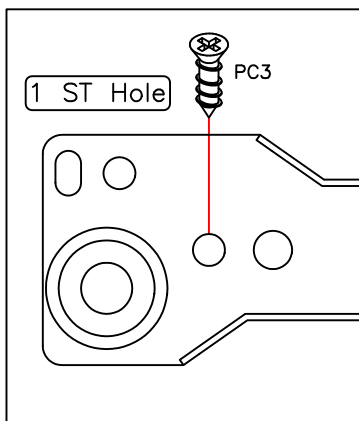







Preassembly of parts

Top view of the finished part

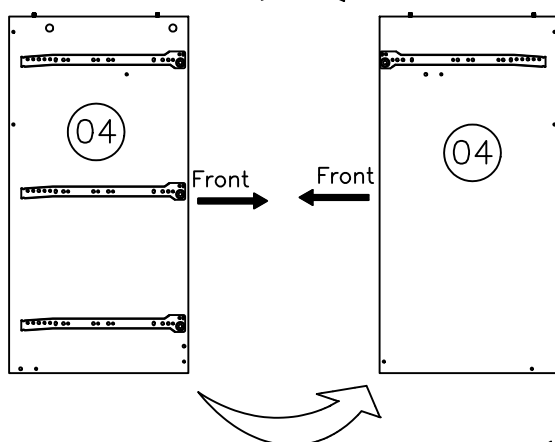







C1		2
PC3		8
CM4C		1
CM4D		3

Detailed view of CORRECT hole location in the rail for the "PC3" Screw

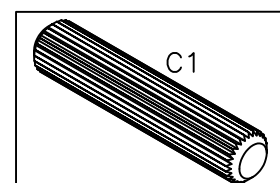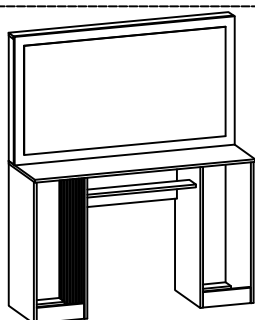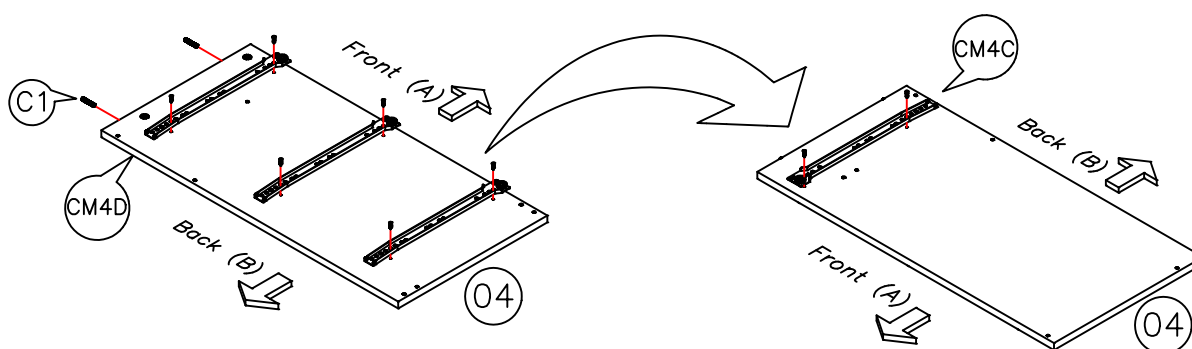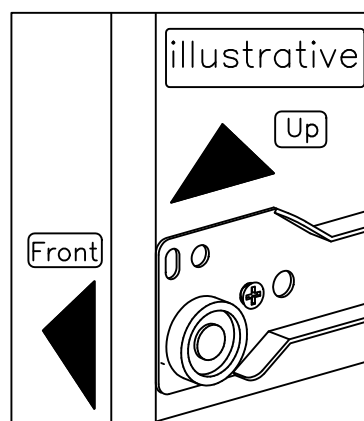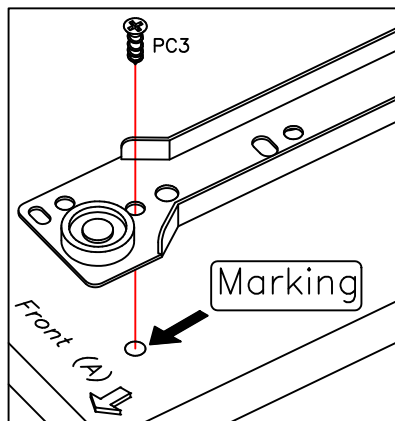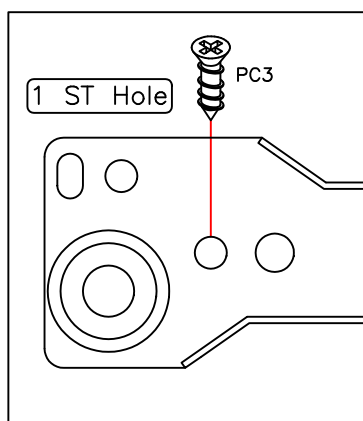


10

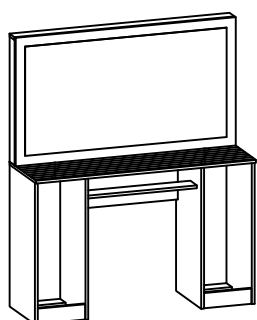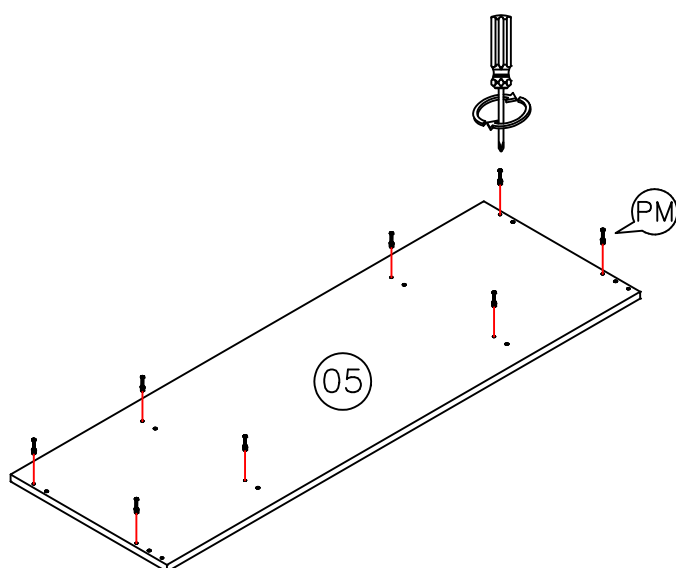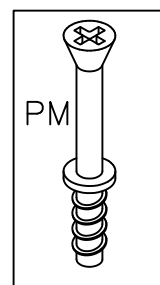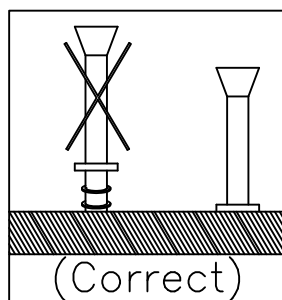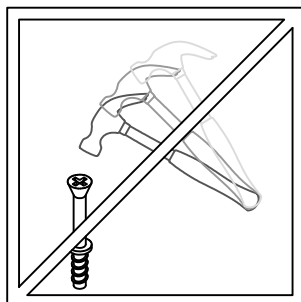

Preassembly of parts




11

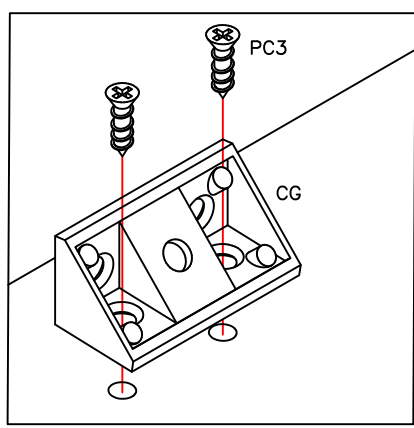
Preassembly of parts





PC3		16
CG		8

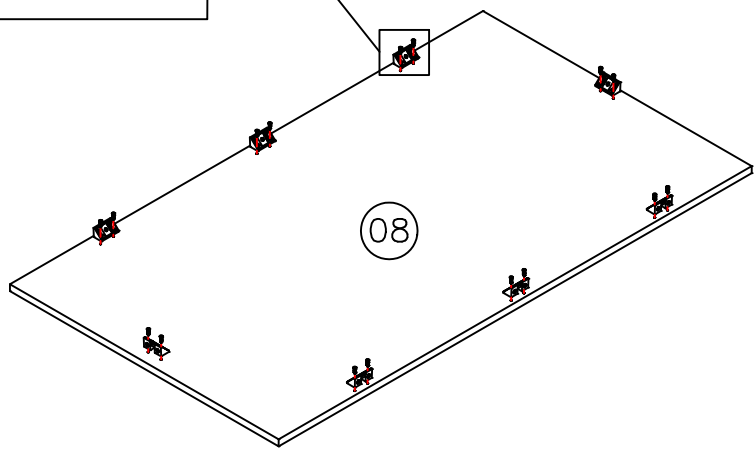



14



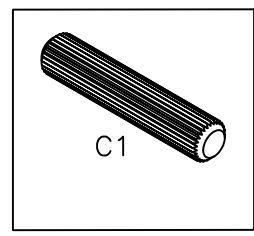






C1		10
----	---	----

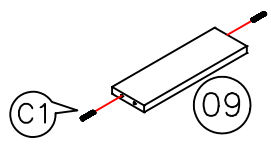


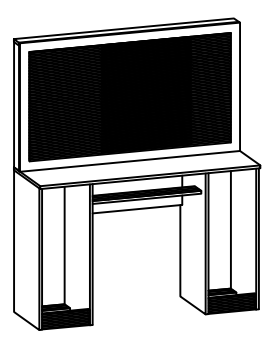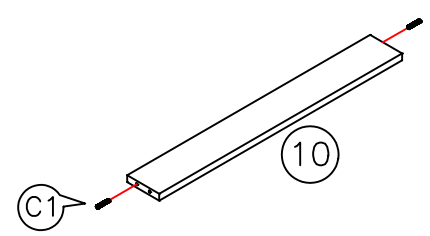





4x



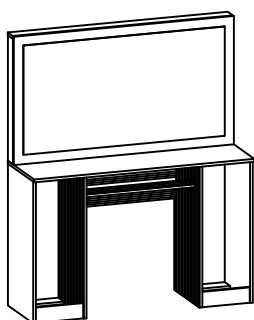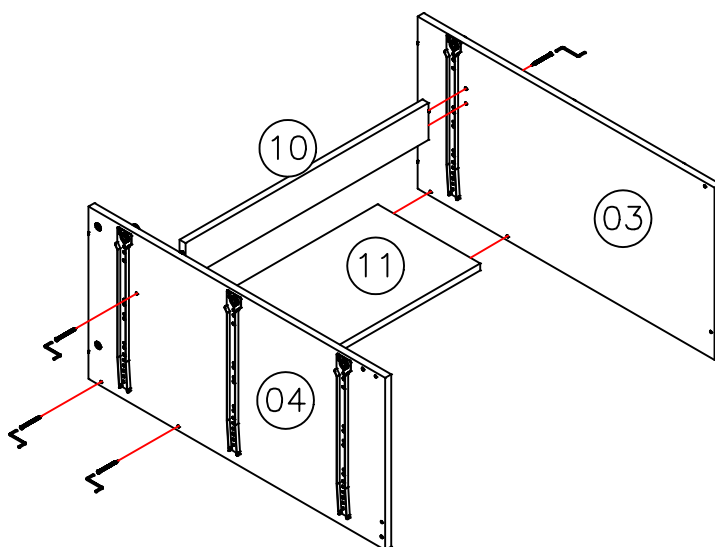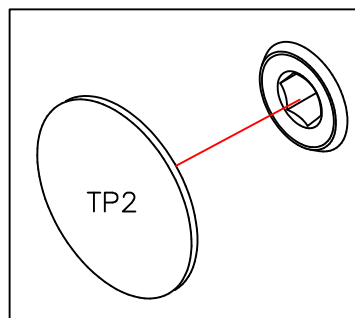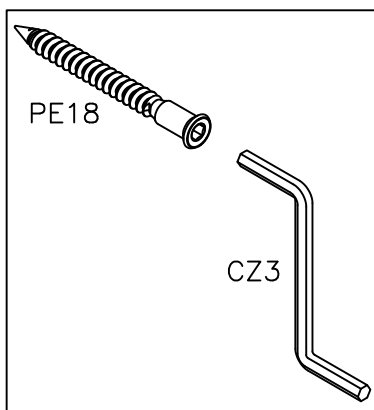






PE18		6
CZ3		1
TP2		6

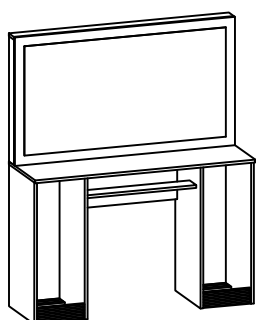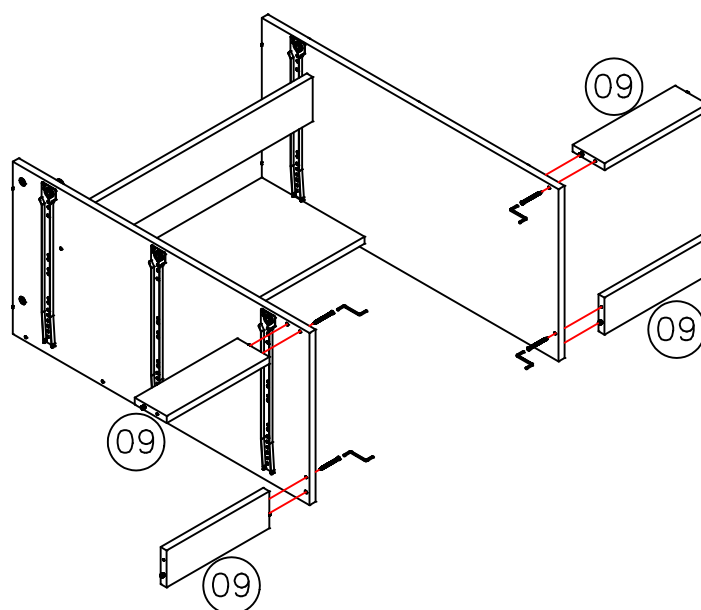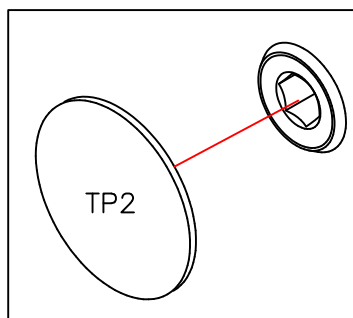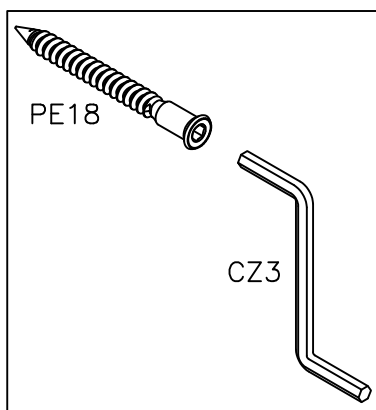



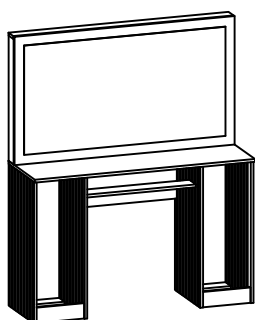
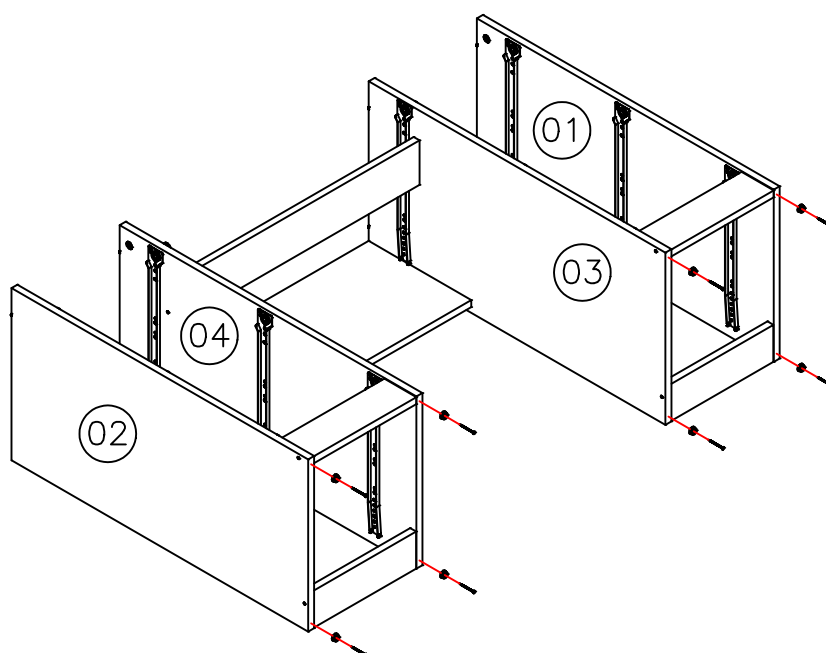
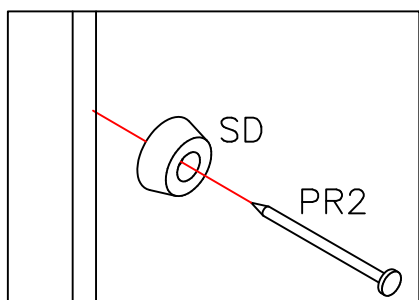
PE18		4
CZ3		1
TP2		4





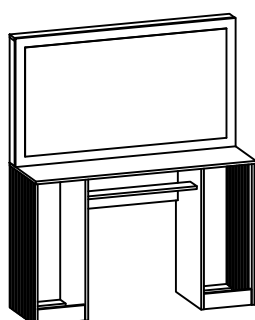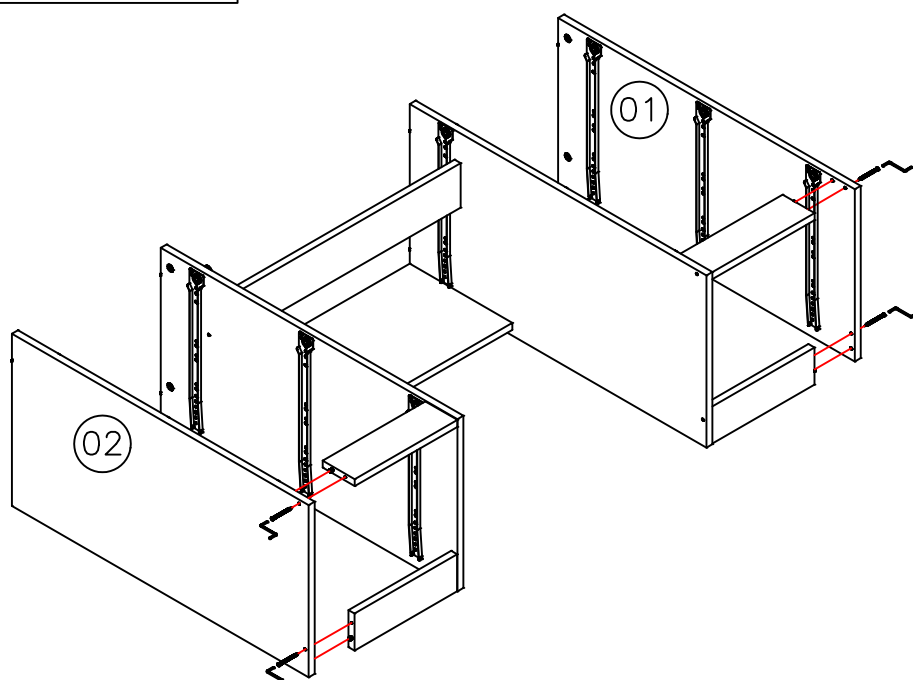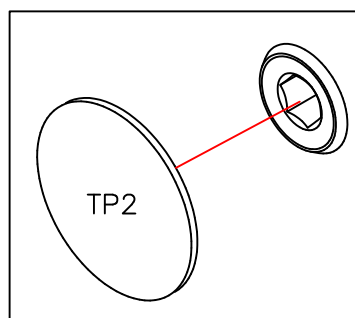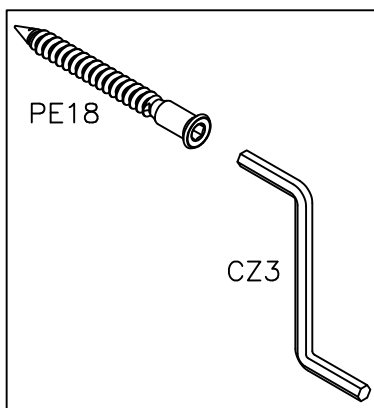PE18		4
CZ3		1
TP2		4



PR2		8
SD		8






Preassembly of parts


C2		2
C1		2






Please ensure that both Wooden Dowels C1 & C2 are installed on the same side. Example- C1 both on top & C2 both on bottom.

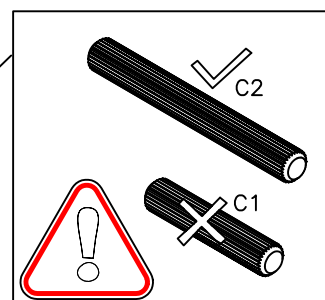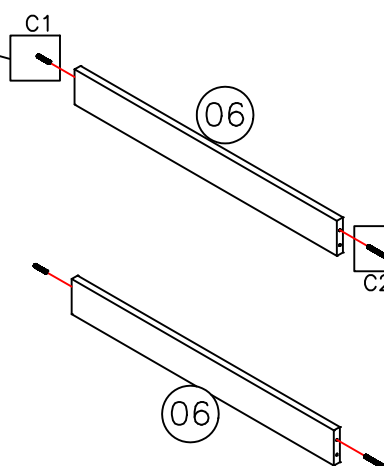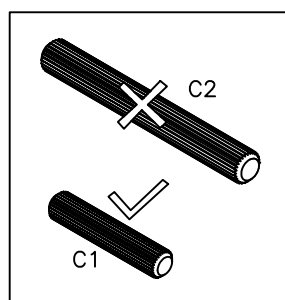





2x


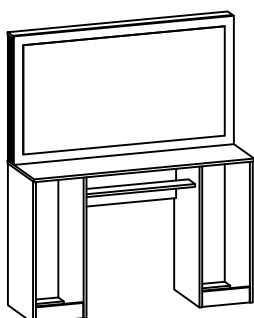


PE18		4
CZ3		1
TP2		2










Please ensure that when you are attaching part 07 it is installed on the side that has the short wooden dowels C1, as this is the top of the mirror.

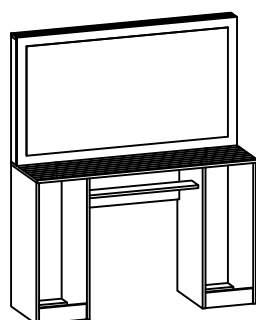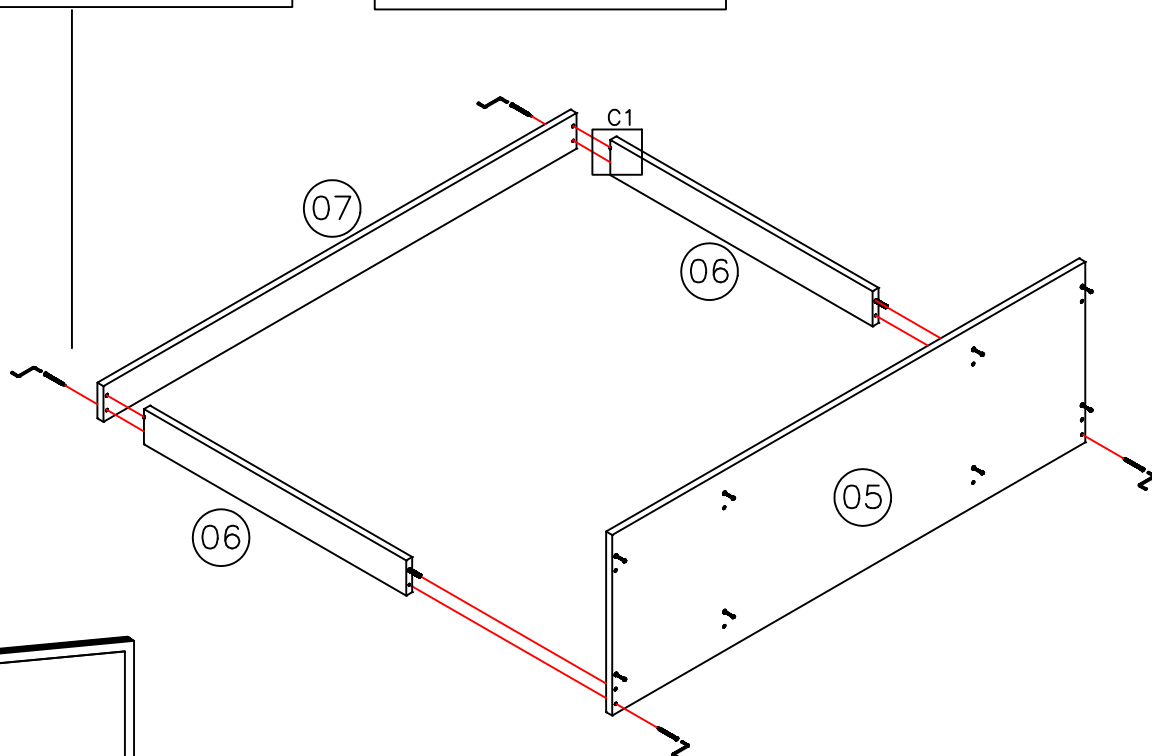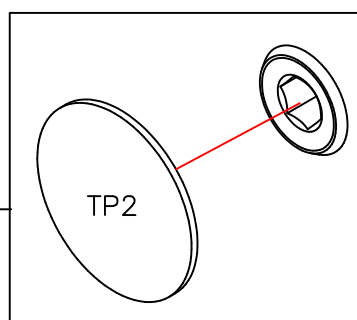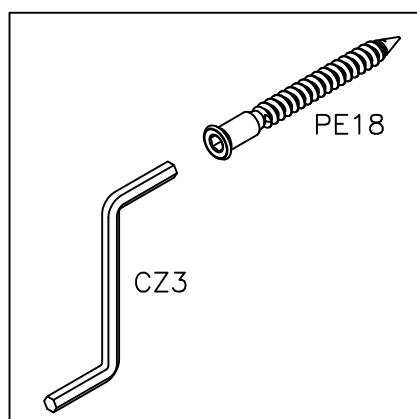


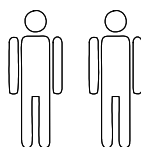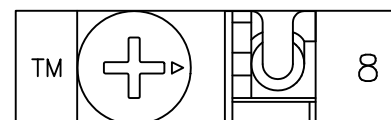

This step requires two people when installing the top portion of the vanity (as per this step), as this item is considered heavy and somewhat cumbersome.

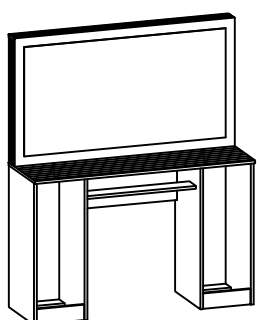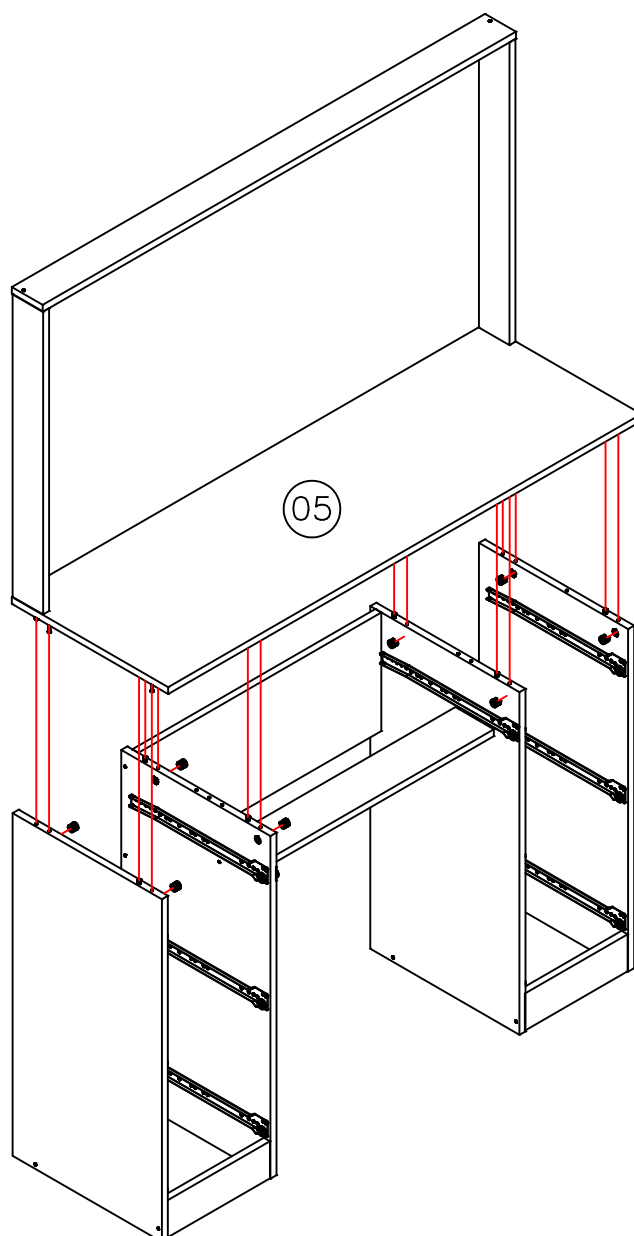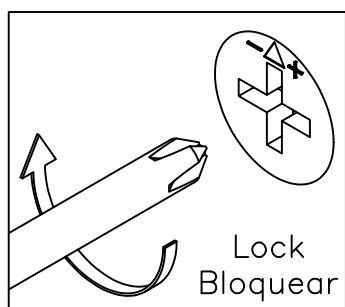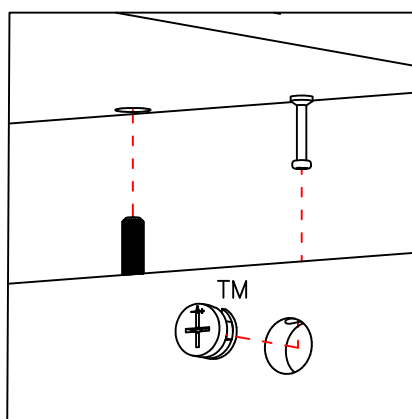

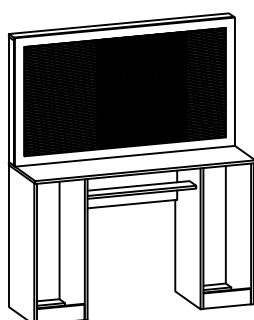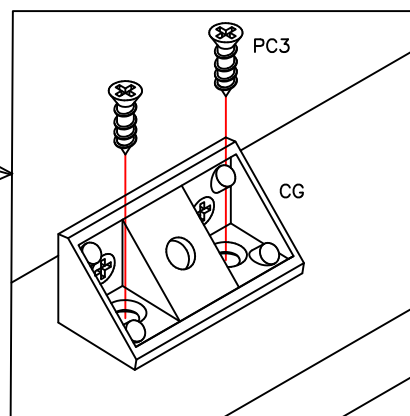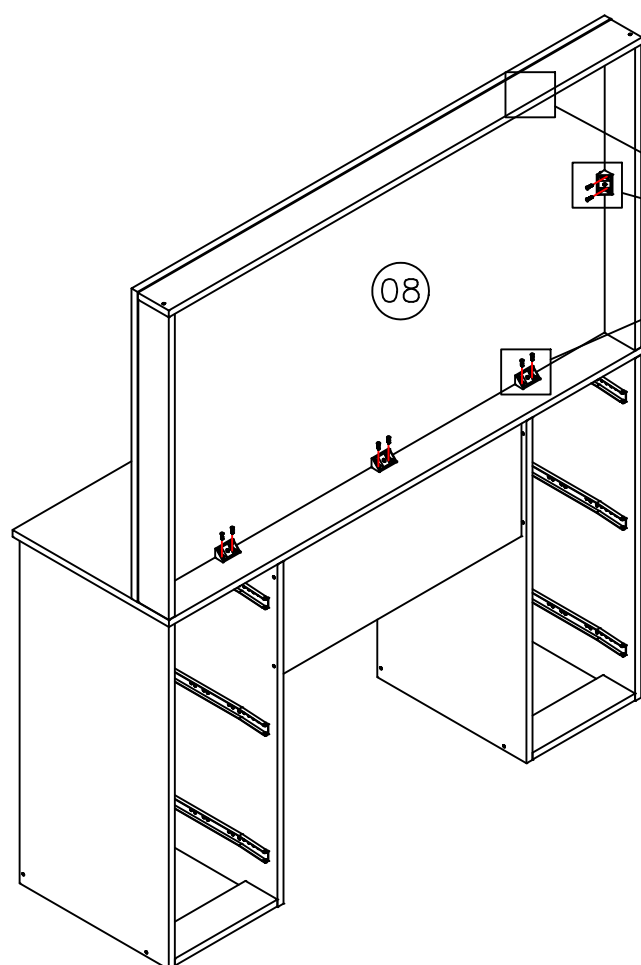








Attention: Ensure that when nailing the back parts in place, that it is being nailed as straight as possible to the top and sides.

Failure to do so can make the drawers appear crooked.

Note: It is essential to place the furniture strait/squared to avoid problems with the functioning and alignment of the Drawers and Doors.



After checking that the back panel is squared to the side and Top, nail the back panel in place.

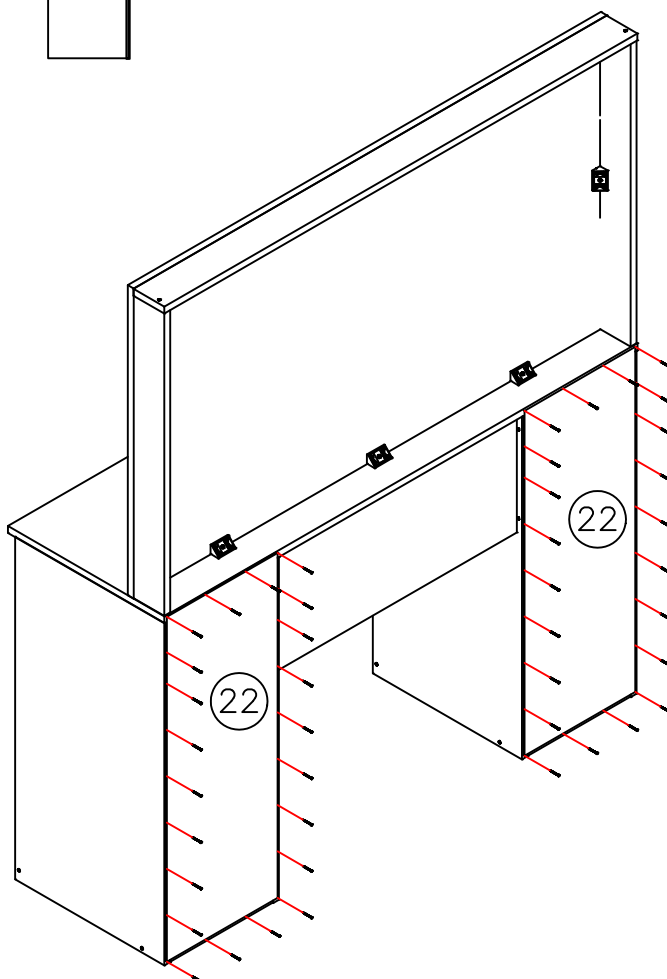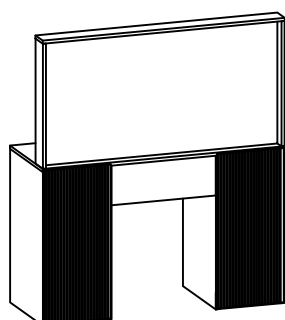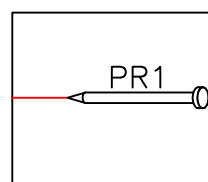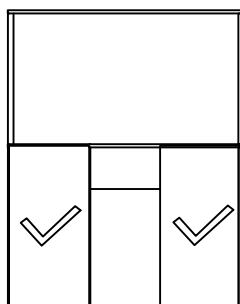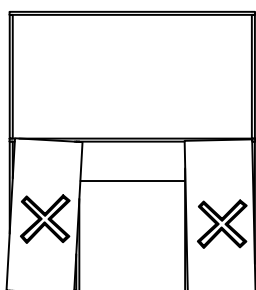





Drawer installation

Insert the slide into the profile and close the drawer to finish locking the clip.

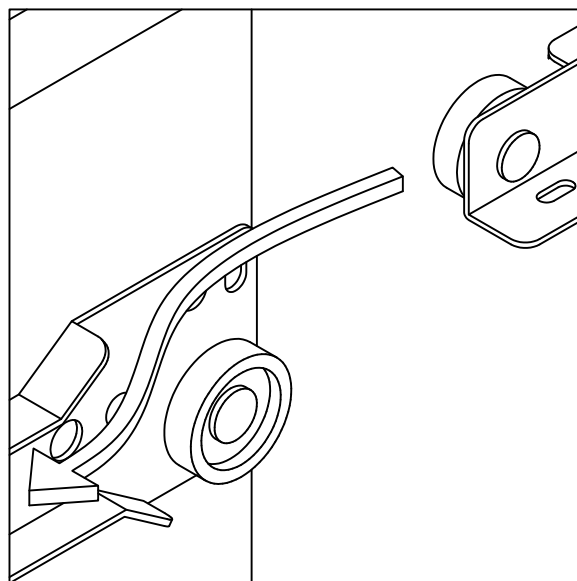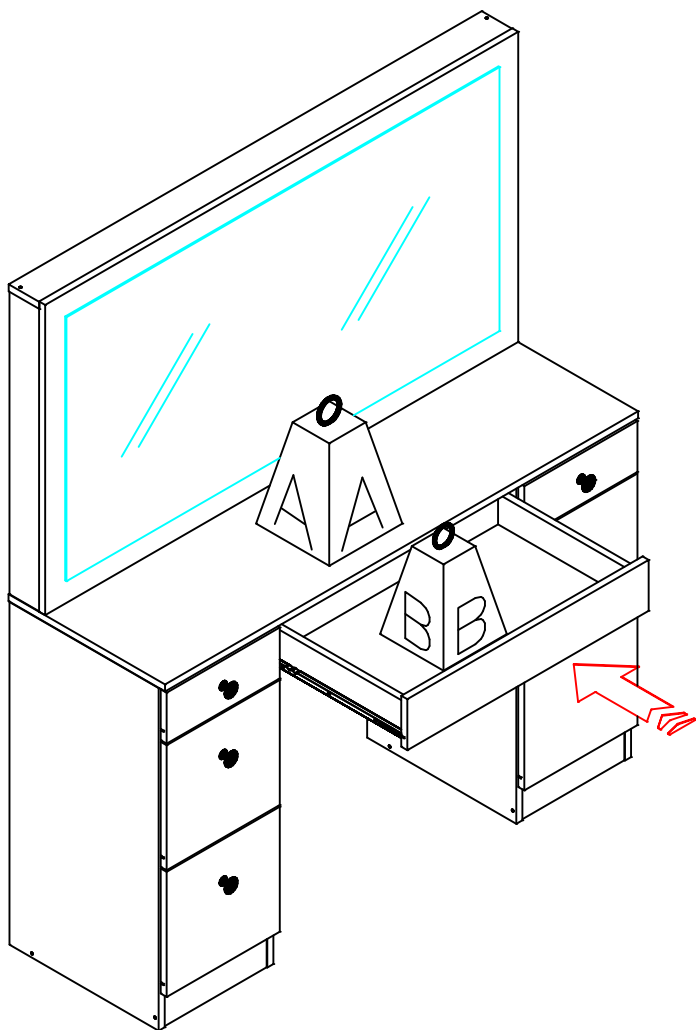


	Kg	lb
A	35	77.16lb
B	6	13.23lb

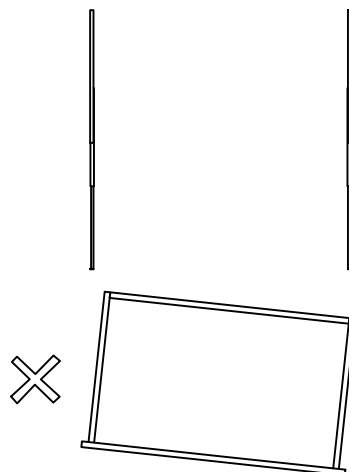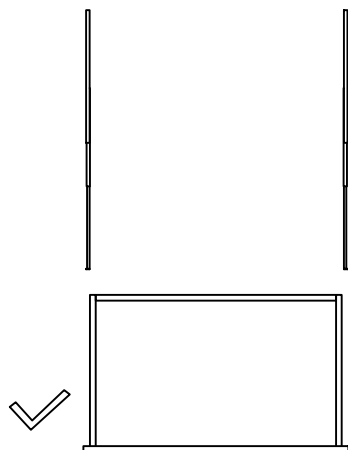


22 NOTE: Do not turn the DRYWALL ANCHOR into a wall stud. If you prefer to fasten the SAFETY ANTI-TIPPING to a wall stud, go to your local hardware store for proper hardware.


Compress the wings of anchor before inserting.

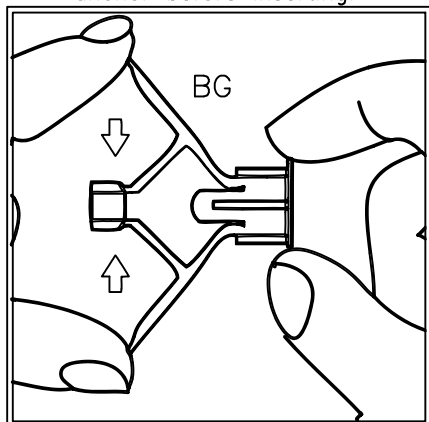


Insert the chuck into the hole of the base material.

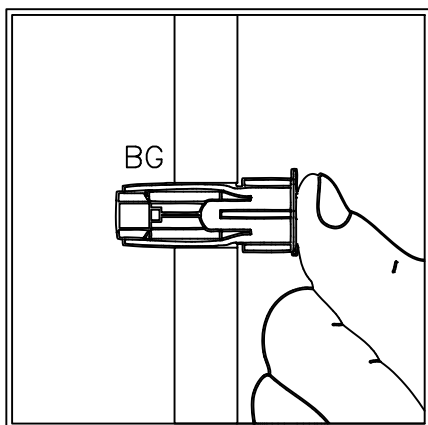

Position the object over the bushing and secure it with a screw.



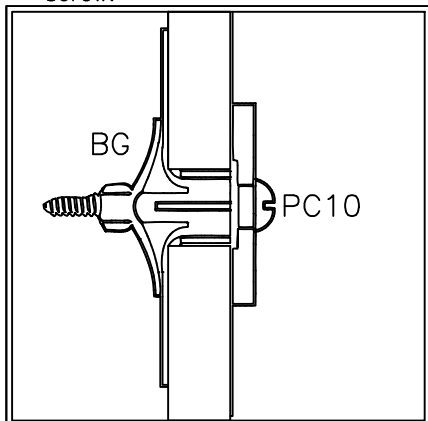


Anti-tipping installation			
SF		Mounting bracket	2
ANY		Clamp	1
PC10		Screw 4,5x50	2
PF4		Screw 3,5x16 BC	2
BG		Anchor	2

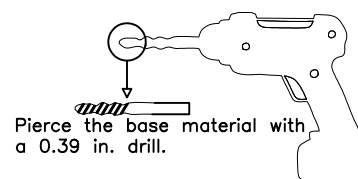

Important

- The minimum length of the screw must be the bushing length + object thickness that will be fixed.
- To guarantee the wing expansion function of the bushing, after the screw head is at the object to be fixed, one must continue to rotate the screw until maximum torque is reached.

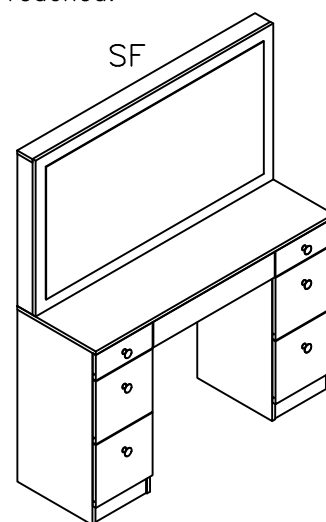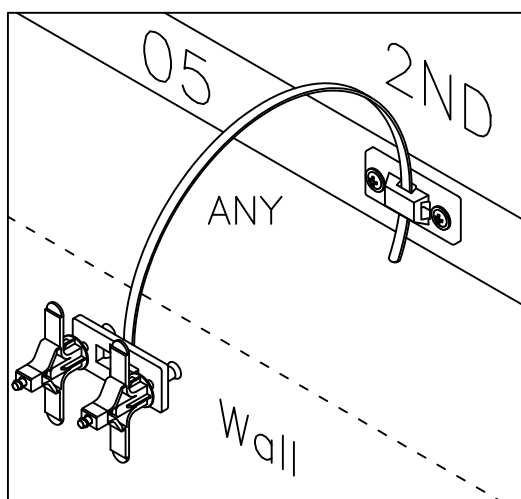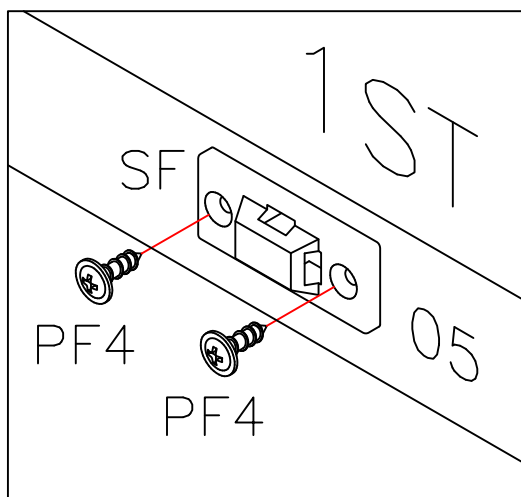

A WARNING - Anti-Tip Advisory

Potential of serious fatal crushing injuries may occur from furniture tip-over. To help prevent tip-over:




ALWAYS INSTALL the tip-over restrain that came with your furniture. This tip-over restrains only reduces but does NOT completely eliminate the risk of tip-over

- ALWAYS Place the heaviest items in the lowest/bottom drawer.
- NEVER place heavy objects on top of this product.
- NEVER allow children to scale/climb/hang on the drawers, doors, or shelves.
- NEVER open more than one drawer at a time.

B ADVERTENCIA - Aviso antivuelco

Pueden producirse lesiones graves por aplastamiento mortales debido al vuelco de los muebles. Para ayudar a prevenir vuelcos:

- SIEMPRE INSTALE el sistema de retención que viene con sus muebles. Este sistema antivuelco solo reduce pero NO elimina por completo el riesgo de vuelco.
- SIEMPRE coloque los artículos más pesados en el cajón más bajo /inferior.
- NUNCA coloque objetos pesados encima de este producto.
- NUNCA permita que los niños escalen, trepen o se cuelguen de los cajones, puertas o estantes.
- NUNCA abra más de un cajón a la vez

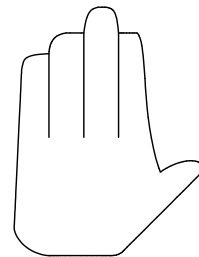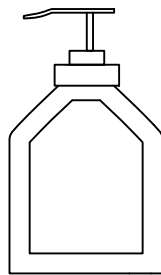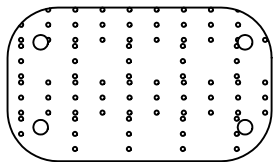

To Remove the printed number, apply a small amount of Glass Cleaner or Hand sanitizer and wipe with a paper towel.

