




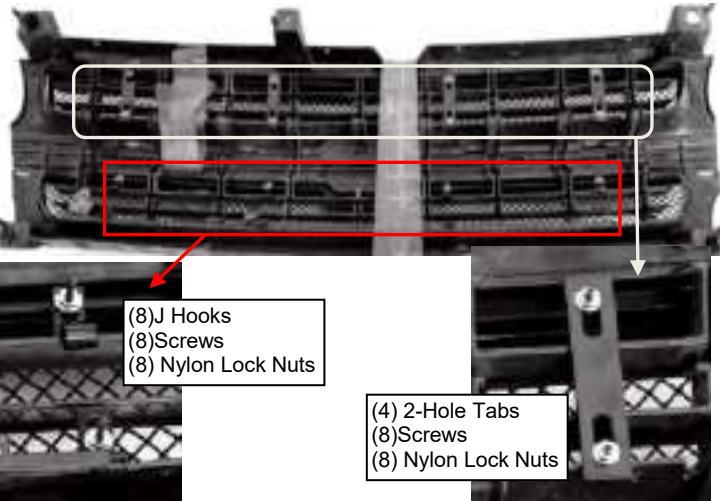

Grille Installation Instruction

Rev. 180401

| | | | |
|-------|-----------|-------------|---|
| Part# | C75701T/H | Application | For 1999-2002 Chevy Silverado 1500/1500HD / 2000-2006 Chevy Suburban / 2000-2006 Chevy Tahoe/ 1999-2000 Chevy Silverado 2500/2500HD/3500 |
|-------|-----------|-------------|---|

| Parts List | Item | Part Name | QTY | Description | Item | Part Name | QTY | Description |
|------------|------|-------------|-----|-----------------|------|-----------------|-----|-------------|
| | 1 | Mesh Grille | 2 | Stainless steel | 4 | Screws | 16 | 6-32 × 2 " |
| | 2 | 2-Hole Tabs | 4 | | 5 | Nylon Lock Nuts | 16 | 6-32 |
| | 3 | J Hooks | 8 | | | | | |

Install Notes: Overlay ☒ Replacement ☐ Drill ☐ Cut ☐

| Step | Description | illustration |
|------|--|--|
| 1 | Identify the grille & hardware with parts list. |  |
| 2 | Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. | |
| 3 | Center the billet grille into the OE grille shell opening. Thread a screw in each nut welded to the grille. |  |
| 4 | For the upper piece, and from the rear of the OE grille shell, place a tab on each screw. Now thread a lock nut on each screw to secure the upper grille piece. | |
| 5 | For the lower piece, and from the rear of the OEM grille shell, place a J hook on each screw. The J hook should hook on the OE grille shell as shown in the picture. Now thread a lock nut on each screw to secure the lower grille piece. | |
| 6 | Make sure the billet grille is centered and tighten the fasteners, but do not over-tighten. | |
| 7 | Reinstall the black plastic cover which was removed in step 2. | |
| 8 | Installation completed. |  |

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!