




The Thompson Canopy Bed

MAIDEN HOME

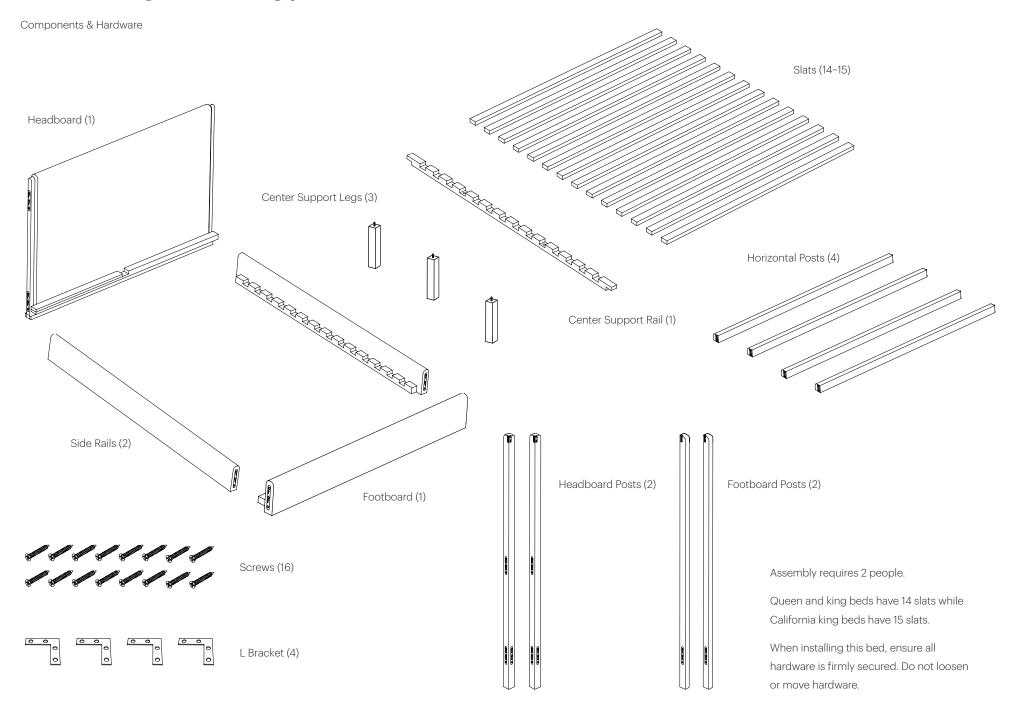


Component Labels

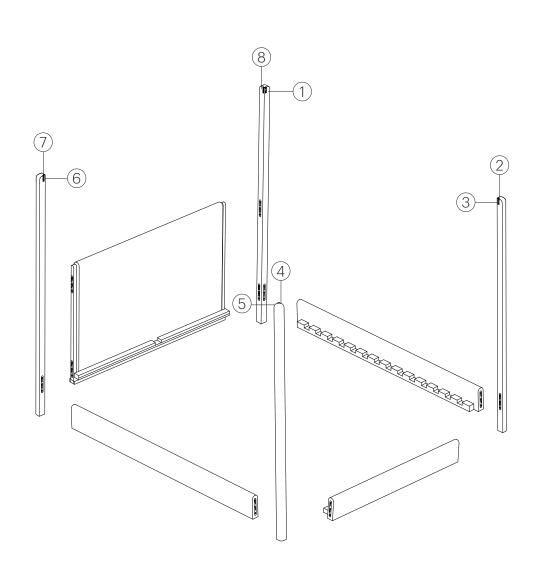

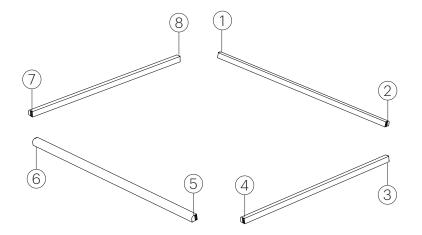


Please note that all horizontal posts, headboard posts, and footboard posts are labeled with numbers to ensure proper assembly. The labels are located at the ends of the horizontal posts and next to the receiving bracket of the headboard and footboard posts. As shown in the diagram, the numbers on the horizontal posts correspond with the numbers on the headboard and footboard posts.

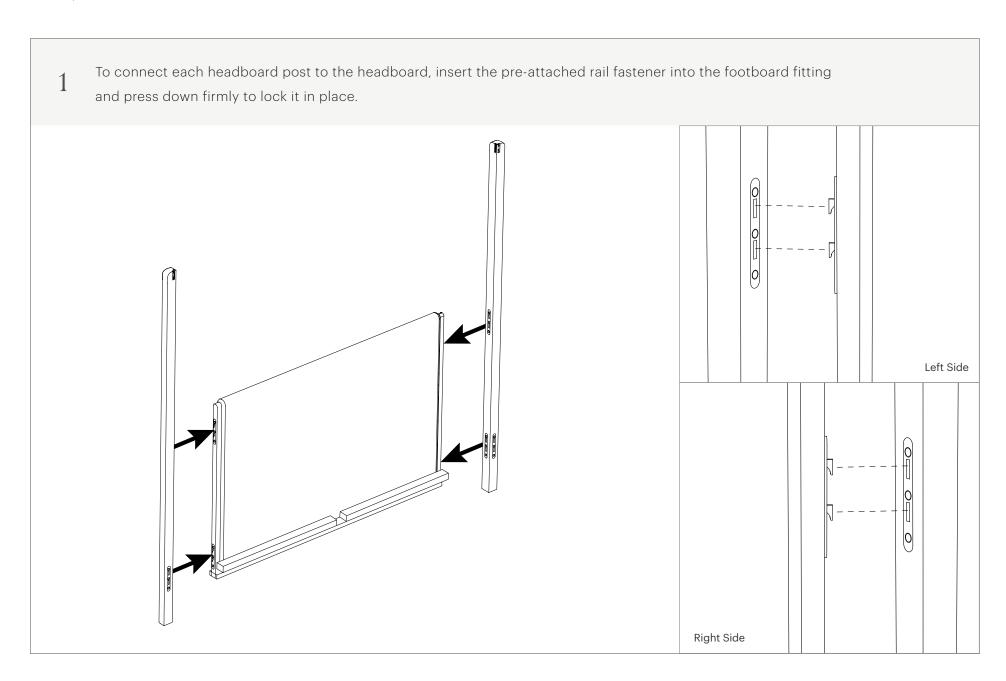



To connect each side rail to the headboard, insert the pre-attached rail fastener into the headboard fitting and press down firmly to lock it in place. Left Side Cardinal Andrews of the Cardin Right Side

To connect each footboard post to each side rail, insert the pre-attached rail fastener into the footboard fitting and press down firmly to lock it in place. Left Side Right Side

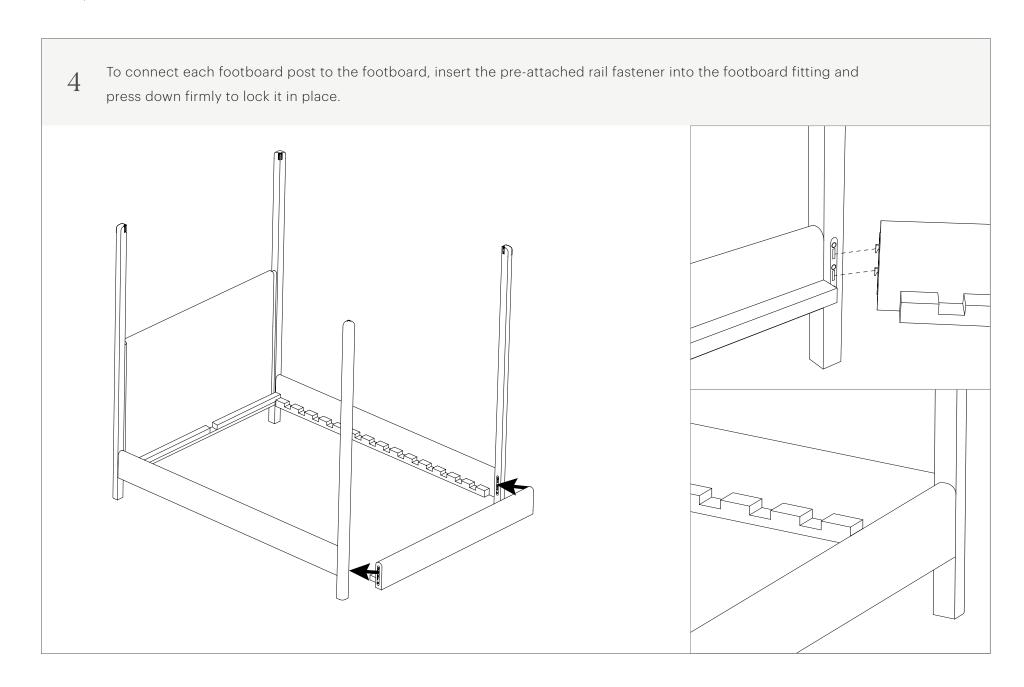


To connect the horizontal posts to the headboard and footboard posts, slot the attached brackets into the receiving brackets. Be sure to match the numbers on the ends of the horizontal posts to the corresponding numbers on the headboard and footboard posts, which are located near the receiving brackets.

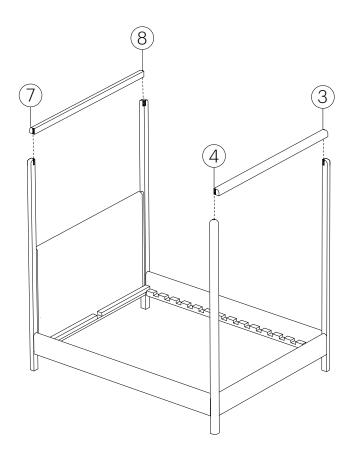

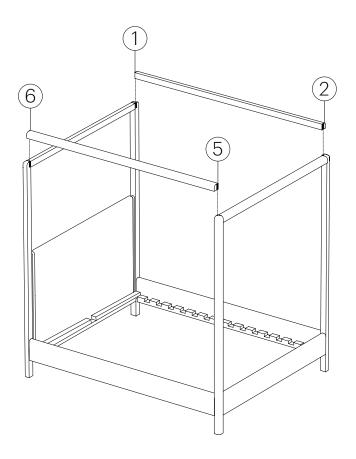


Attach the L brackets to the horizontal posts with the screws provided. Use the pre-drilled holes to guide placement of the brackets.


7 Screw the center support legs into the center support rail, with the metal T-nuts facing upward.

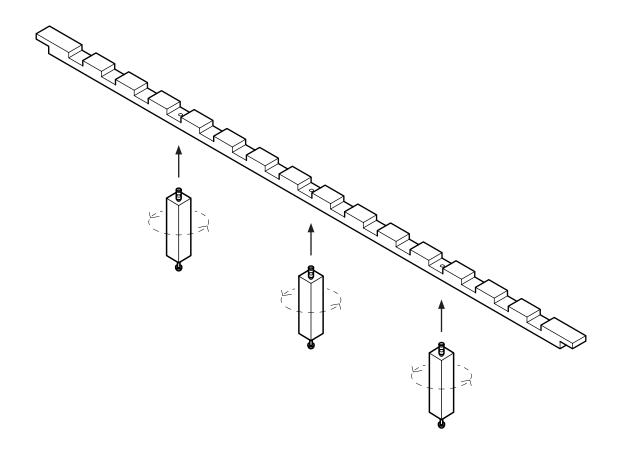

Place the center support rail inside the bed frame. Adjust the glides on the center support legs as needed, ensuring the legs stand straight and are flush to the floor.

Place the slats inside the bed frame. Note that the slat pocket is designed to be slightly wider than the slat for ease of assembly.

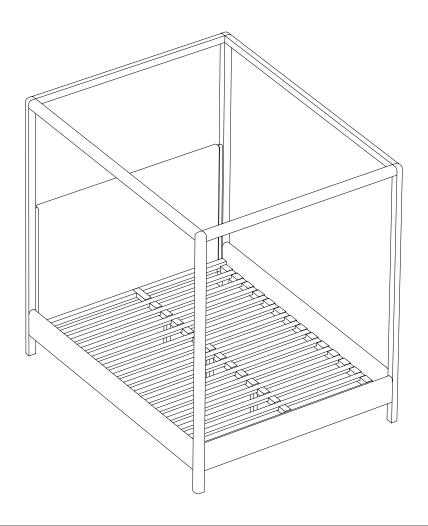

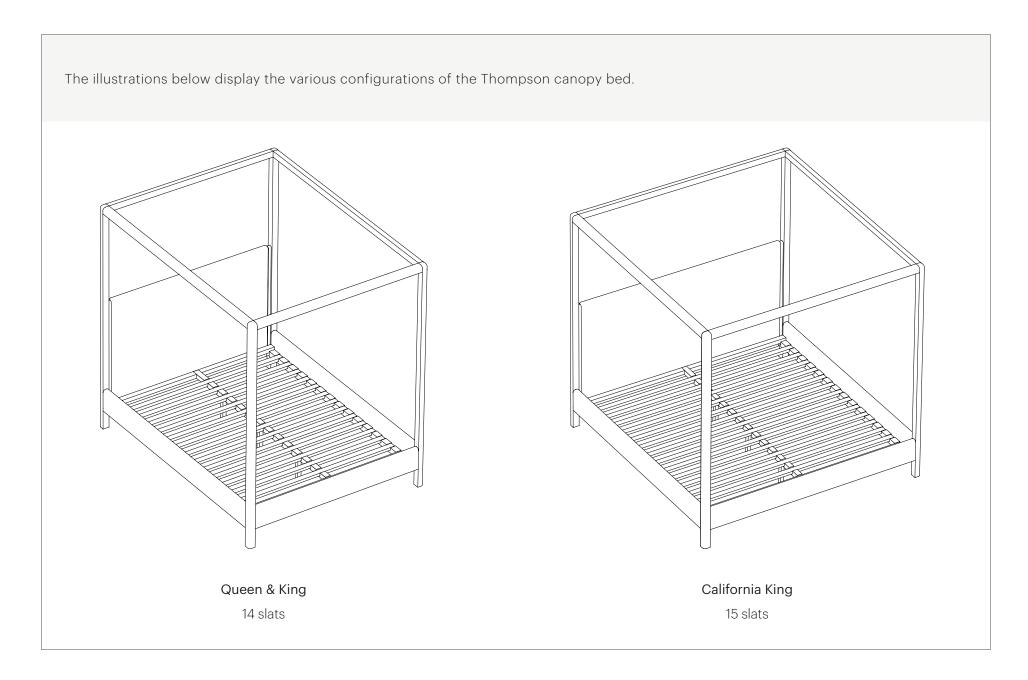

Assembly Checklist

Review the checklist below to ensure your Thompson canopy bed is properly assembled.	
Ensure all slats are present.	
Ensure all slats are lying flat.	
 Ensure all hardware is firmly secured. Do not loosen or move hardware. 	
Ensure center support legs are level.	
 Ensure all 4 L bracket are securely installed on the horizontal posts. 	
 Should you need to move this piece for any reason— including installing a rug beneath it—disassemble it first, then reassemble in the desired position. 	