
Quick Start Guide


If you are a Windows user, please find the appropriate keycaps in the box, then follow the instructions below to find and replace the following keycaps.

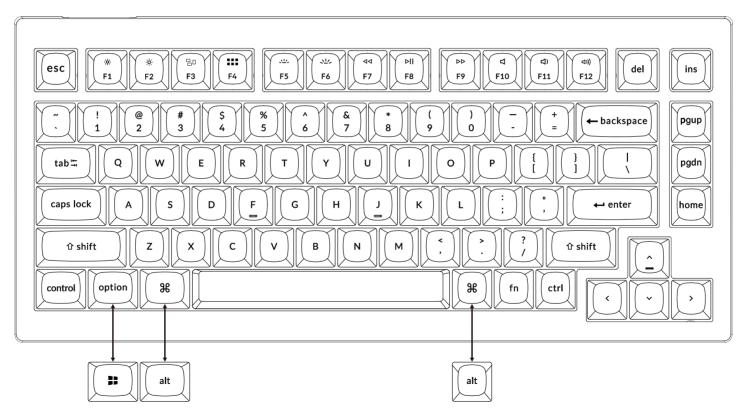



1 Switch To The Right System

Please make sure the system toggle on the top left corner has been switched to the same system as your computer's operating system.



3 The Layers

There are four layers of key settings on the keyboard. The layer 0 and layer 1 are for the Mac system. The layer 2 and layer 3 are for the Windows system.




If your system toggle is switched to Mac, then the layer 0 will be activated. If your system toggle is switched to Windows, then the layer 2 will be activated. Remember that if you are using it in Windows mode, please make changes to the layer 2 instead of the top layer (the layer 0). This is a common mistake people are making.



5 Adjust The Backlight Brightness

Press fn + W to increase the backlight brightness



Press fn + S to decrease the backlight brightness



7 Watch The Building Tutorial On Our Website

If you are building the keyboard for the first time, we highly recommend you watch the building tutorial video on our website first, then start building the keyboard yourself.




2 The VIA Key Remapping Software

Please visit <u>caniusevia.com</u> to download the latest VIA software to remap the keys. If the VIA software cannot recognize your keyboard, please reach out to our support to get the instruction.




4 The Backlight

Press fn + Q to change the lighting effect



Press fn + tab to turn the backlight on/off



6 Warranty

The keyboard is highly customizable and easy to be rebuilt. If anything goes wrong with any of the keyboard components of keyboard during the warranty period, we will only replace the defective parts of the keyboard, not the whole keyboard.



8 Factory Reset

Not Happy

□ support@keychron.com



Troubleshooting? Don't know what's going on with the keyboard?

- 1) Try factory reset by pressing fn + J + Z (for 4 seconds).
- ② Download the right firmware for your keyboard from our website. Remove the power cable from the keyboard.
- ③ Remove the space bar keycap to find the reset button on the PCB.
- Hold the reset key while plugging in the power cable and then release the reset key. The keyboard now will enter DFU mode.
- (5) Flash the firmware with the QMK Toolbox.
- (6) Factory reset the keyboard again by pressing fn + J + Z (for 4 seconds).
- * Step by step guide can be found on our website.

V1 Non-Knob Version Keymap JSON file:

https://cdn.shopify.com/s/files/1/0059/0630/1017/files/v1_ansi_rev1.05.json.zip?v=1657697399

VIA Software for macOS:

https://github.com/the-via/releases/releases/download/v1.3.1/via-1.3.1-mac.dmg

VIA Software for Windows:

https://github.com/the-via/releases/releases/download/v1.3.1/via-1.3.1-win.exe

VIA Software for Linux:

https://github.com/the-via/releases/releases/download/v1.3.1/via-1.3.1-linux.deb

How to Use VIA on Your Keychron V Series Keyboard:

https://www.keychron.com/blogs/archived/how-to-use-via-to-program-your-keyboard