


The screw according to the line direction to go through the hole and lock with ① toe plate and connection.


PS: The screw can't be locked too tightly.

●The Second Step●

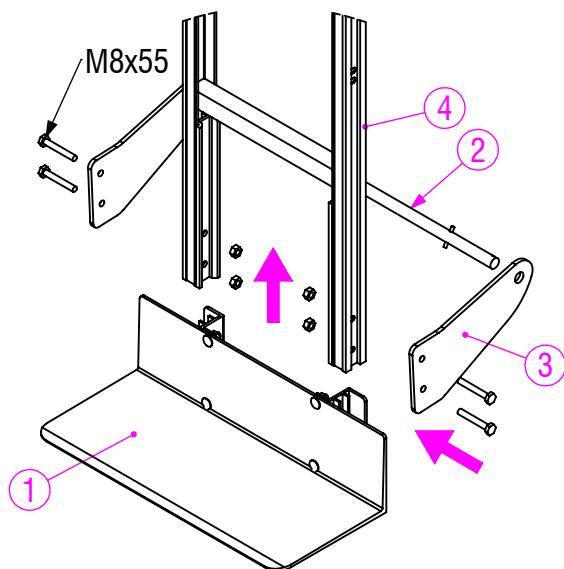


Please follow → direction for assemble.
① nose plate ② axle ③ axle boxes
the axle should go through the axle boxes
then, the axle boxes through be combined with
hand truck body

Must lock the connection on the
upper first hole on the truck body.

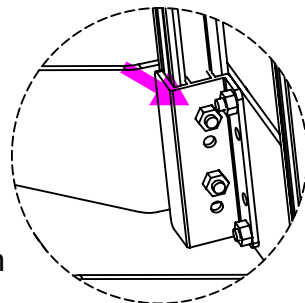


●The Fourth Step●

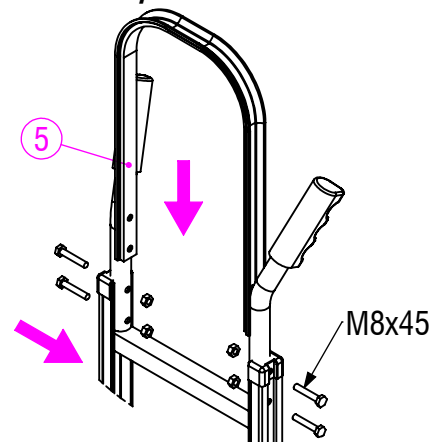


Before inserting the ⑤ handle
insert the ⑤ handle and locking screw.

●The Third Step●

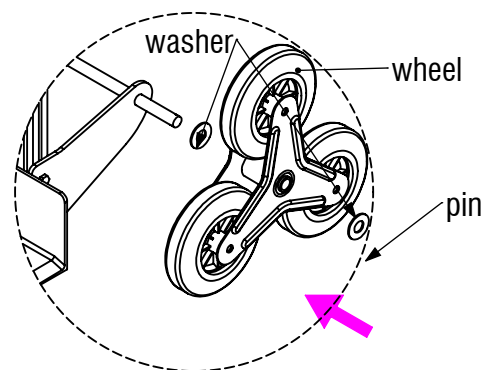

Firstly, insert the first washer into the axle.
Secondly, insert wheel.
Thirdly, insert the second washer,
and finally insert the pin into the axle.
Please bend the cotter pin.

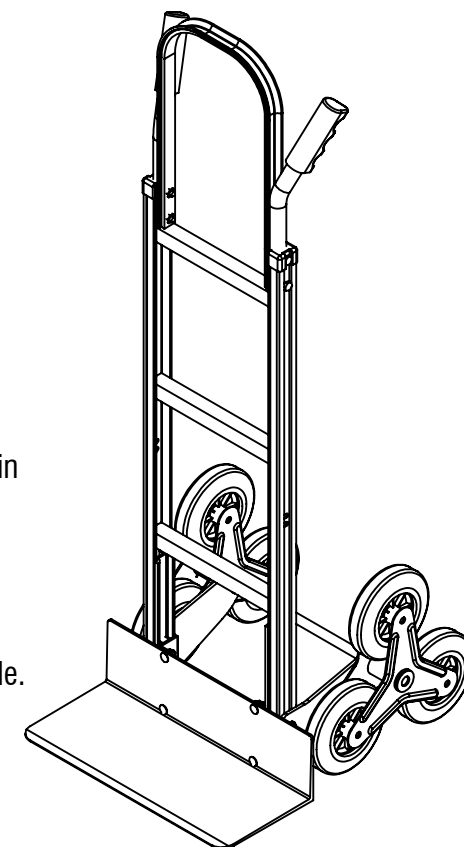

Assembly Instructions

- ☆Read instructions thoroughly before proceeding.
- ☆Tighten all parts by hands. Don't use power tool.
- ☆For you safely, please do not overload.
- ☆For pneumatic wheel: Please check air pressure in tires. Maintain (30) PSI.