



MAKE A DIFFERENCE


Skid Plate

BXG.3088

(INSTALLATION INSTRUCTION)



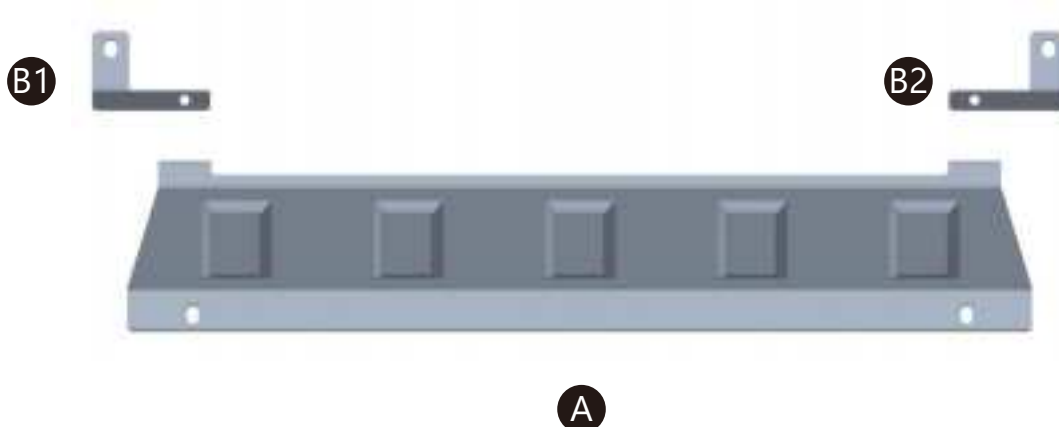


ATTENTION • Please verify all parts are present and read instructions carefully before starting installation.
• Please feel free to contact your distributor if you have any kind of question about your purchase.

1 CONTENTS



A: Skid Plate

B1&B2: Mounting Brackets

Qty	Part Name	Size(mm)	Picture	Qty	Part Name	Size(mm)	Picture
2	Button Bolt	M10×16		2	Flat Washer	M8	
2	Hex Bolt	M8×20		2	Flange Hex Lock Nut	M8	
2	Split Lock Washer	D8					

2 TOOLS REQUIRED

◆ Drive Ratchet Handle

◆ 13mm Wrench

◆ 6mm Hex Bit Socket


To view online instruction, please
scan the QR code.



3 INSTALLATION INSTRUCTION

Step 1

Place the vehicle in park and remove the factory bumper and associated accessories from the frame. Find the factory holes.

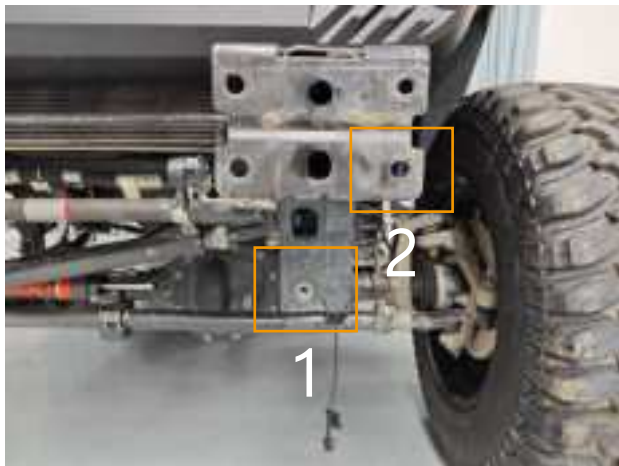


Step 2

Secure the mounting brackets to the skid plate, **and do not fully tighten to allow adjustability**. Repeat this step on the other side of the skid plate.

- (2) M8×20 Hex Bolts
- (2) M8 Flat Washers
- (2) D8 Split Lock Washers
- (2) M8 Flange Hex Lock Nuts

Step 2


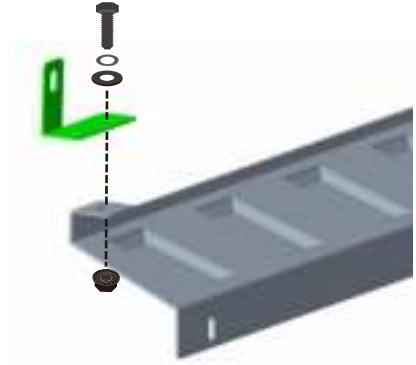


Step 3

Secure the skid plate to the vehicle frame.

Adjust it to the desired position, then tighten all hardware. Repeat this step on the other side of the vehicle.

- (2) M10×16 Bottom Bolts

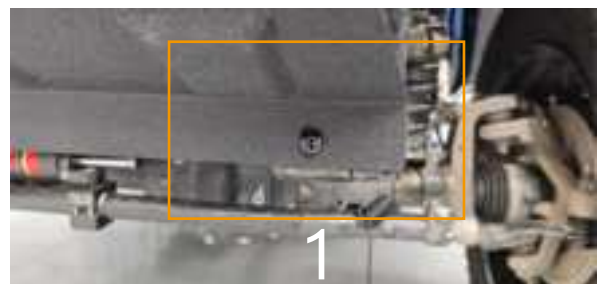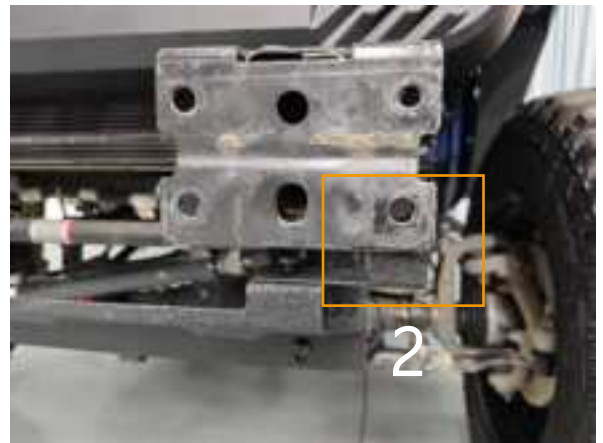

Step 4

The installation is complete. We hope you enjoy a wonderful off-road life with this quality Hooke Road product!

