


AMBER BENCH STOOL (SMALL)

User Guide

MATT BLATT

MBAMBBSSBBA & MBAMBBSSONA

COMPONENTS

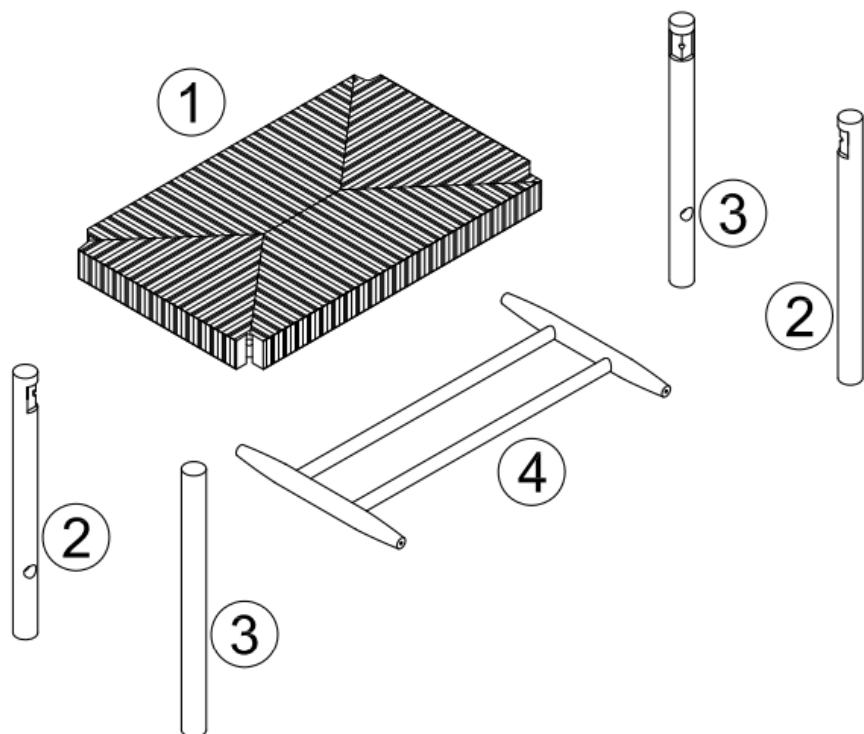

- 1** Stool cover (x1)
- 2** Leg (x2)
- 3** Leg (x2)
- 4** Rack (x1)



A (x4)




B (x4)




C (x4)




D (x4)



E (x4)



F (x1)



G (x4)

Hardware



- A** Dowel (x4)
- B** Split washer (x4)
- C** Washer (x4)
- D** Nut (x4)
- E** Screw (x4)
- F** Wrench (x1)
- G** Adhesive pad (x4)

ASSEMBLY

Step 1: Screw in the dowels **(A)** into the top of all legs **(2 & 3)**.



A (x4)

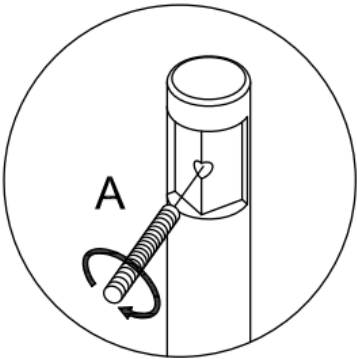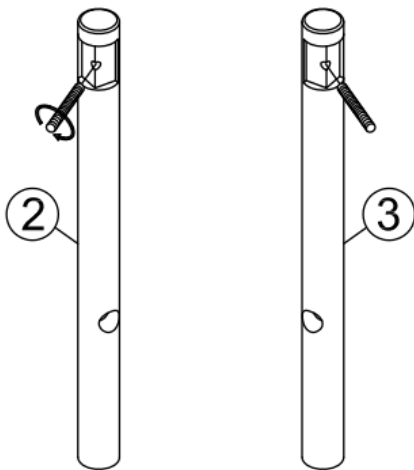

Step 2:

- Turn the stool cover over to expose the underside.
- With the legs **(2 & 3)** standing dowel end facing down on the corners of the stool cover (1), place a washer **(C)** and split washer **(B)** all the way to the end of each dowel **(A)**.
- Put one nut **(4)** onto each dowel **(A)** and tighten using the wrench **(F)** until halfway down their length.



B (x4)




C (x4)




D (x4)



F (x1)

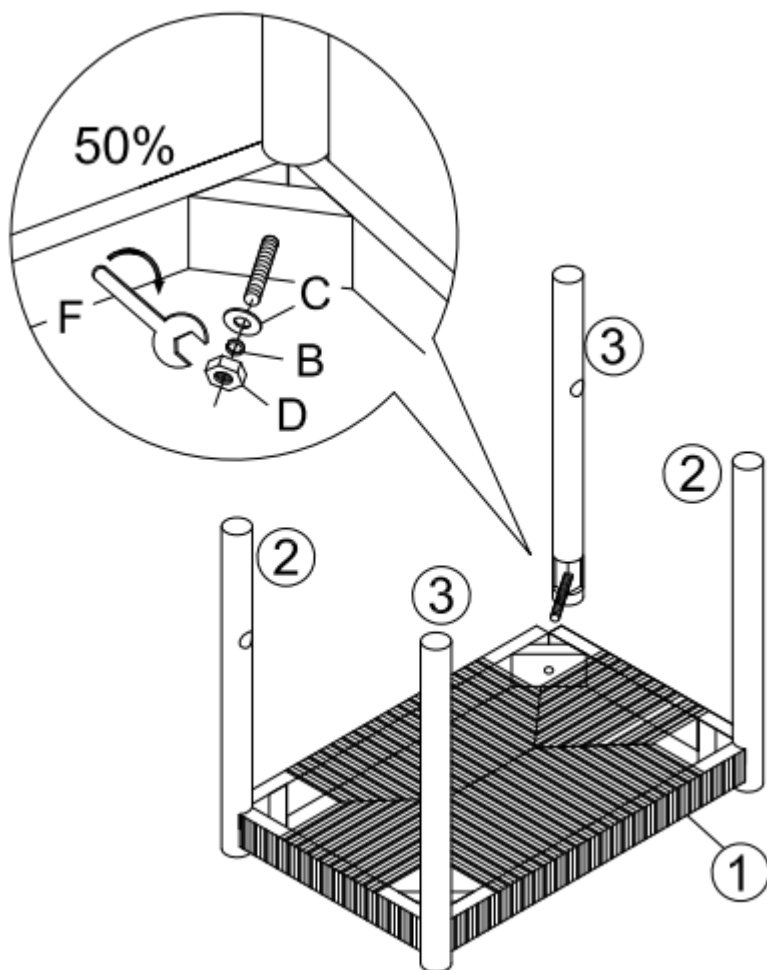



Step 3: Align and insert the rack (4) into the holes of the legs (**2 & 3**) to secure it in place.

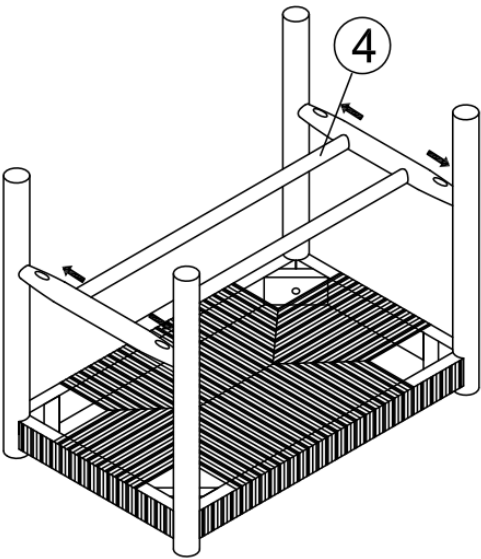

Step 4: Using the wrench (**F**), tighten the nuts (**D**) on the dowels (**A**) all the way down the dowel's length until secure.




F (x1)

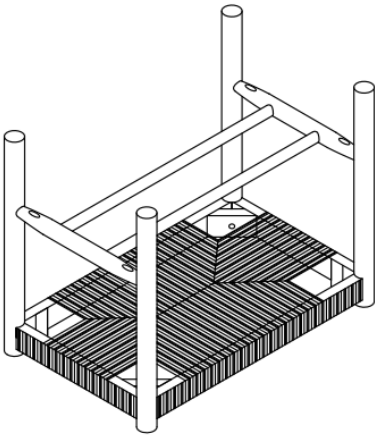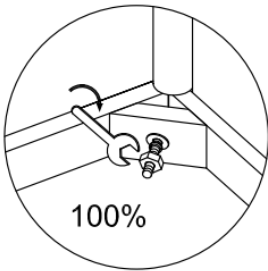


Step 5: Insert and secure the screws **(E)** into the holes of the rack **(4)**.

Then peel the adhesive pads **(G)** and attach them to the bottom of the legs **(2 & 3)**.




E (x4)

G (x4)

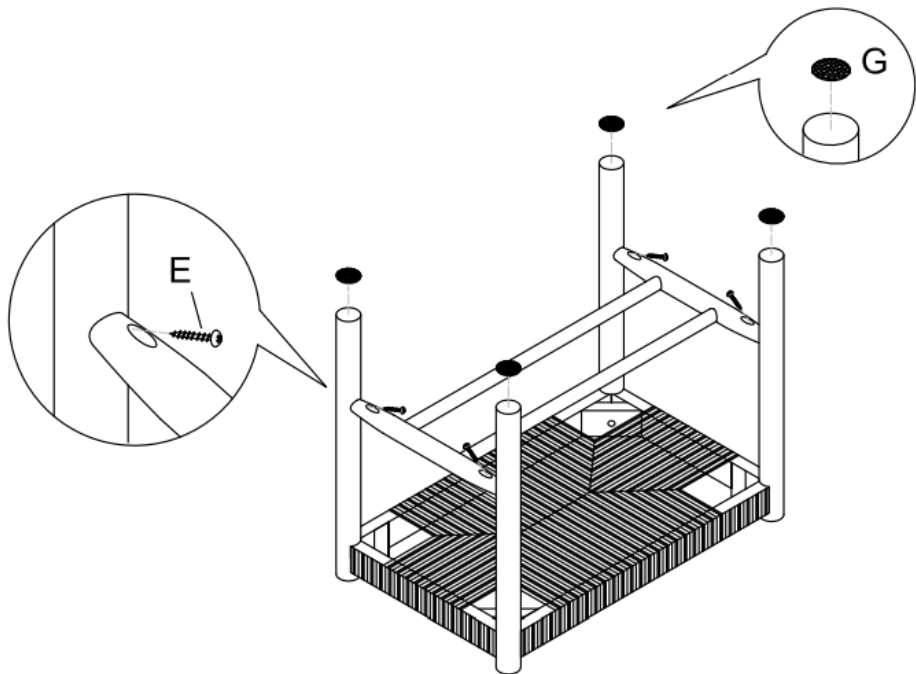


Step 6: Turn the bench stool right side up.

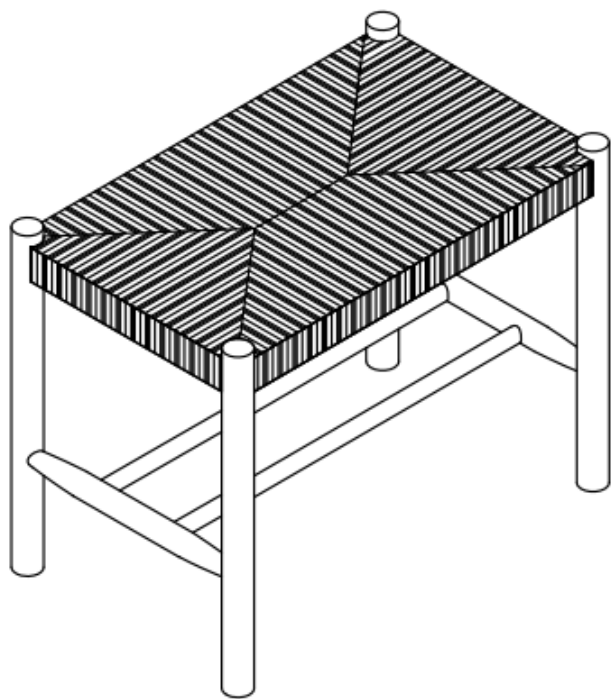

Complete!

[illegible]



NEED MORE INFORMATION?

We hope that this user guide has given you the assistance needed for a simple set-up. For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.mattblatt.com.au**

MATT BLATT