



1. Door Prep

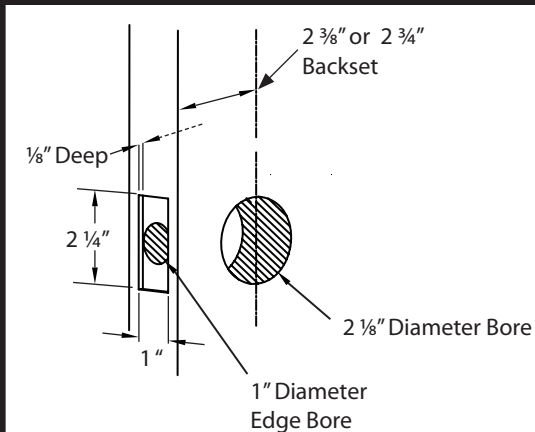


2. Door Jamb Prep

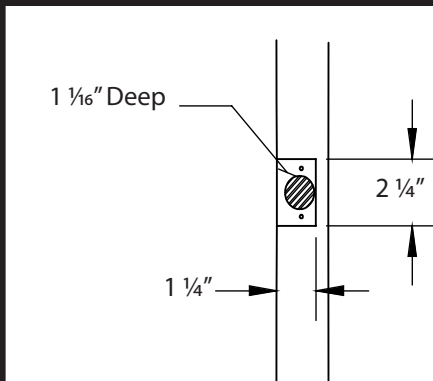


3. Install Strike Plate

Fasten Strike Plate with #8 wood screws (provided).

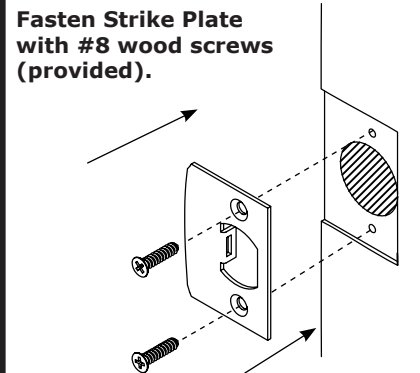


4. Install Latch

Place Plastic Alignment Tool in bore hole. Insert latch and fasten with two #8 wood screws (provided).

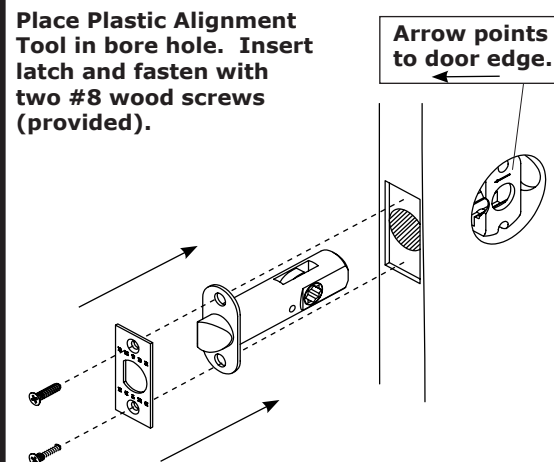


5. Install Outside and Inside Trims.

Step 1. Position the outside trim through the bore hole.

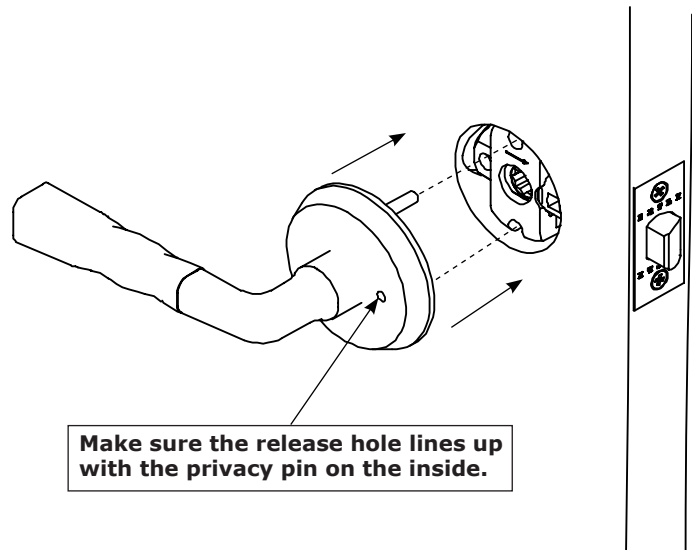

Step 2. Fasten Inside Trim using two #8 machine screws (provided), and install Privacy Pin.

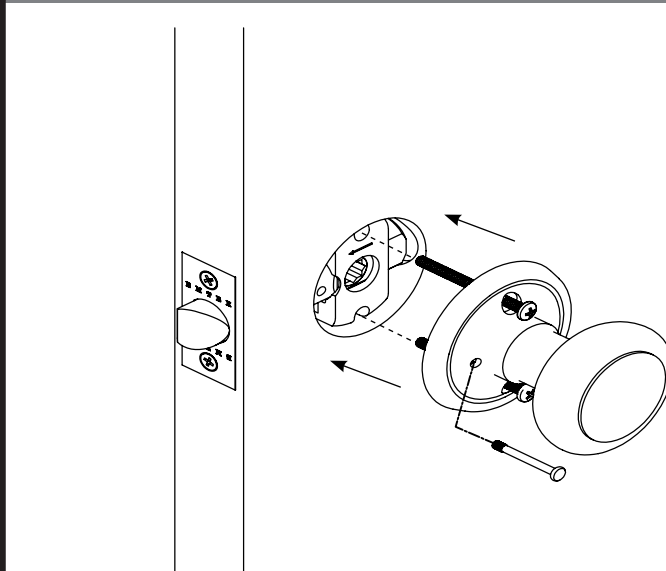

Dummy Installation

Surface mount to door with wood screws (provided). Tighten set screw to secure Rosette and Lever to threaded stud with hex wrench (provided).

