

Tools Required

10mm Socket
10mm Wrench
4mm Hex Bit
Ratchet
1/4 " Drill Bit



Step 1:

1. Remove (6) M6 hex bolts and clips from the inner fender liner.
2. Remove the inner fender liner from vehicle.
3. Drill out (6) fasteners on factory front fender flare.
4. Pry up and remove clips from the fender flare.
5. Remove factory front inner fender liner.
6. Disengage clips and disconnect wire harness to remove the factory front




Step 2:

1. Insert and collapse (9) rivet nuts into the fender panel.
- Note: Insert the rivet tool into mounting hole, using a wrench to hold the nut on rivet tool, and using another wrench or socket turn the bolt clockwise to collapse rivet nut into fender panel.




Notes:

Read this instruction carefully before starting installation.
Proper tools will improve the quality of installation and reduce the time required.
If missing parts or any damage found, please take a picture and contact us.
Select Metric 6mm hand riveter for easier installation.

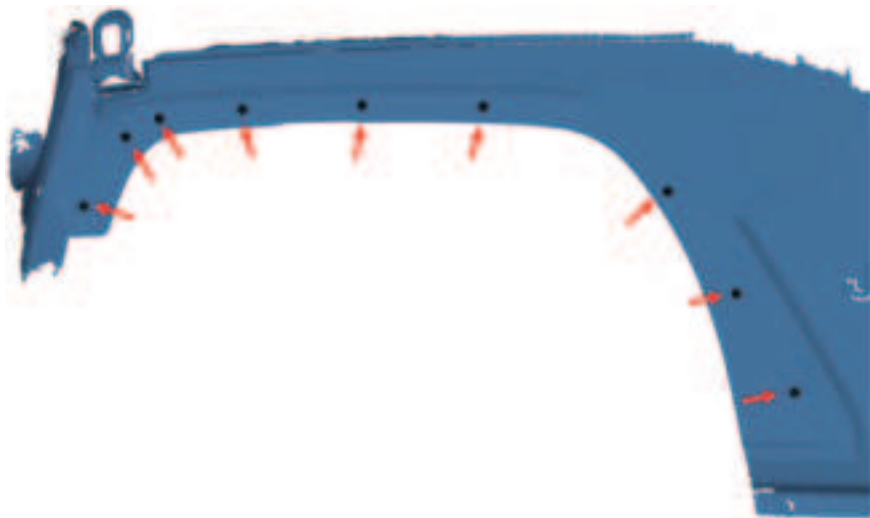

Step 3:

1. Attach the front fender flare onto fender panel.
2. Secure the fender flare to fender panel using (9) M6 bolts, (9) M6 flat washers, (9) M6 lock washers.

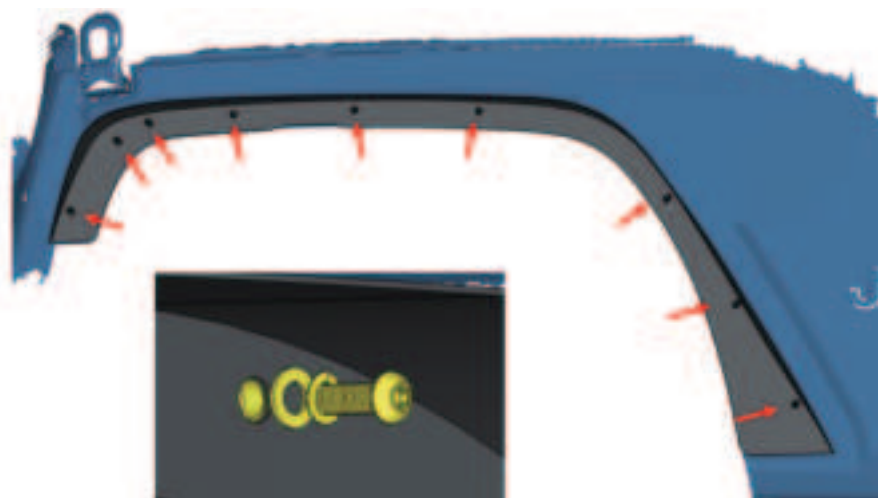


Step 4:

1. Trim and reinstall factory inner fender liner or install another aftermarket fender liner.




Step 5:

1. Pry up and remove (4) rivets from rear inner fender liner.
2. Drill out (9) fasteners on factory rear fender flare.
3. Remove factory rear inner fender liner.
4. Disengage clips to remove the factory rear fender flare.

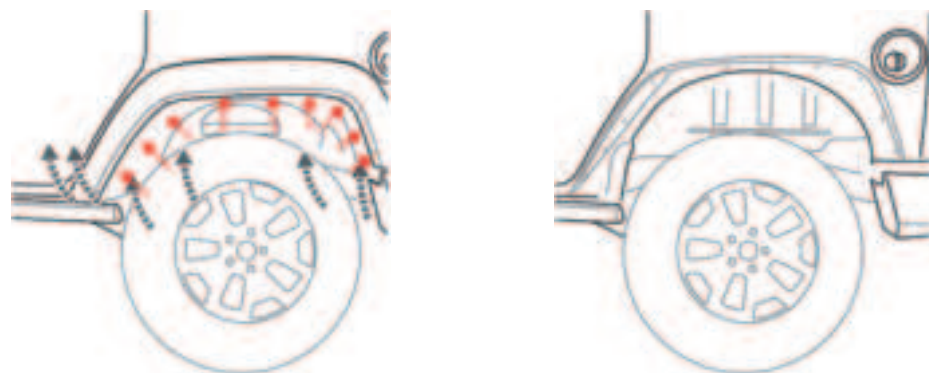


Step 6:

1. Insert and collapse (10) rivet nuts into the fender panel.

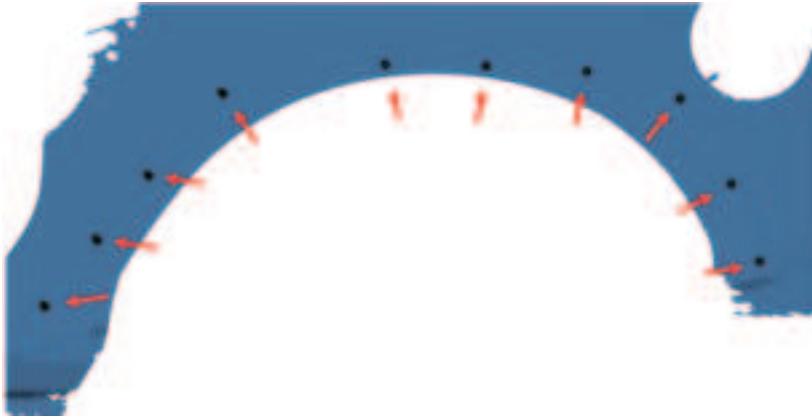

Step 7:

1. Attach the rear fender flare onto fender panel.
2. Secure the fender flare to fender panel using (10) M6 bolts, (10) M6 flat washers, (10) M6 lock washers.

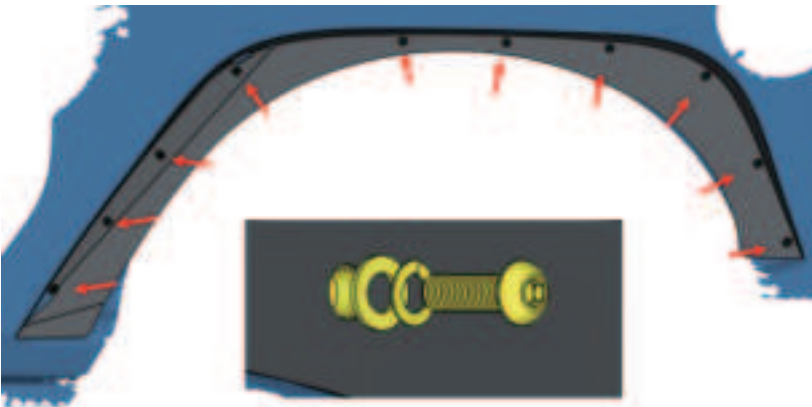









Step 8:






1. Trim and reinstall factory rear inner fender liner or install another aftermarket fender liner.



Part List:

			
Front Driver Side Fender Flare	×1	Front Passenger Side Fender Flare	×1
			
Rear Driver Side Fender Flare	×1	Rear Passenger Side Fender Flare	×1
			
M6×18 Button Head Bolt	×38	M6 Rivet Nut	×38
			
M6 Flat Washer	×38	M6 Lock Washer	×38

Spare Part & Tool:

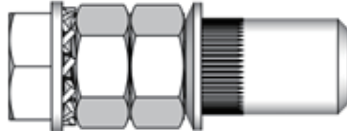			
M6×18 Button Head Bolt	×2	M6 Rivet Nut	×2
			
M6 Flat Washer	×2	M6 Lock Washer	×2
			
Rivet Tool	×1		