


Configurations

With only one kit provided, Vego modular raised bed is able to assemble into 6 different configurations to fit any backyard space. From the classic 5'x 3'5" to the long 6'5" x 2', or the jumbo square 3'5" by 3'5", you can always find one you like.

Note: Due to manufacturing process raised bed sizing may vary +/- 2 inches

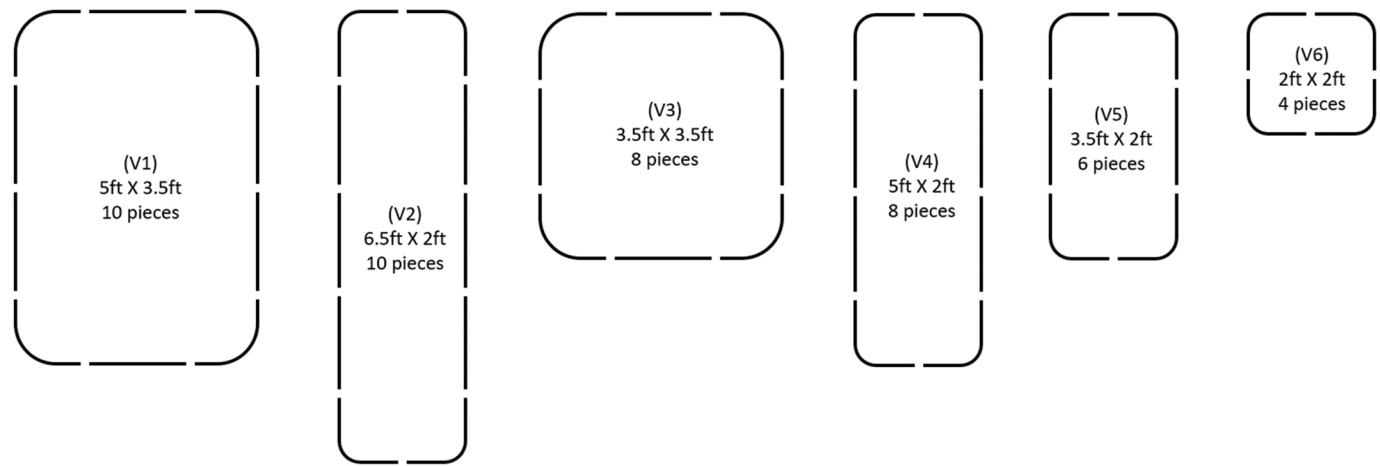

Dimensions

| Configuration | Length (ft) | Width (ft) | Height (in) | Cubic Feet | Cubic Yards |
|---------------|-------------|------------|-------------|------------|-------------|
| V1 | 5 | 3.5 | 32 | 47 | 1.7 |
| V2 | 6.5 | 2 | 32 | 35 | 1.3 |
| V3 | 3.5 | 3.5 | 32 | 33 | 1.2 |
| V4 | 5 | 2 | 32 | 27 | 1.0 |
| V5 | 3.5 | 2 | 32 | 19 | 0.7 |
| V6 | 2 | 2 | 32 | 11 | 0.4 |

Contact Us

- +1 (866) 597-1888
- hello@vegogarden.com
- www.vegogarden.com
- Houston, TX 77032



vegō garden






EXTRA TALL 6 IN 1 MODULAR METAL RAISED BED



Caution


Please be aware that there are sharp edges in metal panels that may cause injury. The use of protective equipment such as gloves and closed toe shoes is recommended.

Packing List

| | | |
|----------------------------------------------------|-------------------------------------------------------------------------------------|-----|
| A: Corner Panel |  | X4 |
| B: Side Panel |  | X6 |
| C: Cap Nut Fastener Set (For Top 2 Rows Use) |  | X20 |
| D: Standard Fastener Set (For Lower 4 Rows Use) |  | X40 |
| E: Safety Edging Cover |  | X1 |
| F: Bracing Rod (Rod A & Rod B) |  | X2 |

Bracing Rod Installation Guide


1 Vego Garden Rods

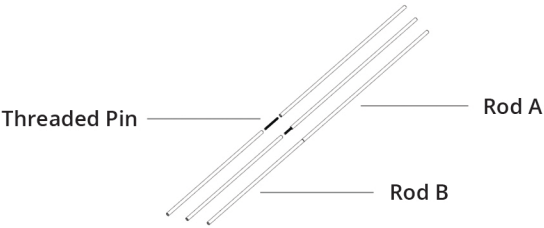

Vego Garden bracing rods are used to reinforce the strength of oversized raised beds. For 2ft wide raised beds: use A Rods only; For 3.5ft wide raised bed: use the threaded pins to connect A Rods to B Rods.

Note: bolt and washer used for rod installation are the same ones provided in the raised bed kit.

2 Rods Installation

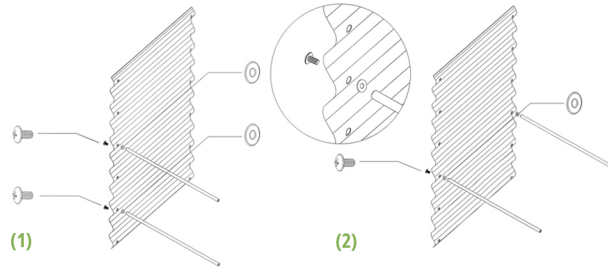


Install bracing rods between two parallel bolt holes. Attach bolt, panel, washer & rod loosely, connecting rods, then tighten them up with a screwdriver for reinforcement of the raised bed.

(1) For 3.5ft wide configurations, the rods are installed in the **third** and **fifth** bolt holes from the top in the same row.


(2) For 2ft wide configurations, the rods are installed in the **forth** bolt holes from the top in adjacent rows.

3 Assemble Picture

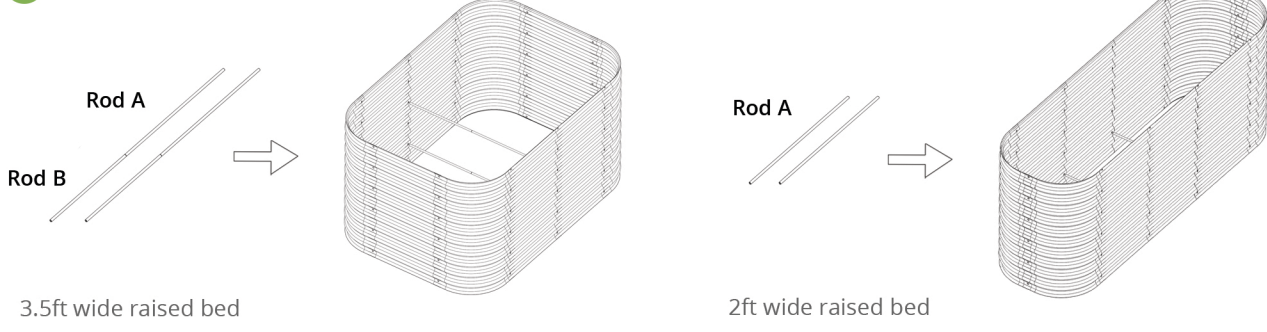


Assembly Guide

1 Step One

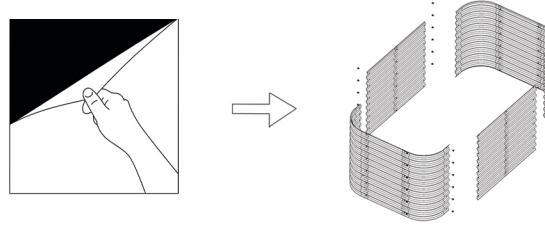


Remove protective films from all panels, and lay panels on a flat surface according to the chosen configuration.

2 Step Two

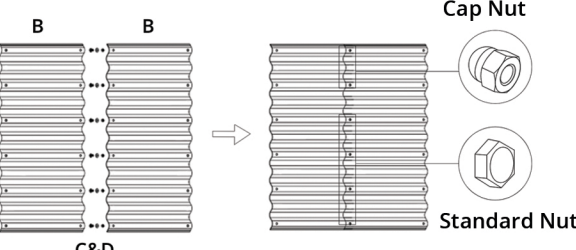


Cap nuts are used for top two rows, standard nuts are used for lower 4 rows. Assemble all straight panels: initially attach all bolts, washers and nuts loosely, and then tighten up using the wrench tool (as supplied) with a screwdriver/cordless drill.

3 Step Three

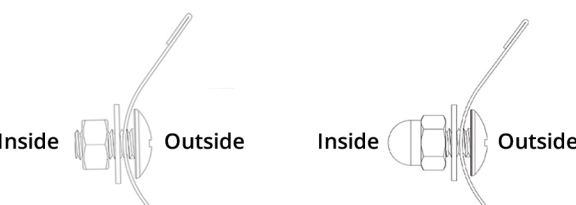


Make sure to tighten each nut and bolt for reinforcement of garden raised bed.

4 Step Four

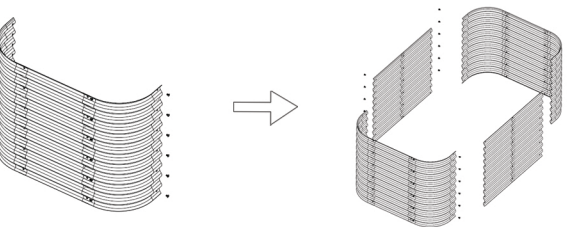


After straight panels are assembled, attach corner panels with straight panels using the same method. Make sure corner panels are attached outside of the straight panels.

5 Step Five

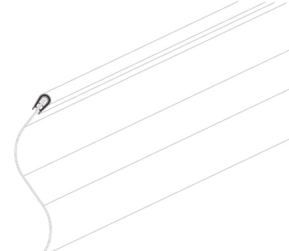

Push the safety edging cover to the top rolled steel edge and cut the extra length off. Make sure edging is attached securely.

6 Step Six

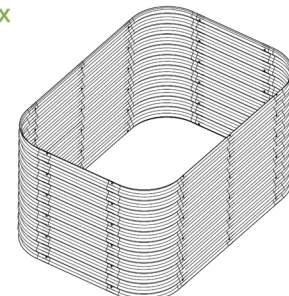

Congratulations on completing the assembly! We are sure there are more configurations that you can do with your great imagination!