

FORM DT


Vertical Stand Assembly Manual

FORMD T1


Vertical Stand

Unfasten:

M3 Thumbscrew

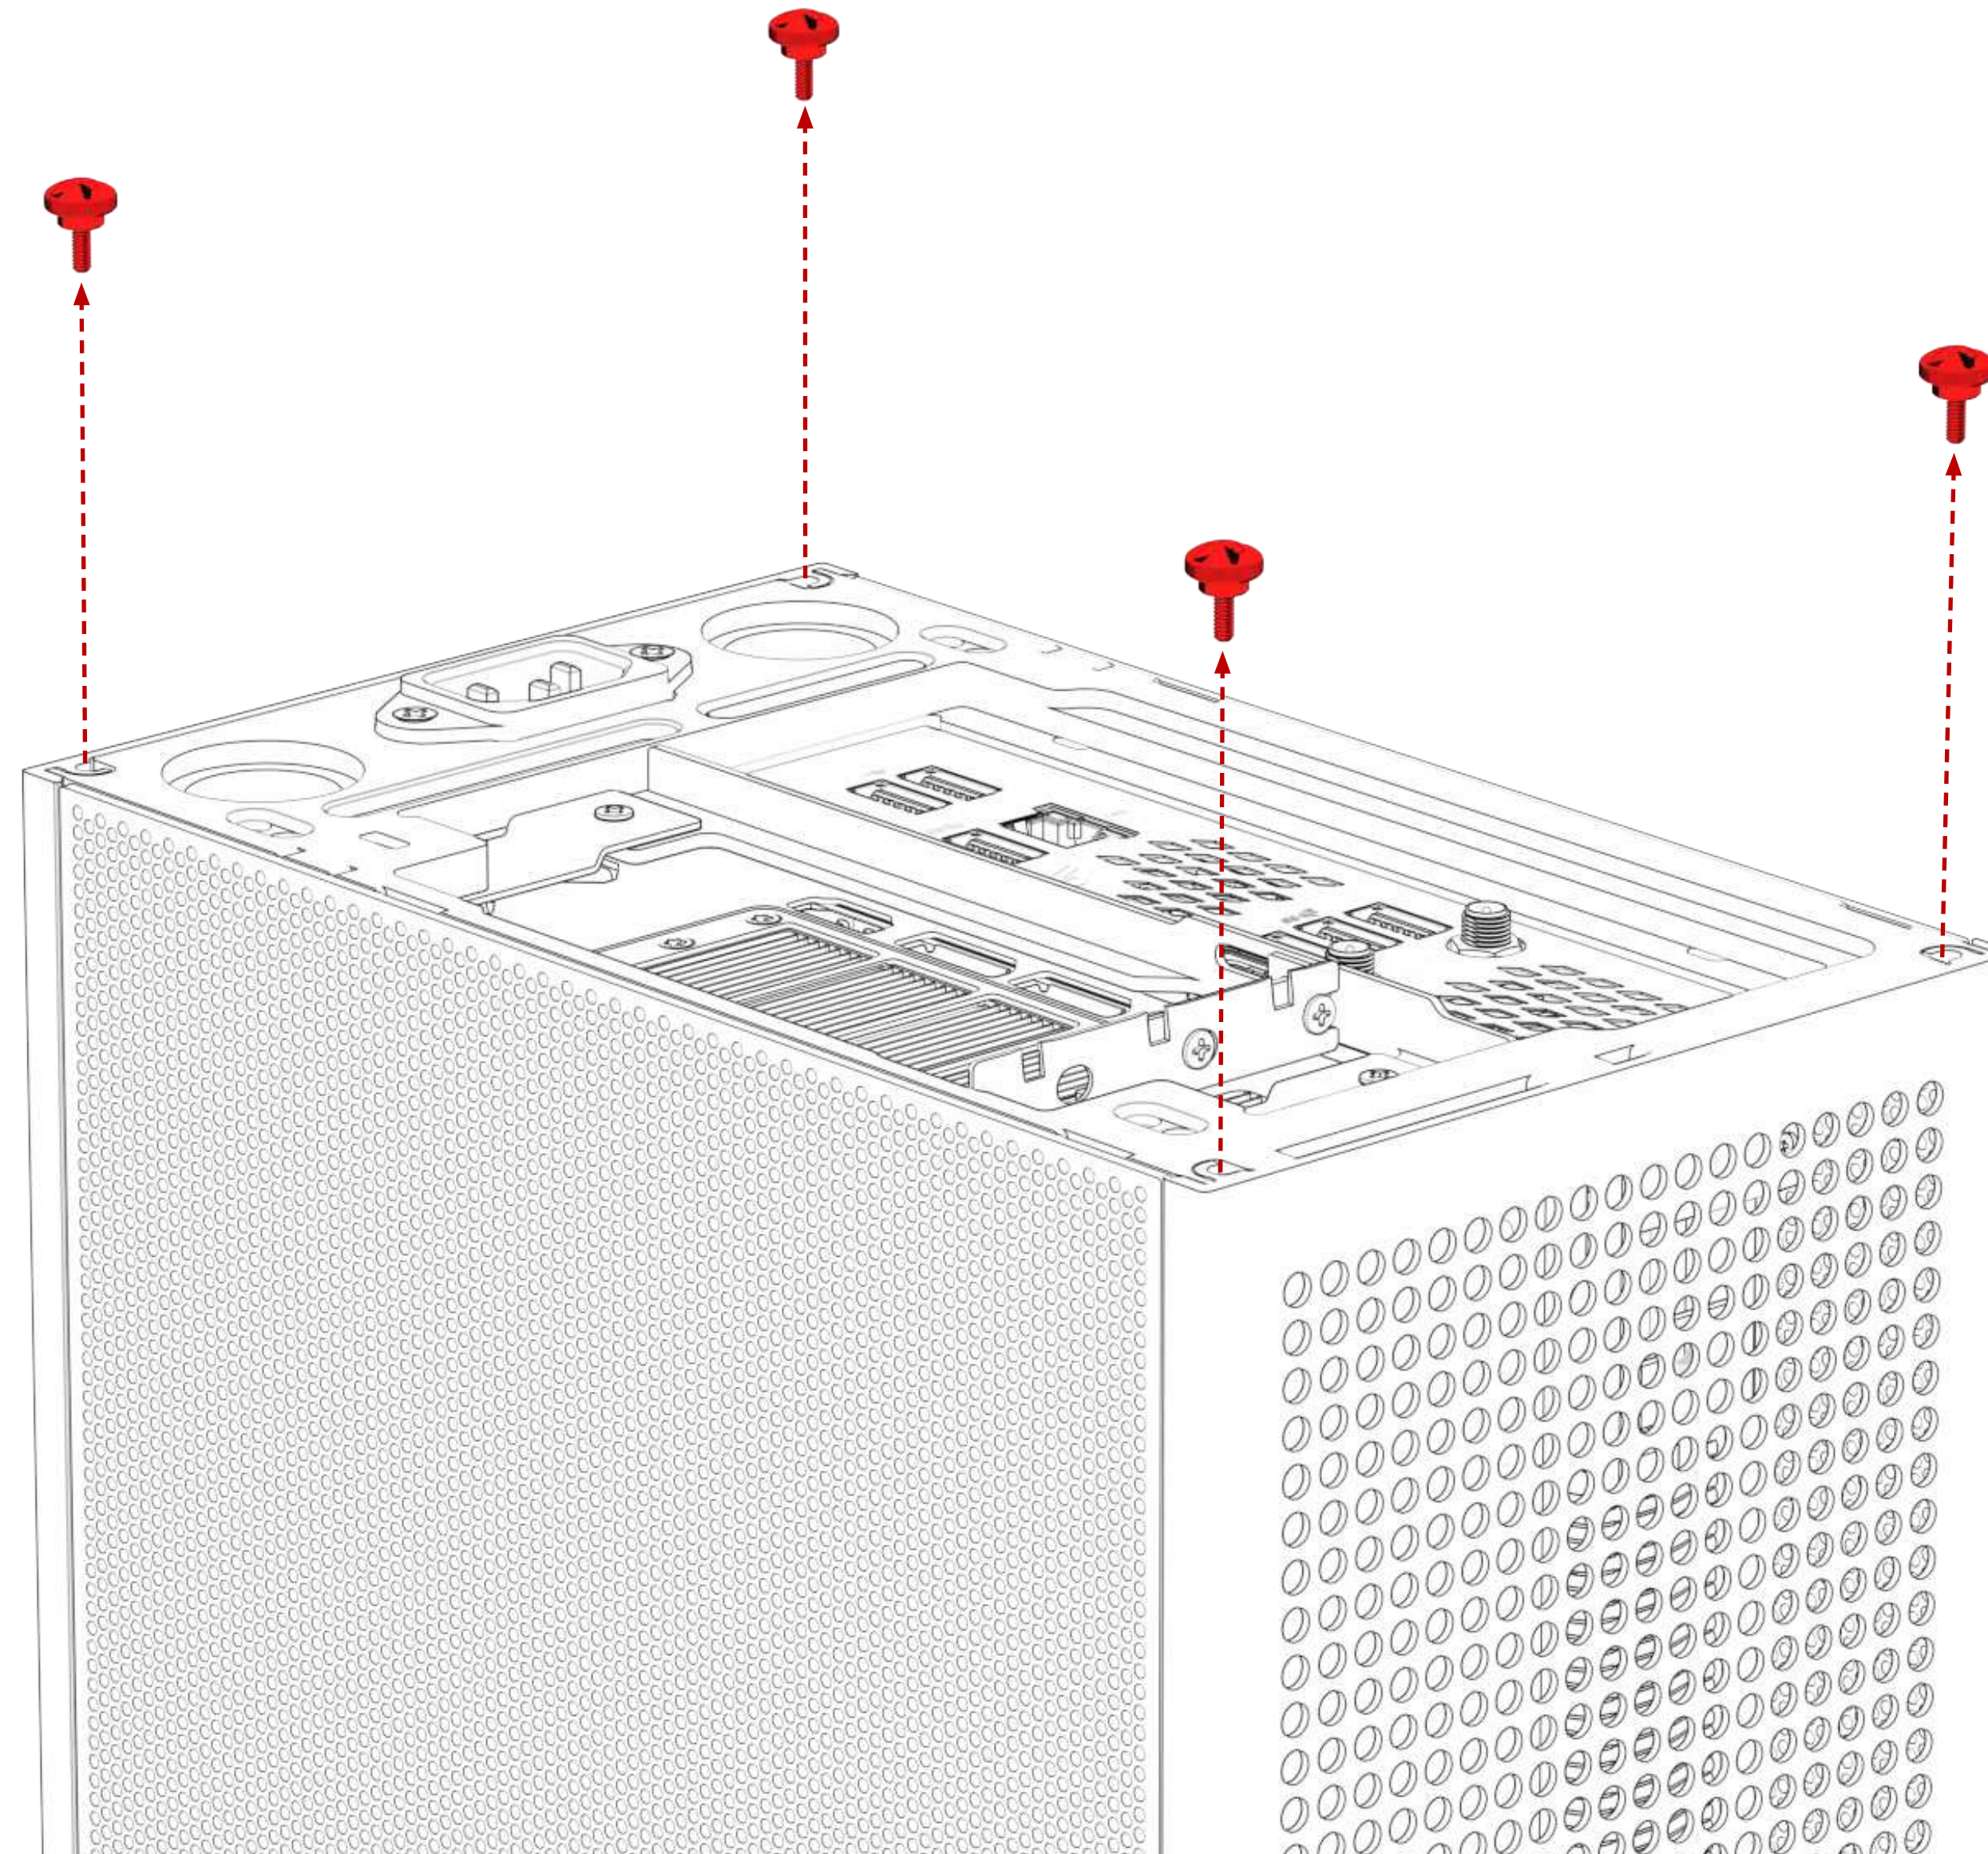

Fasten:
SMA Extension
Cable

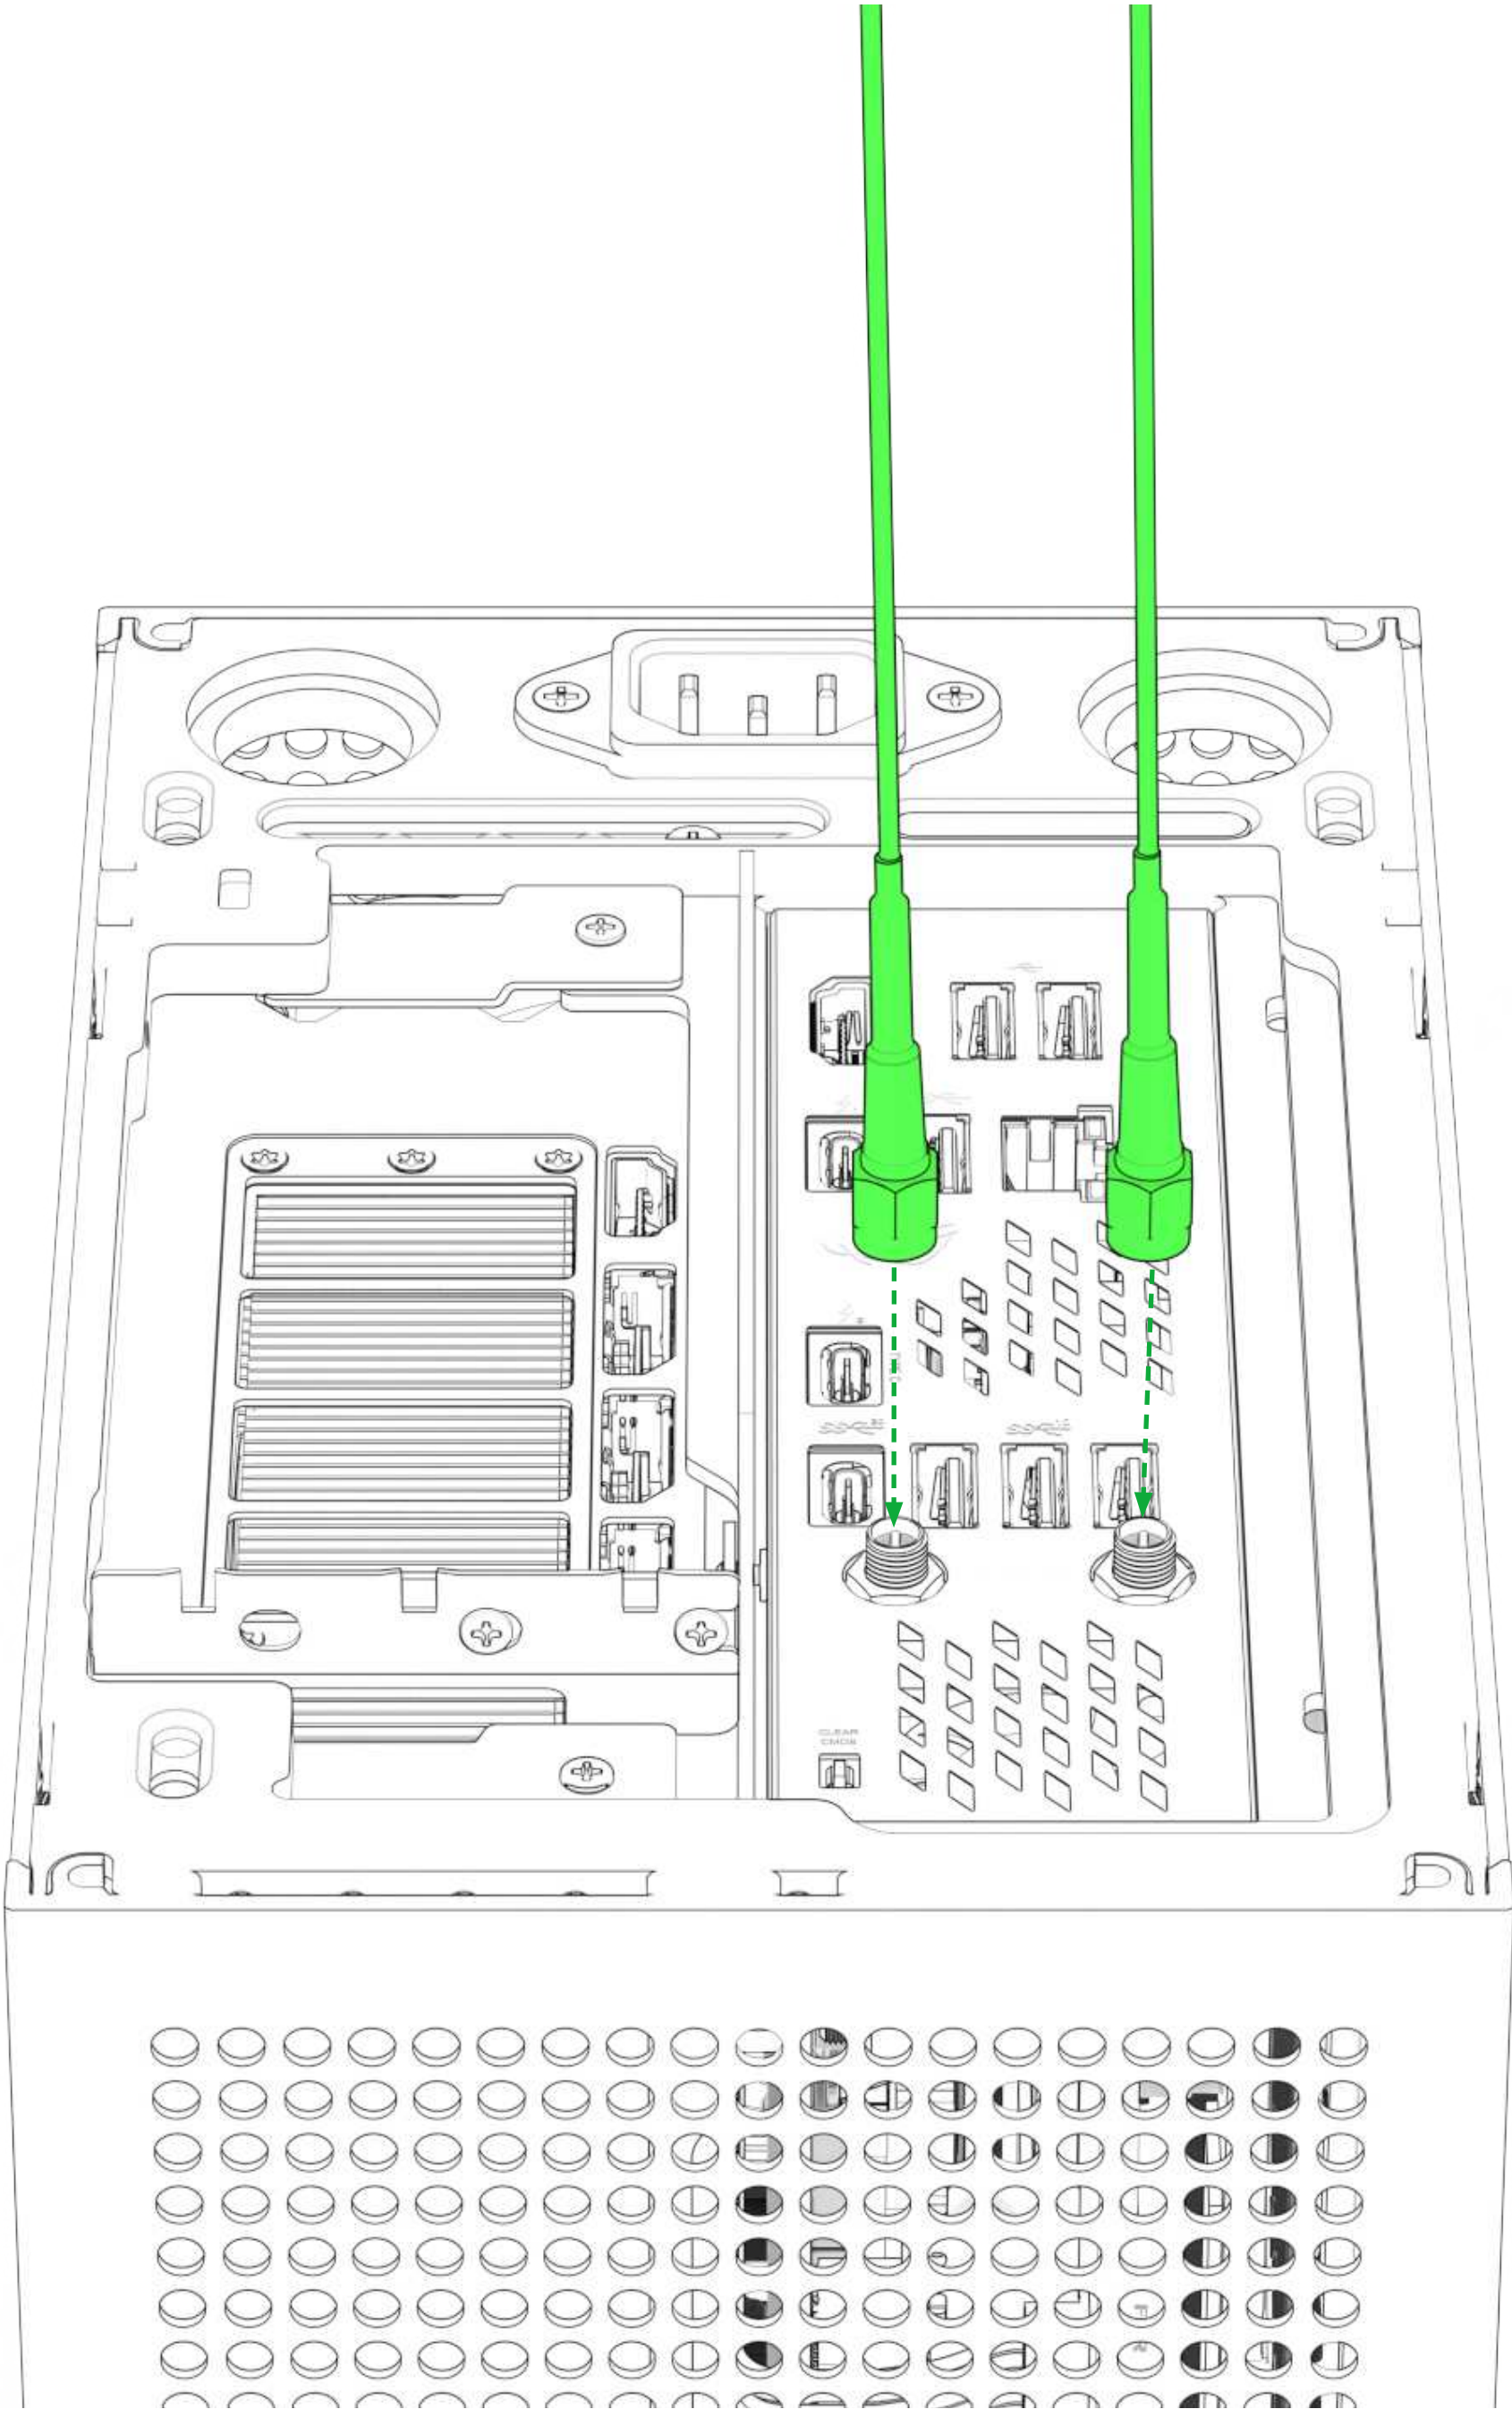


FORM DT1


Vertical Stand

Fasten:

45mm Long
Screws

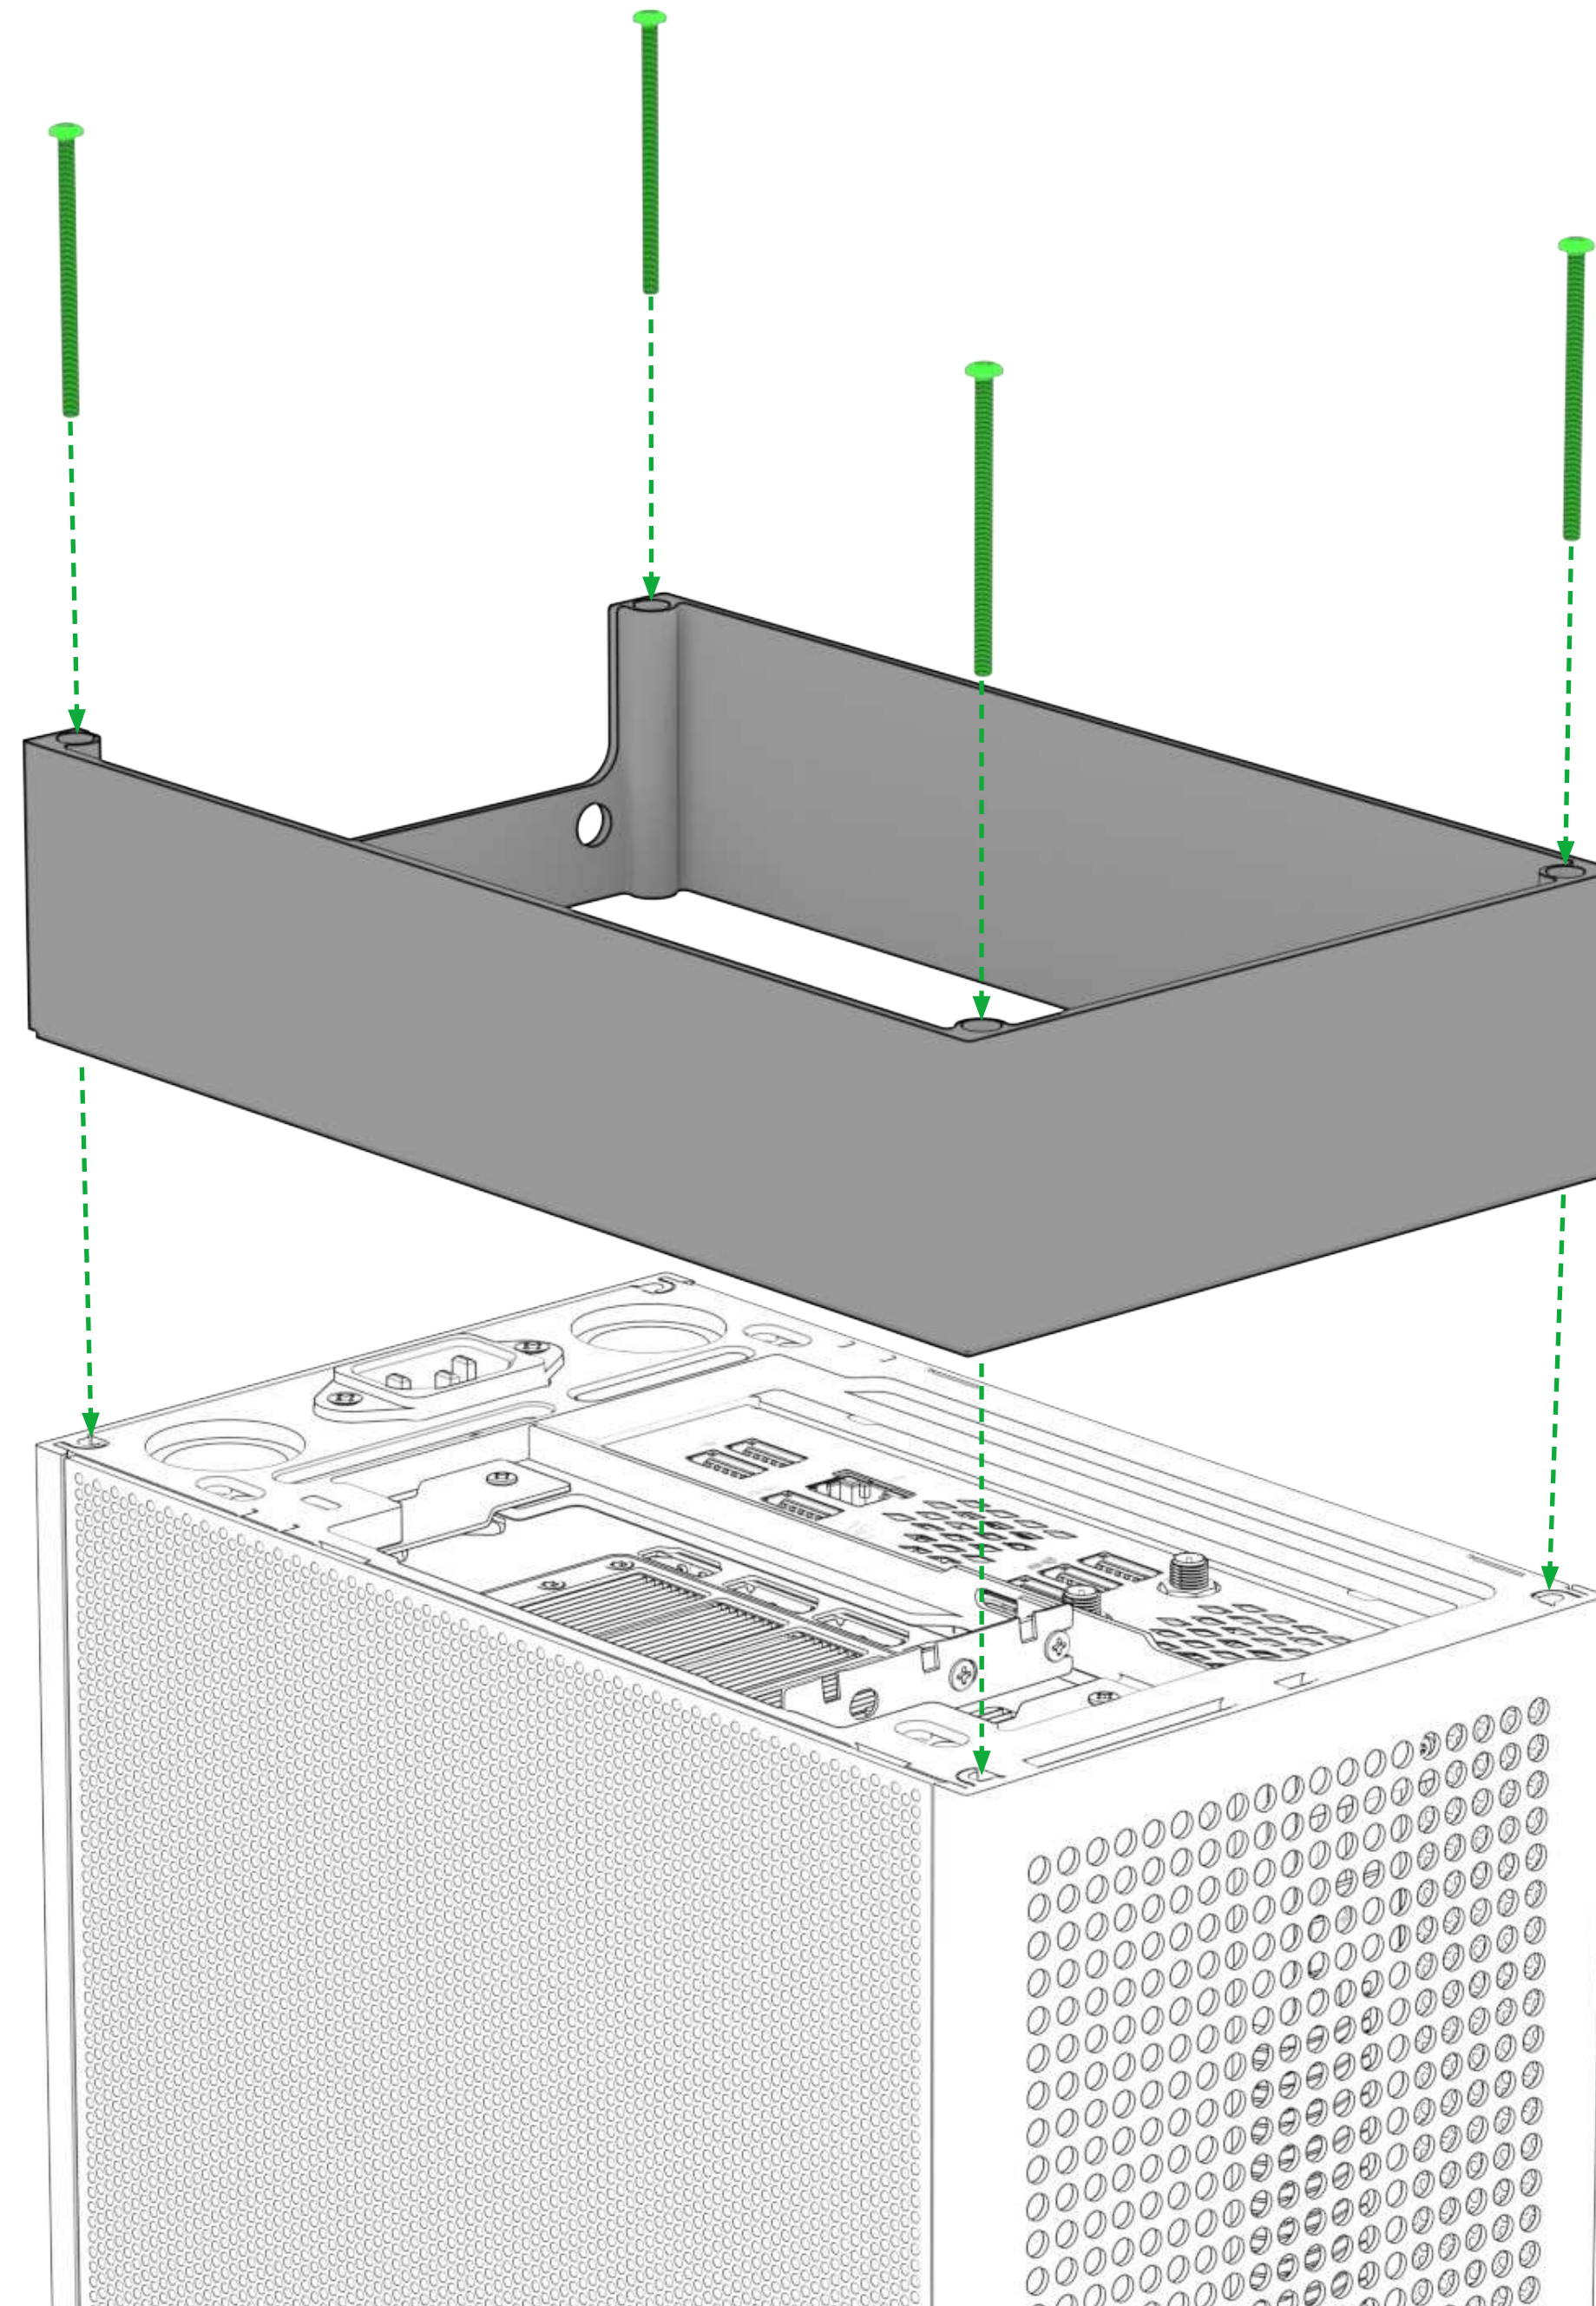


Fasten:
Vertical Stand
Feet

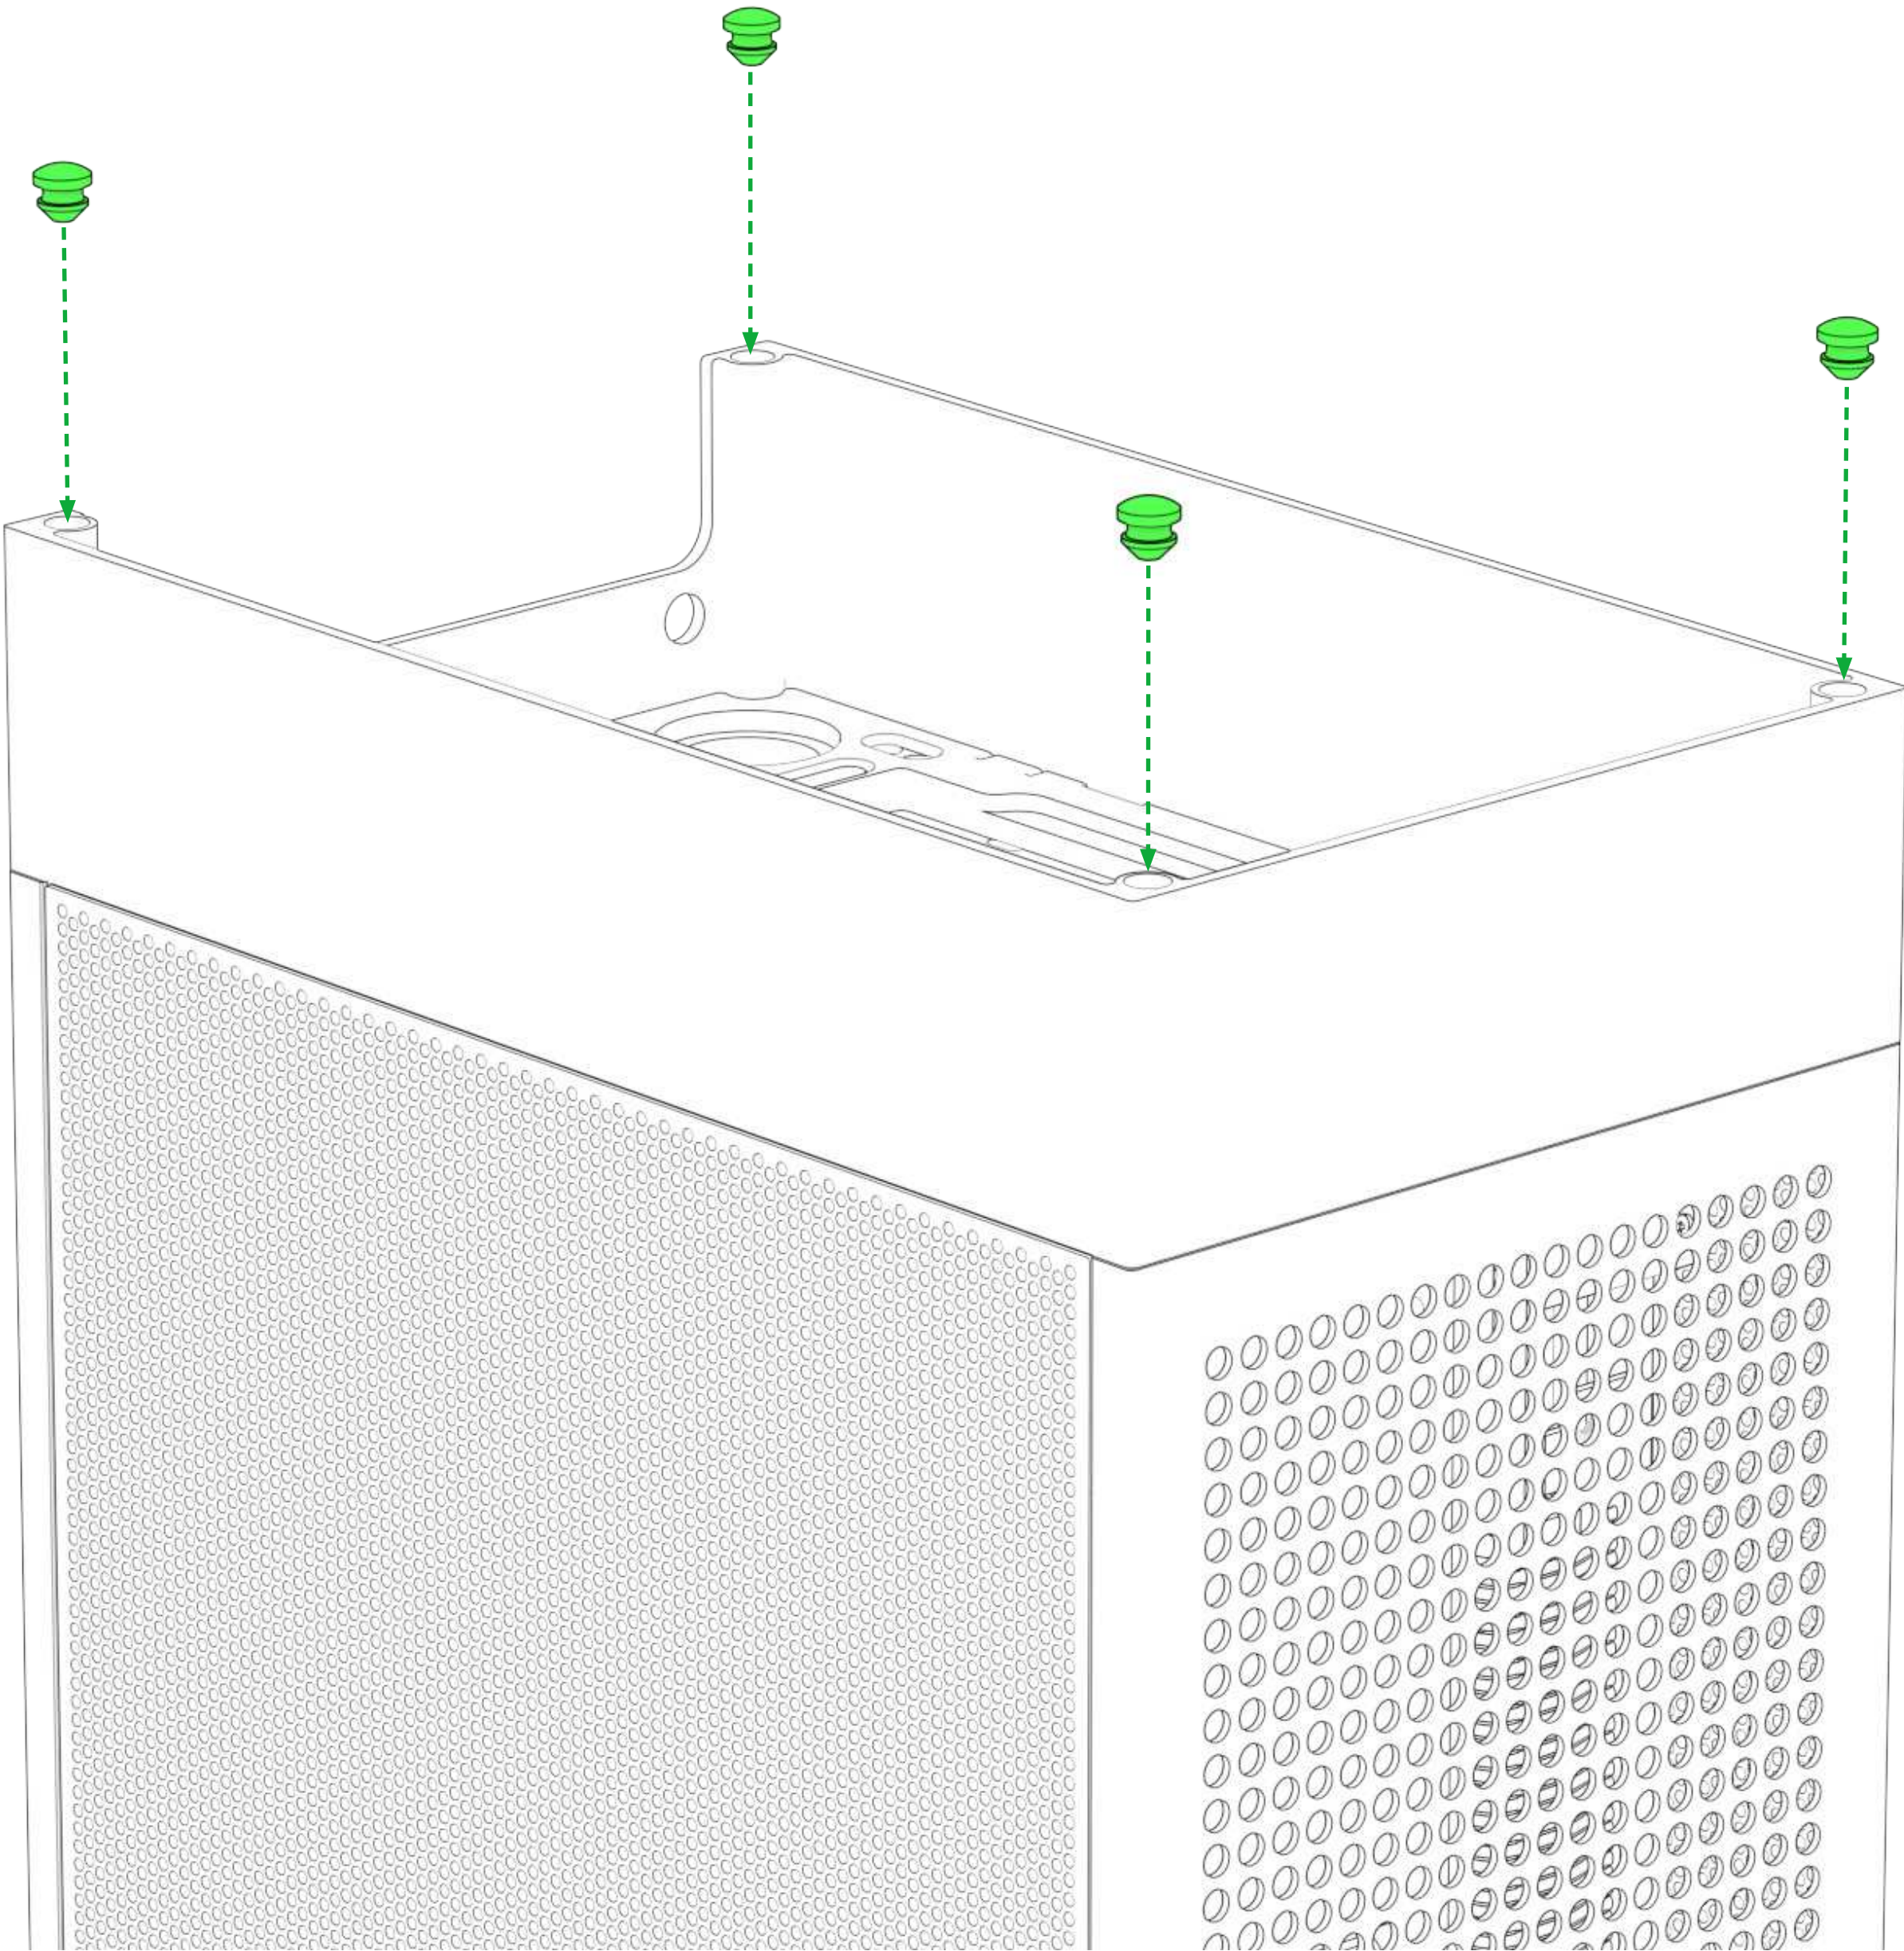

FORM DT1
Vertical Stand


Fasten:
SMA extension
Hex nut

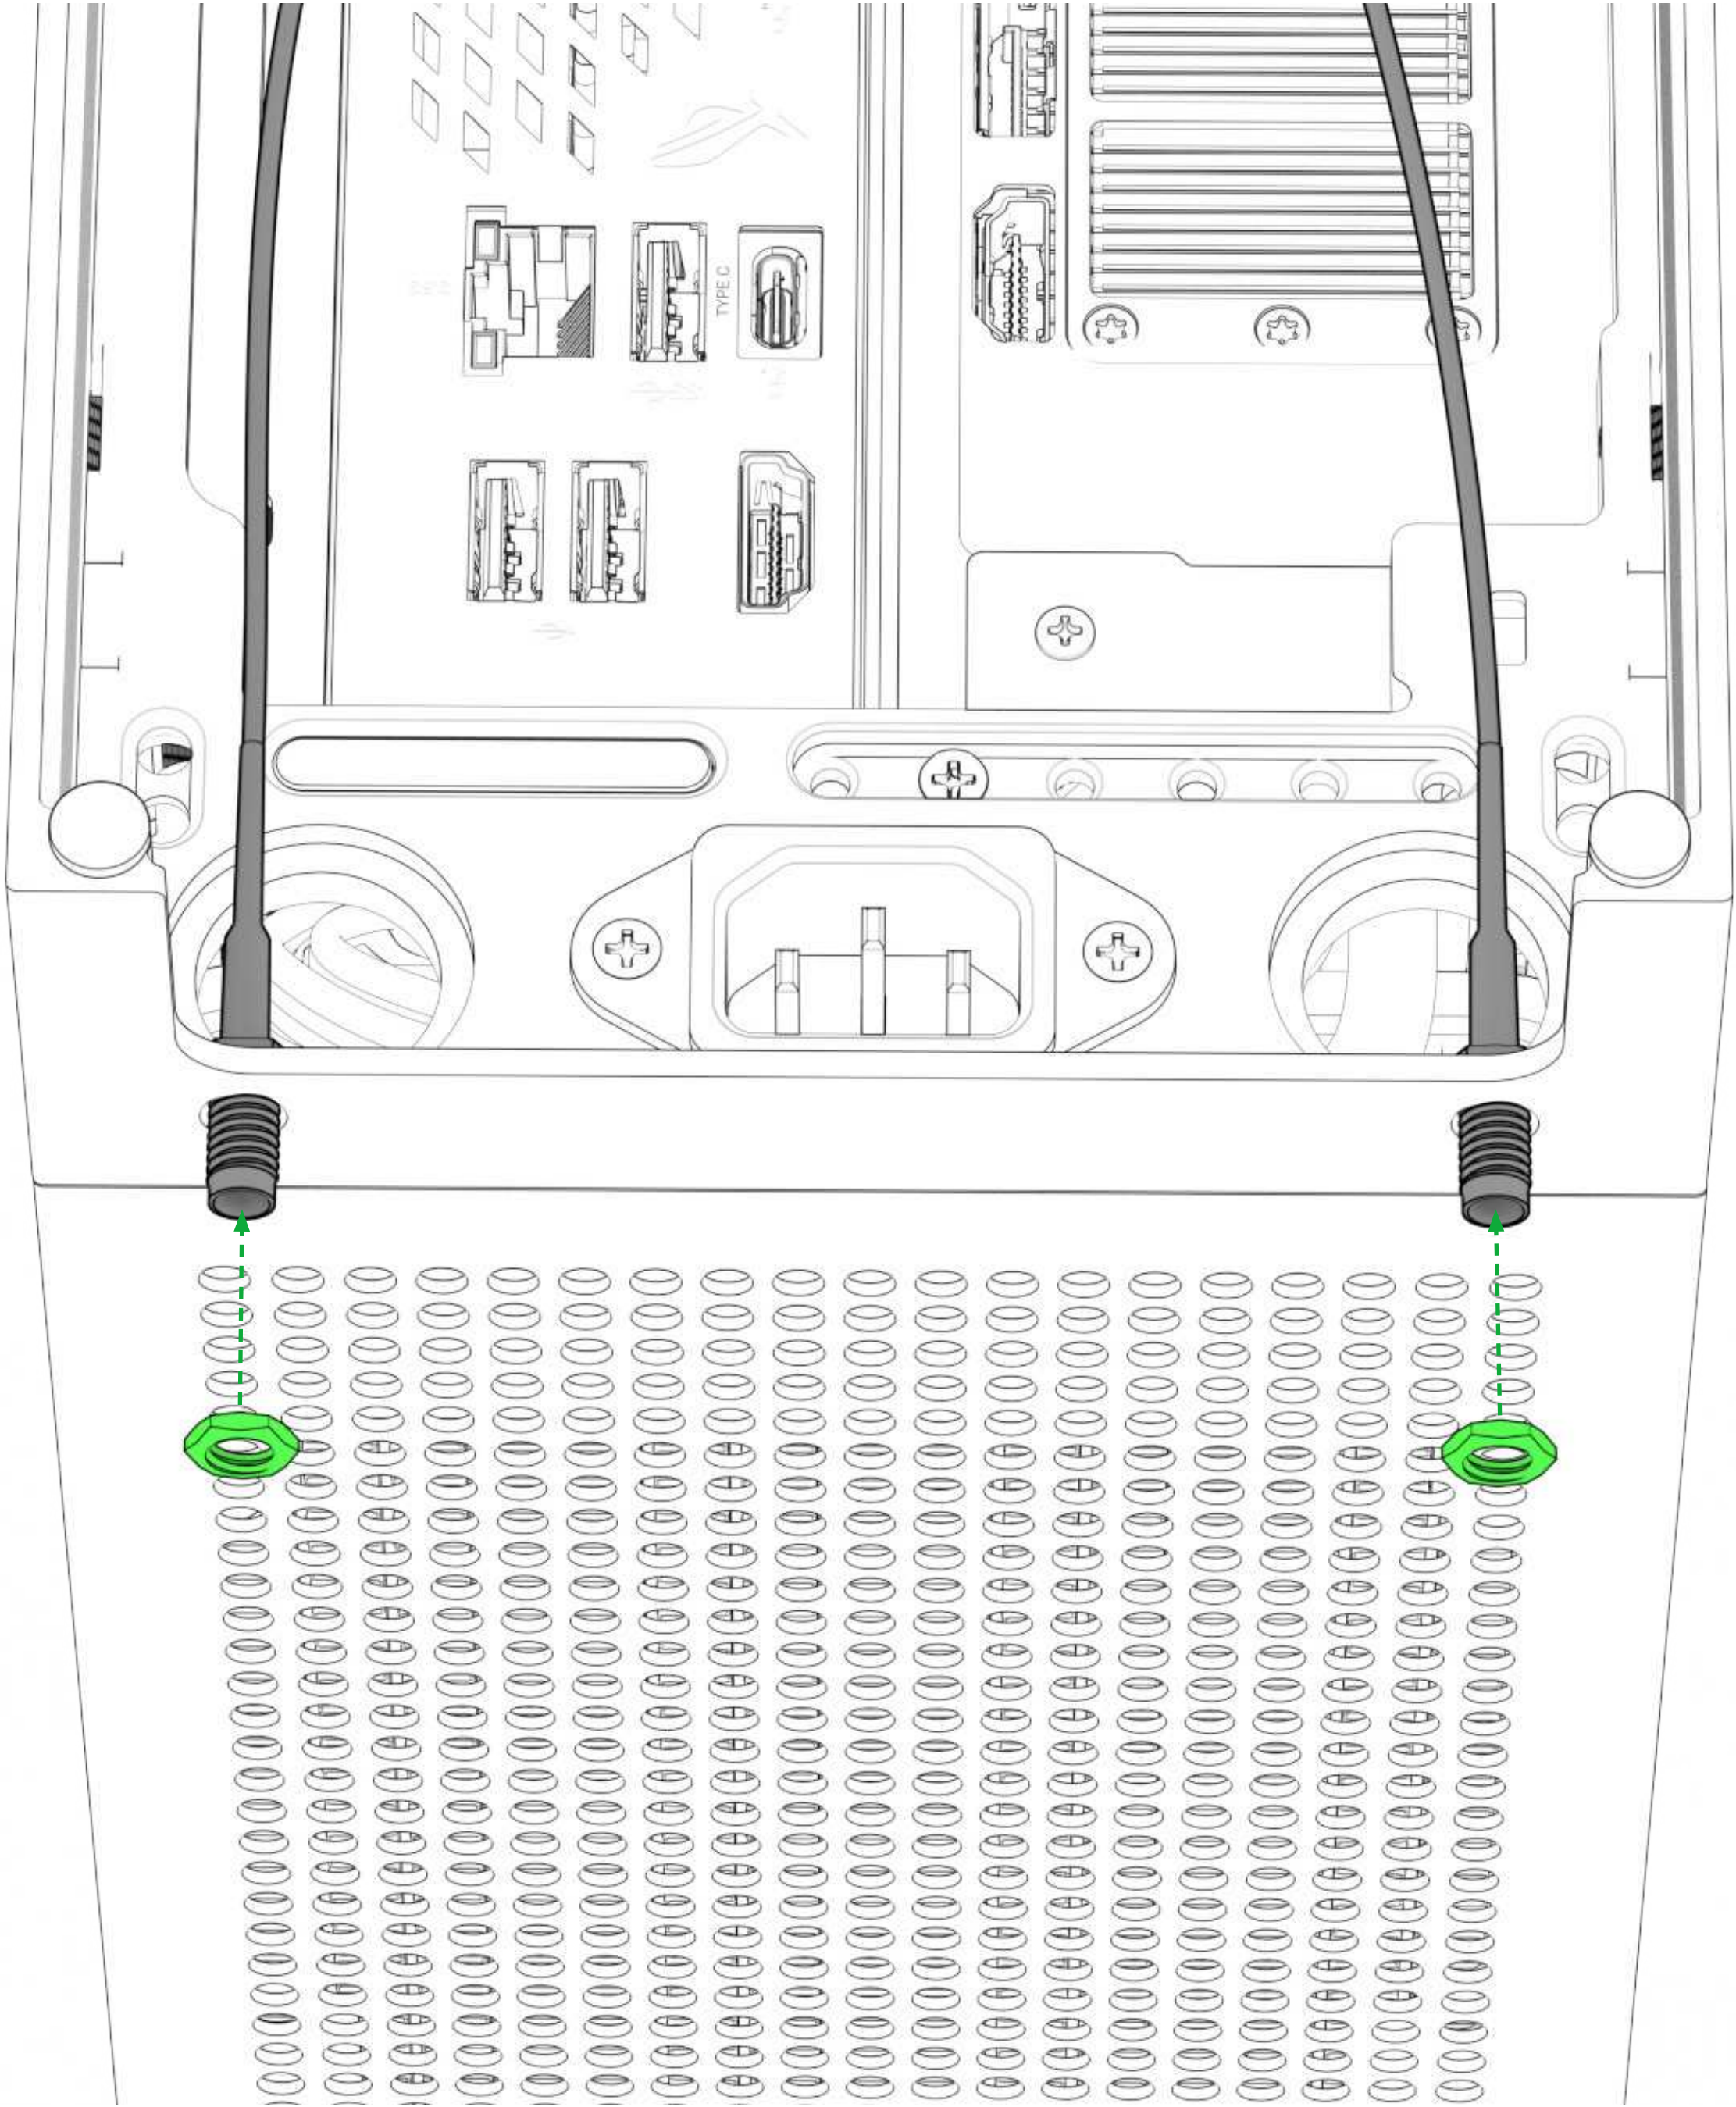

FORMD T1

Vertical Stand

*External Antenna
not included

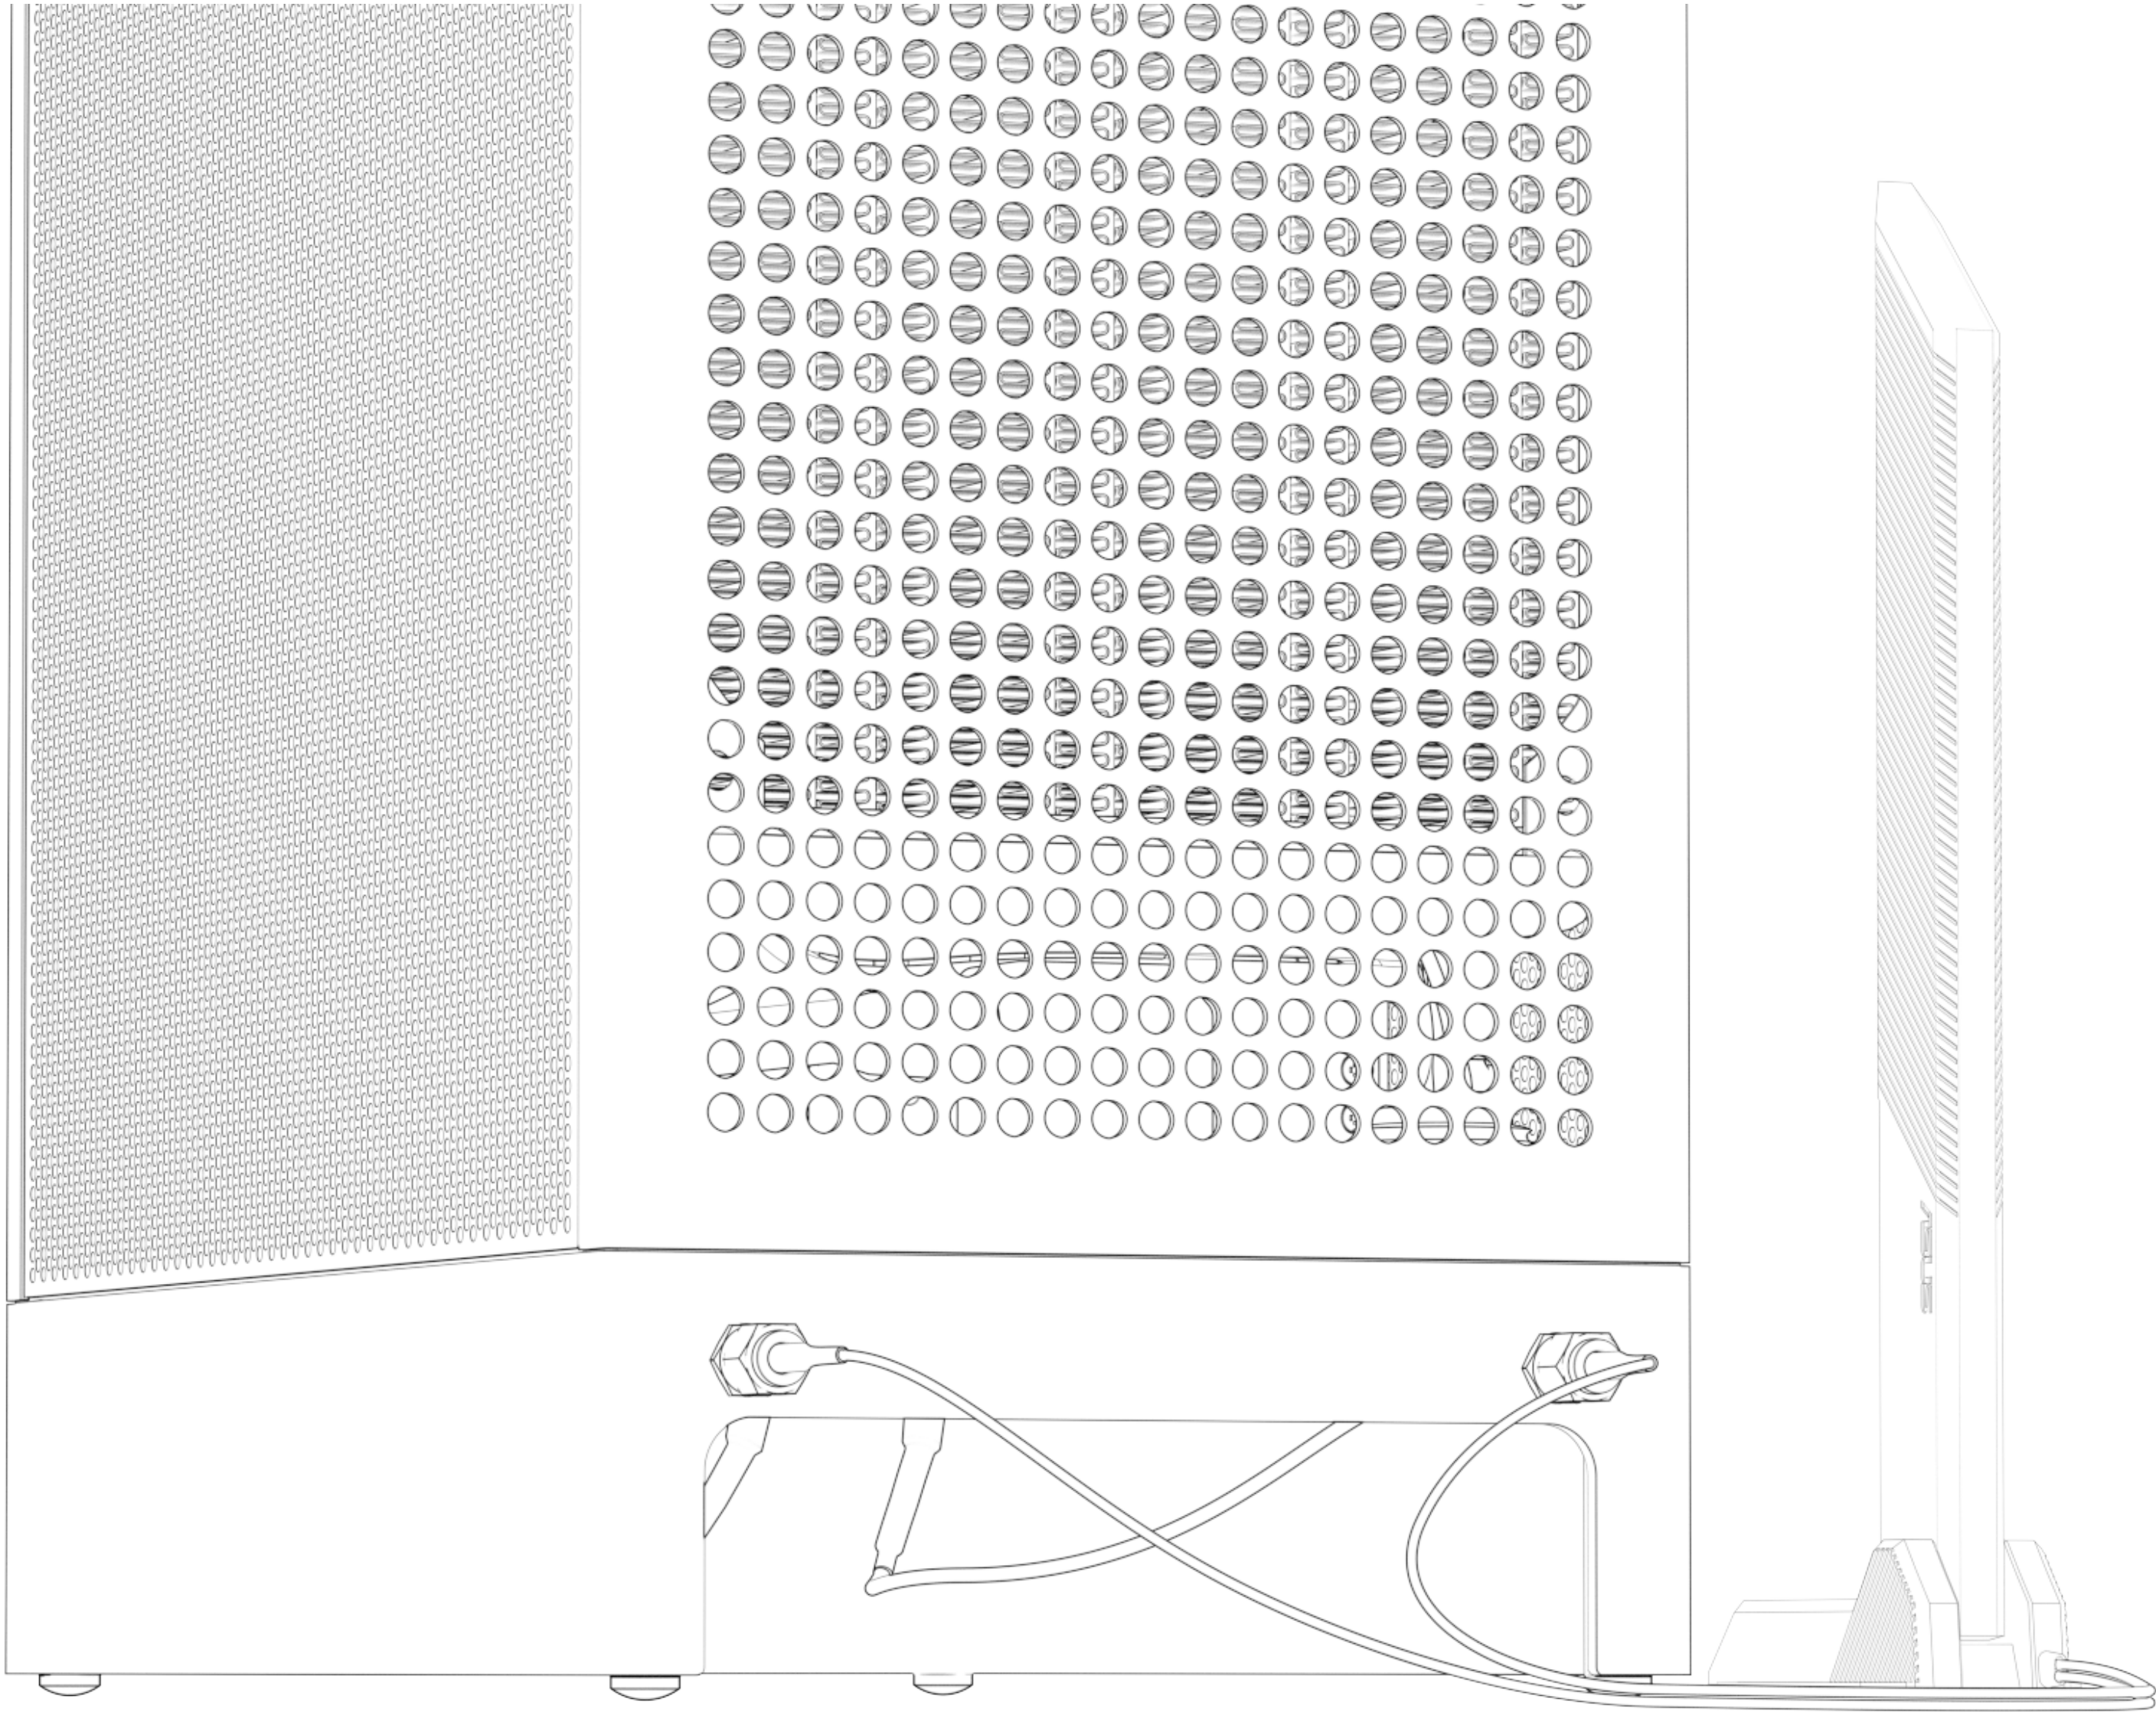

Brought to you by the FORMD Team.