



# LAWN PRO TRACTOR CANOPY

and

# ZERO TURN MOWER CANOPY

MODELS: LNP1012

## **⚠ WARNING**

READ ALL INSTRUCTIONS BEFORE USING THE ALL PRO OR LAWN PRO CANOPIES

NOTE: ASSISTANCE IS NEEDED WITH THIS PRODUCT INSTALLATION. Failure to read instructions before use could result in injury or death.

## **Instructions for Installation and Use:**

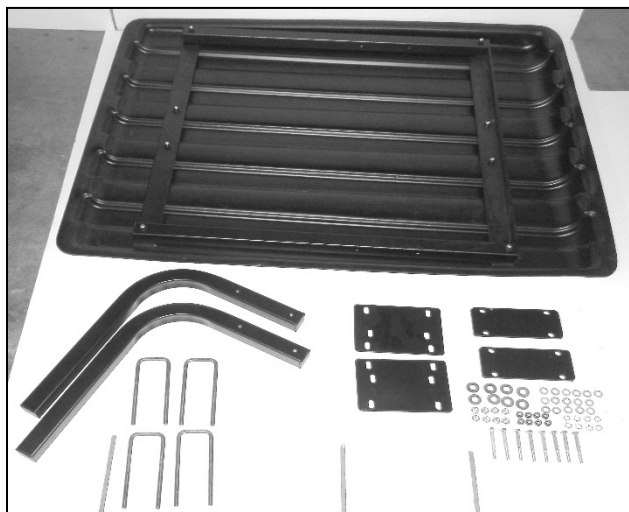


FIG. 1

### **CONTENTS: SEE FIG. 1**

- 1 –COMPOSITE TOP WITH FRAME
- 1 –SET OF 2 UPRIGHT TOP SUPPORTS
- 4 -3/8" U BOLTS
- 4- 5/16" x 2 1/2" U BOLTS
- 8 -3/8" FLAT WASHERS
- 8 -3/8" LOCKNUTS
- 8 -5/16" X 2 1/4" BOLTS
- 16 -5/16" LOCKNUTS
- 24 -5/16" FLAT WASHERS
- 8 –EXTERNAL TOOTH LOCK WASHERS
- 2 –MOUNTING PLATES WITH 6 OBLONG HOLES
- 2 –MOUNTING PLATES WITH (4) 7/16"



**FIG. 2**

**STEP 2-MEASURE THE ROLL BAR WIDTH ON YOUR TRACTOR OR MOWER. MEASURE THE WIDTH OF THE TRACTOR TOP FRAME. SEE FIG. 2**

**STEP 3-INSTALL MOUNTING PLATES WITH OBLONG HOLES TO CANOPY USING 5/16" BOLTS, FLAT WASHERS, EXTERNAL TOOTH LOCK WASHERS AND LOCK NUTS PROVIDED.**

**\*\*NOTE\*\*EXTERNAL TOOTH LOCK WASHERS MUST BE INSTALLED BETWEEN MOUNTING PLATES AND CANOPY FRAME. \*\*SEE FIG. 3**



**FIG. 3**

**\*\*NOTE\*\*MOUNTING PLATES CAN BE MOUNTED TO THE INSIDE SEE FIG. 4 OR OUTSIDE SEE FIG. 4A OF THE CANOPY FRAME TO ACCOMMODATE YOUR ROLLBAR WIDTH. \*\***



**FIG. 4 (INSIDE MOUNT)**



**FIG. 4A (OUTSIDE MOUNT)**





**FIG. 4**

**STEP 4-**

ATTACH UPRIGHT SUPPORTS TO MOUNTING PLATES WITH OBLONG HOLES AS DONE IN STEP 3.

**\*NOTE\*SELECT THE APPROPRIATE HOLES OF THE 3 SETS AVAILABLE TO ACQUIRE THE DESIRED ANGLE FOR YOUR TRACTOR TOP/CANOPY.\***

**\*NOTE\*\*THESE BOLTS SHOULD BE LEFT SOMEWHAT LOOSE UNTIL FINAL ASSEMBLY HAS BEEN COMPLETED. \*\* SEE FIG. 4**

**STEP 5-ATTACH 3/8" U-BOLTS TO VERTICAL SIDES OF ROLLBARS USING 3/8" FLAT WASHERS AND 3/8" LOCK NUTS PROVIDED.**

**\*\*NOTE\*\* TO INSTALL ON A LEXMARK LAWN MOWER WITH ROUND ROLL BARS, USE THE 5/16" X 2 1/2" U BOLT AND HARDWARE INSTEAD OF THE 3/8.**

**\*\*NOTE\*\*U-BOLTS SHOULD BE LEFT LOOSE ENOUGH FOR THE UPRIGHT SUPPORT BARS TO BE INSERTED THRU U-BOLTS. \*\* SEE FIG. 5**



**FIG. 5**



**FIG. 6**

**STEP 6-WITH ASSISTANCE RAISE THE CANOPY ASSEMBLY AND SLIDE DOWN THRU THE U-BOLTS. ALSO WITH ASSISTANCE TIGHTEN THE 4 U-BOLTS AROUND THE UPRIGHT SUPPORTS AND ROLLBARS SECURELY. SEE FIG. 6**

**STEP 7-BY UTILIZING THE RANGE OF MOVEMENT PROVIDED WITH THE OBLONG HOLES IN THE MOUNTING PLATES, HOLD CANOPY HORIZONTAL TO GROUND. TIGHTEN ALL HARDWARE SECURELY. SEE FIG. 7**



**FIG. 7**

**⚠ WARNING**

**CANOPY DOES NOT OFFER ANY ADDITIONAL ROLLOVER PROTECTION.**

**⚠ WARNING**

**NEVER ALLOW ANYONE TO SIT OR STAND ON CANOPY.**

**⚠ WARNING**

**CANOPY IS NOT INTENDED TO TRANSPORT ANY CARGO AND/OR EQUIPMENT.**

For more information about this or other products, contact us at:

**Great Day, Inc.**

604 Kimbrough Dr. \* Tallulah, LA 71282 \* (866) 649-1918 \* [www.greatdayinc.com](http://www.greatdayinc.com)