

NOTE: THIS MANUAL IS BASED ON CAREFULLY DOCUMENTED RESEARCH. ABSOLUTE ACCURACY IS ATTEMPTED BUT NOT GUARANTEED. USE THIS MANUAL AS A REFERENCE GUIDE. SCOSCHE, INC. CANNOT BE RESPONSIBLE FOR INCONSISTENCIES THAT MAY OCCUR.

TUNERS / CASSETTE / DISC PLAYERS						RADIO EQ STACK
	MINI	STAN	DIN	ISO DIN	SINGLE DBL DIN	
CHASSIS H	1 ³ / ₄ -2	2	2	2	3 ⁷ / ₈	3
CHASSIS W	7 ¹ / ₈	7 ¹ / ₈	7 ¹ / ₈	7	7 ¹ / ₈	7 ¹ / ₈
CHASSIS D	4 ³ / ₄ -5 ¹ / ₂	5 ⁷ / ₈ -6 ¹¹ / ₁₆	5 ⁷ / ₈ -6 ¹¹ / ₁₆	5 ⁷ / ₈ -6 ¹¹ / ₁₆	5 ⁷ / ₈ -6 ¹¹ / ₁₆	5 ⁷ / ₈ -6 ¹¹ / ₁₆
NOSE H	1 ⁵ / ₈ -1 ³ / ₄	1 ⁵ / ₈ -1 ³ / ₄	2 ³ / ₈	1 ¹³ / ₁₆	3 ³ / ₄ -4	
NOSE W	4 ¹ / ₈ -4 ³ / ₁₆	4 ¹ / ₈ -4 ³ / ₁₆	7 ¹ / ₂	6 ¹¹ / ₁₆	6 ¹¹ / ₁₆ -7 ¹ / ₄	
SHAFT SP	5 ¹ / ₈ -5 ³ / ₄	5 ¹ / ₈ -6				
IN DASH APPLICATION NOTES						
	K	K	K	K ⁴	F ²	K

APPLICATION KIT MODEL: HY1602	
HARNESS ADAPTOR: HY04	ANTENNA ADAPTOR:

IN-DASH INSTALLATION AREA DIMENSIONS				
	DEPTH	MAX DEPTH	WIDTH	HEIGHT
CAVITY	7 ¹⁵ / ₁₆ "	7 ¹⁵ / ₁₆ "	7 ¹ / ₄ "	4 ⁵ / ₁₆ "
DASH OPENING	TYPE: DOUBLE DIN			
DASH MATERIAL: PLASTIC			THICKNESS:	
FOR MAX DEPTH		<input type="checkbox"/> REMOVE REAR SUPPORT <input type="checkbox"/> MODIFY CAVITY		

AMPLIFIER/EQ MOUNTING LOCATIONS (WxHxD)			
UNDER/IN DASH	UNDER SEAT	GLOVE BOX	TRUNK/ CARGO
	14 ¹ / ₂ x 2 x 13"	11 ³ / ₄ x 6 x 6"	Various

Dimensions shown are inches.
For inch/mm conversions refer to chart section.



- B = BACK UP PLATES REQUIRED.
- C¹ = CUT TRIM/PLASTIC (STRUCTURE).
- C² = CUT STEEL.
- D = BELOW DECK ONLY.
- D¹ = LIFT PORTION OF DECK. (MAY REQUIRE STRUCTURAL REINFORCEMENT).
- D² = CUT STEEL WHEN TOP MOUNTED. DO NOT IF BELOW DECK.
- D³ = NARROW SURFACE, BELOW DECK ONLY.
- F¹ = MINIMUM MODIFICATION FILE SHAFT HOLES OR DASH OPENING.
- F² = MODIFY DASH CAVITY AND/OR PANEL.
- K = INSTALLATION KIT, SPACER OR ADAPTOR REQUIRED.
- K¹ = KIT MODIFICATIONS REQUIRED.
- K² = EXTENSION KIT RECOMMENDED.
- K³ = WHEN EQUIPPED WITH FACTORY "ELECTRONIC" RADIO.
- K⁴ = FABRICATE PANEL/BRACKETS.


UPDATED
THROUGH
2002 ☐
2003 ☐
2004 ☐
2005 ☐

HYUNDAI 2000-UP TIBURON

2 Door Sports Coupe


DASHBOARD

Factory Provisions: 1" 2-hole tweeter
Aftermarket:

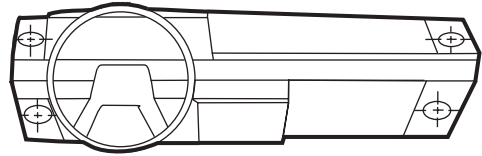

FRONT DOORS


Factory Provisions: 6¹/₂" mounted in factory speaker adapter
Aftermarket: 5¹/₄"K^S, 6¹/₂"K^S
K^S=SAC656

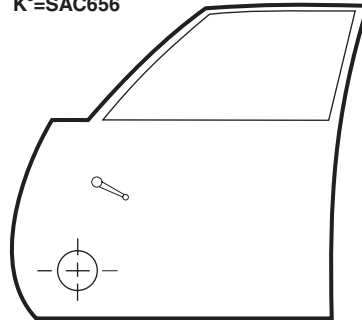

CAVITY W H D
5¹/₂ x 5¹/₂ x 4¹/₂" (factory adapter)
6 x 6 x 4¹/₂" (precut in steel)

REAR SEAT SIDE PANELS

Factory Provisions: Standard 6 x 9"
Aftermarket: 5¹/₄"K^S, 6¹/₂"K^S, 6 x 9"
K^S = SA69

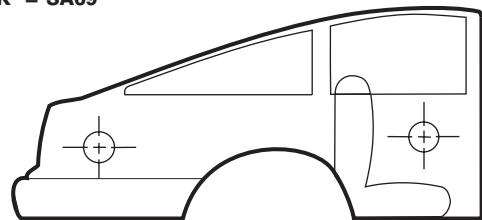

CAVITY W H D
8³/₄" x 6" x 6" (precut in steel)

- K^S = WHEN EQUIPPED WITH STANDARD TWO SHAFT RADIO/TAPE PLAYER. FABRICATE KIT WHEN EQUIPPED WITH FLAT FACE ELECTRONIC RADIO/TAPE PLAYER.
- K^S = SCOSCHE KIT RECOMMENDED.
- N = NOT RECOMMENDED. EXTENSIVE MODIFICATION REQUIRED.
- P = PERFECT WITHOUT MODIFICATION.
- P¹ = MODIFY OR REMOVE POCKETS.
- P² = COIN POCKET LOCATION IN DASH (MAY REQUIRE TRIM KIT).
- P³ = PERFECT WHEN EQUIPPED WITH STANDARD TWO SHAFT RADIO, K WITHOUT.
- R = REAR LOAD ISOMOUNT.
- U = UNDERDASH.
- W¹ = WITH POWER WINDOWS ONLY.
- W² = WITHOUT POWER WINDOWS ONLY.

2000-UP HYUNDAI TIBURON

2 DOOR SPORTS COUPE



DASH.

PRELIMINARY: DISCONNECT THE NEGATIVE BATTERY CABLE.

ANTENNA: THE FACTORY ANTENNA IS LOCATED ATOP THE DRIVER'S SIDE REAR QUARTER PANEL.

RADIO REMOVAL AND IN-DASH INSTALLATION:

NOTE: THE FACTORY STEREO PROVISION IS FOR A DOUBLE DIN STEREO.

1. UNSCREW AND REMOVE SHIFTER KNOB.
2. UNSNAP SHIFTER BEZEL, LIFT AWAY AND REMOVE.
3. UNSNAP RADIO TRIM BEZEL, LIFT AWAY, DISCONNECT AND REMOVE.
4. EXTRACT (4) PHILLIPS HEAD SCREWS SECURING RADIO, DISCONNECT AND REMOVE.

DASH SPEAKER REMOVAL AND INSTALLATION:

NOTE: THE FACTORY SPEAKER PROVISION IS FOR A 1" TWEETER MOUNTED TO THE BACKSIDE OF THE FRONT PILLAR PANEL.

1. CAREFULLY UNSNAP SPEAKER GRILLE BY PULLING FORWARD, LIFT AWAY AND REMOVE.

FRONT DOOR SPEAKER REMOVAL AND INSTALLATION:

NOTE: THE FACTORY SPEAKER PROVISION IS FOR A 6 1/2" PIN CUSHION SPEAKER MOUNTED IN A FACTORY SPEAKER ADAPTER. WHEN INSTALLING AN AFTERMARKET 5 1/4 OR 6 1/2" SPEAKER A SPEAKER ADAPTER IS REQUIRED. WE RECOMMEND THE USE OF A SCOSCHE SAC656 OR SAU56 SPEAKER ADAPTERS.

1. EXTRACT (7) PHILLIPS HEAD SCREWS FROM PERIMETER OF DOOR PANEL.
2. EXTRACT (1) PHILLIPS HEAD SCREW FROM DOOR OPENER CUP AND REMOVE.
3. USING A SMALL PICK, REMOVE (2) PLASTIC PHILLIPS HEAD SCREW COVERS FROM THE DOOR HANDLE AND EXTRACT (2) PHILLIPS HEAD SCREWS FROM BEHIND.
4. USE A PANEL REMOVAL TOOL AND REMOVE PLASTIC SIDE MIRROR TRIANGLE.
5. USING A PANEL REMOVAL TOOL UNSNAP THE PERIMETER OF THE DOOR PANEL, LIFT AWAY, UNPLUG AND REMOVE.
6. EXTRACT (4) PHILLIPS HEAD SCREWS FROM SPEAKER, DISCONNECT AND REMOVE.

REAR DECK SPEAKER REMOVAL AND INSTALLATION:

NOTE: THE FACTORY SPEAKER PROVISION IS FOR A 6X9" SPEAKER MOUNTED IN THE REAR DECK. WHEN INSTALLING AN AFTERMARKET 5 1/4 OR 6 1/2" SPEAKER A SPEAKER ADAPTER IS REQUIRED. WE RECOMMEND THE USE OF A SCOSCHE SA69 SPEAKER ADAPTER.


1. UNSNAP GRILL USING PANEL TOOL FROM TOP AND REMOVE
2. EXTRACT (4) PHILLIPS HEAD SCREWS FROM SPEAKER, DISCONNECT AND REMOVE.



DISASSEMBLE DASH WITH FACTORY RADIO.



FRONT DOOR SPEAKER PROVISION.

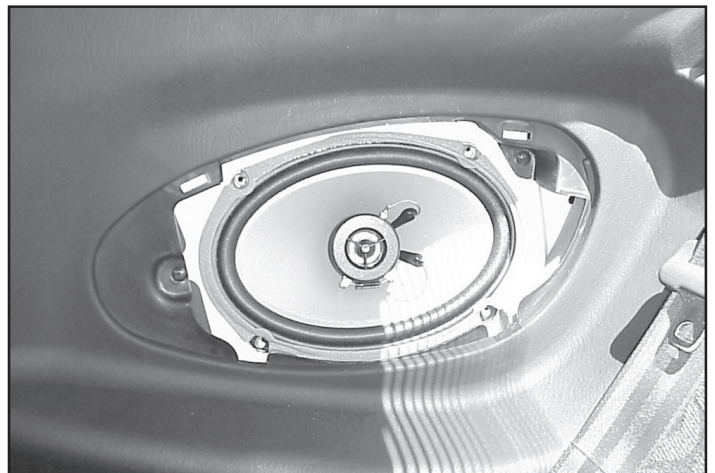

REAR DECK SPEAKER PROVISION.