



Affordable. Reliable. Home Improvement.

GOLF CART REAR SEAT RACK

MODEL:MX24-111

VEVOR

Affordable. Reliable. Home Improvement.

GOLF CART REAR SEAT RACK

MODEL:MX24-111



This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

Assembly precautions

1. Assemble according to these instructions. Improper assembly can create hazards.
2. Product capabilities apply to properly and completely assembled product only.
3. For additional information regarding the parts listed in the following pages, please refer to the Assembly Diagram of this manual. Unwrap and separate all parts in a clean work area. Please keep small spare parts out of children's reach.


SAVE THESE INSTRUCTIONS

WARNING:

The product is not a toy, children shall not play with the product.


Packing list

Serial Number	Name	Quantity
A	Connecting Ear Plate	2
B	Connecting Ear Plate Support Tube	2
C	Turning Connector	2
D	Lower Connecting Tube Assembly	1
E	Upper Connecting Tube Assembly	1

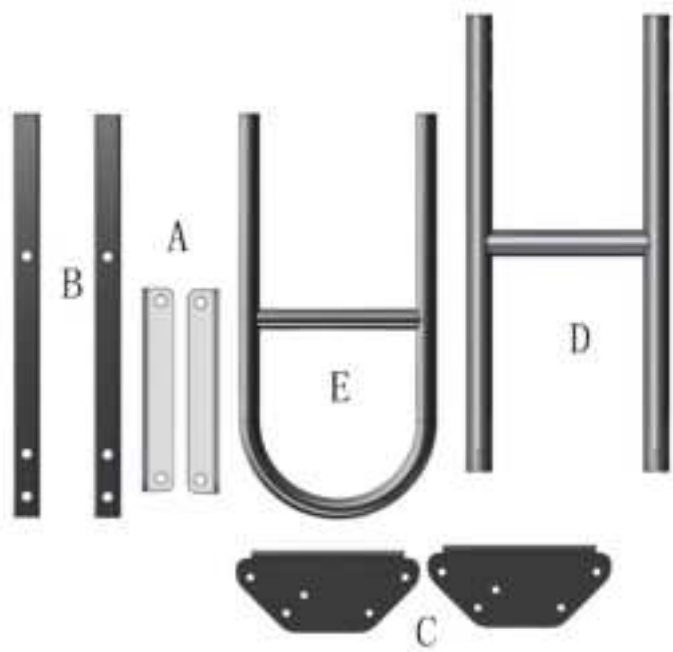

Serial Number	Name	Specification	Quantity	1#	2#	3#
a	Hexagon Head Bolt	M8×50	12	8	4	-
b	Hexagon Head Bolt	M8×45	4	-	-	4
c	Oversized Flat Washer	M8	24	16	-	8
d	Flat Washer	M8	8	-	8	-
e	Spring Washer	M8	4	-	4	-
f	Self - locking Nut	M8	16	8	4	4
g	Drum Brake	Φ25	2	-	2	-

Serial Number	Name	Specification	Quantity	1#	2#	3#
h	Single - ended Fixed Wrench	M8S13	1	-	1	-

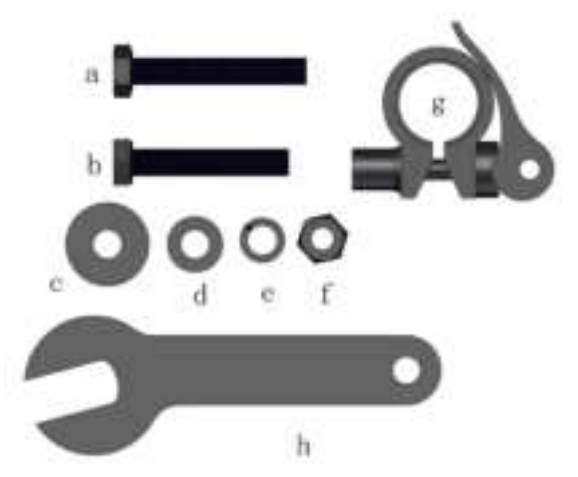

For easier installation, pre-sort the components into 1#, 2#, 3#. Their quantities will be used in Steps 1-3.

Installation Steps

Step 1:

Install the connecting lug support tube (B), the turning connector (C), and the lower connecting tube assembly (D) together using the 8 hexagon head bolts M8×50, 16 oversized flat washers M8, and 8 self - locking nuts M8 from Set 1#.



Step 2:

Slip the brake caliper from Set 2# onto the lower connecting tube assembly (D). Insert the upper connecting tube assembly (E) into the lower connecting tube assembly (D), adjust it to the appropriate height, then rotate and tighten the brake caliper.



Step 3:

Install the connecting lugs (A) together using 4 hexagon head bolts M8×45 and 4 oversized flat washers M8 from Set 3#.




Step 4:

Use 4 hexagon head bolts M8×50, 8 flat washers M8, 4 spring washers M8 and 4 self - locking nuts M8 from Set 2# to install the assembled connecting ear plates (A) and the footrest together.



Step 5:

Install the installed connecting lug support tube (B) and the footrest together using 4 oversized flat washers M8 and 4 self - locking nuts M8 from Set 3#.

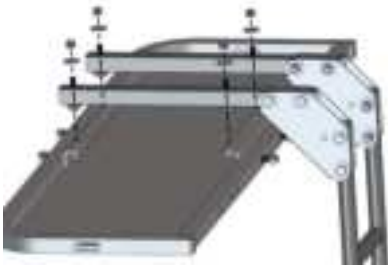

Precautions

Regularly check the installation status of the rear armrest. If it is loose, tighten it in a timely manner.

Manufacturer: Shanghaimuxinmuyeyouxiangongsi

Address: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

Imported to AUS: SIHAO PTY LTD. 1 ROKEVA STREETEASTWOOD

NSW 2122 Australia

Imported to USA: Sanven Technology Ltd. Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

UK	REP
-----------	------------

YH CONSULTING LIMITED. C/O YH Consulting
Limited Office 147, Centurion House, London
Road, Staines-upon-Thames, Surrey, TW18 4AX

EC	REP
-----------	------------

E-CrossStu GmbH
Mainzer Landstr.69,
60329 Frankfurt am Main.

