



SAVE THESE INSTRUCTIONS


Find the latch and the polarity line.
Align parts as shown below and
insert the adapter box into the track

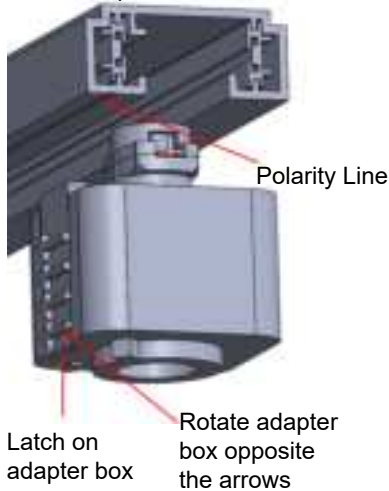

Rotate the adapter box opposite
the arrows until the latch snaps in
place between the two track rails

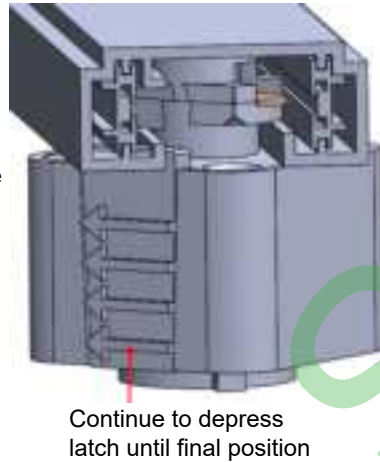


Final Position

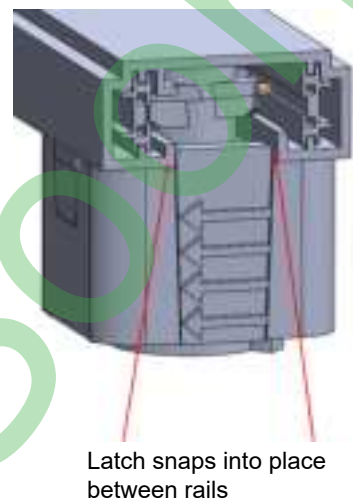

Second Circuit Positioning

1. Hold onto Adapter Box with one hand
2. Place the end of a flat head screw driver under the contact shown below
3. Gently pull up, the contact should move vertically until hitting a hard stop
4. Follow instructions for inserting into track

Place flat head under the contact

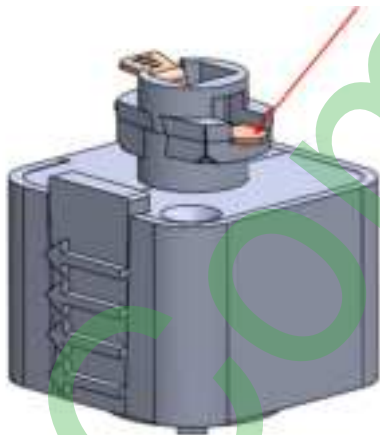

Final Position

