



NOTE:

Please read carefully before use and keep for future reference

Tell Free(US): 3235971109

Website: www.mcombo.com Amazon sold by: MCombo

Warranty Claim: sales@mcombo.com

Sales & Technical Questions: sales@mcombo.com sales@exacme.com




CONGRATULATIONS!


Mcombo Living Room Chairs - a name synonymous with classic design and the carrier of value and quality. Our products are directly from factory and eliminated the cost of middlemen. The Living Room Chairs is a high-quality shading solution to enhance comfortable feelings as you try to enjoy the nice day.

WARRANTY

- All warranties are to the original purchaser from MCOMBO ONLY ®
- MCOMBO [®] will replace the defective parts or send replacement item provided that the warranty parts have not been subjected to misuse, abuse or improper service by the consumer, for example, damaged wire arising in consequence of negligence or improper operation.
- MCOMBO [®] All of recliners come with a 30-day return/replace policy. During this time, we will cover the shipping cost of return and replacement for defective and damaged item, through provide pre-paid return label or pick up service for customer's convenience.

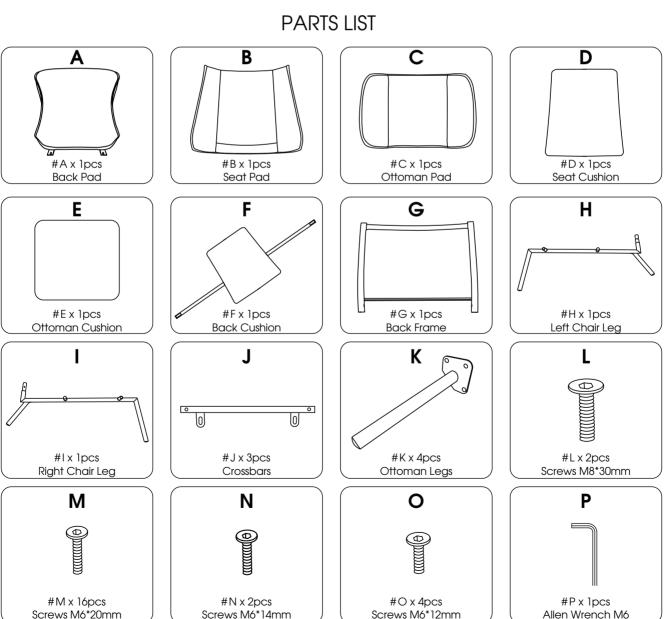

Ottoman Assembly

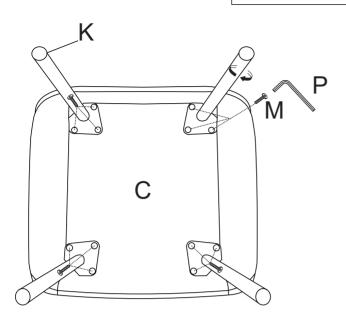


Step 1

Use Screws **#M** to fix the Ottoman Legs **#K** on the Ottoman Pad **#C**, tighten with Allen Wrench **#P**.

Chair Assembly

Step 2

Use Screws **#O** to connect the Left Chair Leg **#H** to the side of the Crossbar **#J** with Allen Wrench **#P**.

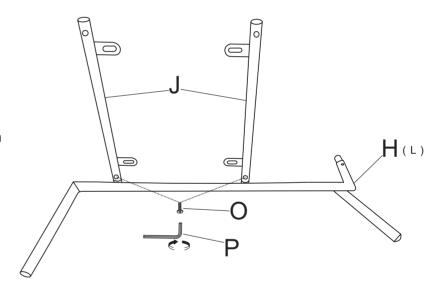


I (R)

Step 3

Use Screws **#O** to connect the Right Chair Leg **#I** to the other side of the Crossbar **#J** with Allen Wrench **#P**.

In this step, the bottom frame of the chair is complete.

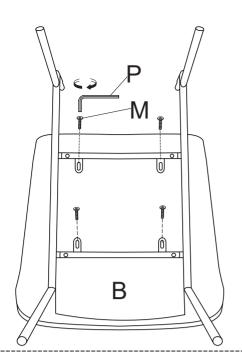

Step 4

Use Screws **#M** to fix the Seat Pad **#B** on the bottom frame of the chair, tighten with Allen Wrench **#P**.


Tips


An inverted installation may be easier to operate.

Step 5

Place the bottom frame of the chair in its normal position.

Use Screws **#N** to connect the Back Frame **#G** to the top of the Left Chair Leg **#H** and Right Chair Leg **#I** with Allen Wrench **#P**.

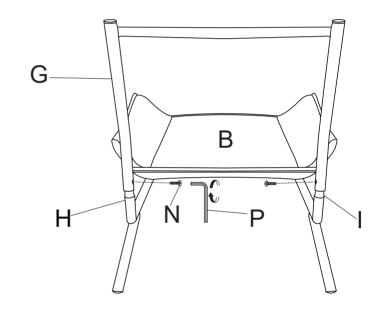

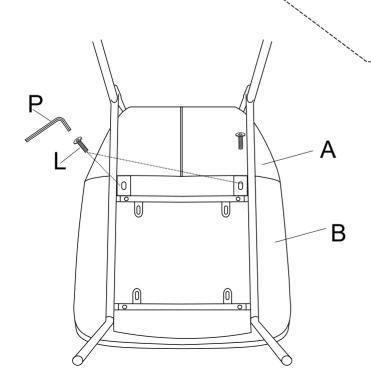


Step 6

Use Screws **#L** to fix the Back Pad **#A** on the Seat Pad **#B**, tighten with Allen Wrench **#P**.

Tips

An inverted installation may be easier to operate.

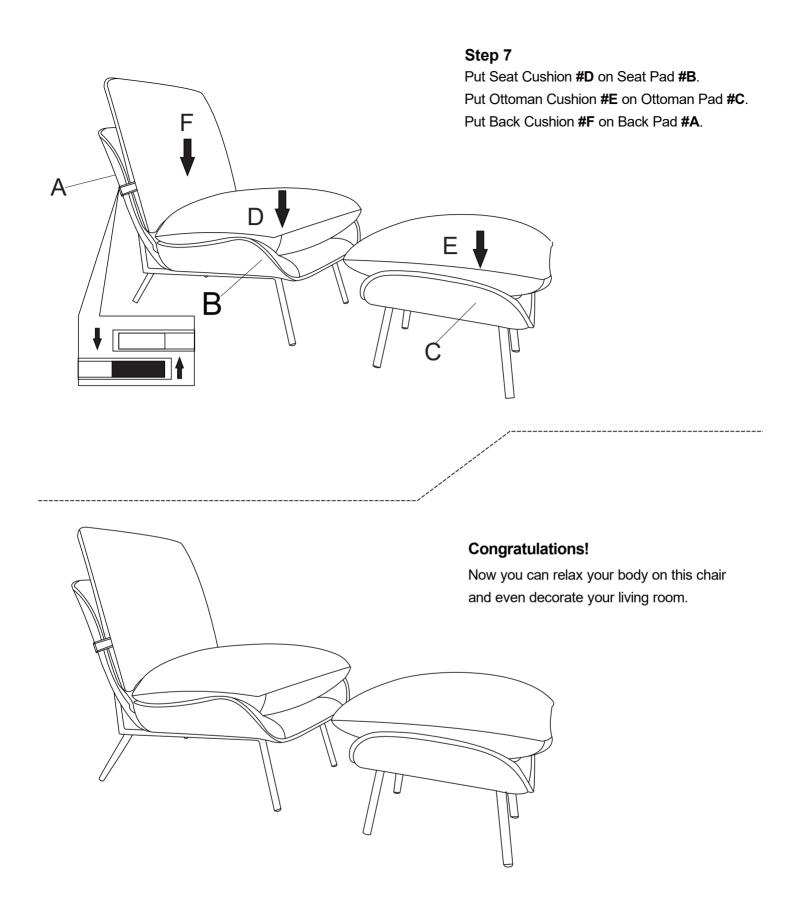

KINDLY REMINDER

If you have any questions about the product or use, please feel free to contact sales@mcombo.com