
WF 310874/WF 310875

If you have any questions, please feel free to contact us. Email: hdteam@aminalife.com

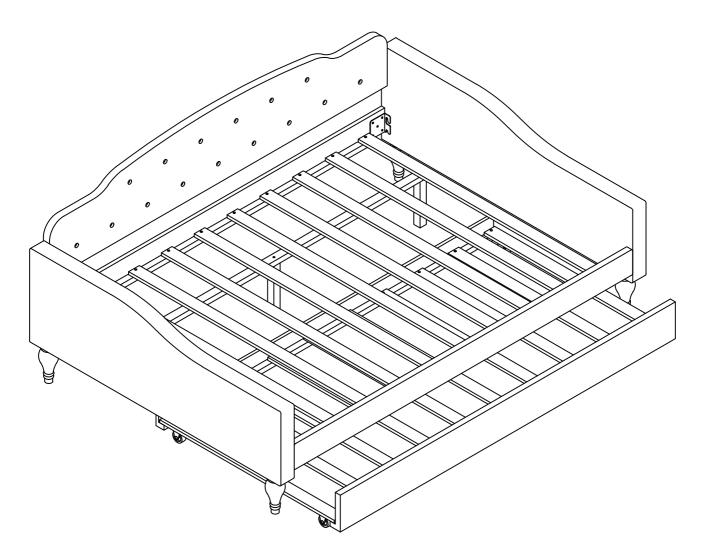


IMPORTANT NOTE


- **PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED
- ** BEFORE YOU BEGIN , KINDY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP
- **DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BED IS FULLY SET-UP

MADE IN VIETNAM

PAGE 1 OF 9

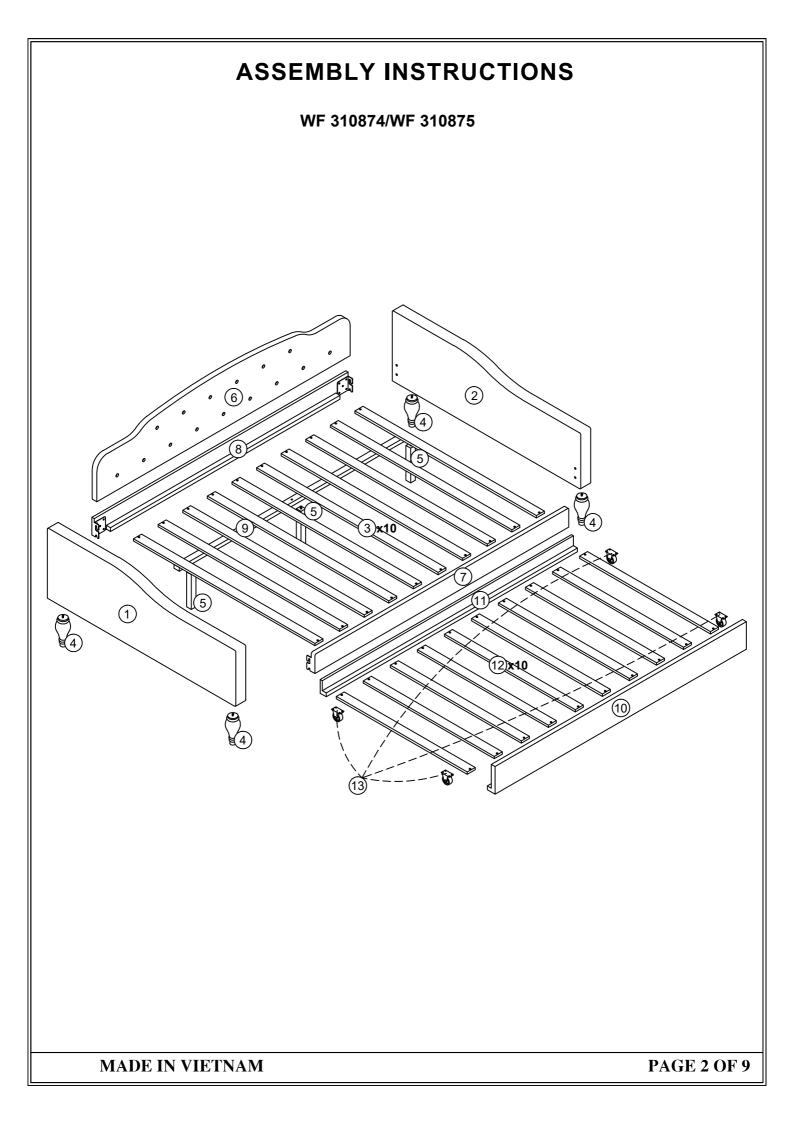


WF 310874/WF 310875

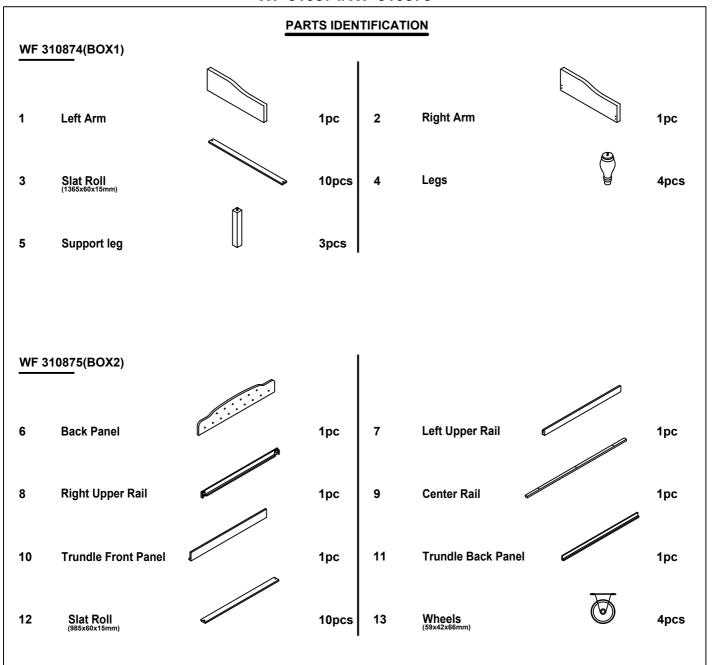



MADE IN VIETNAM PAGE 3 OF 9

WF 310874/WF 310875

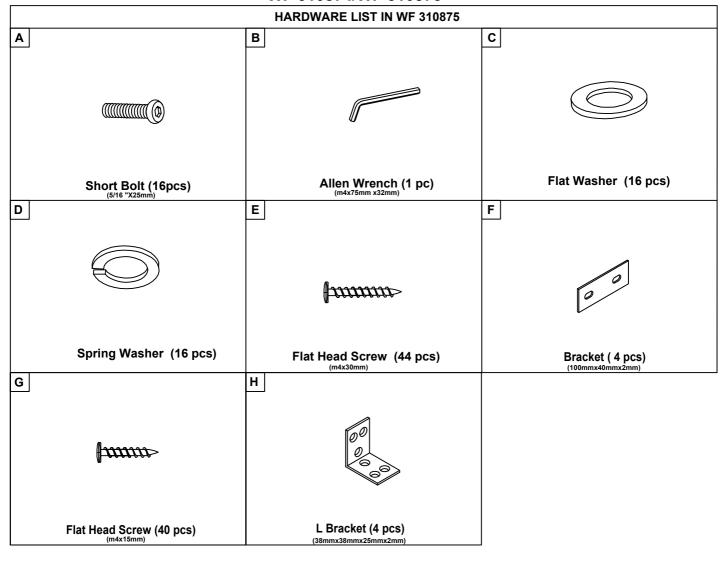


MADE IN VIETNAM PAGE 4 OF 9



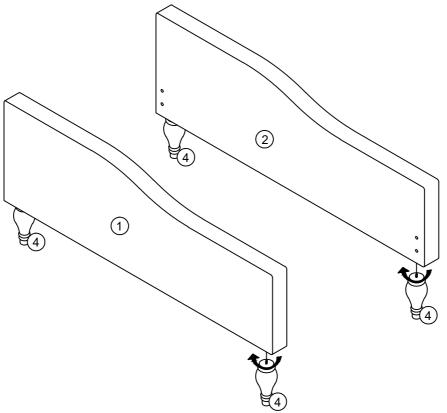


STEP 2

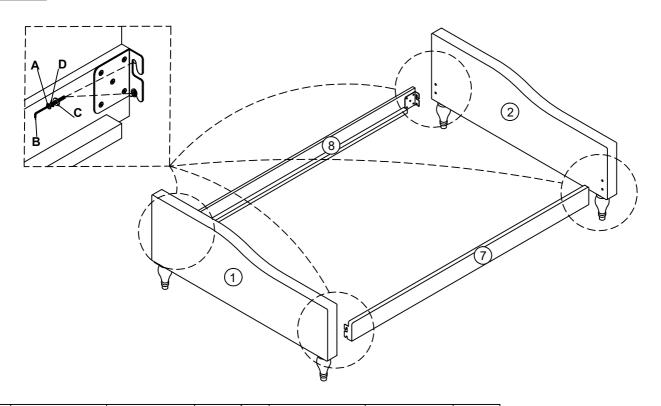



A	Bolt (5/16 "x25mm)	8pcs	D	Spring Washer	8pcs
В	Allen Wrench (M5x75mm x32mm)	1рс	С	Flat Washer	8pcs


MADE IN VIETNAM

PAGE 5 OF 9

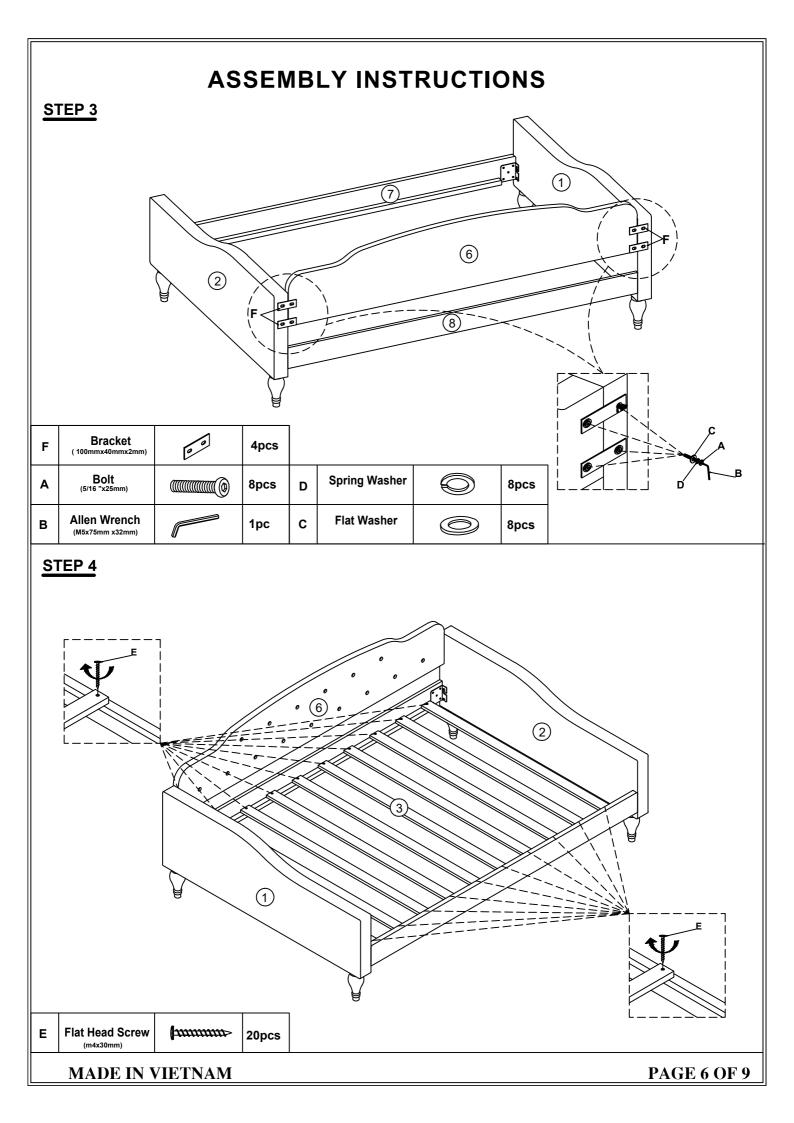


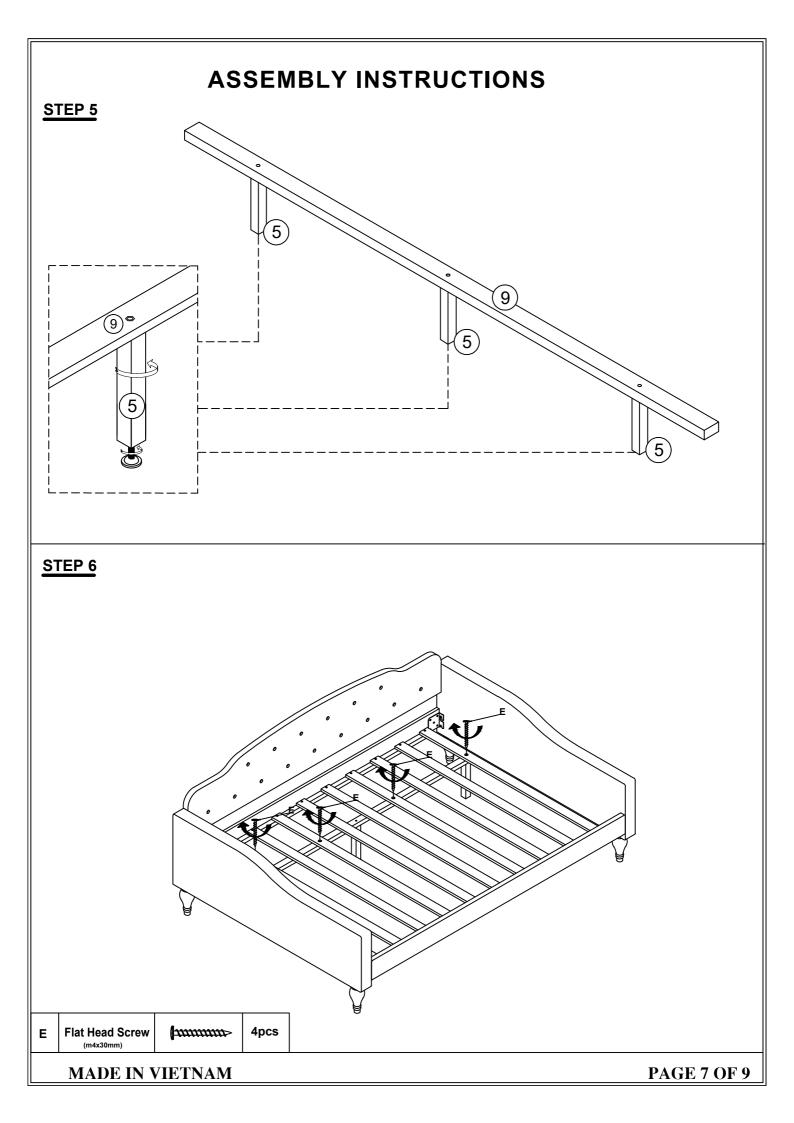

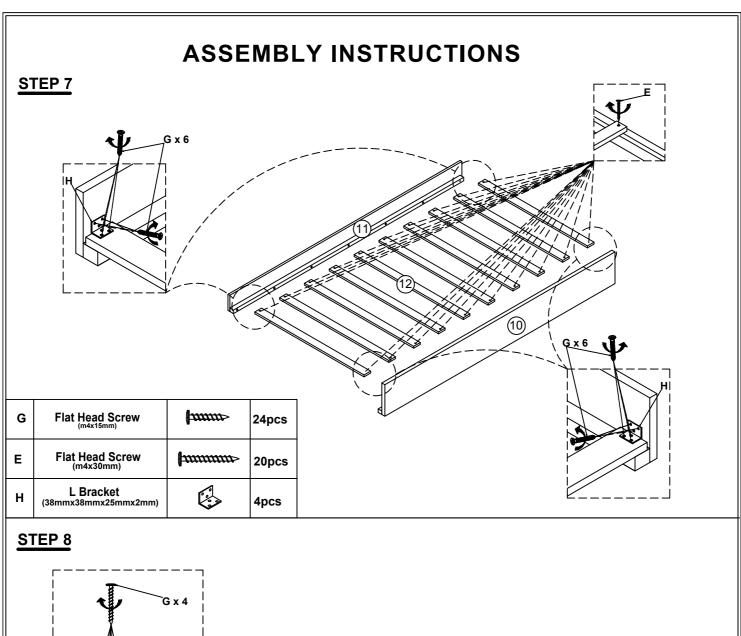

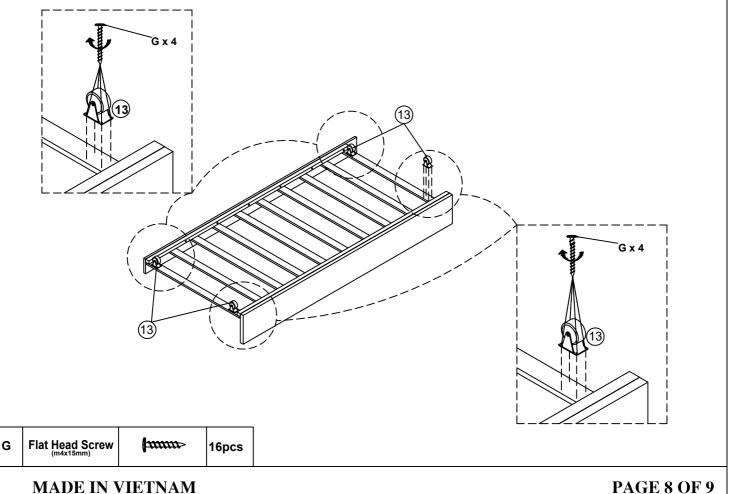

STEP 9 COMPLETE

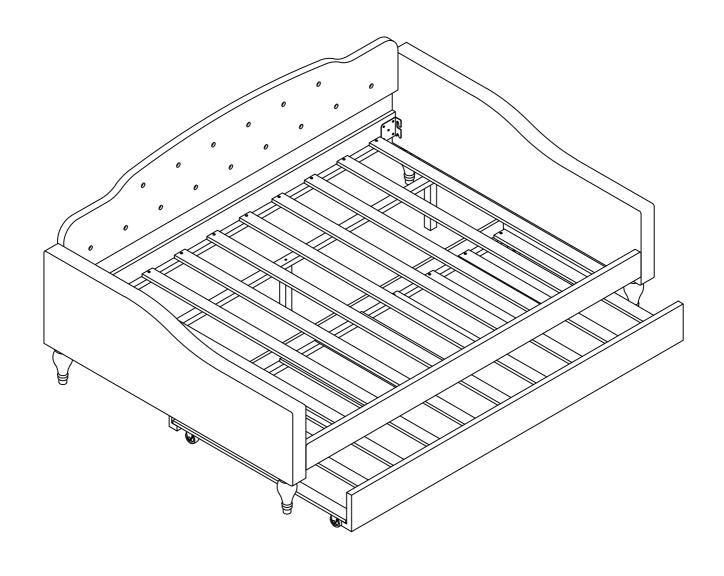

MADE IN VIETNAM