



## Convert 1271 --> 1270

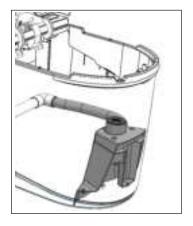


1. Open the lid and have necessary tools ready


Screwdriver torx T25

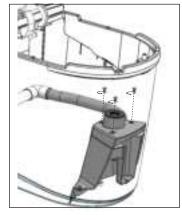

2. Loosen the three screws

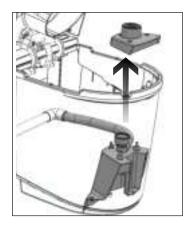


**3.** Remove fixing block and gasket

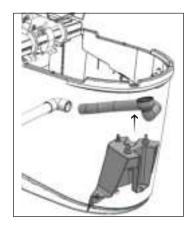


**4.** Loosen urine hose from connection


If you want to use urine hose later on leave connection in urine outlet

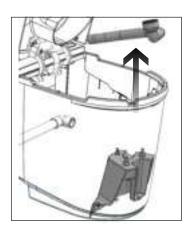


**5.** Remove the internal urine hose

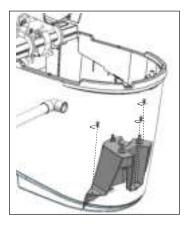

**6.** Loosen the three screws that keep the assembly base in position

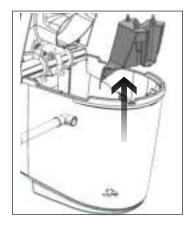


**7.** Remove assembly base

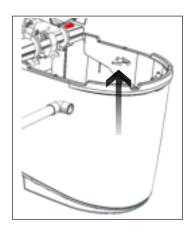


8. Remove magnet holder

If the toilet is connected to power, the red light goes on

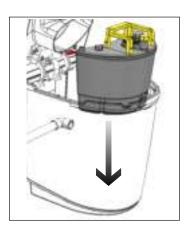

**9.** Place the urine container

When the urine tank is placed in correct position, the red light will go out

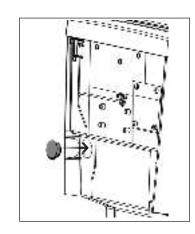

10. Insert the pipe cover

