



Installation Manual

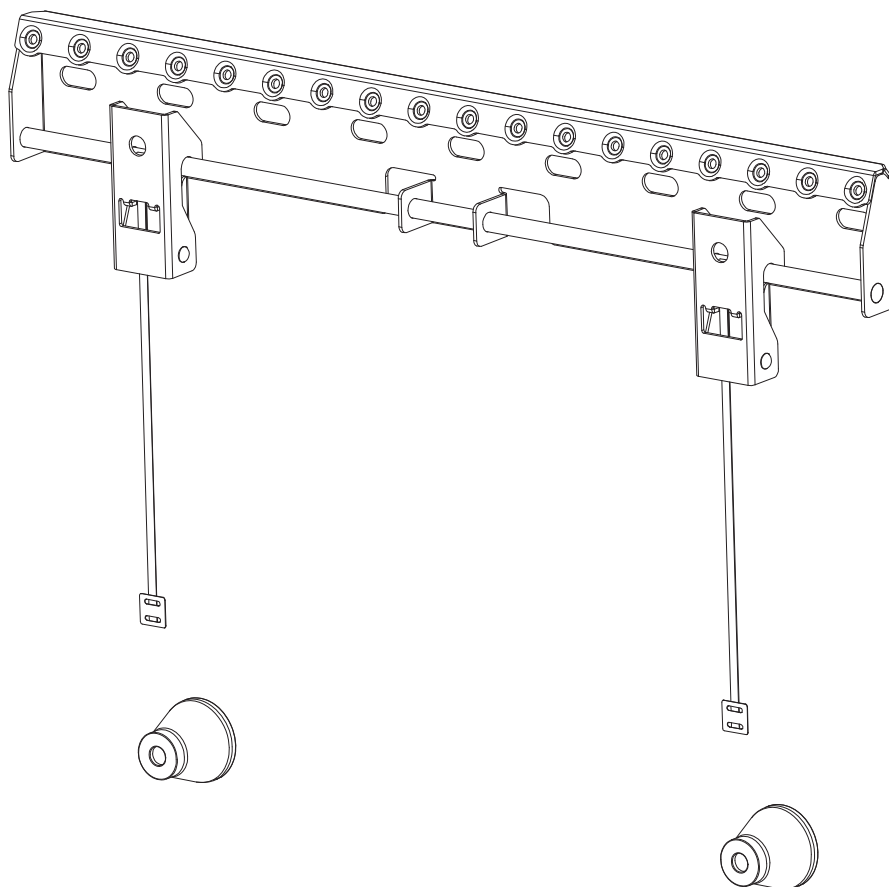

Studless TV Wall Mount

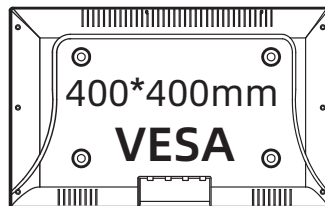

Thank you for choosing **Supcline**! All our products come with **10 years warranty**. As a manufacturer, we strive to provide you with the highest quality products and services. If you have any issues during installation and use, please contact us at **supcline@126.com**. We're 24 hours available!


Warning!

Please read this instruction carefully before installation.

If you have any doubts, please feel free to contact our Customer Service at supcline@126.com.


- This product is designed for solid concrete/brick wall and drywall. For wood stud, please check the stud spacing first before installation.
- The wall must be capable of supporting five times the weight of the TV and mount combined.
- The product contains small parts, do not swallow any accessories, it may cause choking hazard if swallowed.
- Incorrect installation may result in product damage or body injury. Supcline shall bear no responsibility for any damage or injury resulted from incorrect installation, incorrect assembly or misuse.

Tools Needed (Not Included)

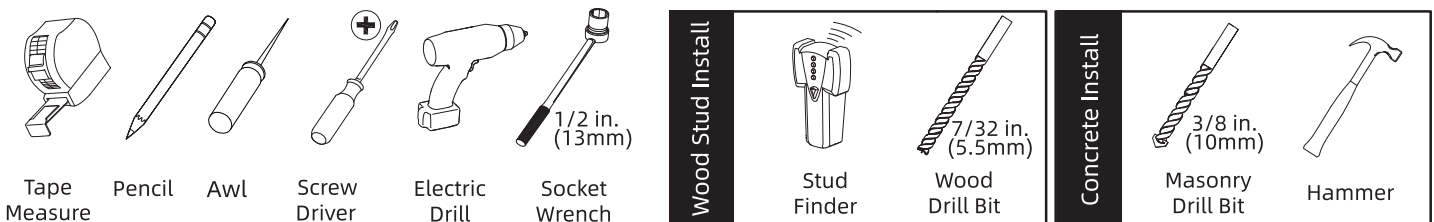

Contained Parts and Hardware

Main Parts




1 Wall Plate x1



2 TV Bracket x2



3 Bumper x2




4 Level x1

Accessories




A Anchors (Φ10*50) x3



B Tapping Screw (M7*55) x3



C Washers (Φ20*8.5*1.5) x3



D Steel Nail (Φ2.8*50) x18



a/b Screws (M4*12) x4 (M4*30) x4



c/d Screws (M6*15) x4 (M6*35) x4



e Screws (M8*25) x4




f Screws (M8*45) x4



g Washers (Φ16*6.5*1.0) x4



h Washers (Φ20*8.5*1.5) x4

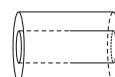


i 10mm Spacer Ring (Φ18*8.5*10.0) x4




j 5mm Spacer Ring (Φ18*8.5*5.0) x4

Step 1: Before Installation


1-1. Check the wall type

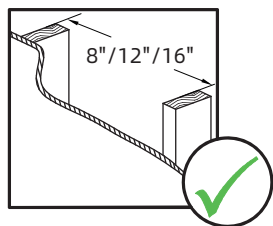

Wood studs

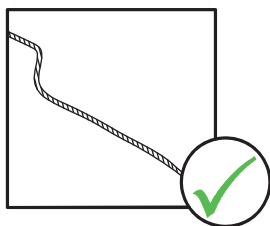


Drywall

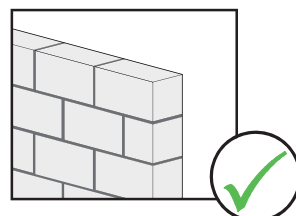


Solid concrete or brick walls

1-2 Check your TV VESA pattern (Vesa=Horizontal x Vertical)

Measure the four holes at the back of your TV.

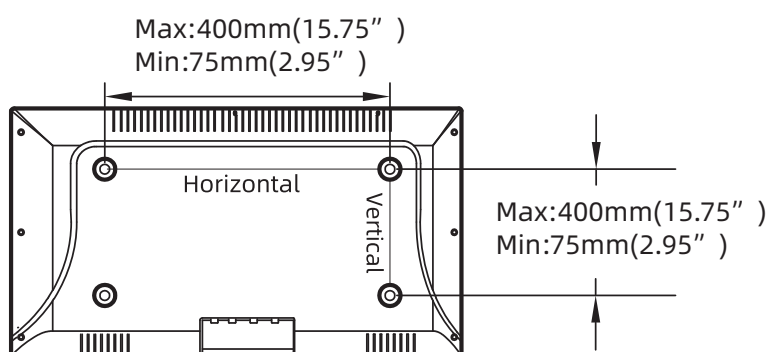

Please check the ports on the back of the TV to avoid potential clogging.

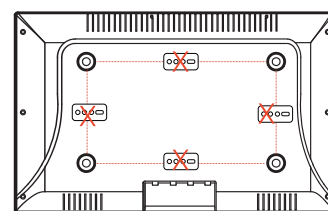



1-3. Check max load



DO NOT exceed the max load indicated, otherwise it may cause product damage or body injury.


Step 2: Assemble the Brackets and Bumpers to the TV

2-1 Select the right screws/washers/spacer rings according to the size and depth of the TV screw holes.

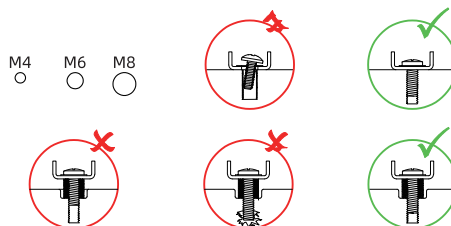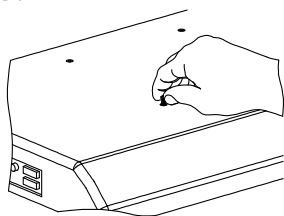


2-2 Figure out the suitable screw combination according to your TV

Combination of screws and washers

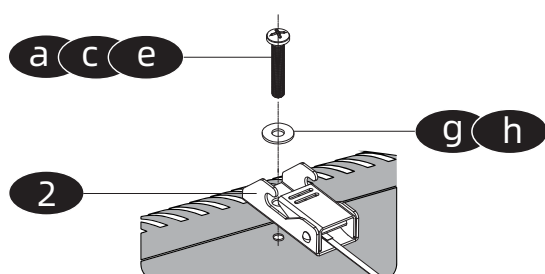


OR

Combination of screws, washers and spacer rings

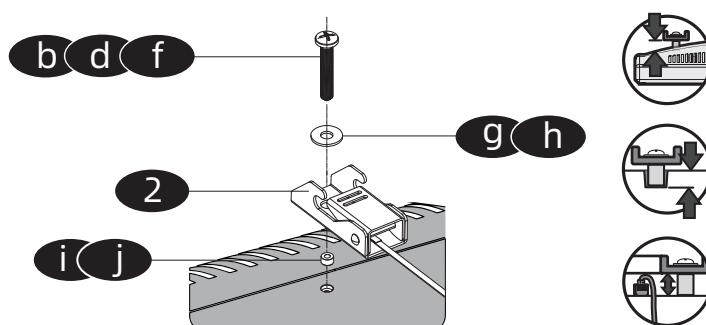



2-3 Attach the brackets

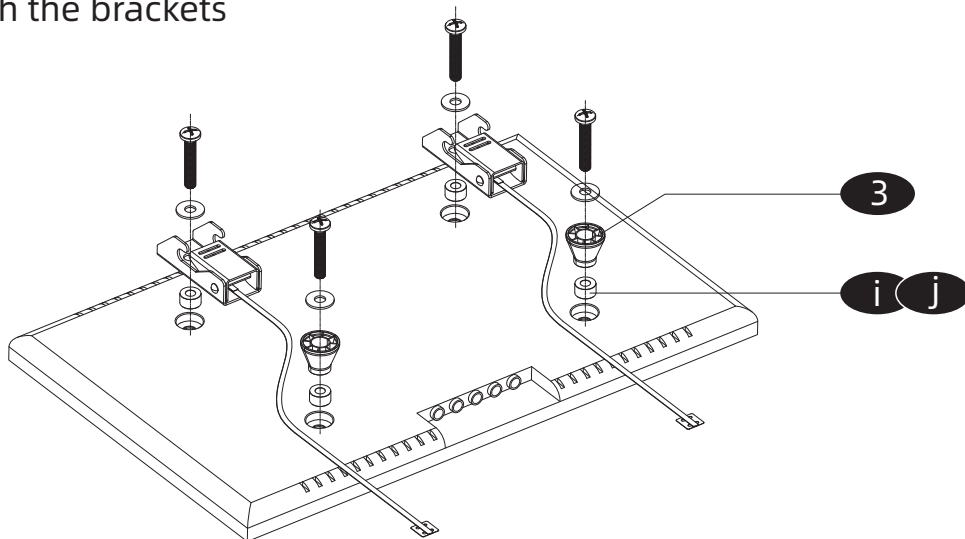


Step 3: Install the Wall Plate on the Wall

Option A: Install on wood studs

Note: Only suit for 8"/12"/16" spacing wood studs

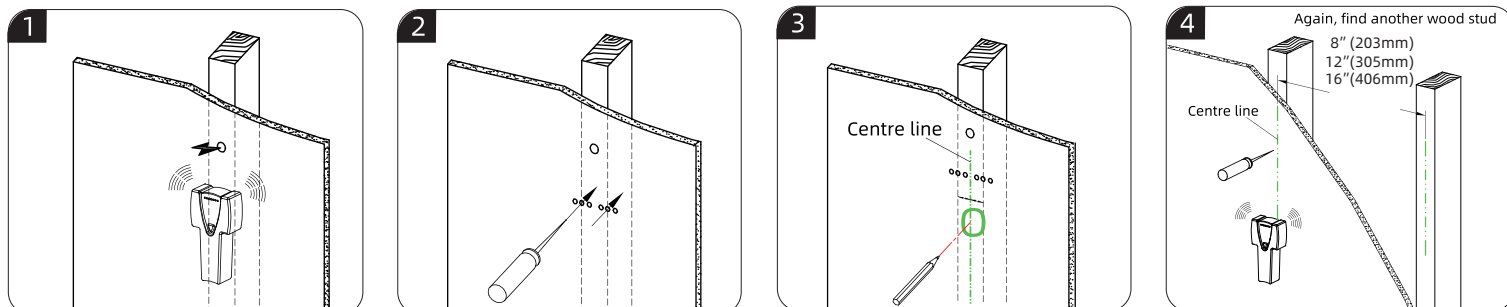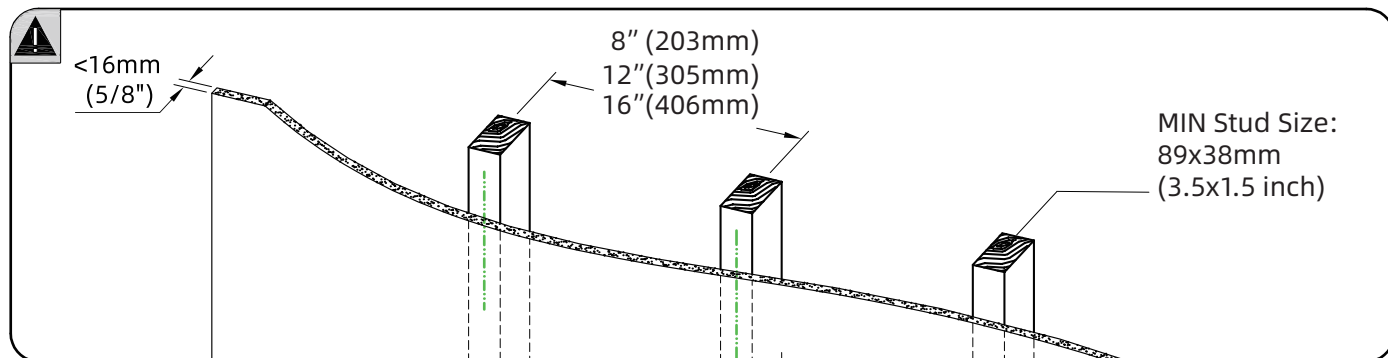

● Use a stud finder to locate the wood studs. Mark the center line of the studs.

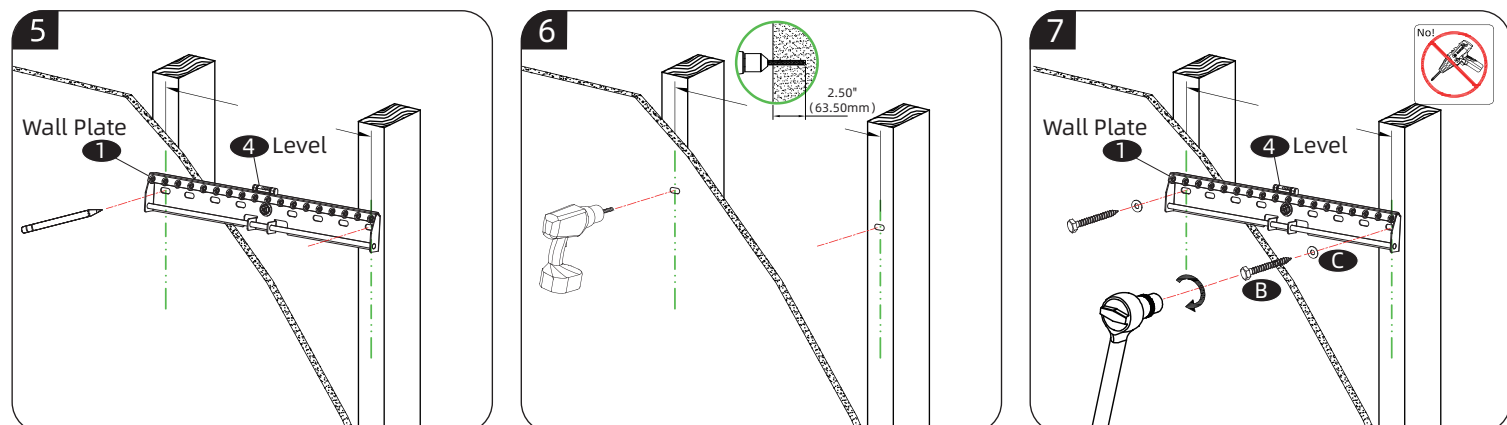


● Position the wall plate at desired height, level it and mark the holes. Drill holes, then align the wall plate with drilled holes and install it.

Option B: Install on drywall


Notes: Read carefully before installation

- All 18 steel nails must be securely tightened to prevent unwanted movement of the wall plate.
- Do not use wall anchors or tapping screws for this mounting option.
- Drywall must be of sound construction with no water damage.
- Do not mount to patches/seams areas, or uneven walls.
- The TV must be placed in the center of the wall plate.


- 1 Position the wall plate at desired height, tap a nail into a hole on one side.

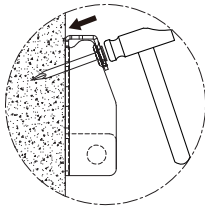


Install the nails at a downward angle, and the nails must pass through both holes.

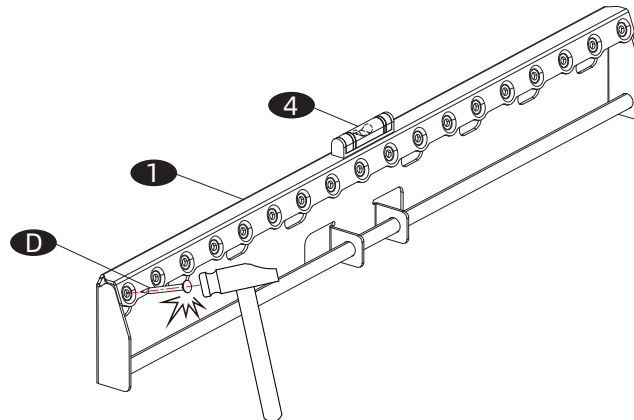

- 2 Lever the wall plate and tap a nail into a hole on the other side.



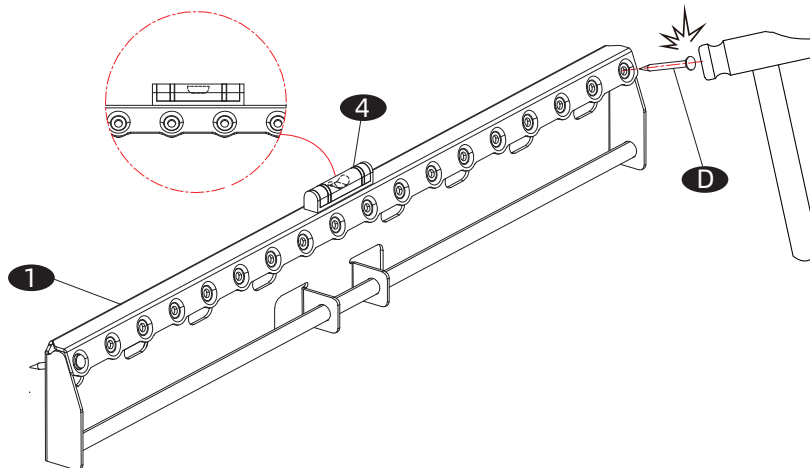


- 3 Tap the remaining 16 nails from one side to the other.

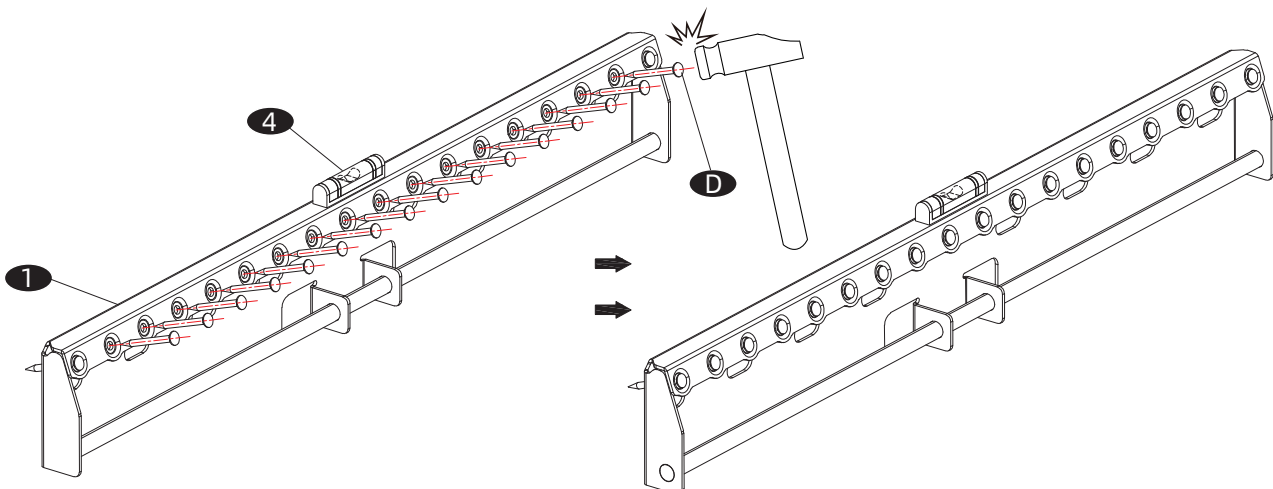


Option C: Install on solid concrete/brick wall


Notes: Read carefully before installation

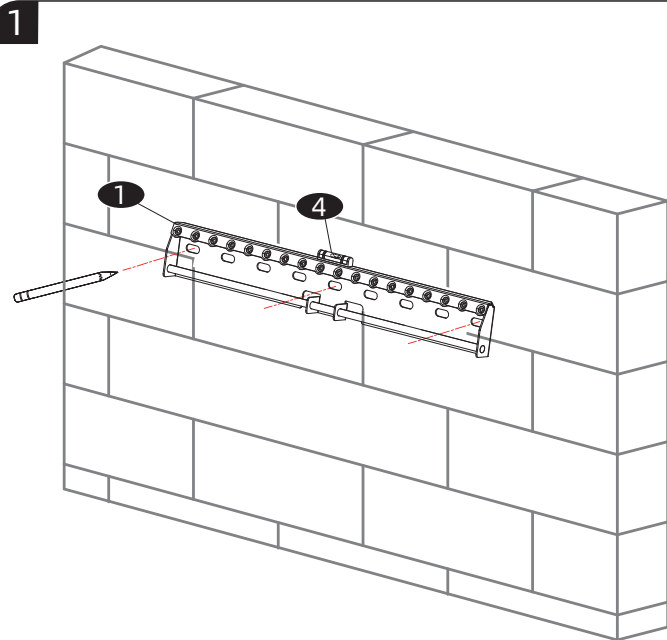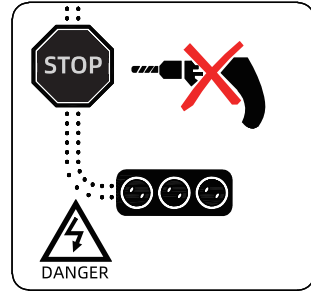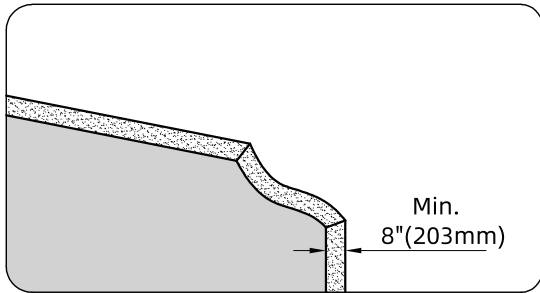


- Position the wall plate at desired height. Lever the wall plate and mark the holes.

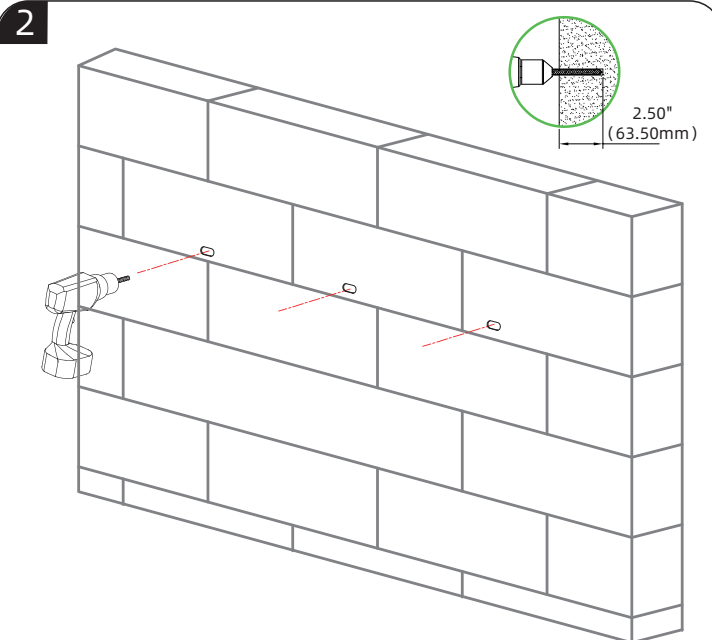

- Drill 3 pilot holes. Make sure the depth is not less than 3" (75mm). Never drill holes in the joints between bricks.

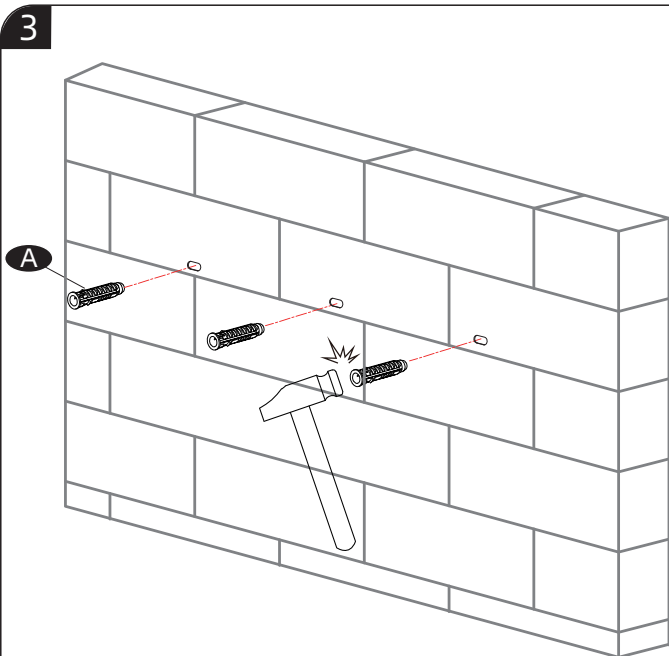




- Tap the anchors into the drilled holes. Ensure the anchors are seated flush with the concrete or brick surface.

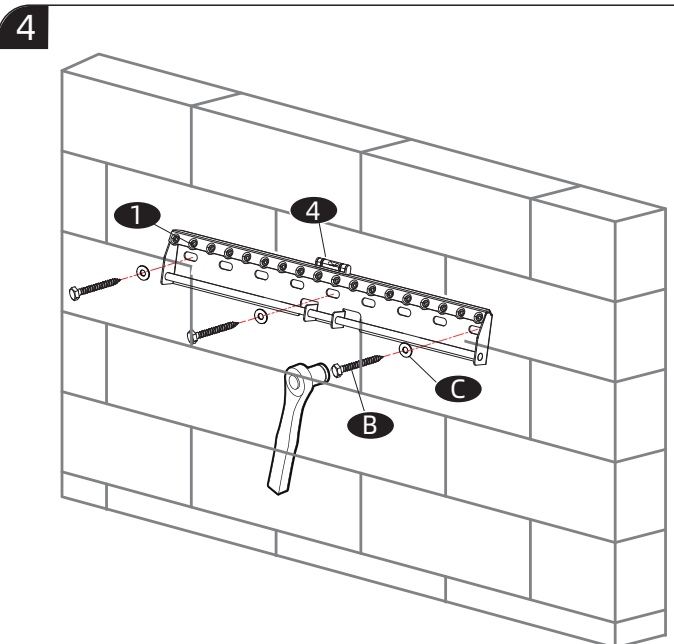








- Align the wall plate holes with the drilled holes and install the wall plate with tapping screws.

Step 4: Hang the TV

4-1. Test the stability

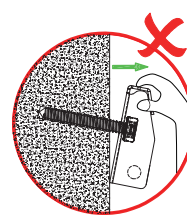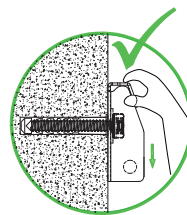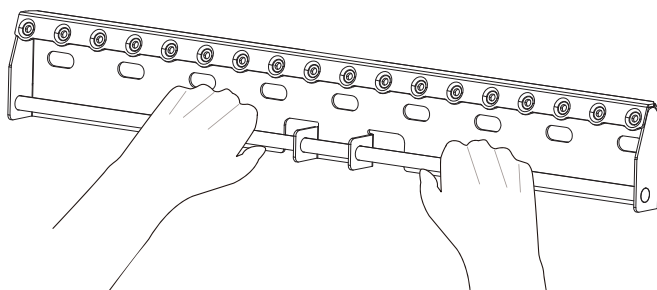


4-2. Hang the TV on the wall plate

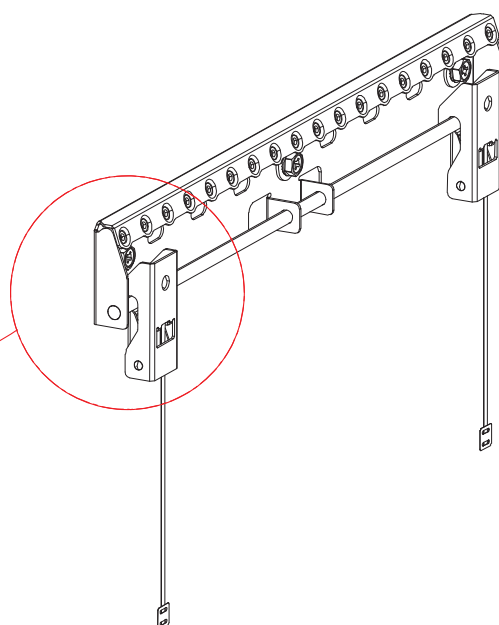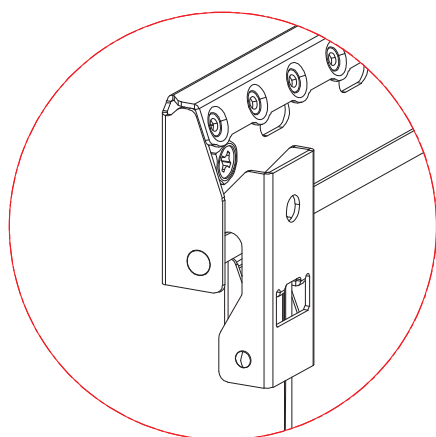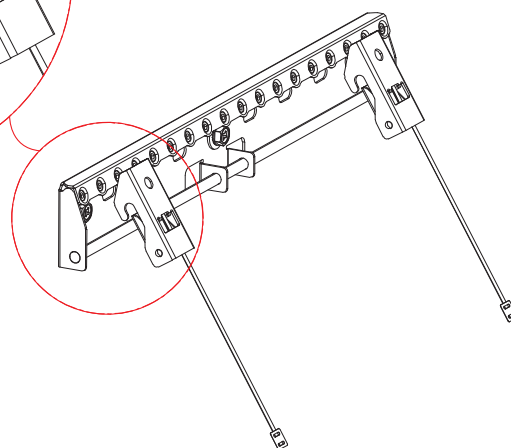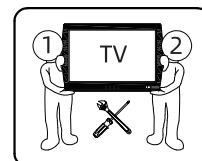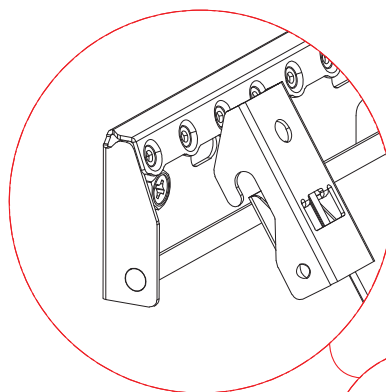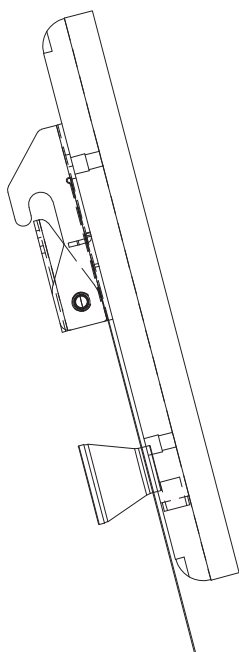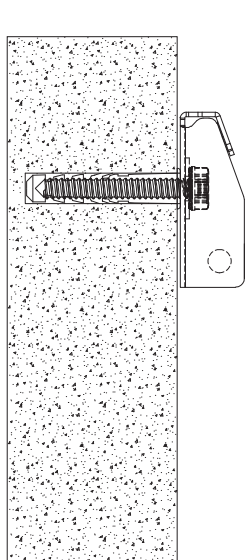

- Hang the TV on the wall plate, then press forward. Make sure the safety latches are in the locked position so the TV is securely fastened to the wall plate.

Step 5: Remove the TV

5-1. Pull the strap down to unlock the latches, then pull the bottom of TV away from the wall plate.

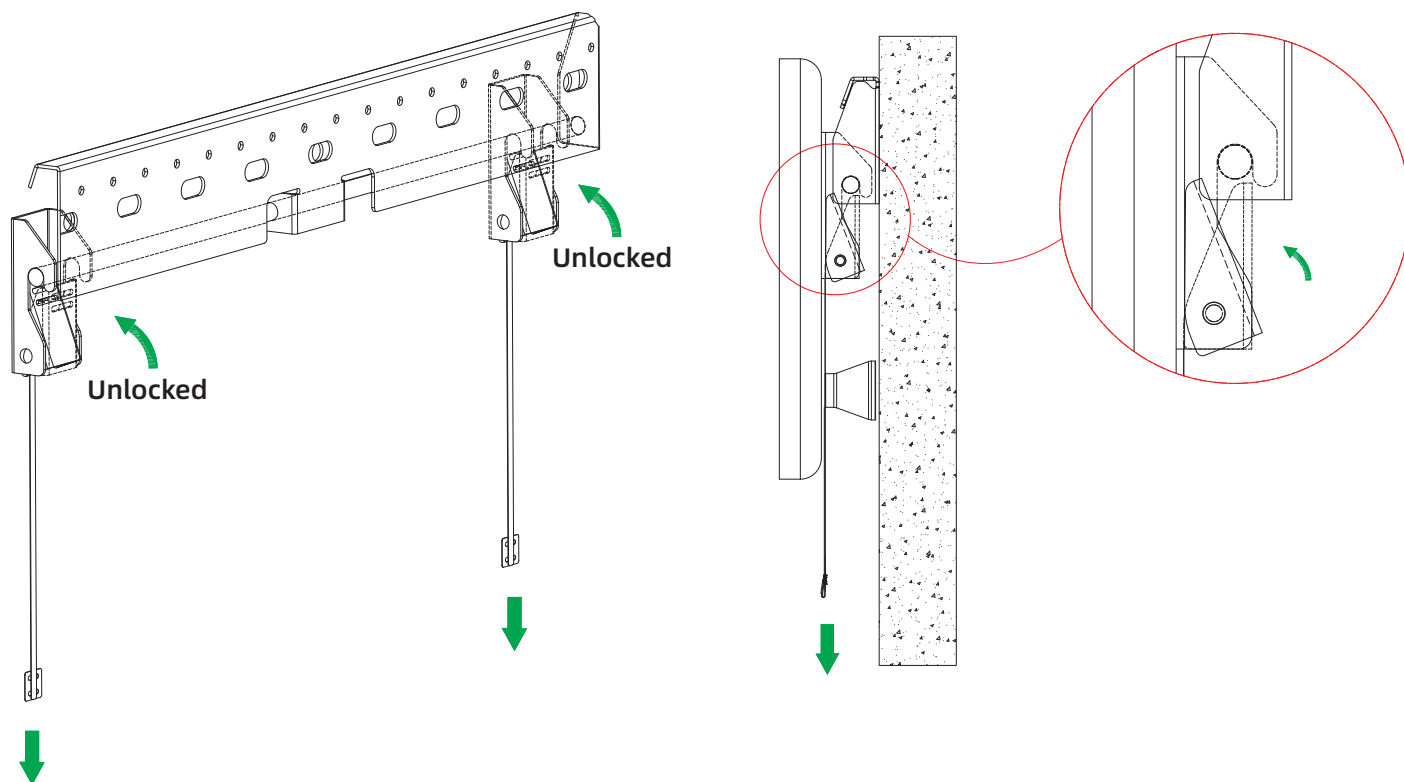

5-2. Lift the TV up and take it off.

