


ASSEMBLY INSTRUCTIONS

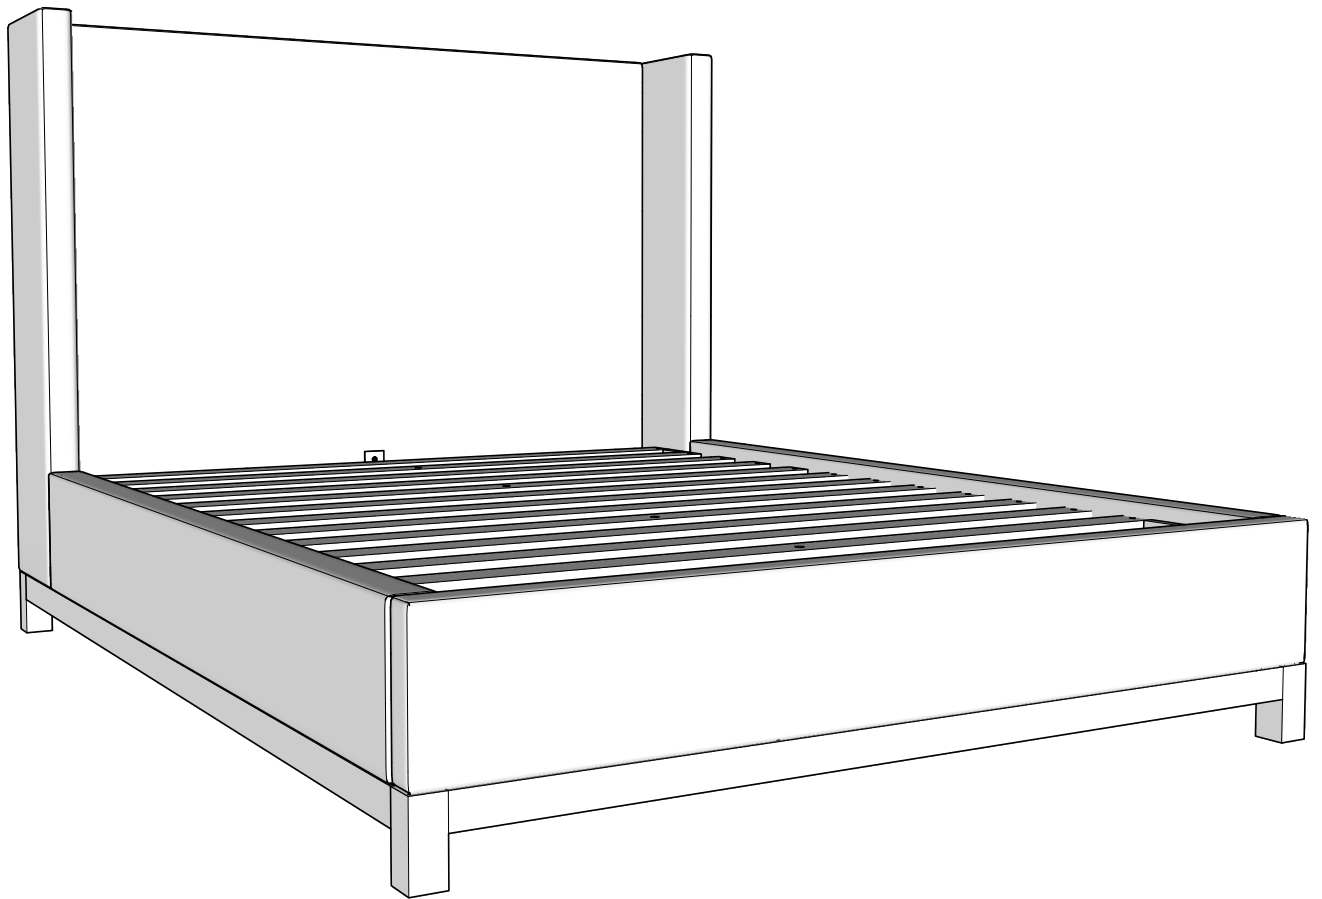



IMPORTANT INFORMATION

Seller and Manufacturer disclaim all and any liability for property damage, personal injury, or loss, direct, indirect, or incidental, resulting from the incorrect assembly, inadequate maintenance, improper use, or neglect of this product.




NOTICE

- Keep these assembly instructions for future reference.
- Do not use this product if there are missing, damaged, or broken parts until repairs are made and/or factory replacement parts are installed.
- Check all packing material carefully for small hardware that may have become loose inside the carton during shipment.
- Identify and count all hardware and parts to compare with parts and hardware list.
- Follow assembly instructions closely. Improper assembly can result in personal or property damage.
- Secure all bolts before use.
- Every 90 days check all bolts are secured.
- Some parts may have a sharp corner or edge and maybe heavy.
- Do not use or store this product near open flames or around flammable chemicals.
- When placing contents on non-carpeted flooring, it's recommended to use floor protection such as an area rug or furniture pads. These are not included with the purchase.
- Do not drag or push the bed frame. To ensure safe moving, always use two people to lift and re-position the bedframe. Avoid dragging or pushing it across the floor to prevent damage to the legs, slats, and the center support legs.

REPLACEMENT PART OR HARDWARE REQUEST:

Request a replacement by logging into the marketplace account in which the purchase was made and sending a message to the seller. To assist in expediting the request attach applicable images relevant to the request and/or part number and quantity.


ADDITIONAL TOOL REQUIRED:


















**#2 Philips Screwdriver
(Not Provided)**

BED PARTS


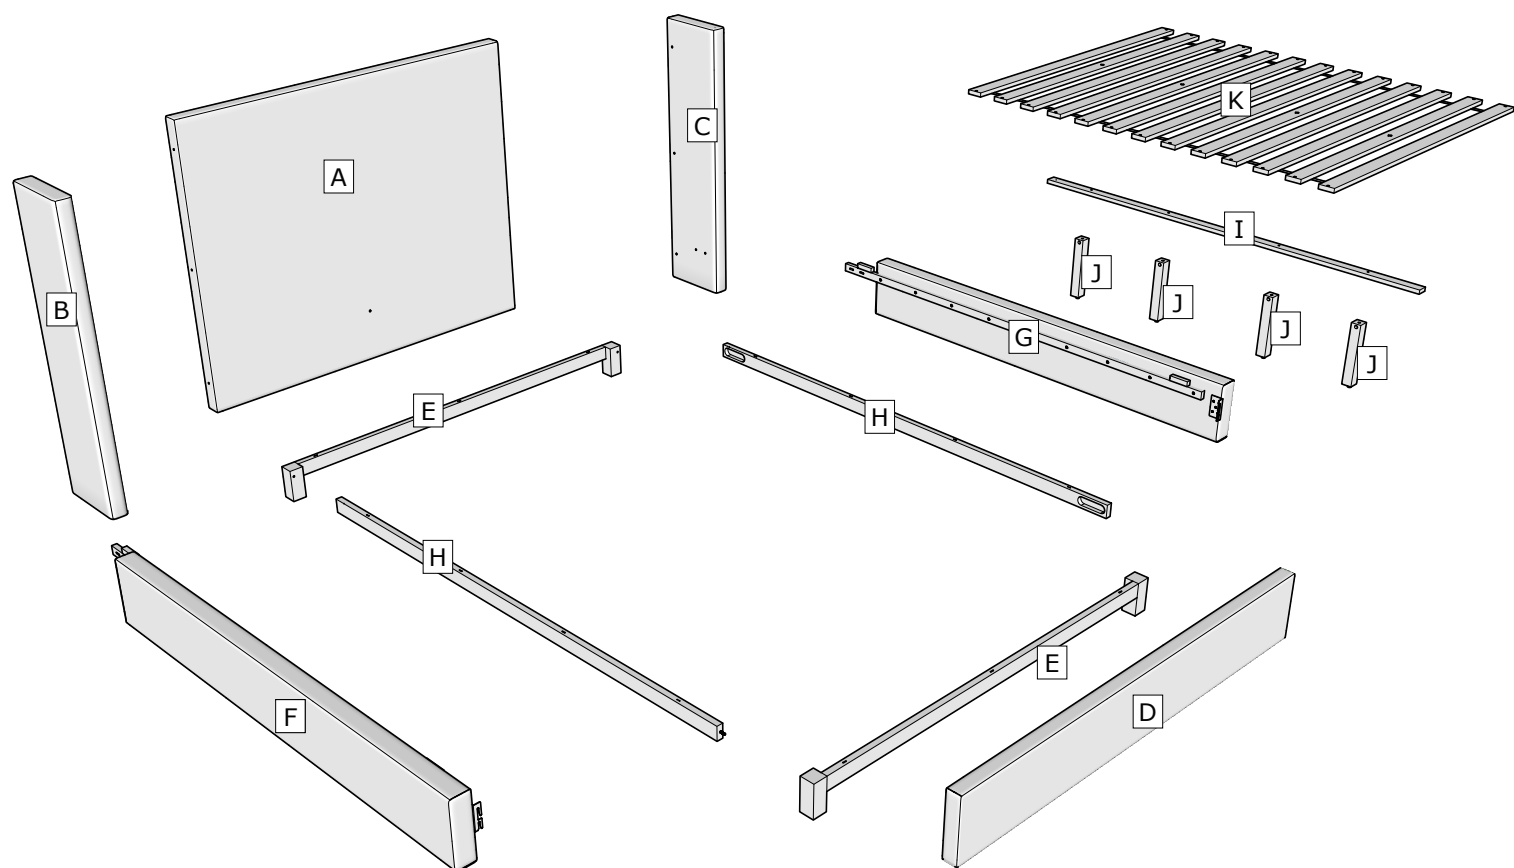




A.....	Headboard	x 1
B.....	Headboard Wing Left	x 1
C.....	Headboard Wing Right	x 1
D.....	Footboard	x 1
E.....	Bottom Wood Base	x 2
F.....	Side Rail Left	x 1
G.....	Side Rail Right.....	x 1
H.....	Side Rail Wood Bottom.....	x 2
I	Center Rail.....	x 1
J	Center Support Leg	x 4
F.....	Bed Slat	x 13

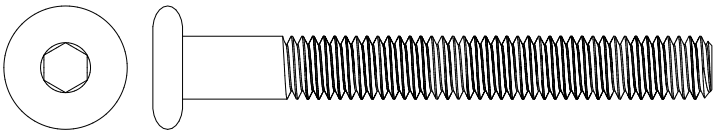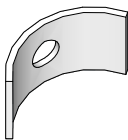


HARDWARE

L Bolt x 4  M6 x 15mm	M Bolt x 6  M6 x 35mm	N Bolt x 8  M6 x 45mm
O Bolt x 14  M6 x 80mm	P Bolt x 4  M8 x 20mm	
Q Bolt x 4  M8 x 70mm	R Flat Washer x 24  M6	
S Spring Washer x 4  M6	T Bed Washer x 4 	U L-Bracket x 2 
V Barrel Nut x 4  M8	W Adjustable Feet x 4 	X Screw x 26  M4 x 25mm
Y Ball End Hex Key Wrench x 1  M4 x 100mm	Z Hex Key Wrench x 1  M5	

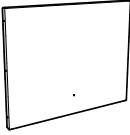





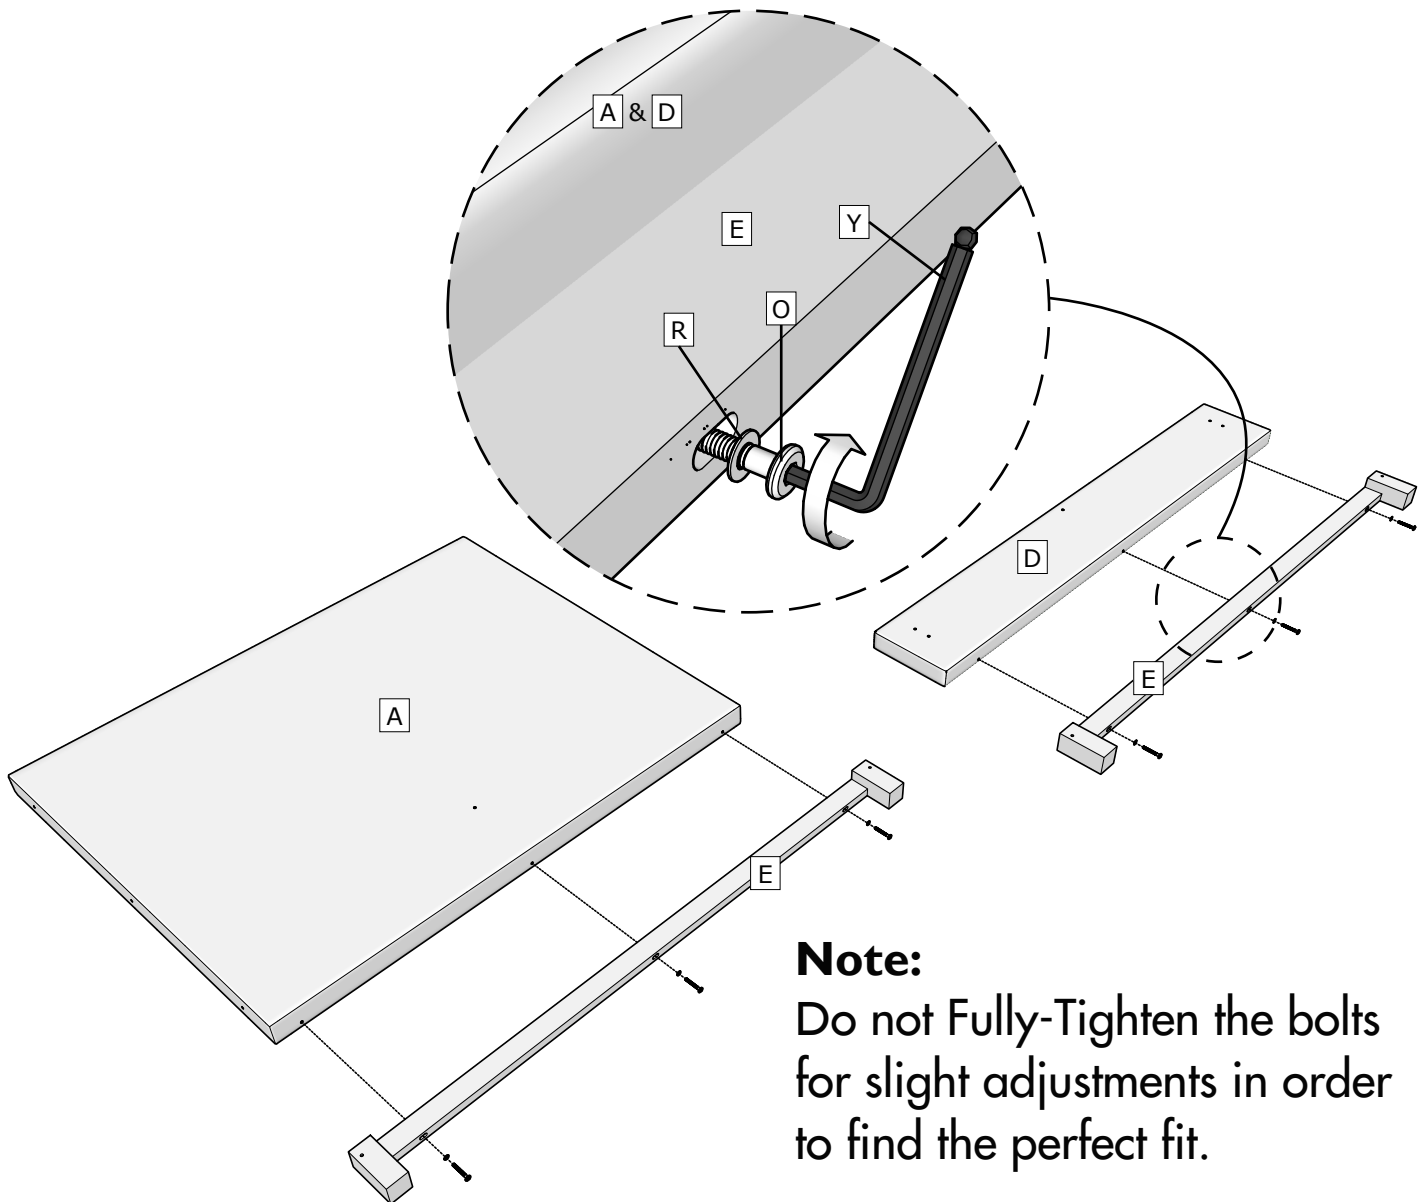BED ASSEMBLY STEP 1

A x1 Headboard 	D x1 Footboard 	E x2 Bottom Wood Base 	O x6 Bolt  M6 x 80mm
R x6 Flat Washer  M6	Y x1 Ball End Hex Key Wrench  M4		




Attach **E** to **A** and **D** with **O** and **R** using a Ball End Hex Key Wrench **Y**.

BED ASSEMBLY STEP 2

F Side Rail Left x1 	G Side Rail Right x1 	H Side Rail Wood Bottom x2 	O Bolt x6  M6 x 80mm
R Flat Washer x6  M6	Y Ball End Hex Key Wrench x1  M4		



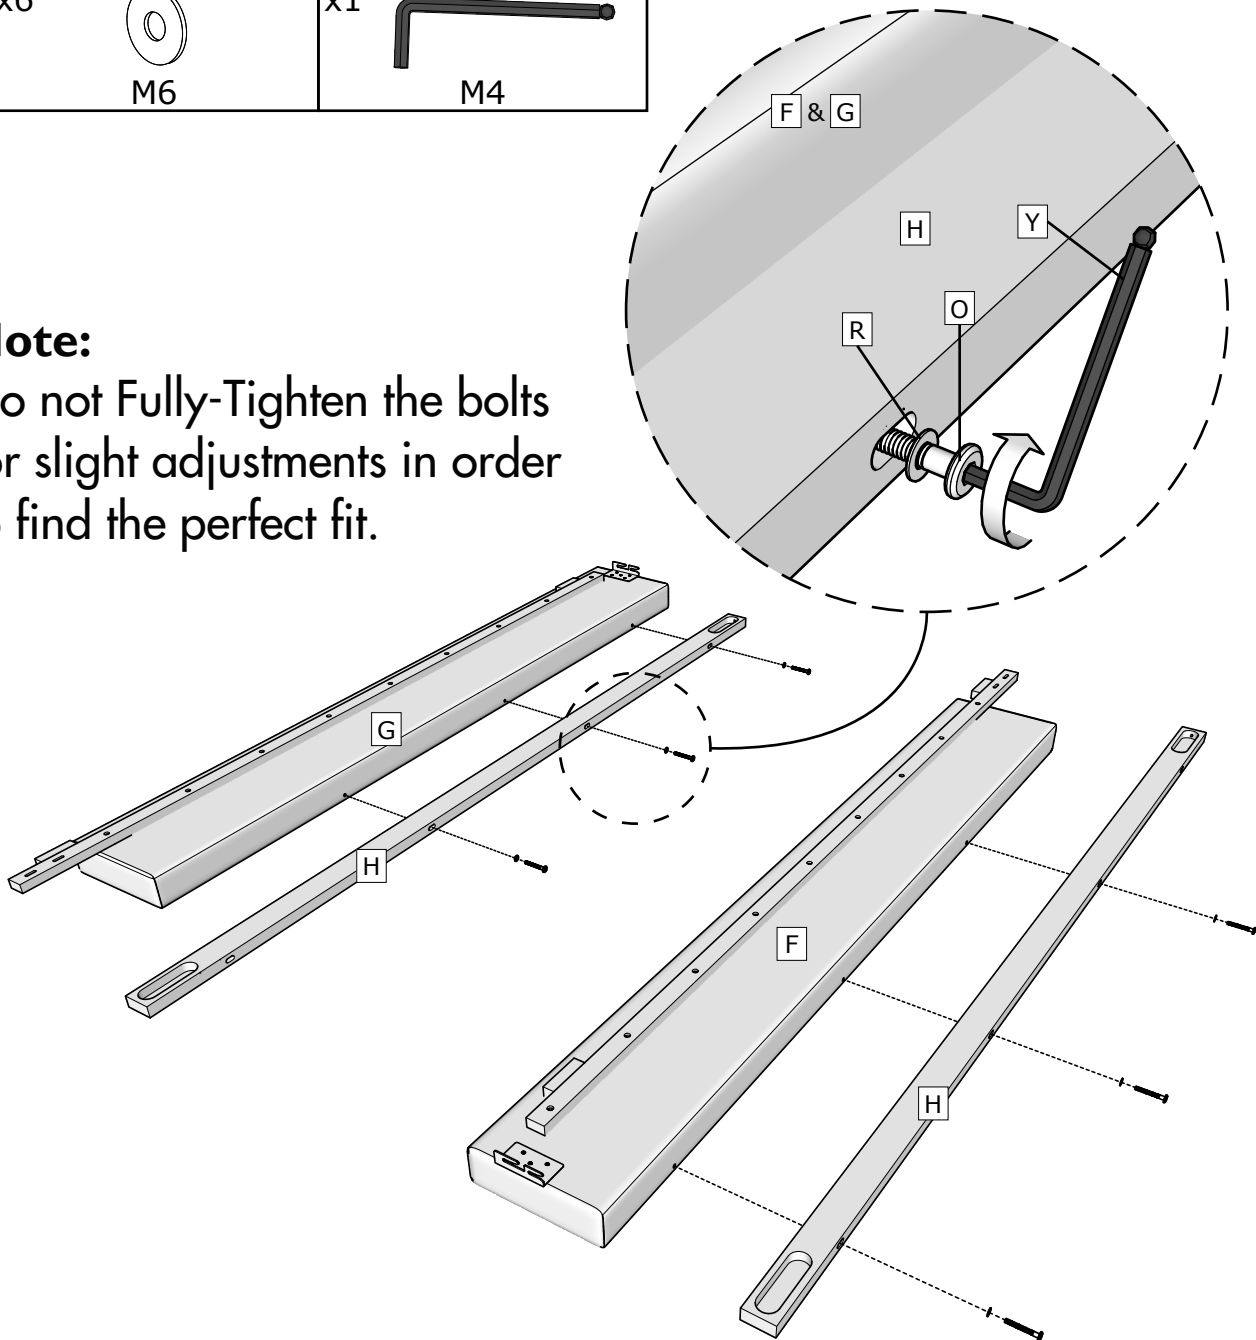


Note:


Do not Fully-Tighten the bolts for slight adjustments in order to find the perfect fit.



Attach **H** to **F** and **G** with **O** and **R** using a Ball End Hex Key Wrench **Y**.







BED ASSEMBLY STEP 3

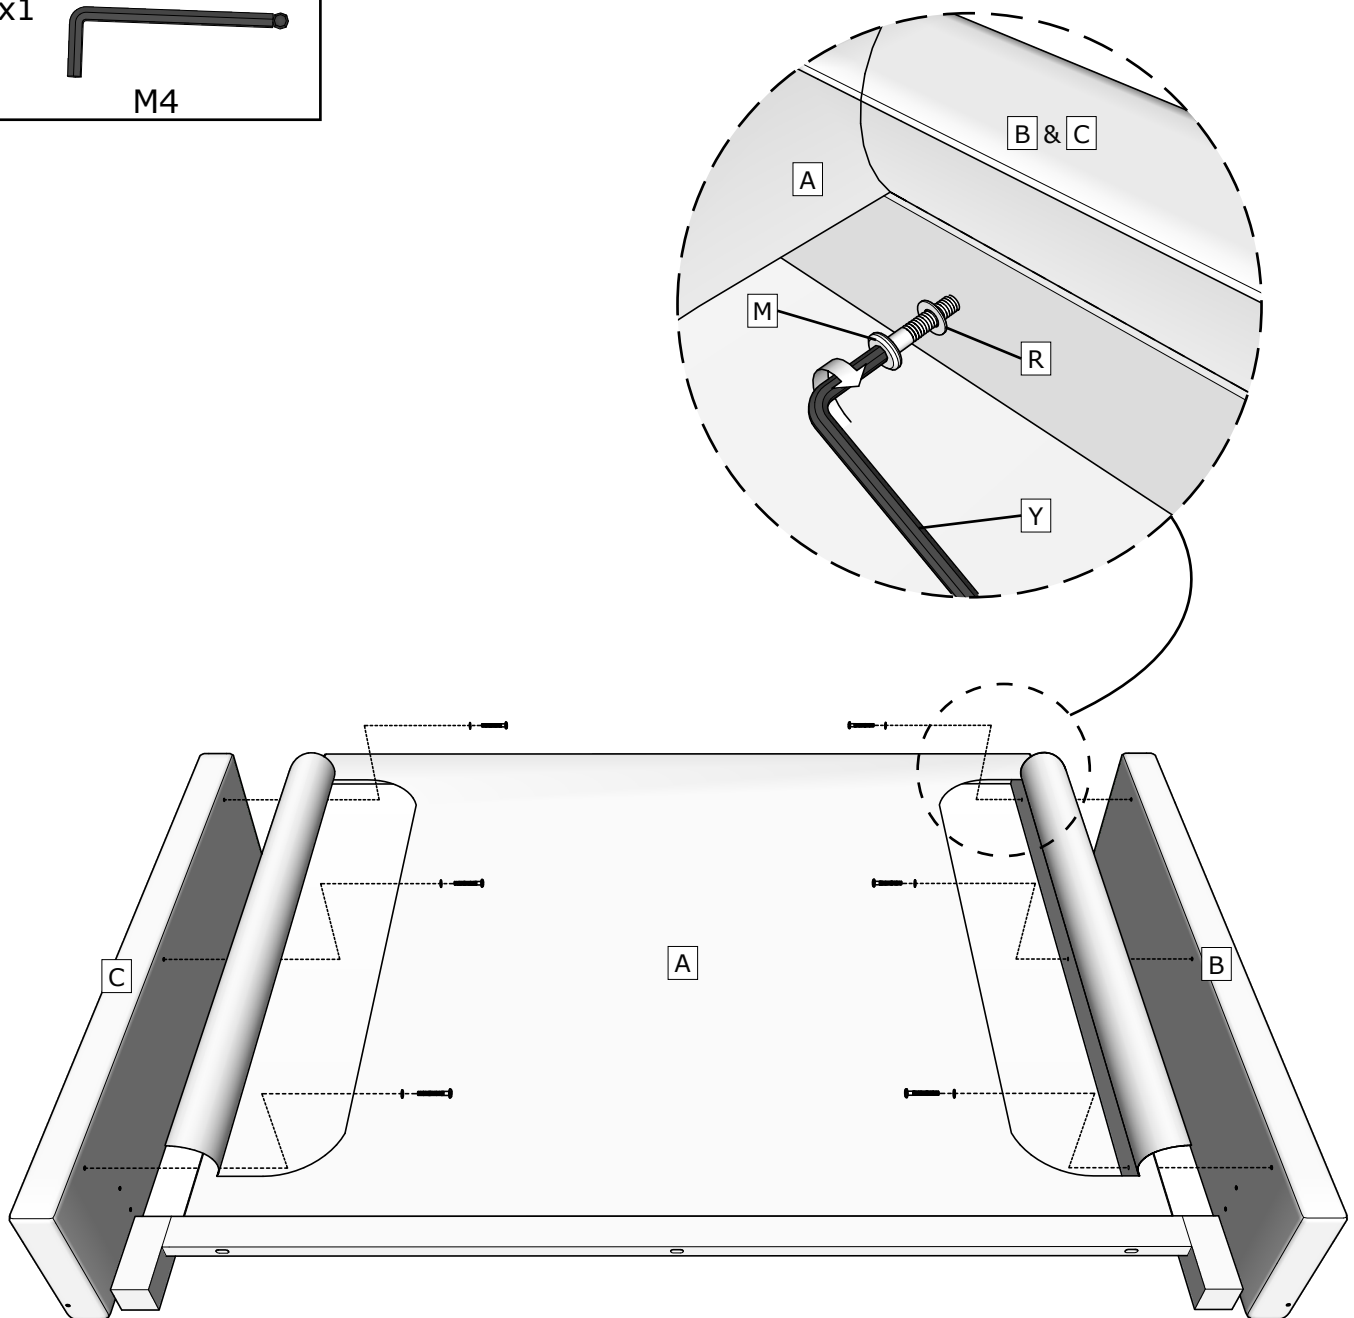
B Headboard Wing Left x1 	C Headboard Wing Right x1 	M Bolt x6  M6 x 35mm	R Flat Washer x6  M6
Y Ball End Hex Key Wrench x1  M4			



Attach **B** and **C** to **A** with **M** and **R** using a Ball End Hex Key Wrench **Y**.






BED ASSEMBLY STEP 4

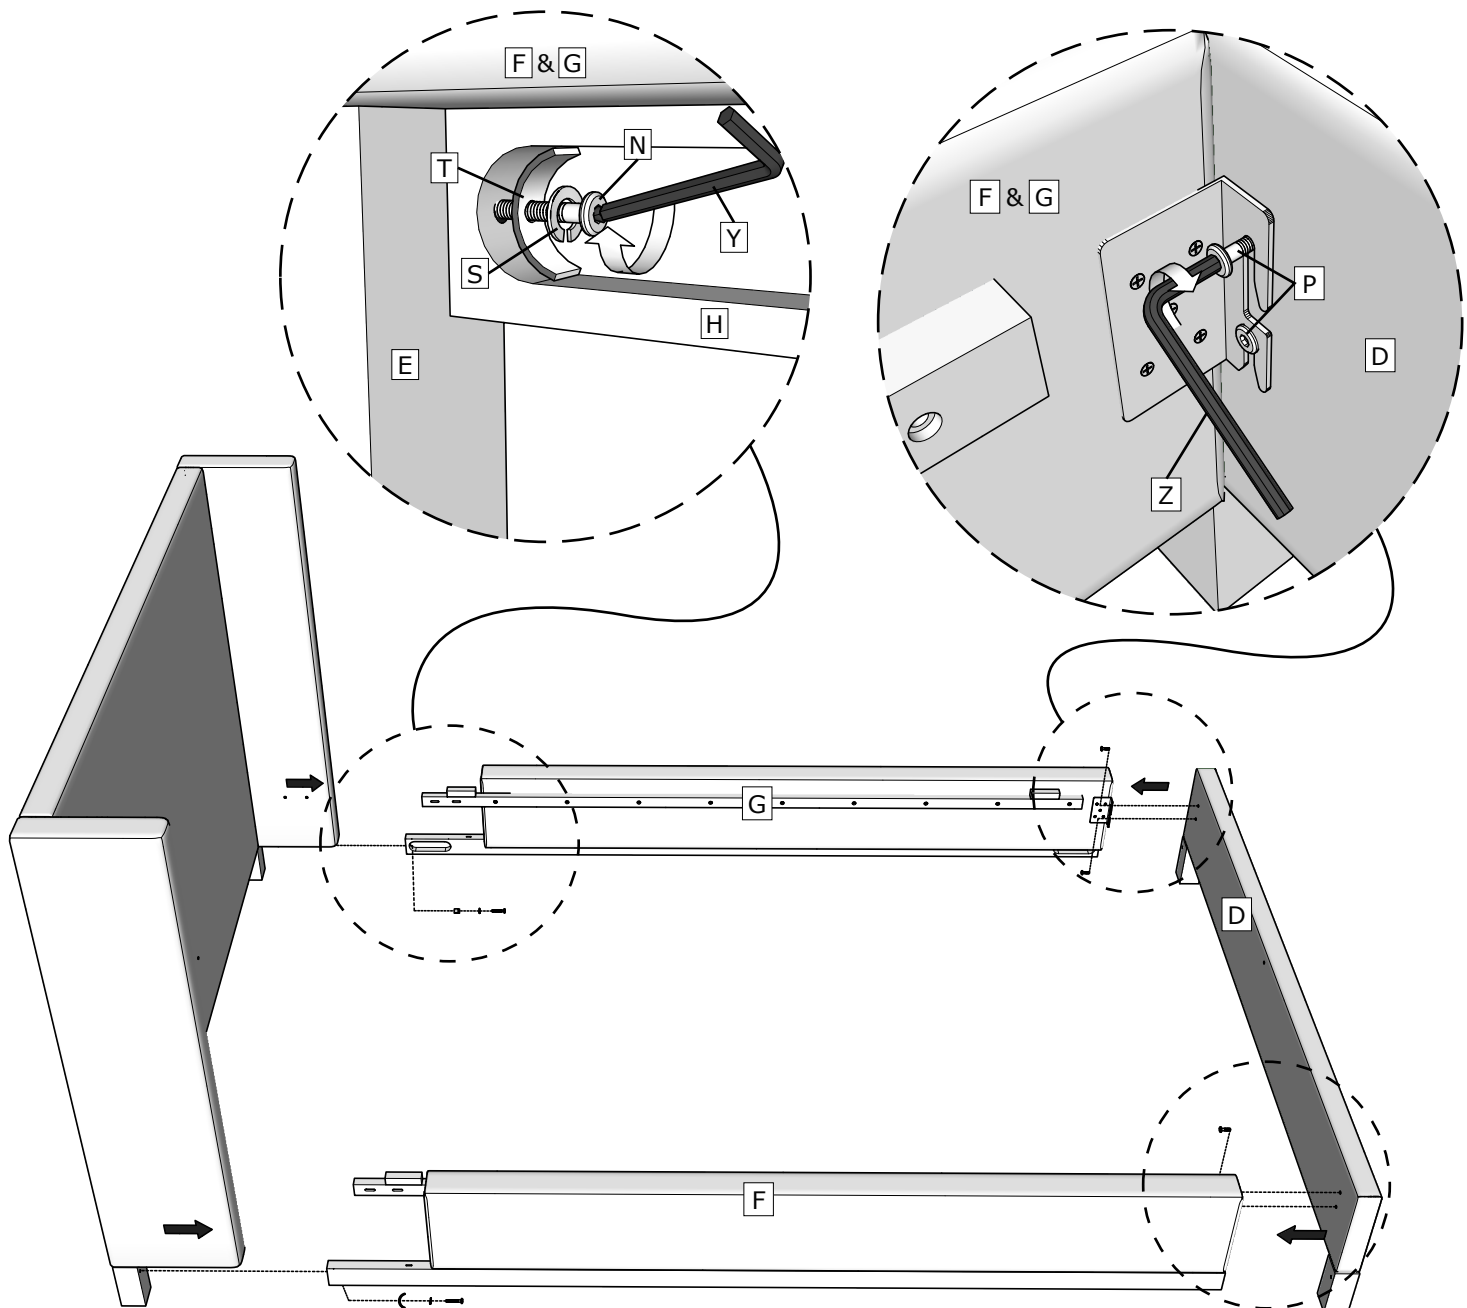
N Bolt x2  M6 x 45mm	P Bolt x4  M8 x 20mm	S Spring Washer x2  M6	T Bend Washer x2 
Y Ball End Hex Key Wrench x1  M4	Z Hex Key Wrench x1  M5	Note: Do not tighten bolts at this step.	



Attach Footboard to **F** and **G** with **P** using a Hex Key Wrench **Z**.
Attach Assembled Headboard to **F** and **G** with **N**, **S** and **T** using a Ball End Hex Key Wrench **Y**.

BED ASSEMBLY STEP 5


N Bolt x6 M6 x 45mm 	R Flat Washer x4 M6 	S Spring Washer x2 M6 	T Bend Washer x2 
Y Ball End Hex Key Wrench x1 M4 	Note: Do not tighten bolts at this step.		

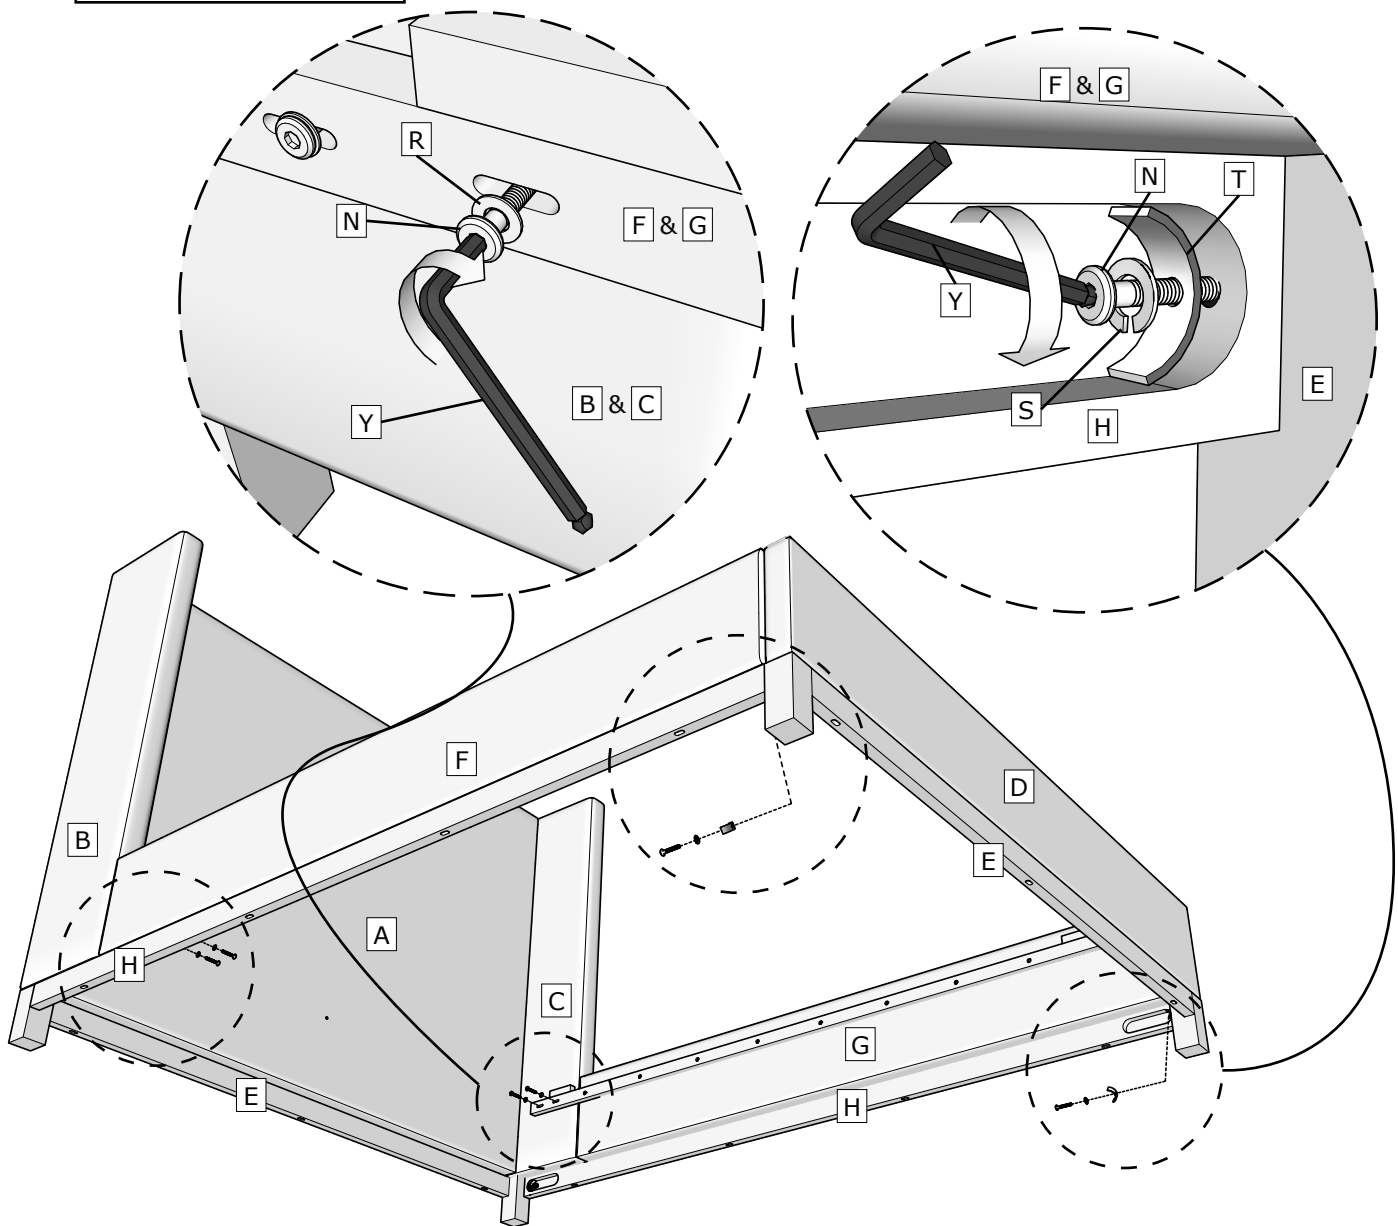

Affix **N** , **R** , **S** and **T** to Assembled Bed using a Ball End Hex Key Wrench **Y** as shown.


BED ASSEMBLY STEP 6

O Bolt x2 M6 x 80mm	R Flat Washer x2 M6	Y Ball End Hex Key Wrench x1 M4
----------------------------------	----------------------------------	--

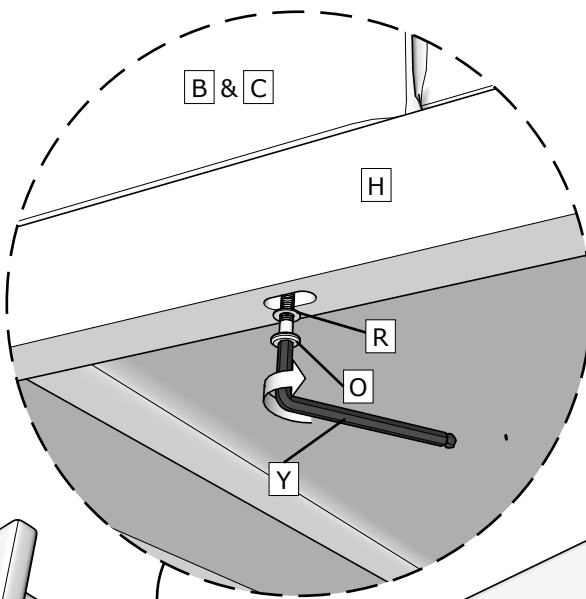



Note:

Tighten all bolts after all bolts are in place.

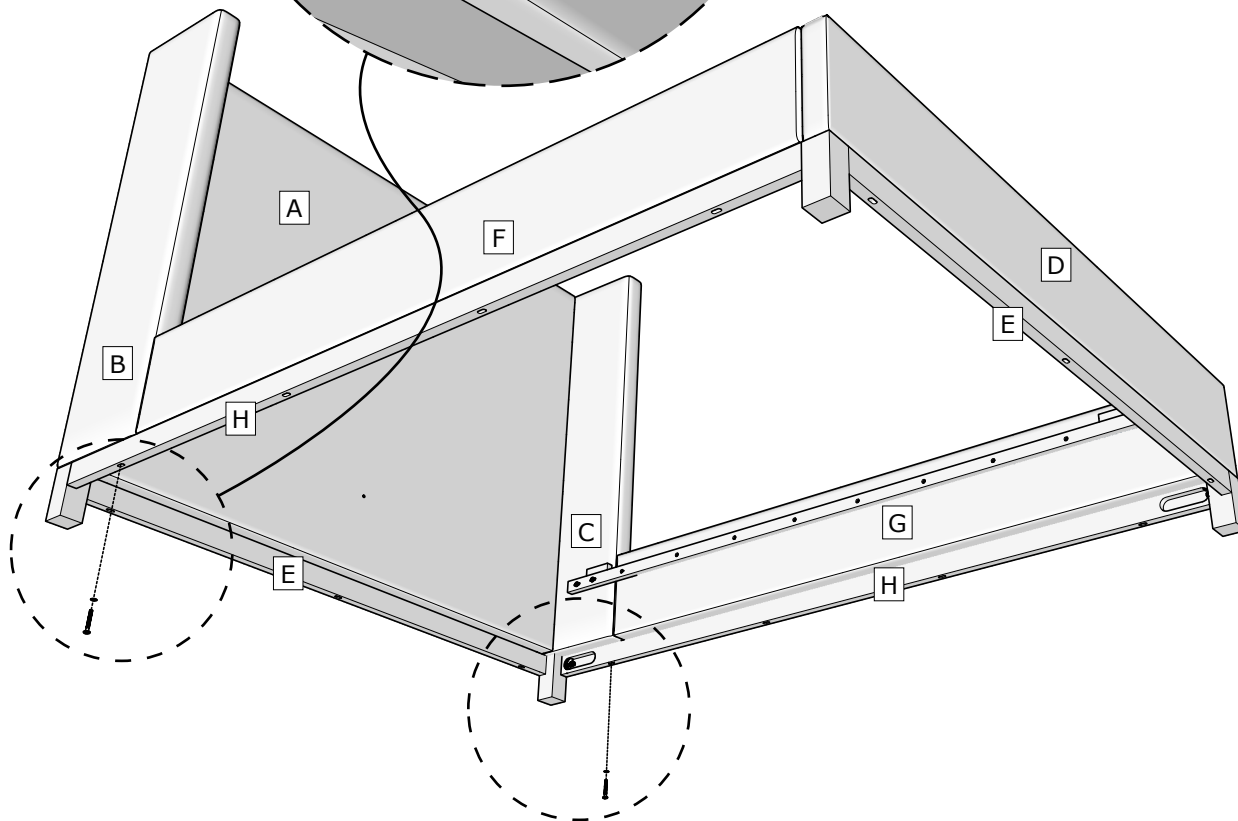





Affix **S** and **T** to Assembled Bed using a Ball End Hex Key Wrench **Y** as shown.


BED ASSEMBLY STEP 7

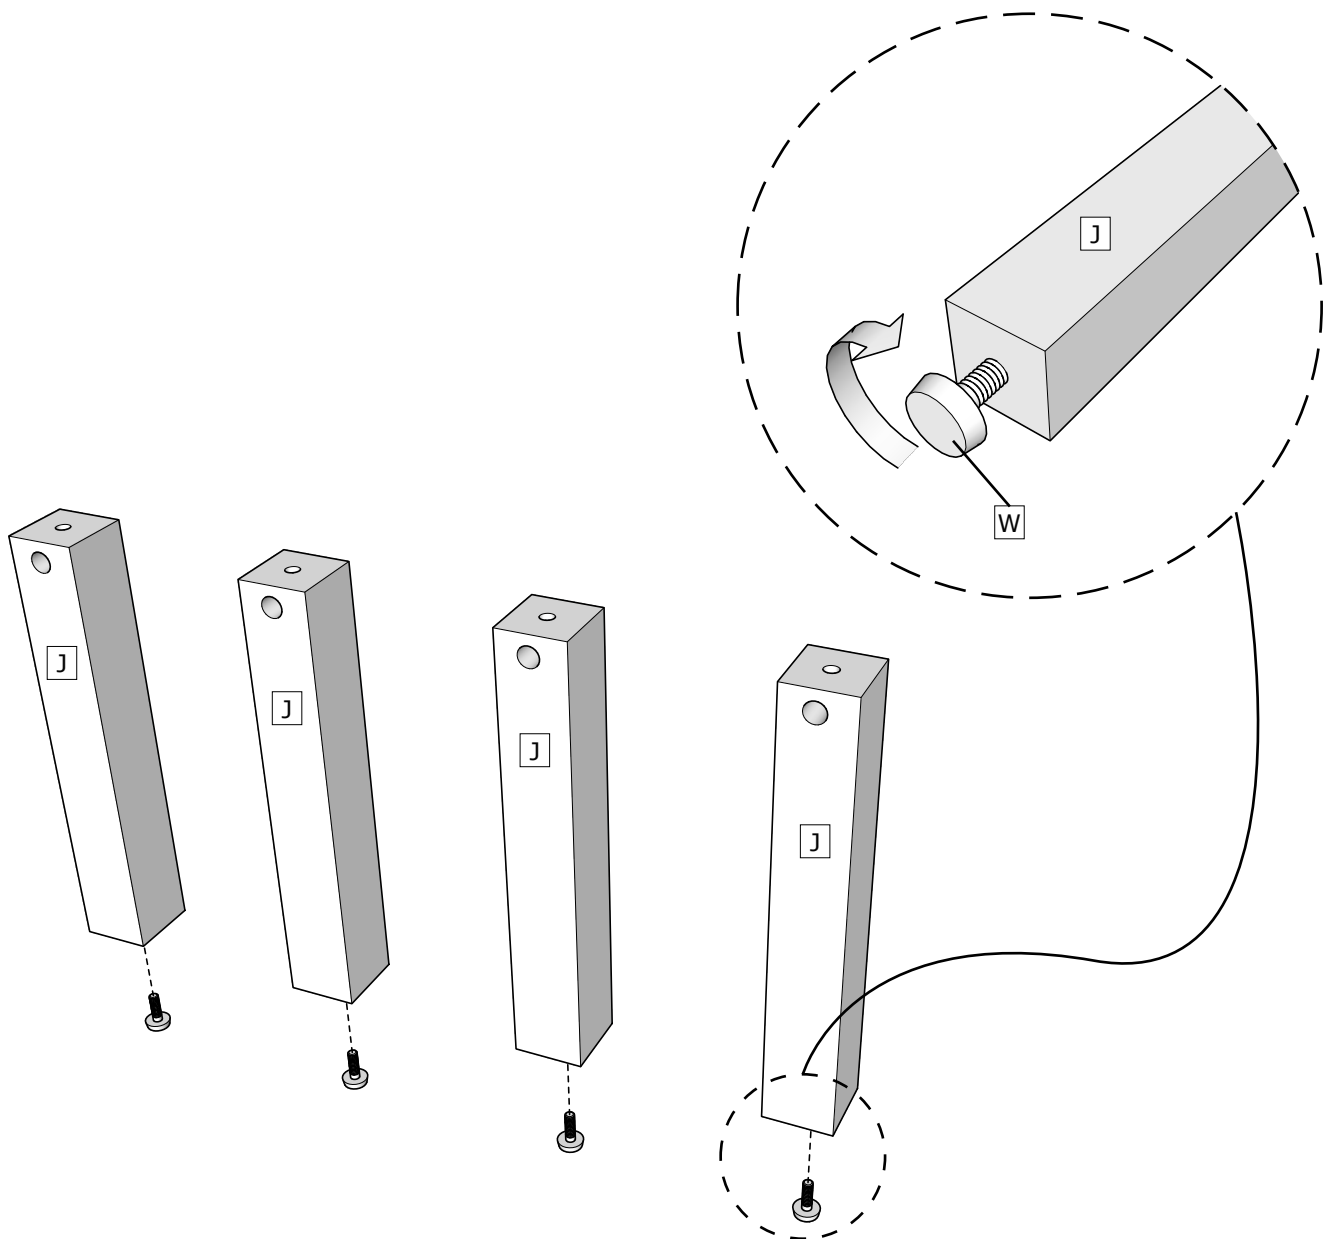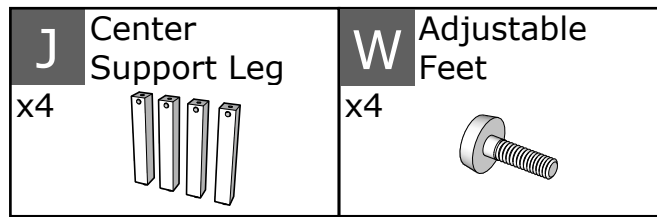

Attach **W** to **J** as shown.



BED ASSEMBLY STEP 8

I	Center Rail	L	Bolt	U	L-Bracket	Y	Ball End Hex Key Wrench
x1		x2		x2		x1	
			M6 x 15mm				M4

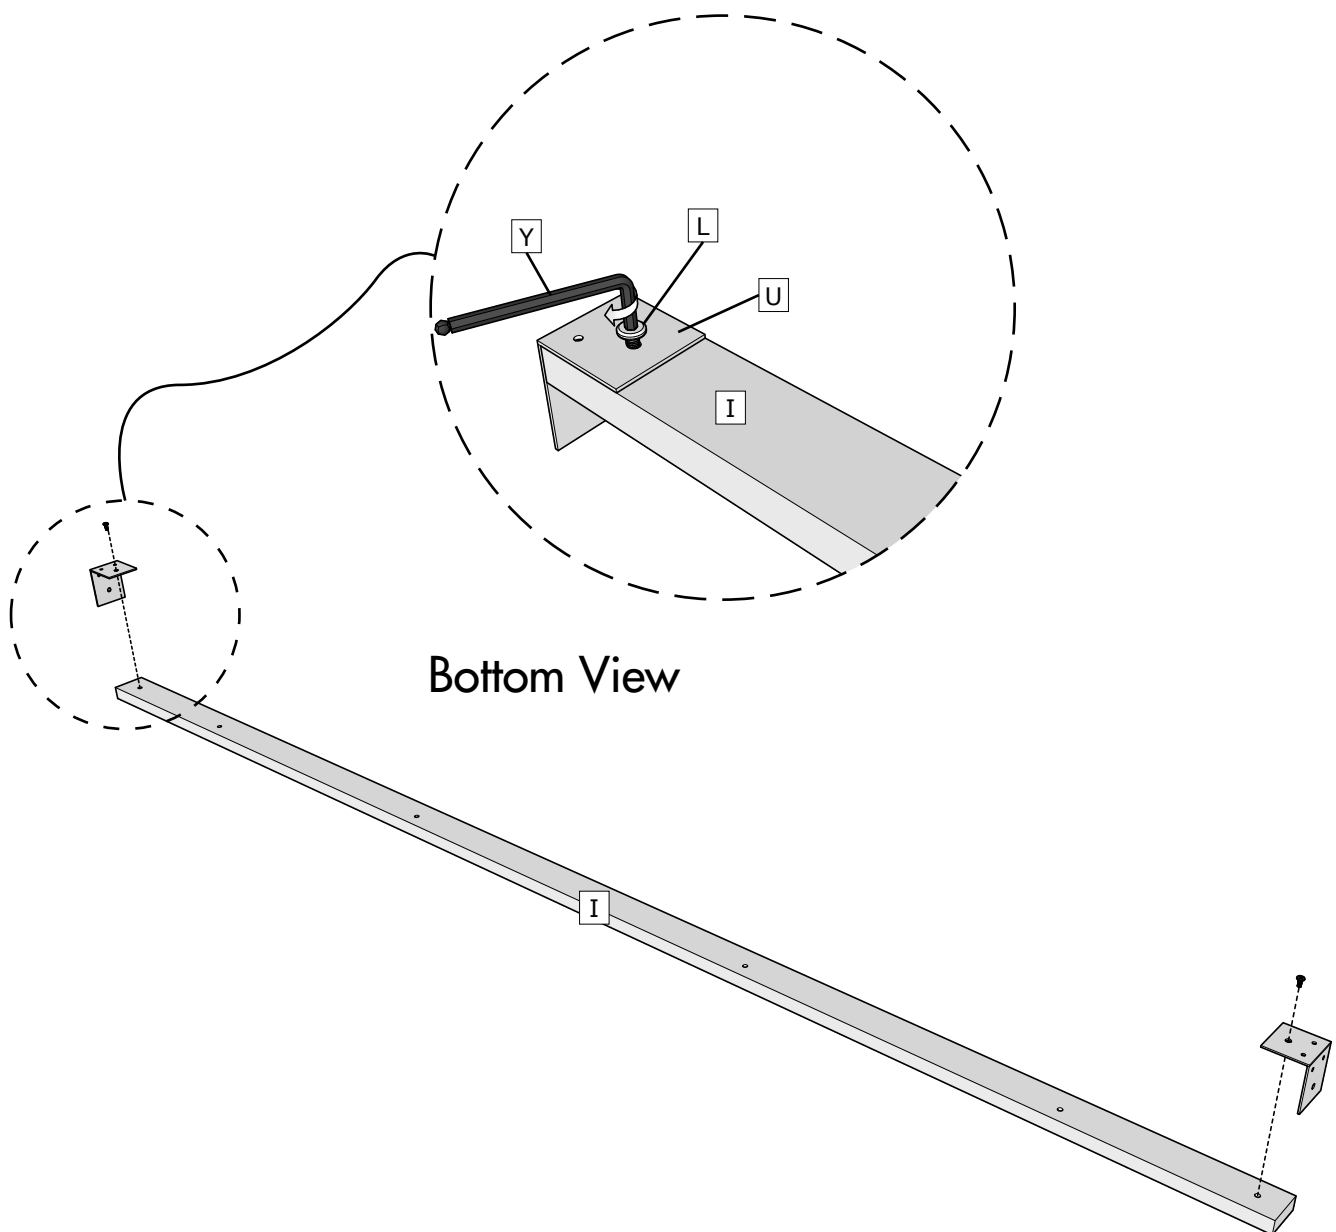





Attach **U** to **I** with **L** using a Ball End Hex Key Wrench **Y** as shown.

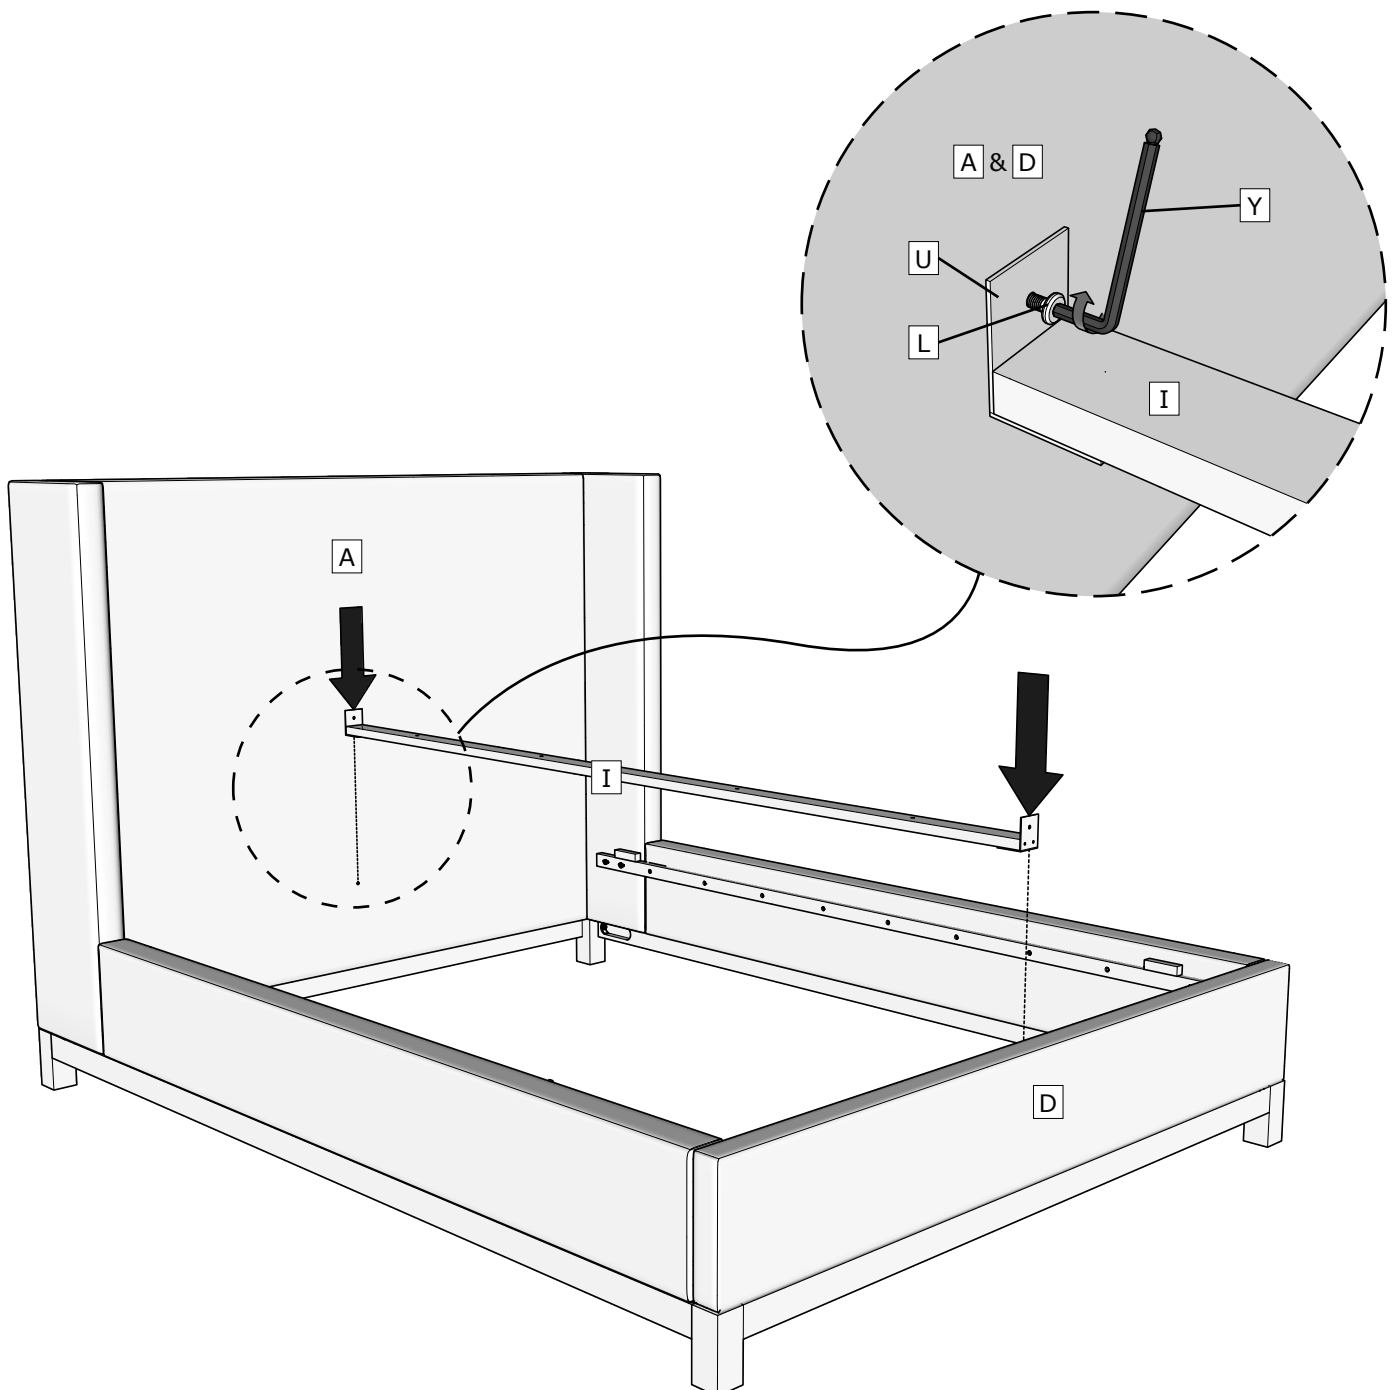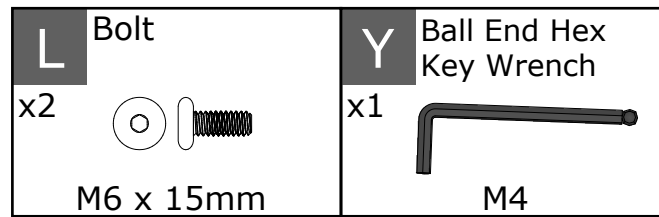
BED ASSEMBLY STEP 9



Attach Assembled Center Rail to Assembled Bed with **L** using a Ball End Hex Key Wrench **Y** as shown.



BED ASSEMBLY STEP 10



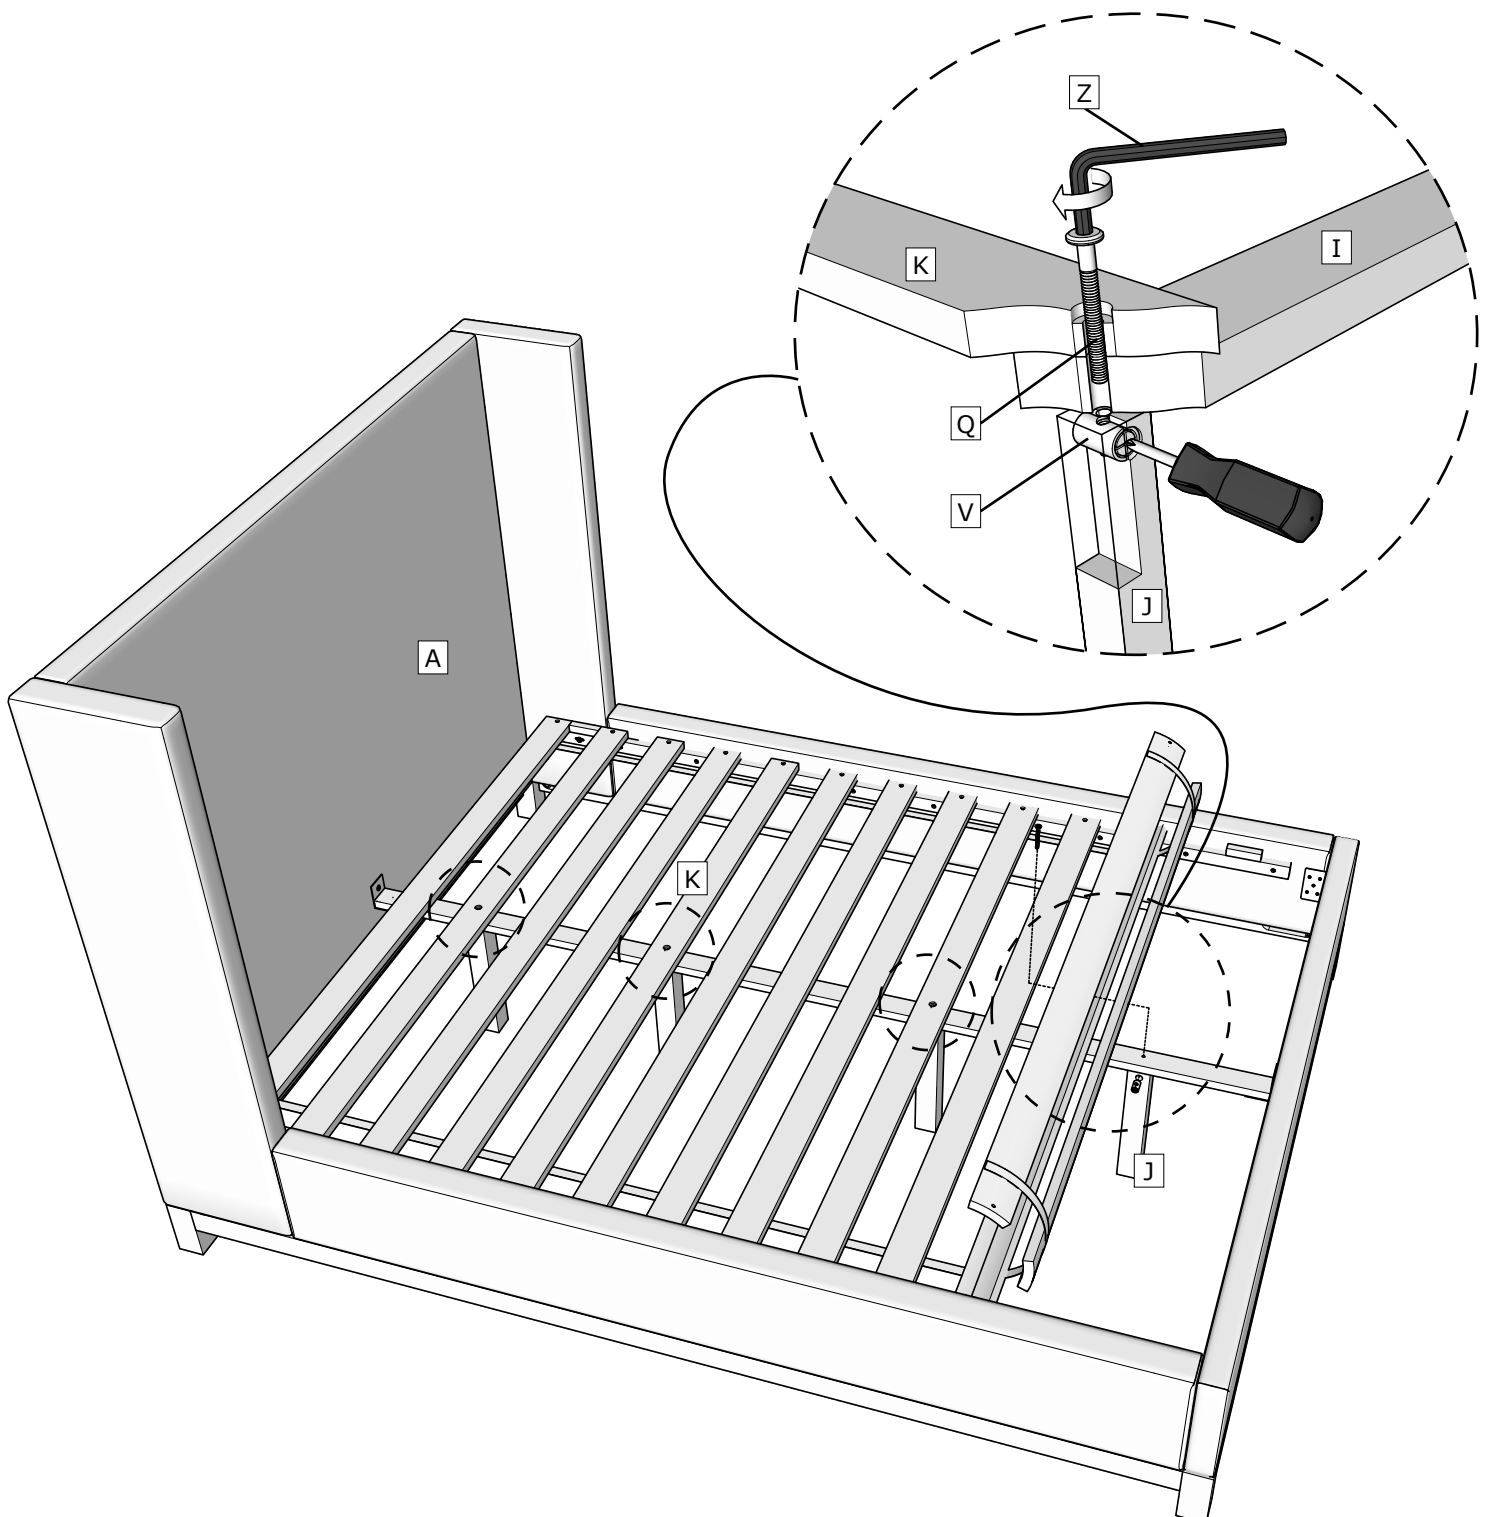
K x13 Bed Slat 	Q x4 Bolt M8 x 70mm 	V x4 Barrel Nut M8 	Z x1 Hex Key Wrench M5 
--	--	--	---



Attach **K** to Assembled Center Rail with **Q** and **V** using A Hex Key Wrench **Z** as shown.


BED ASSEMBLY STEP 11

X Screw	Philips Screwdriver
x26	
 M4 x 25mm	Not provided

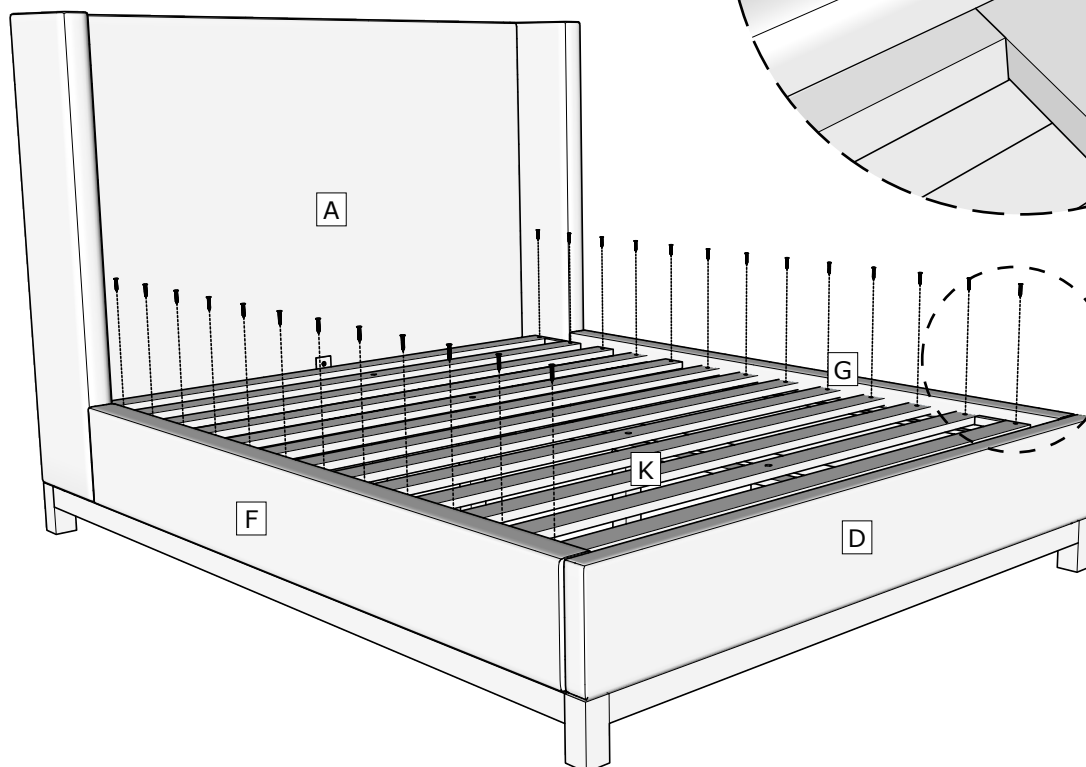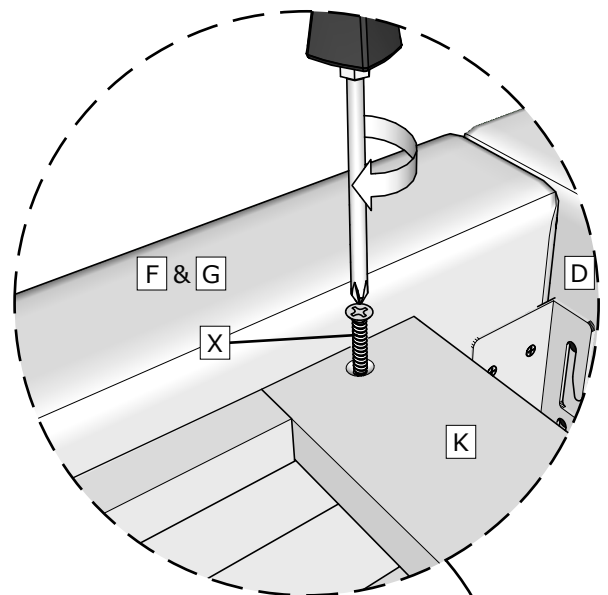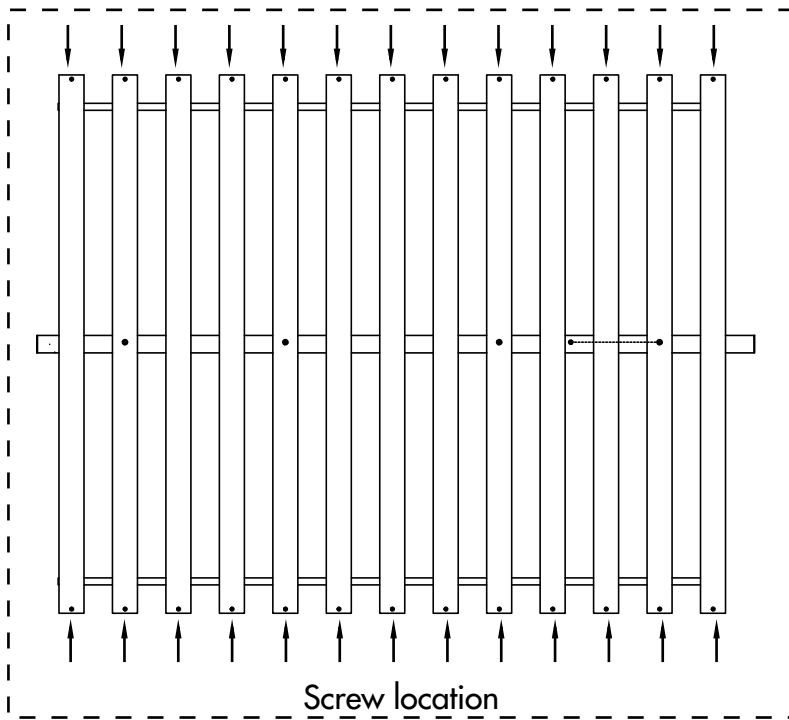

Affix **X** to Assembled Bed Slat using a Philips Screwdriver as shown.

BED ASSEMBLY STEP 12

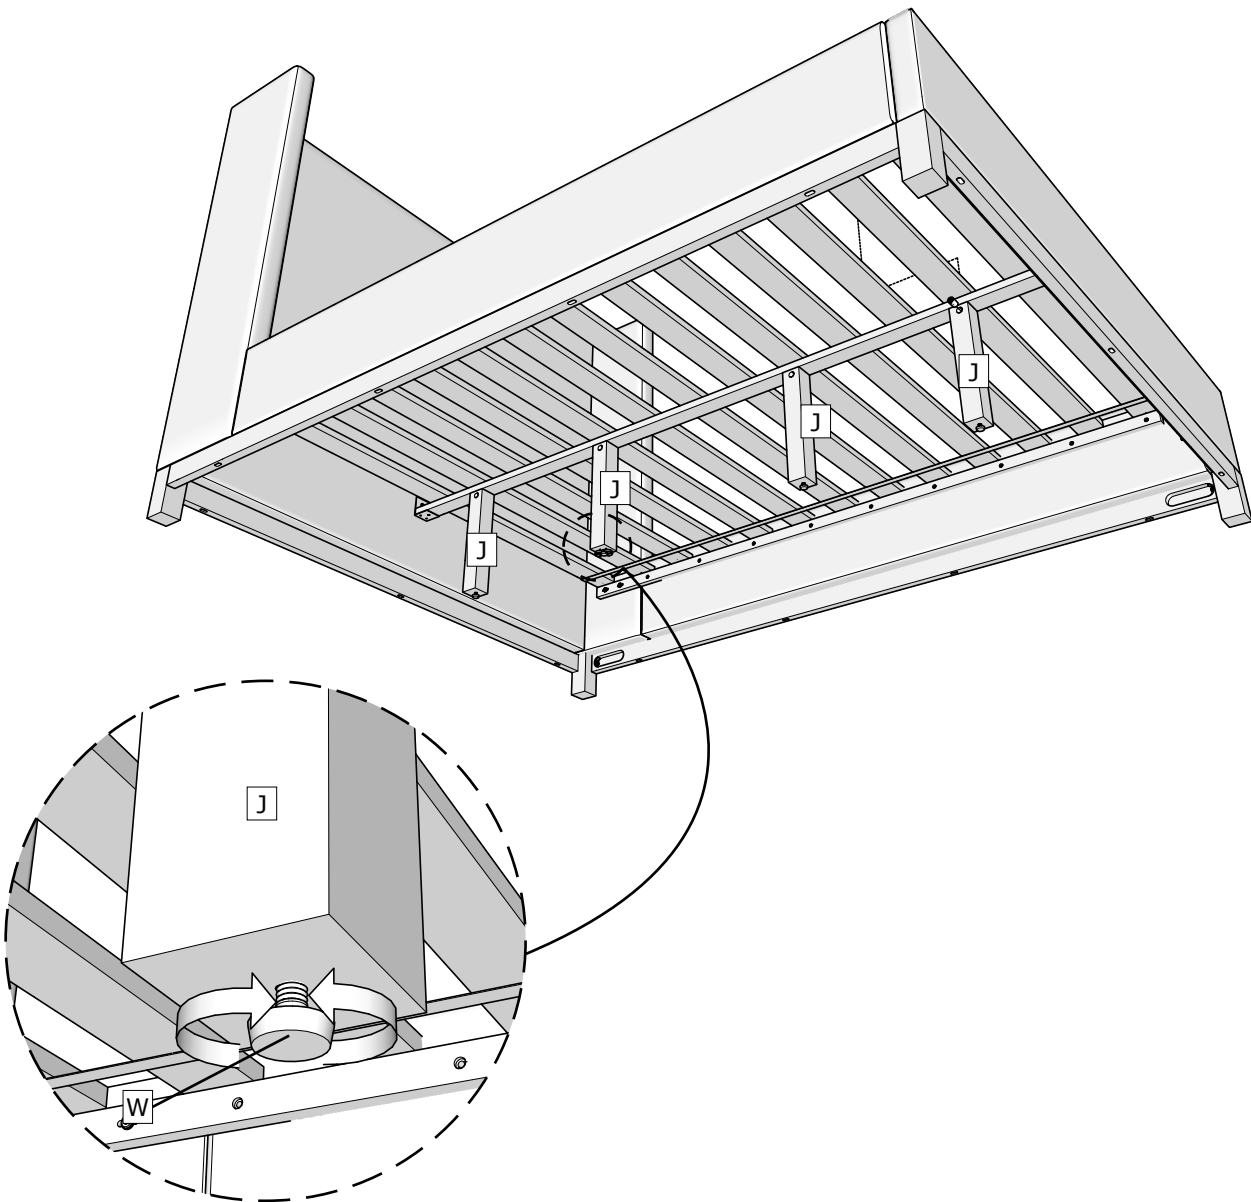

WARNING!

- Ensure the adjustable feet are perpendicular to the floor before using the bed. Rotate them clockwise or counterclockwise until firmly against the floor.

Note: *The adjustable feet rotate to fit the floor; one may need clockwise rotation while the other counterclockwise, depending on leveling and assembly.*

- Do not drag or push the bed frame. To ensure safe moving, always use two people to lift and re-position the bed frame. Avoid dragging or pushing it across the floor to prevent damage to the legs, slats, and center support legs.