



2650-1645-00

INSTALLATION INSTRUCTIONS

2 $\frac{1}{16}$ " Subaru WRX Instrument Cluster Bezel


Model P61025



1. Remove factory gauge bezel per manufacturer's instructions. Contact auto manufacturer for details.
2. Remove the two factory screws at the bottom of the instrument cluster bezel and install the included aluminum brackets. Use outside holes to install for proper fit.
3. Install gauges in the cluster and run wiring.
4. Install Instrument Cluster Bezel.

NOTE: Installing this Dash Pod with mechanical pressure gauges may require 12ft. nylon tubing kit model 3226 (not for use with fuel pressure gauges). 12ft. capillary tubing may also be needed on mechanical temperature gauges.

5. Use the two factory screws to secure the top of the bezel, and the supplied screws to attach the Instrument Cluster Bezel to the aluminum brackets.

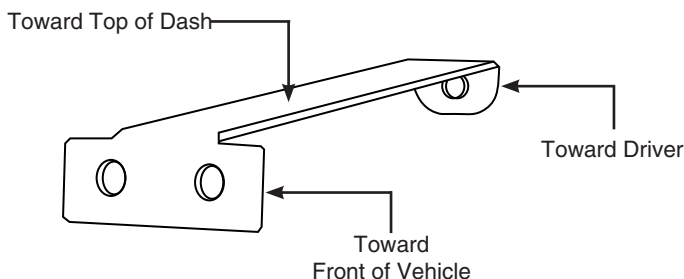

NOTE

Due to normal manufacturing processes you may have "flashing" (small fibers of plastic) around the pod holes. Once the gauge(s) are installed in the pod you will not be able to see the "flashing."

Auto Meter ProPods Three Limited year Warranty

Auto Meter warrants to the consumer that all ProPod products will be free from defects in material and workmanship. Products that fail will be repaired or replaced at Auto Meter's option to the consumer, when determined by Auto Meter that the product failed due to defects in material or workmanship. This warranty is limited to the repair or replacement of parts in the ProPod Product and the necessary labor done by Auto Meter to effect the repair or replacement of the ProPod product. In no event shall this warranty exceed the original purchase price of the ProPod Product nor shall Auto Meter be responsible for special, incidental or consequential damages or costs incurred due to the failure of this product. Warranty claims to Auto Meter must be transportation prepaid and accompanied with proof of purchase. This warranty applies only to the original purchaser of product and is non-transferable. Improper use or installation, accident, water damage, abuse, unauthorized repairs or alterations voids this warranty. Auto Meter disclaims any liability for consequential damages due to breach of any written or implied warranty on all products manufactured by Auto Meter.

FOR SERVICE CONTACT: AUTO METER PRODUCTS Inc. 413 W. Elm St., Sycamore, IL 60178 USA (866) 248-6357 or
Email us at service@autometer.com

© 2012 Auto Meter Products, Inc.

2650-1645-00 4/19/12



2650-1645-00

INSTALLATION INSTRUCTIONS

2 $\frac{1}{16}$ " Subaru WRX Instrument Cluster Bezel


Model P61025



1. Remove factory gauge bezel per manufacturer's instructions. Contact auto manufacturer for details.
2. Remove the two factory screws at the bottom of the instrument cluster bezel and install the included aluminum brackets. Use outside holes to install for proper fit.
3. Install gauges in the cluster and run wiring.
4. Install Instrument Cluster Bezel.

NOTE: Installing this Dash Pod with mechanical pressure gauges may require 12ft. nylon tubing kit model 3226 (not for use with fuel pressure gauges). 12ft. capillary tubing may also be needed on mechanical temperature gauges.

5. Use the two factory screws to secure the top of the bezel, and the supplied screws to attach the Instrument Cluster Bezel to the aluminum brackets.

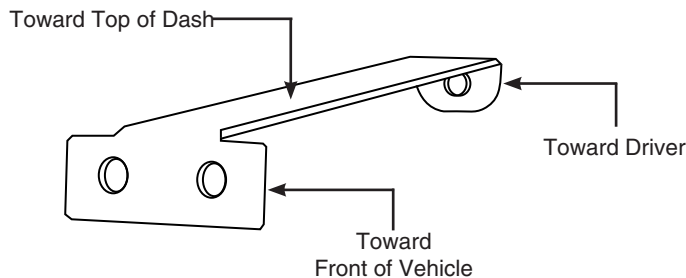

NOTE

Due to normal manufacturing processes you may have "flashing" (small fibers of plastic) around the pod holes. Once the gauge(s) are installed in the pod you will not be able to see the "flashing."

Auto Meter ProPods Three Limited year Warranty

Auto Meter warrants to the consumer that all ProPod products will be free from defects in material and workmanship. Products that fail will be repaired or replaced at Auto Meter's option to the consumer, when determined by Auto Meter that the product failed due to defects in material or workmanship. This warranty is limited to the repair or replacement of parts in the ProPod Product and the necessary labor done by Auto Meter to effect the repair or replacement of the ProPod product. In no event shall this warranty exceed the original purchase price of the ProPod Product nor shall Auto Meter be responsible for special, incidental or consequential damages or costs incurred due to the failure of this product. Warranty claims to Auto Meter must be transportation prepaid and accompanied with proof of purchase. This warranty applies only to the original purchaser of product and is non-transferable. Improper use or installation, accident, water damage, abuse, unauthorized repairs or alterations voids this warranty. Auto Meter disclaims any liability for consequential damages due to breach of any written or implied warranty on all products manufactured by Auto Meter.

FOR SERVICE CONTACT: AUTO METER PRODUCTS Inc. 413 W. Elm St., Sycamore, IL 60178 USA (866) 248-6357 or
Email us at service@autometer.com

© 2012 Auto Meter Products, Inc.

2650-1645-00 4/19/12

