

SpeedoHealer CAN

Supplementary Manual



Husqvarna Svartpilen 401 ABS TC 2020- (SH-CAN)

Secure the bike on a stand.



Remove the seats.

Remove the side fairings.

Remove the fuel tank.



Locate the ABS connector under the fuel tank.



SpeedoHealer CAN

Supplementary Manual



Husqvarna Svartpilen 401 ABS TC 2020- (SH-CAN)

Cut the Green/Blue wire about 2,5cm (1") of the connector.

Connect the SH Green wire to the Green/Blue wire end, which goes to the ABS module. Use a yellow butt connector.




Connect the SH Blue wire to the Green/Blue wire end, which is at the wiring harness side. Use a yellow butt connector.



Cut the Yellow/Blue wire about 2,5cm (1") of the connector.

Connect the SH White wire to the Yellow/Blue wire end, which goes to the ABS module. Use a yellow butt connector.

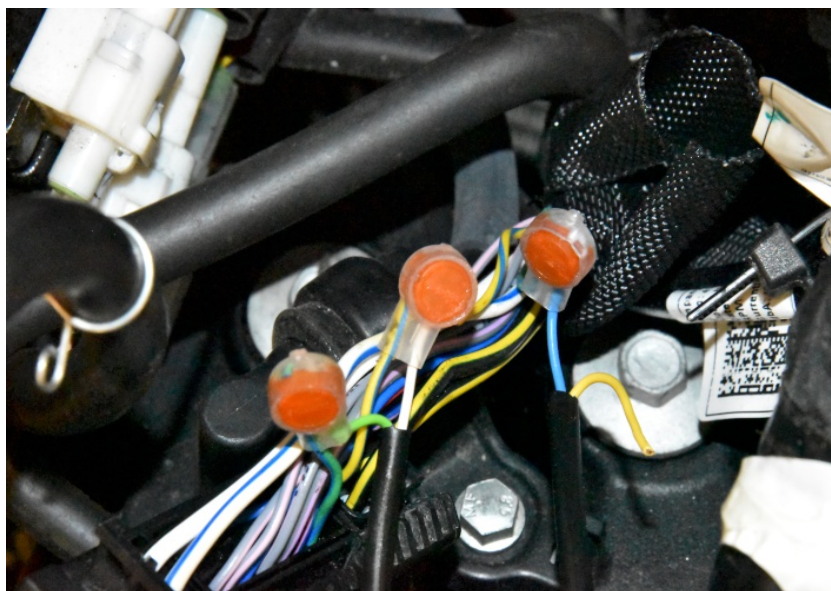

SpeedoHealer CAN

Supplementary Manual



Husqvarna Svartpilen 401 ABS TC 2020- (SH-CAN)

Connect the SH Yellow wire to the Yellow/Blue wire end, which is at the wiring harness side. Use a yellow butt connector.



Splice the SH Red wire to the Grey/Pink wire of the ABS connector. Use a red wire tap connector.



Splice the SH Black wire to the Black wire of the fan connector. Use a red wire tap connector.



SpeedoHealer CAN

Supplementary Manual



Husqvarna Svartpilen 401 ABS TC 2020- (SH-CAN)

Typical position for the SpeedoHealer CAN.

Secure the unit properly.

