




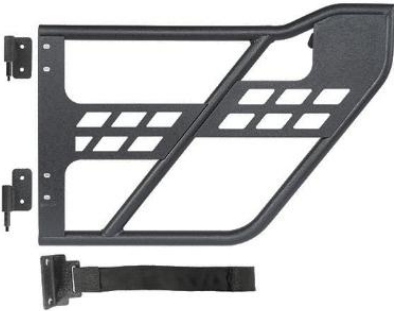


MAKE A DIFFERENCE





Tubular Doors

BXG.3009-1S
(INSTALLATION INSTRUCTION)

ATTENTION • Please verify all parts are present and read instructions carefully before starting installation.
• Please feel free to contact your distributor if you have any kind of question about your purchase.

1 CONTENTS

	Front Doors	Rear Doors
Driver Side		
Passenger Side		

Qty	Part Name	Size(mm)	Picture	Qty	Part Name	Size(mm)	Picture
16	Button Bolt	M8*25		16	Flat Washer	M8*20*1	
16	Split Lock Washer	D8		16	Flange Lock Nut	M8	

2 TOOLS REQUIRED

◆ Drive Ratchet Handle

◆ 5mm Hex Bit Socket

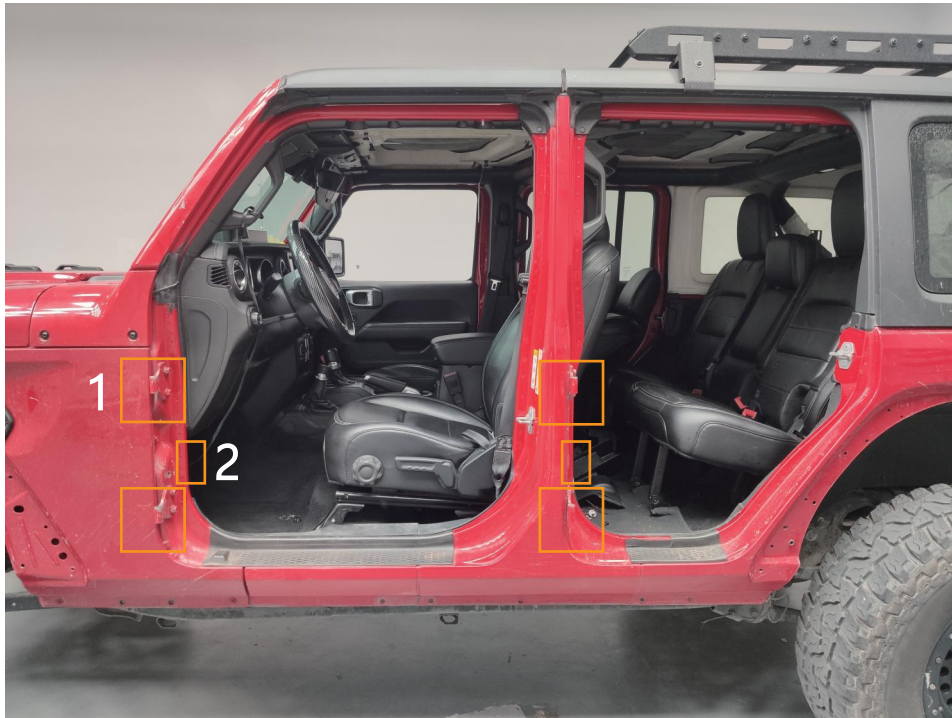
To view online instruction, please scan the QR code.



3 INSTALLATION INSTRUCTION

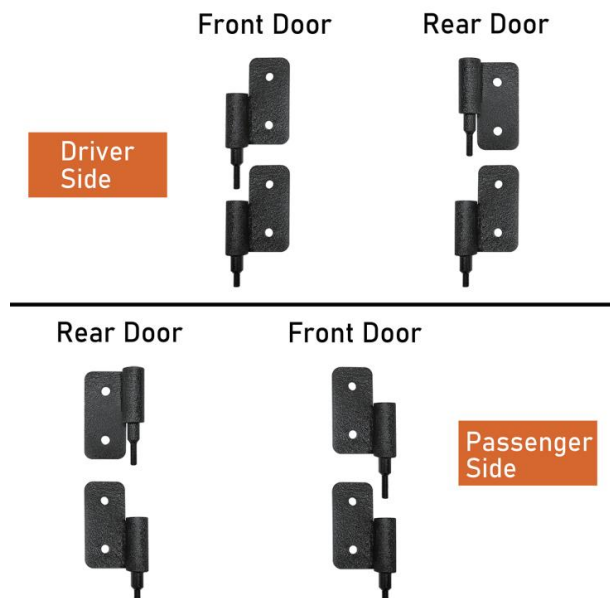
Step 1

Place the vehicle in park and remove the factory doors.



Step 2

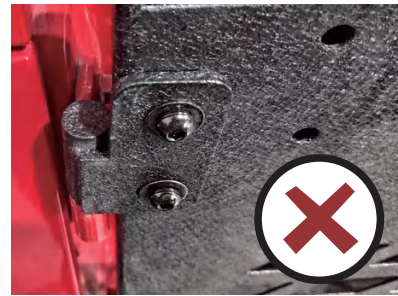
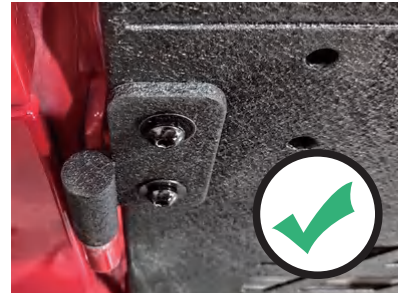
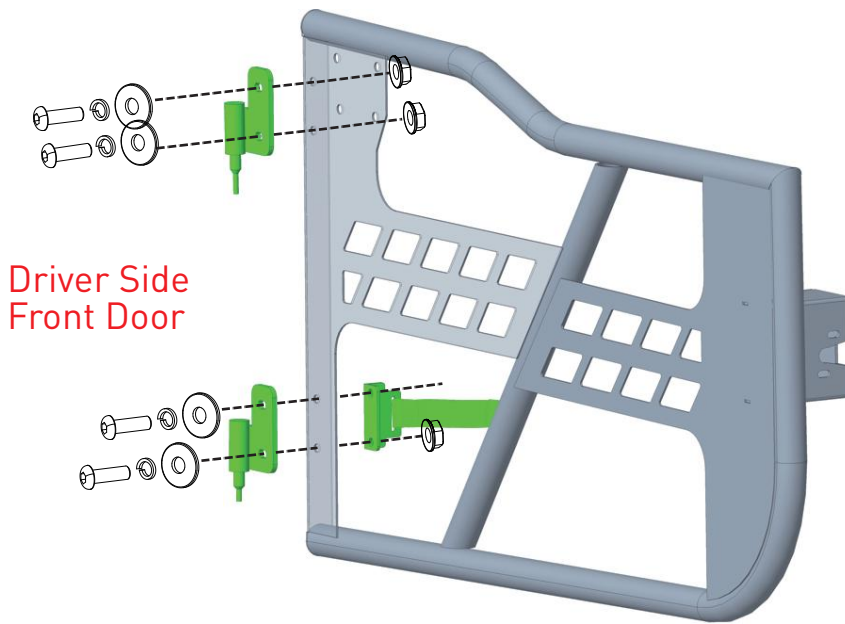
Distinguish the door hinges and straps as the picture below.



Step 3

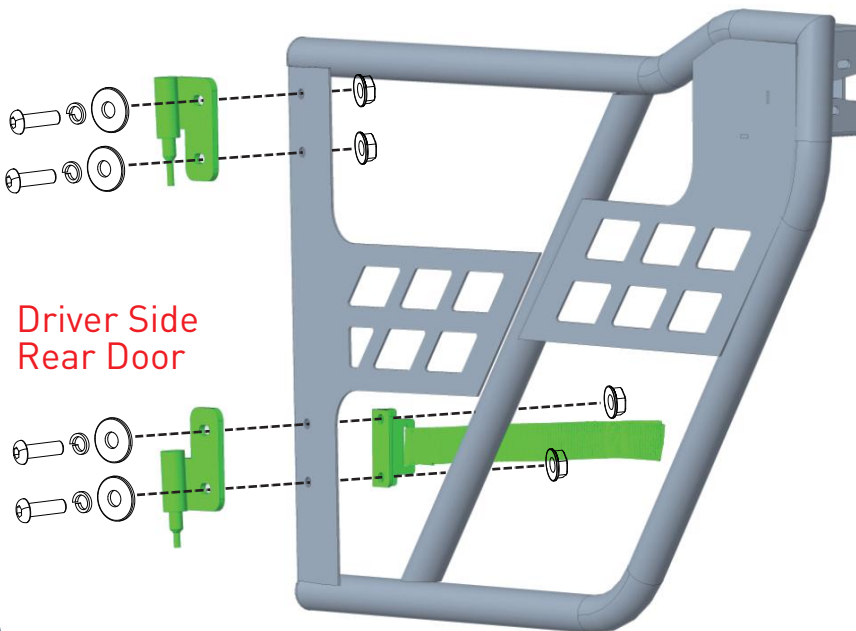
Install the front door hinges and front strap to the front door. Do not tighten the hardware at this time.

- (4) M8x25 Button Bolts
- (4) M8 Lock Washers
- (4) M8x20x1 Flat Washers
- (4) M8 Flange Lock Nuts

**Step 4**

Install the rear door hinges and rear strap to the rear door. Do not tighten the hardware at this time.

- (4) M8x25 Button Bolts
- (4) M8 Lock Washers
- (4) M8x20x1 Flat Washers
- (4) M8 Flange Lock Nuts

**Step 5**

Secure the strap onto the vehicle.



Step 6

Install the tubular door to the vehicle. Close the door and adjust the door to the desired location. Tighten up all bolts.

**Step 7**

Loose the lock cover. Adjust the lock.

**Step 8**

Repeat all steps for the opposite of the vehicle.

Step 9

The installation is complete. We hope you enjoy a wonderful off-road life with this quality Hooke Road product!

