



Mcombo



RECLINER TV CHAIR

6151-4188

NOTE:

Please read carefully before use
and keep for future reference

Toll Free(US) : 3235971109

Website : www.mcombo.com Amazon sold by: MCombo

Warranty Claim : sales@mcombo.com

Sales & Technical Questions : sales@mcombo.com sales@exacme.com



























CONGRATULATIONS!


Mcombo Recliner TV Chair - a name synonymous with classic design and the carrier of value and quality. Our products are directly from factory and eliminated the cost of middlemen. The Recliner TV Chair is a high-quality shading solution to enhance comfortable feelings as you try to enjoy the nice day.

WARRANTY

- All warranties are to the original purchaser from **MCOMBO ONLY**®
- **MCOMBO**® will replace the defective parts or send replacement item provided that the warranty parts have not been subjected to misuse, abuse or improper service by the consumer, for example, damaged wire arising in consequence of negligence or improper operation.
- **MCOMBO**® All of recliners come with a 30-day return/replace policy. During this time, we will cover the shipping cost of return and replacement for defective and damaged item, through provide pre-paid return label or pick up service for customer's convenience.

PARTS LIST


A  #A x 10pcs Bolt M8 x 38	B  #B x 10pcs Flat Washer Φ8*22*2	C  #C x 2pcs Bolt M6 x 20	D  #D x 2pcs Bolt M5 x 10	E  #E x 4pcs Bolt M6 x 25	F  #F x 2pcs Bolt M8 x 70	G  #G x 2pcs Bolt M8 x 25
H  #H x 2pcs M8	I  #I x 1pc Allen Wrench M6	J  #J x 1 pc Allen Wrench M8	K  #K x 1pc (Right Armrest)	L  #L x 1pc (Left Armrest)	M  #M X 1PCS Ottoman Leg Support	N  #N X 1PC Ottoman Round Base
O  #O X 1PC Ottoman Cushion	P  #P X 2PCS Ottoman Bracket	Q  #Q X 2PCS Seat Leg Support	R  #R X 1PC Seat Round Base	S  #S X 1PC Seat Cushion	T  #T X 1PC Back Cushion	U  #U x 1 pc Wrench
V  #V x 2 pc Washer	W  #W x 1 pc Lumbar Pillow	X  #X X 1PC Remote Control	Y  #Y X 1PC Adapter	Z  #Z X 1PC Headrest Padding		

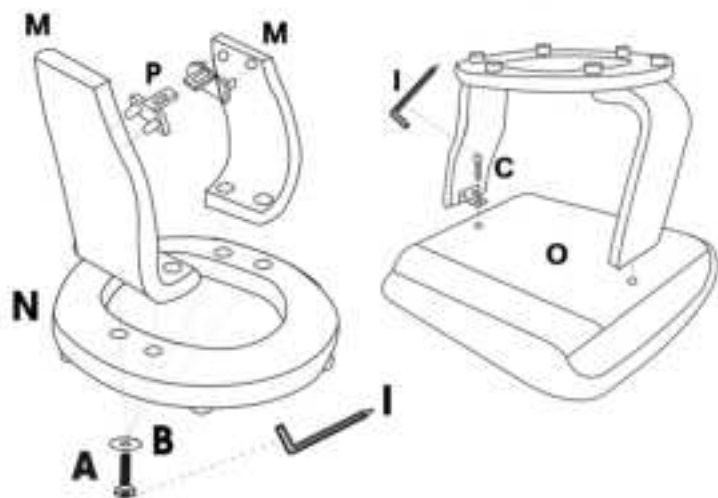

Step 1

Use Allen Wrench (#I) to fix the Ottoman leg supports (#M) with bolts (#A&B) on Ottoman base (#N).


Install the bracket (#P) on the Ottoman leg support (#M), and then fix the Ottoman cushion (#O) to the ottoman base with bolts (#C).

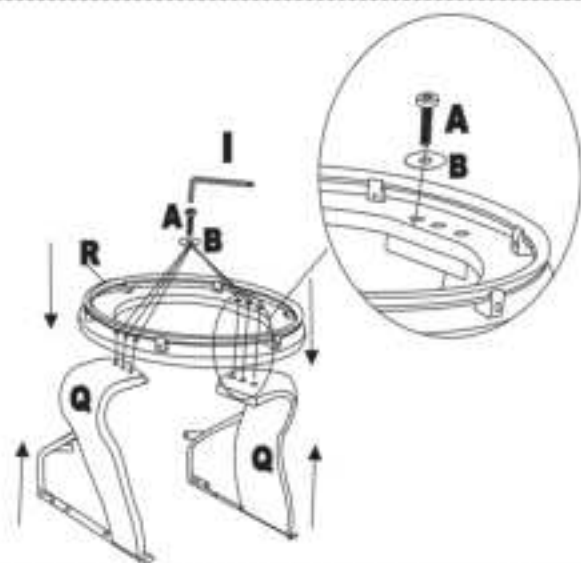

Step 2

1 : Fix the seat leg support (#Q) to the seat base (#R) with bolts (#A&B) through pre-drilled holes

2 : Secure the leg and base with the bolts (#A&B), then tighten with allen wrench (#I).

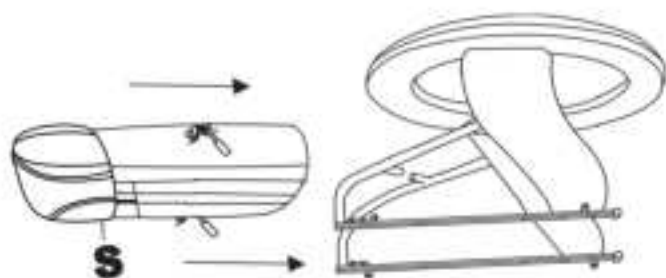

Step 3


Install the seat cushion (#S) on the chair frame, and align the adjusting levers on both sides of the cushion with the corresponding holes on the armrest frame of the chair.


Tip : Turn the chair frame and base upside down, and then turn the seat cushion over and install it on the chair frame. It may be easier to operate.

Step 4

1 : First insert the washer (#V) between the adjusting lever and the armrest rod, and align them.

2 : Then use screw (#D) to fix the armrest frame and the adjusting lever with wrench (#I) .

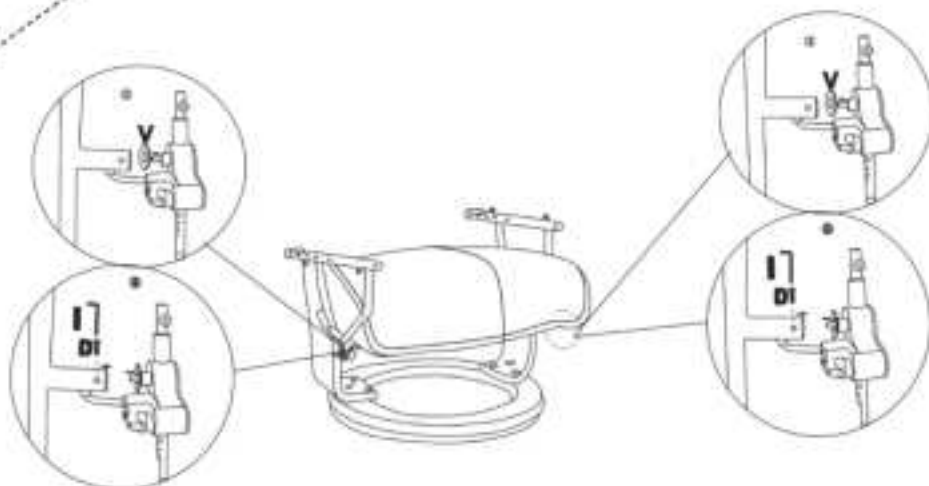


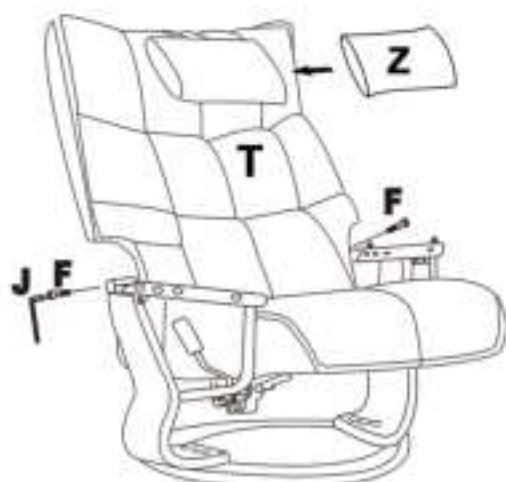

Step 5


1. Put the back cushion (#T) on the seat cushion first, align the screw holes on the armrest frame with the screw holes on the side of the back cushion, and tighten the screws (#F) with a wrench (#J).

2. Put the Headrest Padding (#Z) into the headrest cover that is attached to the backrest.

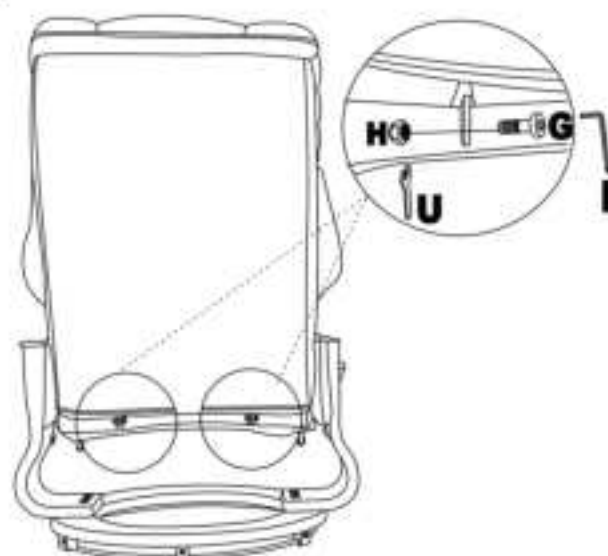

Step 6

Align the small iron plate holes on the back of the backrest with the seat cushion, and fix the screws (#G & #H) with a wrench (#I & #U).

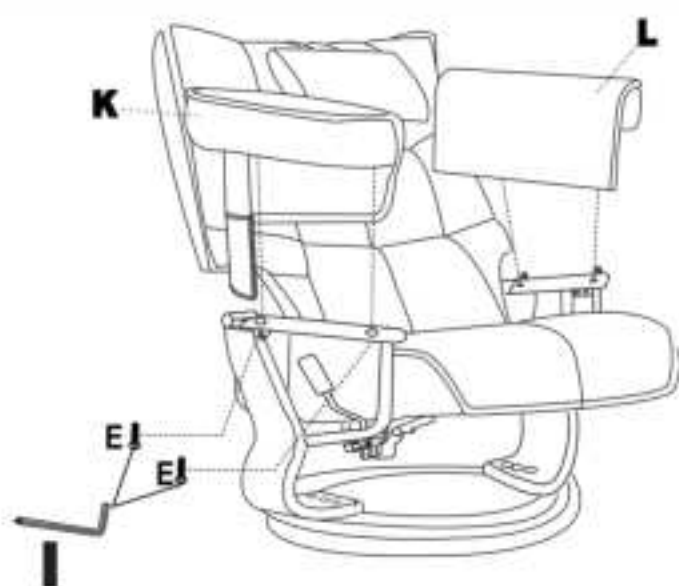

Step 7

Use screws (#E) to install the left armrest (#L) and right armrest (#K) to the armrest frame and fix with wrench (#I).

Step 8

Connect three wires,

1: Adapter (#S): Connect to the small black connector of the chair.

2: Remote Control (#T): Connect two large black connectors.

3. Vibrating Power Cord: Connect two small white connectors.

