


Quick Installation Guide
DeskMeet X600 Series



We recommend you wearing gloves while building/un-building the DeskMeet to protect your hands and the PC hardware.

Be sure to follow the procedures in this guide and put the DeskMeet together in correct order.

Package Contents

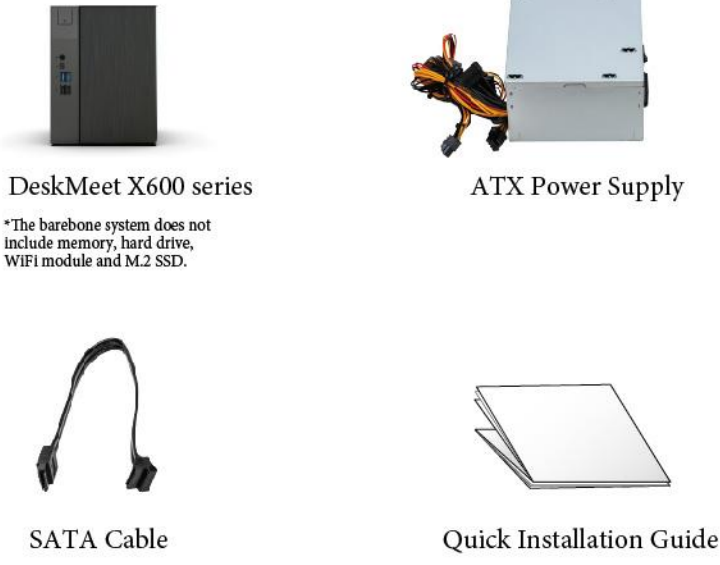

DeskMeet X600 series

*The barebone system does not include memory, hard drive, WiFi module and M.2 SSD.



SATA Cable

Quick Installation Guide



Screw Package

Rubber Foot x 4pcs, M.2 Screw x 3pcs, 2.5" HDD/SSD Screw x 8pcs, 3.5" HDD Screw x 9pcs (Countersunk Screw x 2pcs included), PWR Screw x 4pcs (Step Screw x 2pcs included), PCIe Card Screw x 2pcs, Foam Pad for Power Supply

Screw Package



Attach the foam pad to this position of the power supply to avoid damaging the case.

Customization Options

客製化選擇 / Anpassungsoptionen / Options de personnalisation / Opzioni di personalizzazione / Opciones de personalización / Настройка параметров / Opções de personalização / 사용자 지정 옵션 / カスタマイズオプション / 客制化选择

M.2 WiFi kit



DeskMeet Addressable LED



DeskMeet USB HUB




Front View

前視圖 / Vorderansicht / Vue de face / Visione frontale / Vista frontal
Передний план / Vista frontal / 전면보기 / 正面図



Rear View


後視圖 / Rückansicht / Vue arrière / Retrovisore / Vista trasera / Вид сзади / Visão traseira / 배면도 / 背面図

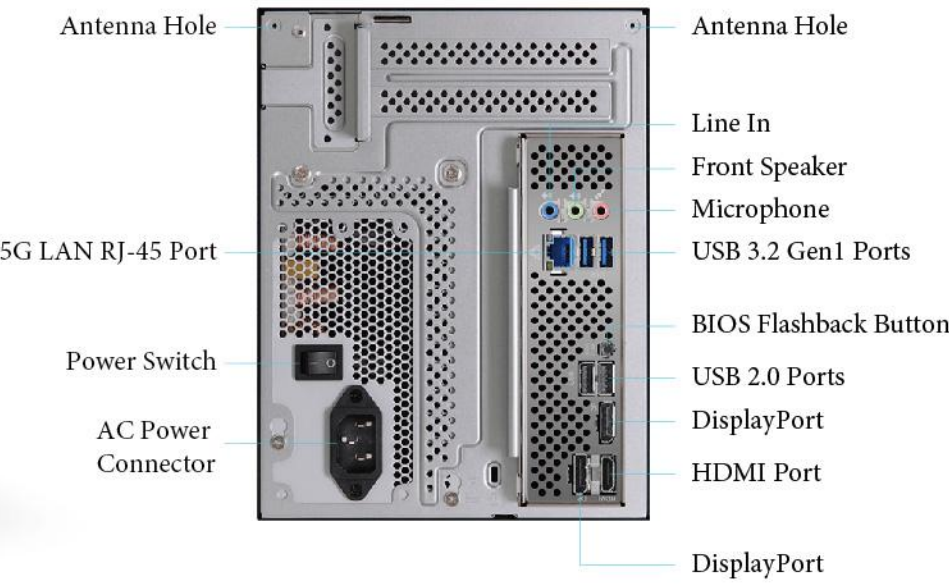

Motherboard Layout


主機板構造圖 / Motherboard Layout / Carte mère / layout della scheda madre / tarjeta madre / Материнские платы Master
Disponição da placa-mãe / 메인보드 레이아웃 / マザーボードのレイアウト

Top View

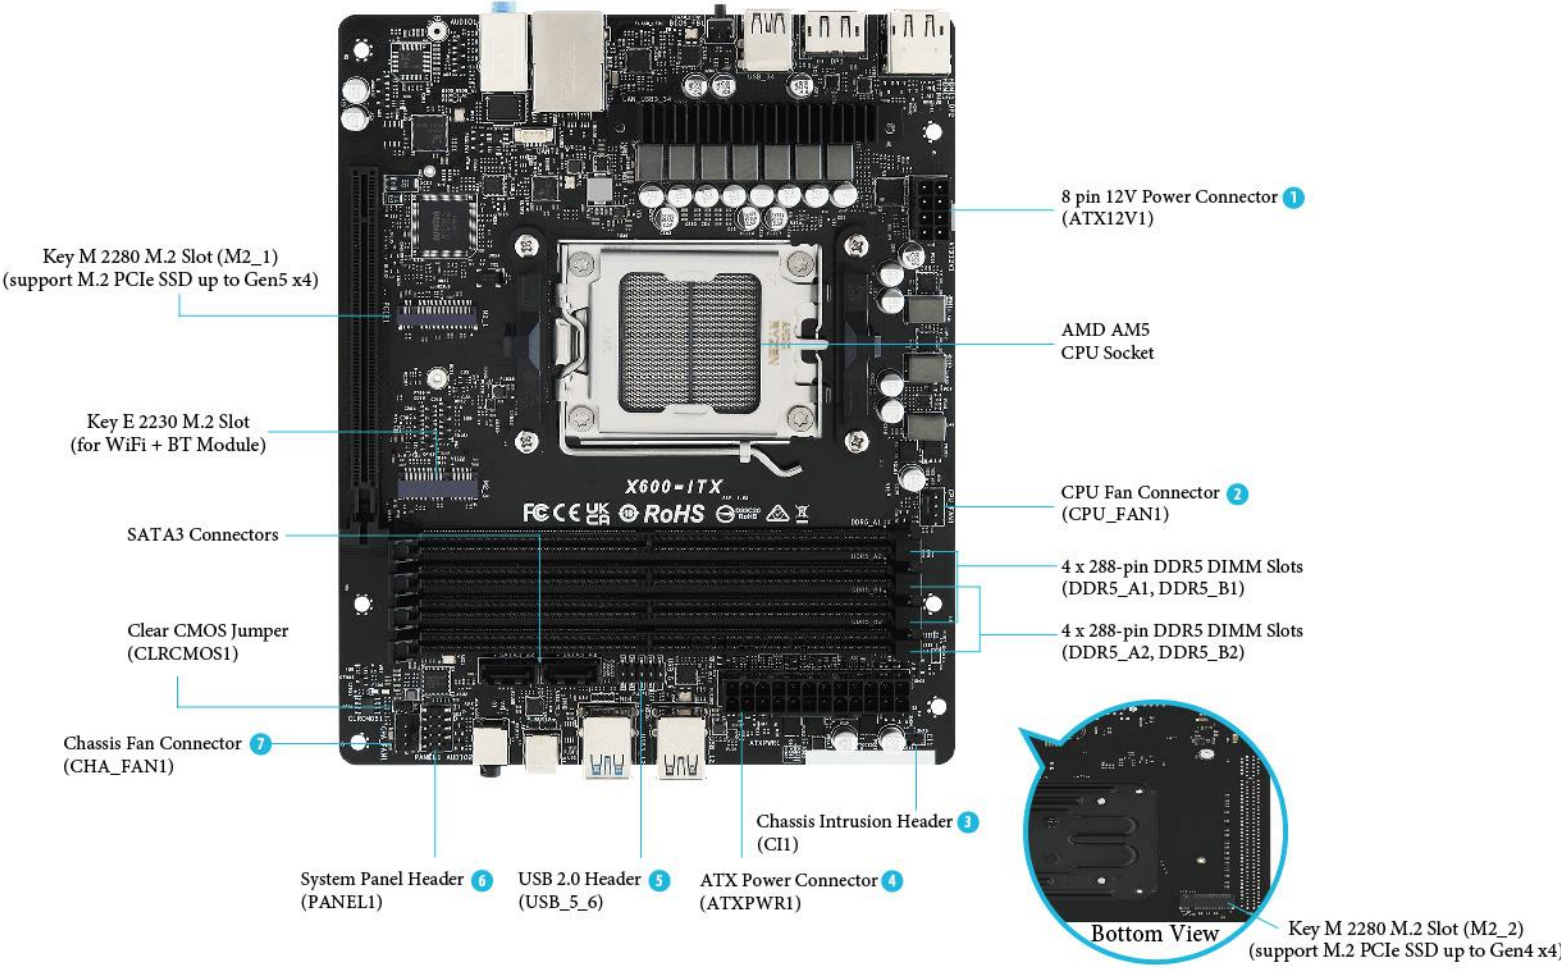


Onboard Connectors


主機板元件 / Onboard-Anschlüsse / Connecteurs à bord / Connettori a bordo / Conectores a bordo / Базовые соединения
Conectores de bordo / 온보드 커넥터 / 온보드 코넥트

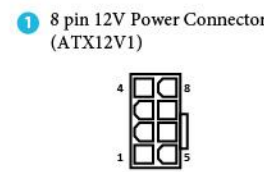


1 8 pin 12V Power Connector (ATX12V1)

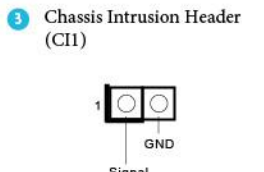


3 Chassis Intrusion Header (CI1)

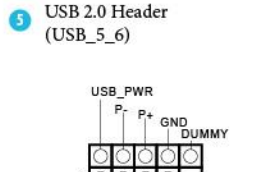


1 USB 2.0 Header (USB_5_6)

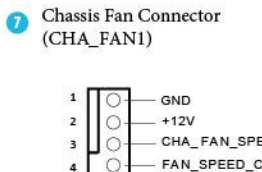


7 Chassis Fan Connector (CHA_FAN1)

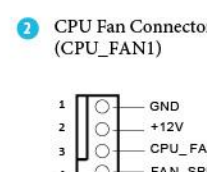

2 CPU Fan Connector (CPU_FAN1)

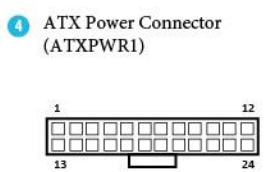

4 ATX Power Connector (ATXPWR1)

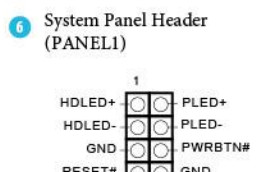

1 System Panel Header (PANEL1)




4 FAN_SPEED_CONTROL

Hardware Installation

硬體安裝 / Hardware-Installation / Installation du matériel / Installazione hardware / Instalación de hardware / Установка оборудования
Instalação de hardware / 하드웨어 설치 / 하드웨어의 인스톨 / 硬件安装

A Begin Installation

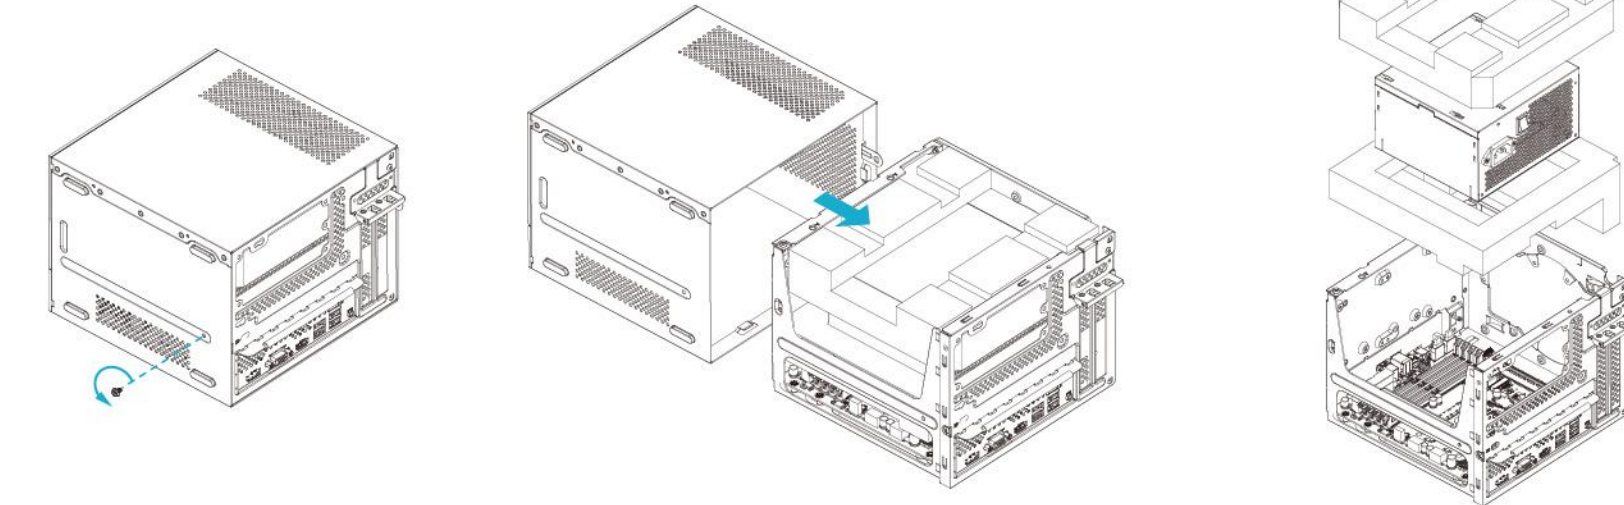


1. Remove the screw from the bottom side of the case.

2. Pull out the motherboard tray.


3. Remove the PSU and EPE Sponge.

B Installing the CPU

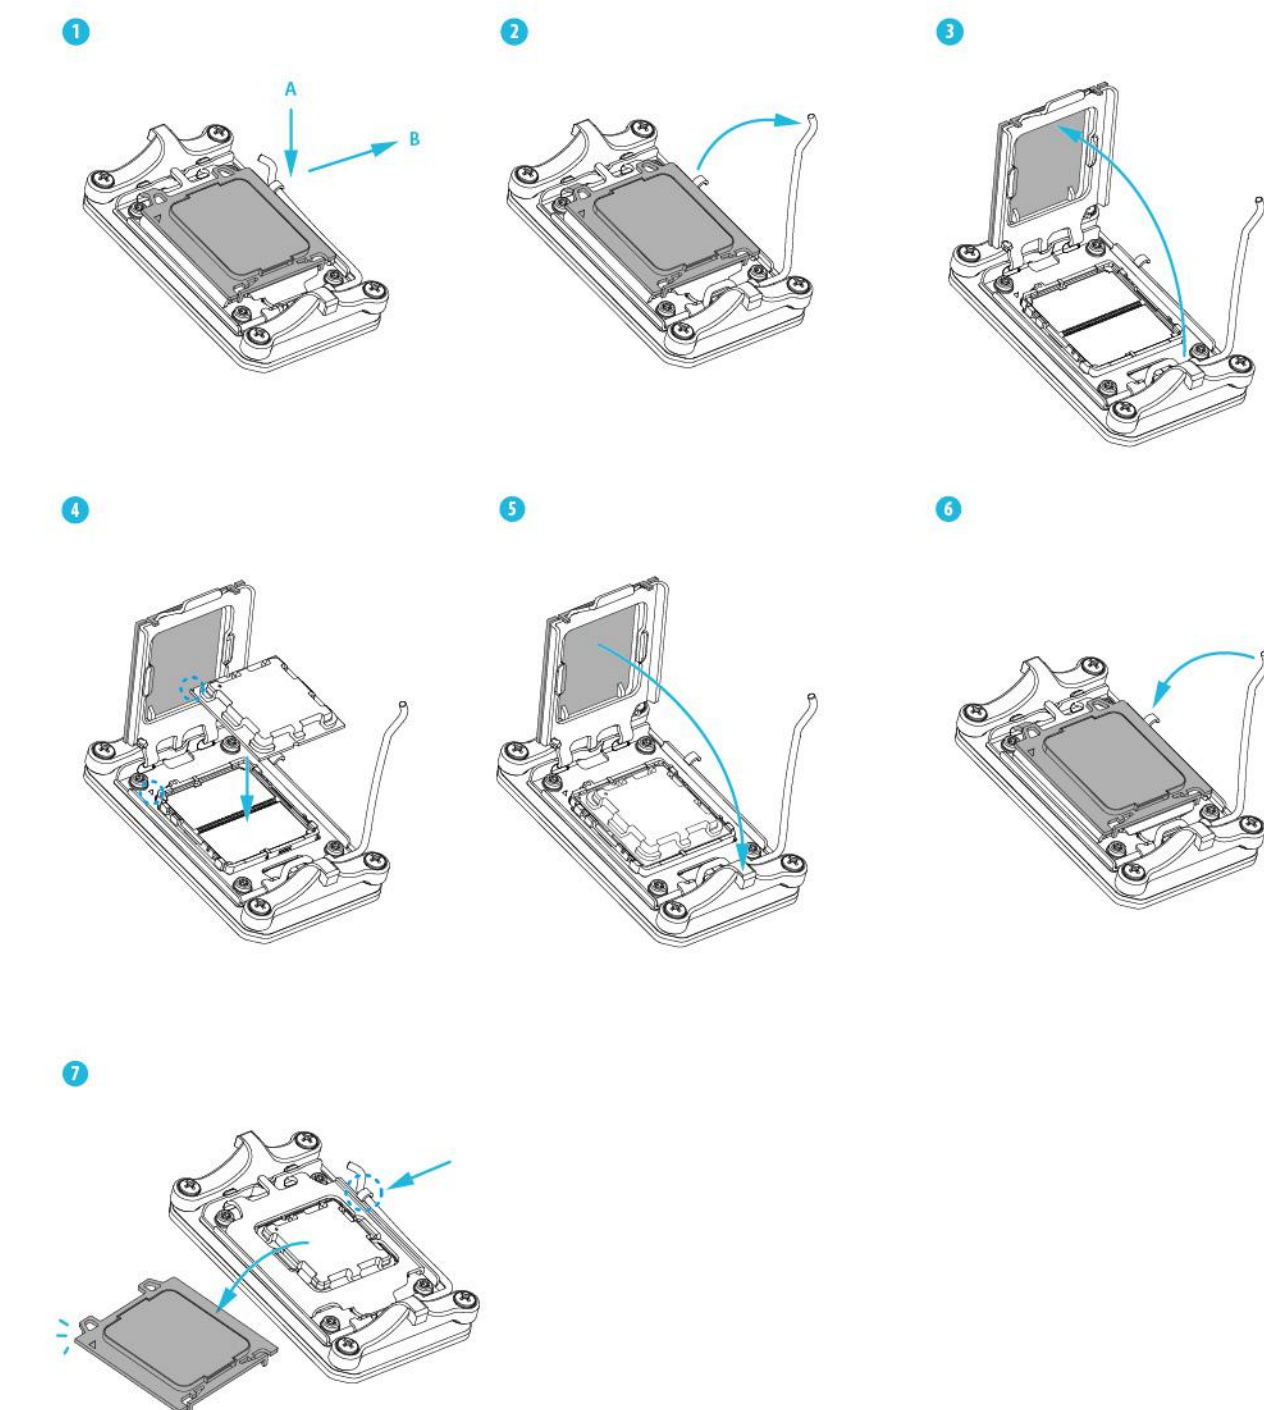


C Installing the CPU Fan and Heatsink

Installing the CPU Box Cooler

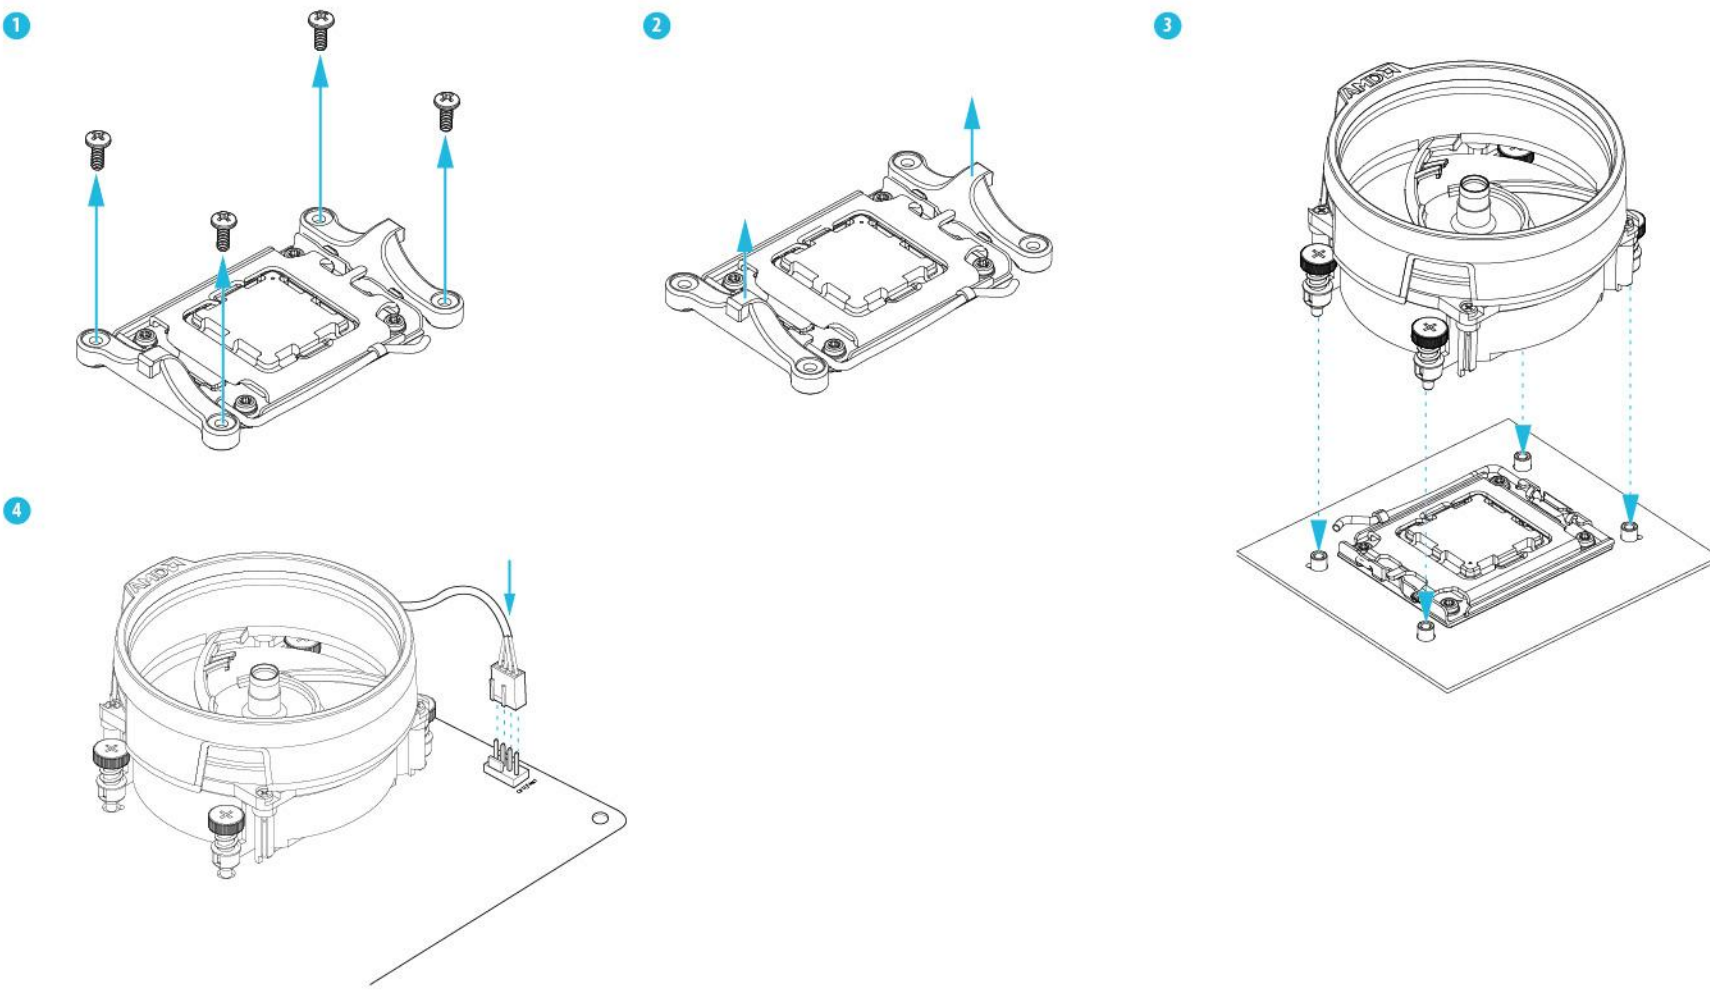

D Installing Memory Modules

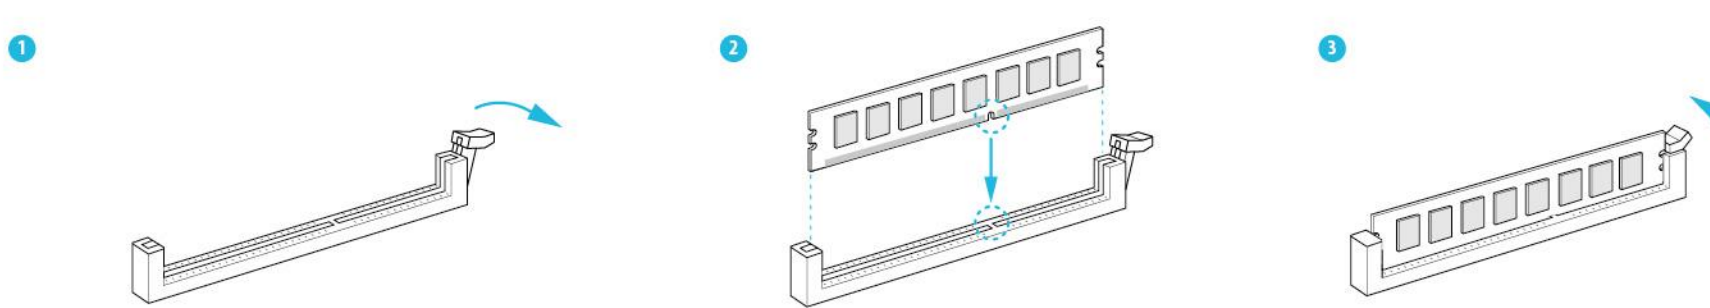

Memory Module X 1

A1	A2	B1	B2
			✓

Memory Module X 2


A1	A2	B1	B2
✓	✓		✓

Memory Module X 4

A1	A2	B1	B2
✓	✓	✓	✓

*The DeskMeet X600 series requires DDR5 DIMM.
*For dual channel configuration, you always need to install identical (the same brand, speed, size and chip-type) DDR5 DIMM pairs.

E Installing the M.2 WiFi/BT Module and WiFi Antennas

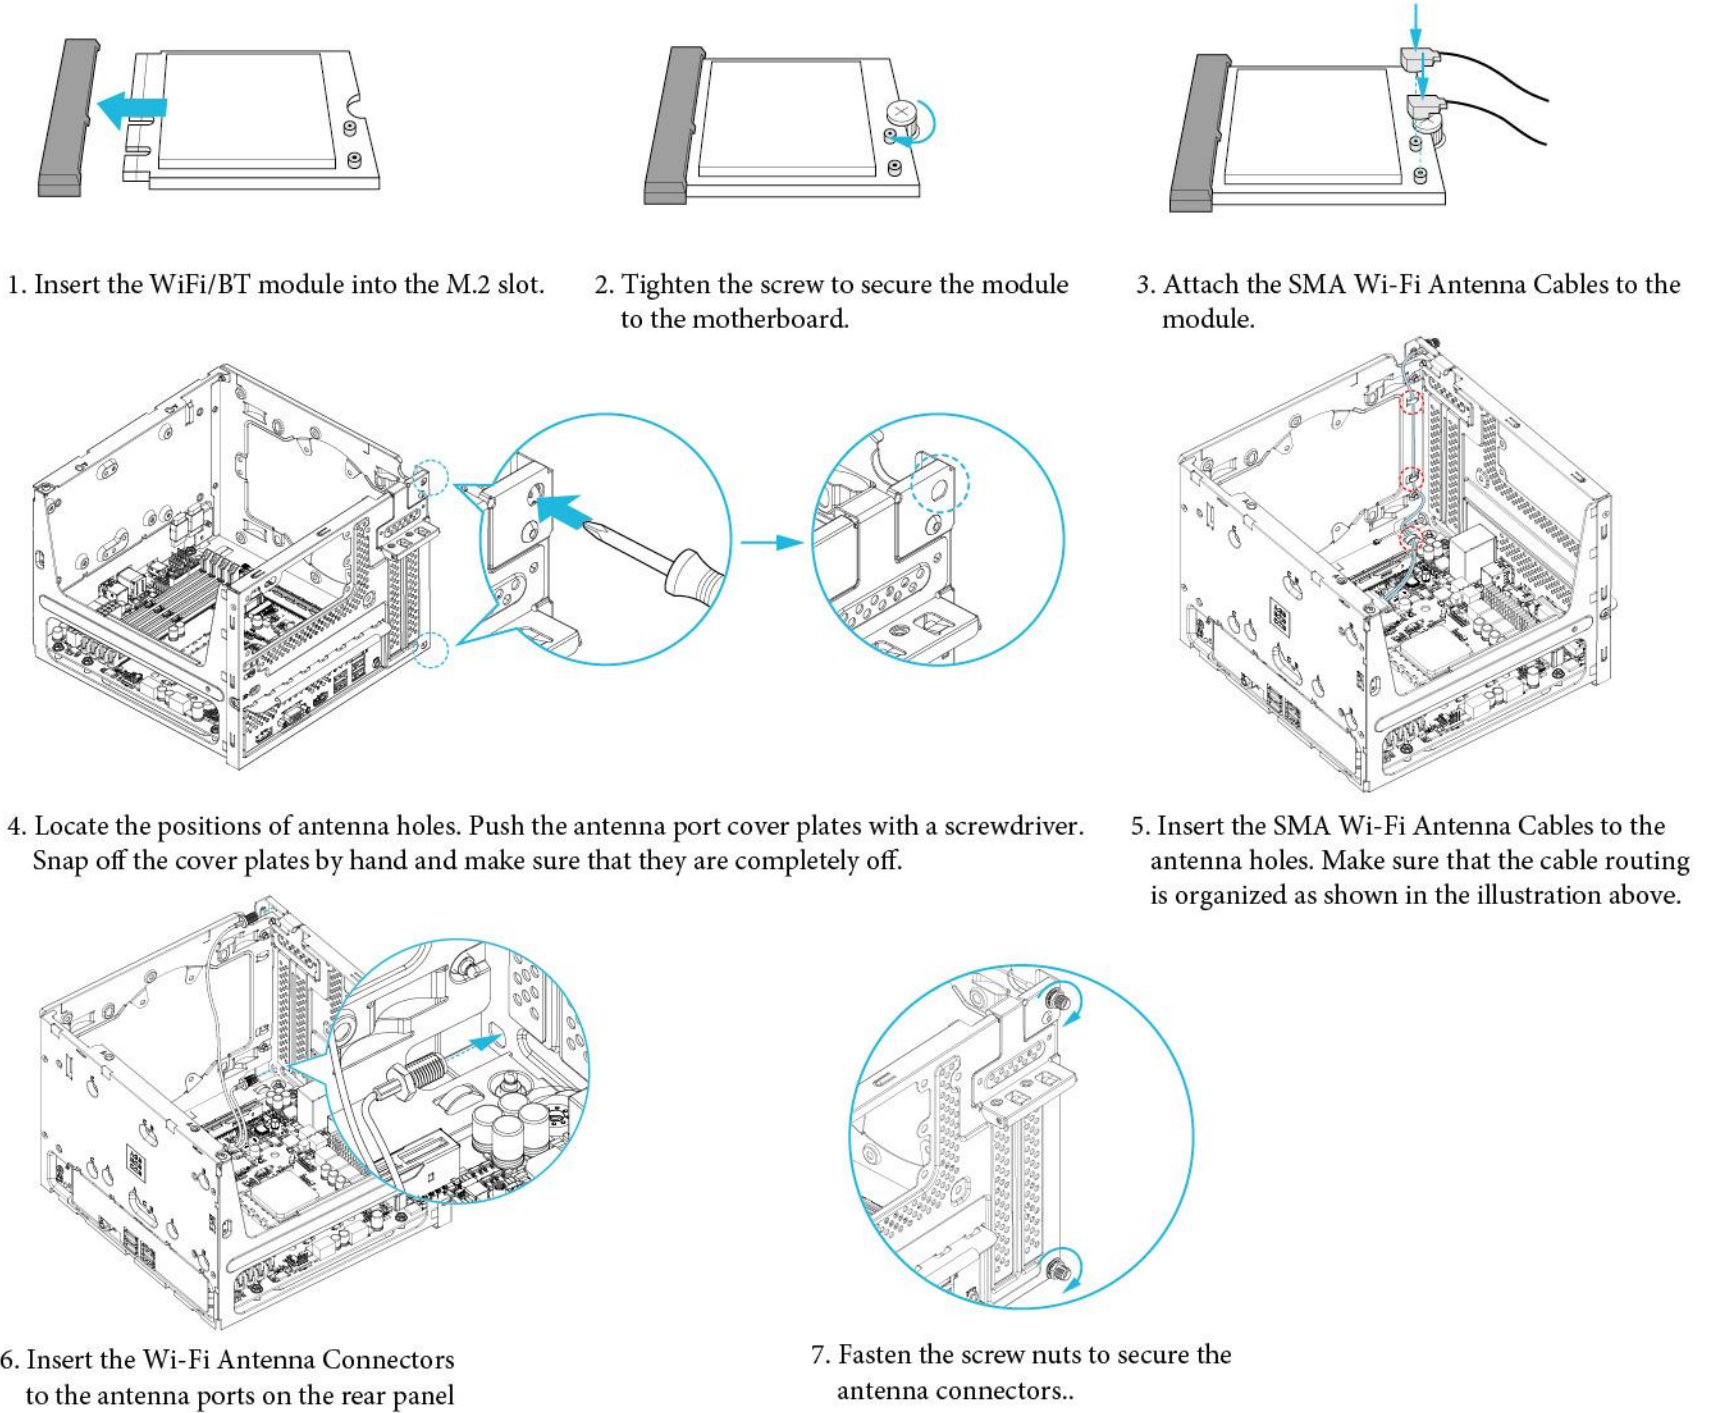

F Installing the Type 2280 Ultra M.2 SSD

