






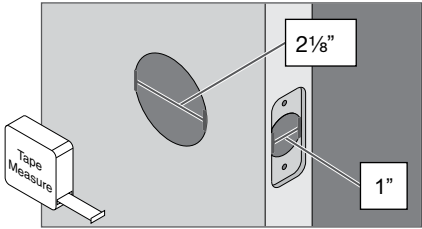
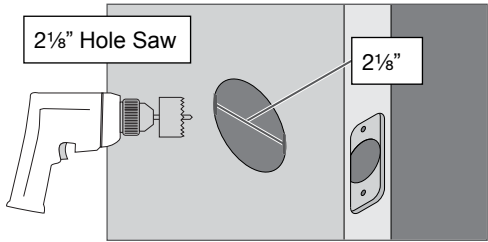
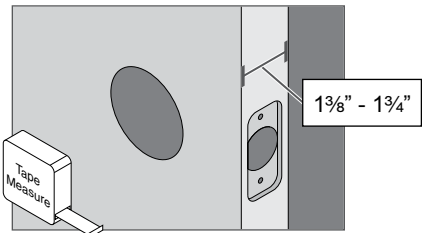
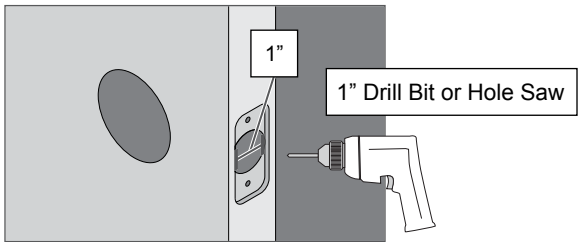
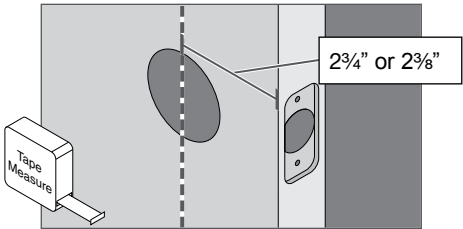
Schlage Control™ Smart Deadbolt

with ENGAGE Technology




Model BE467F

Door Preparation Instructions for Door with Existing Holes


Tools Needed	3 Measure the hole sizes.
Tape Measure Pencil Drill and Drill Bits Bit Sizes: 1/8", 1" Hole Saws 1", 2 1/8" Chisel Hammer	3a If hole sizes are larger than those shown, then the lock will not fit properly on the door. If hole sizes are smaller than those shown, see steps 3b and 3c.  3b If necessary, enlarge hole in door face. 
1 Measure door thickness. If the door is thinner than 1 3/8" or thicker than 1 3/4", then the lock will not fit properly on the door.  ① A thick door kit is available from Product Support at 800-847-1864.	3c If necessary, enlarge hole in door edge. 
2 Measure the backset. If existing backset is not 2 3/4" or 2 3/8", then the lock will not fit properly on the door. 	

4 Check the door jamb.

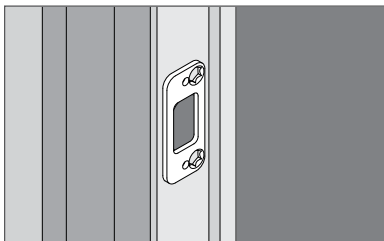
- 4a Place new strike and reinforcement plate against the door jamb. If these do not fit properly, see steps **4b** and **4c**.



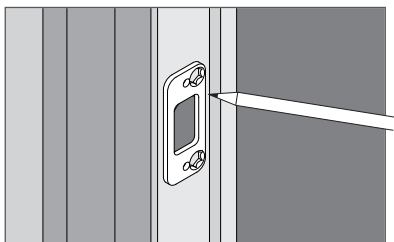- 4b If correction is necessary, trace faceplate and mark holes.



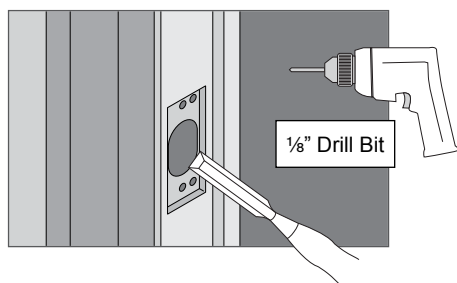- 4c If necessary, use chisel, hammer and drill to correct door jamb preparation.



Product Support

800-847-1864

www.allegion.com

