

# QUICK START GUIDE

This window kit is designed to fit most standard "vertical" and "horizontal" window applications.

Adjust to the desired length and secure with the provided metal wing nuts and bolts.


**This window kit will fit windows with dimensions of: MAXIMUM: 47" (120 cm) and MINIMUM: 9"(23cm)**

**However, for some types of windows, you may need to custom cut one of the window sliders to fit your specific window.**

## First condition:

For a 9"-25.5" window opening, use panel A (**Cut short if necessary**)

### PANEL A

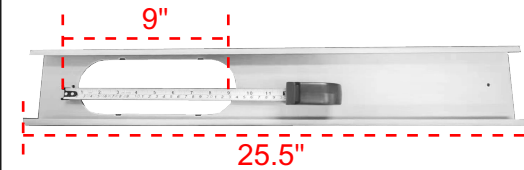


**Note: Never cut out the small hole on the right hand side of Panel A, unless your window opening is less than 25.5 inches.**

## Second condition:

**If the window opening is larger than panel A, cut Panel B, to desired length to fill window.**

For a 26"- 47" window opening, use panel A+B (**Cut panel B short if necessary**)

### PANEL A+B

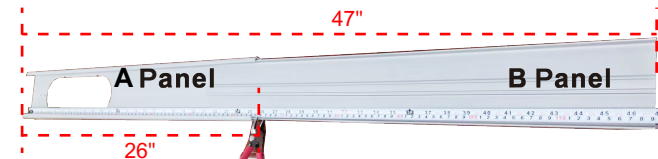

## CONNECT HOSE TO WINDOW KIT



Stretch the vent hose 6inch(15CM) to facilitate the installation of the exhaust nozzle.



Rotate the vent hose into the exhaust nozzle clockwise, and check to see that it are fastened securely to the hose.




Slide it for locking.




Insert hose outlet into the window panel A fully.




If you want fix the connection more firmly, use the type A screw.

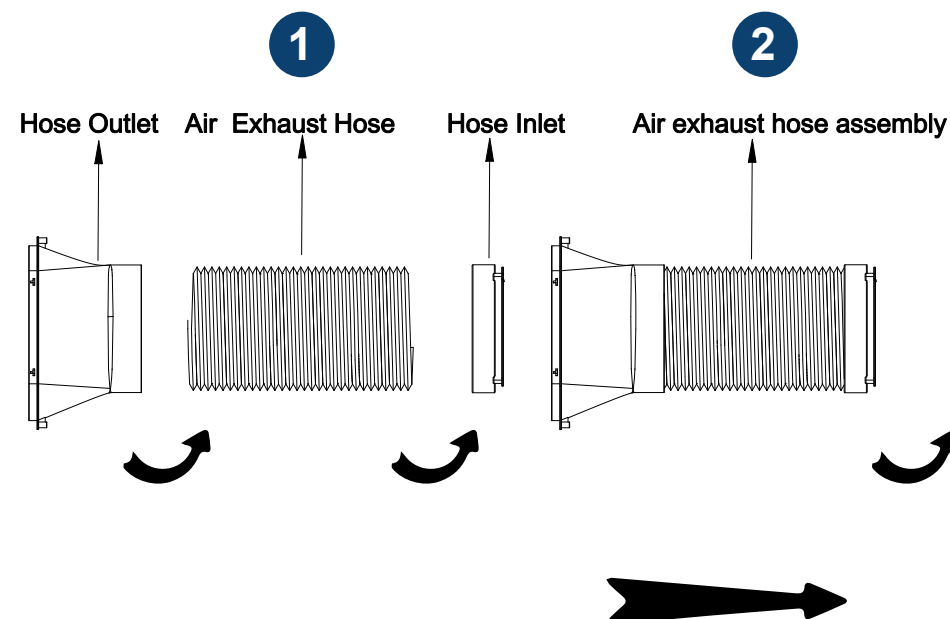

3 Connect with air conditioning outlet

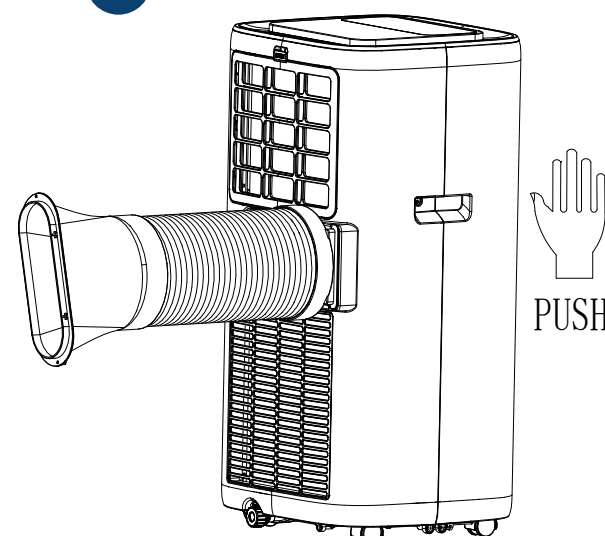

4 Drain hose installed to the upper drain hole

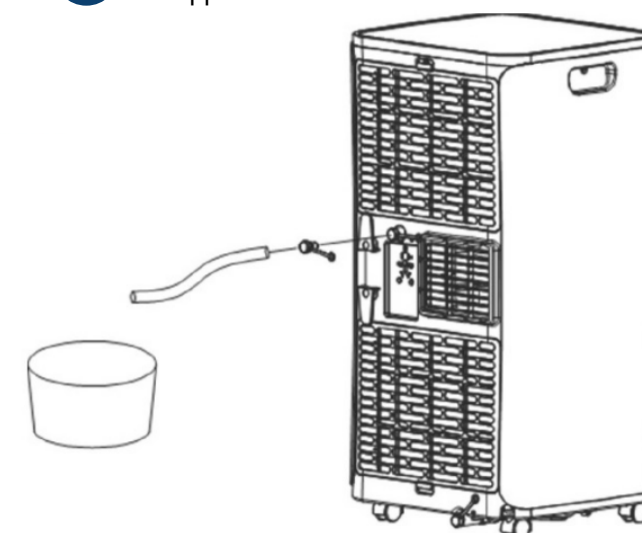

5

Attach the window panel and snap the panel into place on the window

