


6 Tier Farmhouse Bookcase Instruction Manual


Note: There is also a more detailed installation video on the product detail page on website.

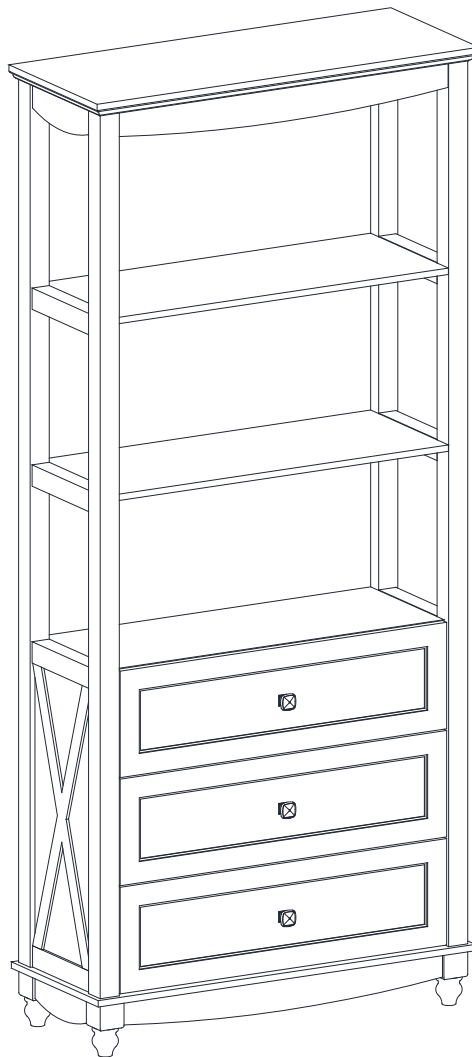








E-mail: support@allstand.net

QR code for installation video





Parts List(EN)

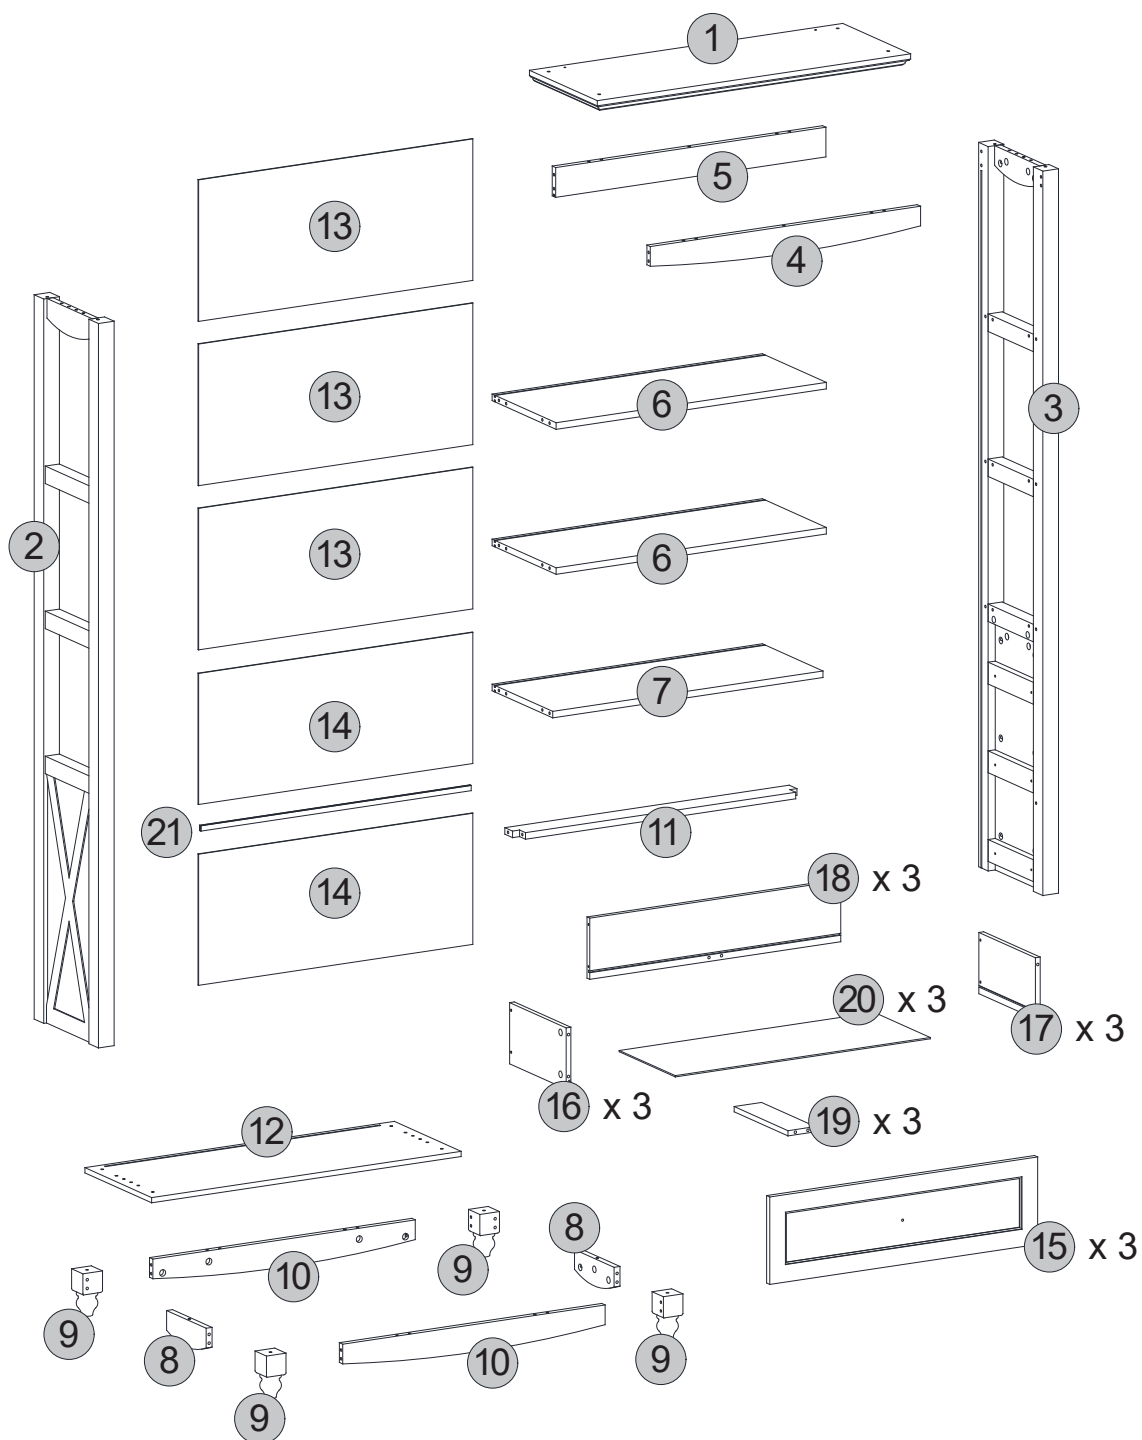

Parts List(EN)

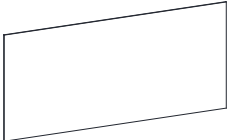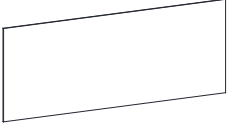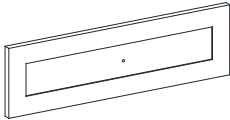1 1 PC 	2 1 PC 	3 1 PC 
4 1 PC 	5 1 PC 	6 2 PCS 
7 1 PC 	8 2 PCS 	9 4 PCS 
10 2 PCS 	11 1 PC 	12 1 PC 
13 3 PCS 	14 2 PCS 	15 3 PCS 

Parts List(EN)








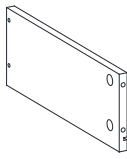
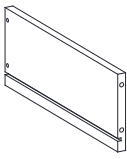
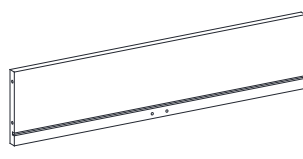

16 3 PCS 	17 3 PCS 	18 3 PCS 
19 3 PCS 	20 3 PCS 	21 1 PC 



Please read the following instructions carefully:


1. If power drills for assembly, please be sure to adjust the appropriate speed and accessories, excessive rotational speed or unsuitable drill bits may cause damage to screws and boards.
2. Please follow the instructions or the video on the detail page to assemble the product.
3. Due to the small size of the screw, please put them in a safe position when installing them to avoid accidental ingestion or loss.
4. After the installation is completed, you can use cotton cloth to clean the board.
5. We offer customers a free lifetime warranty. If you need help regarding product issues, after-sales service, or other relevant problems, please contact us via the email on the cover.

Parts List(EN)

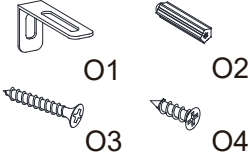A  70+3 PCS	B  70+3 PCS	C  42+3 PCS
D  12+1 PCS	E  24+2 PCS	F  12+1 PCS
G  3 PCS	H  3+1 PCS	I  18+1 PCS
J  18+1 PCS	K  102+3 PCS	L  1 PC
M  1 PC	O  2 PCS	CL  3 PCS
CR  3 PCS	DL  3 PCS	DR  3 PCS


Assembly Steps(EN)

STEP 1

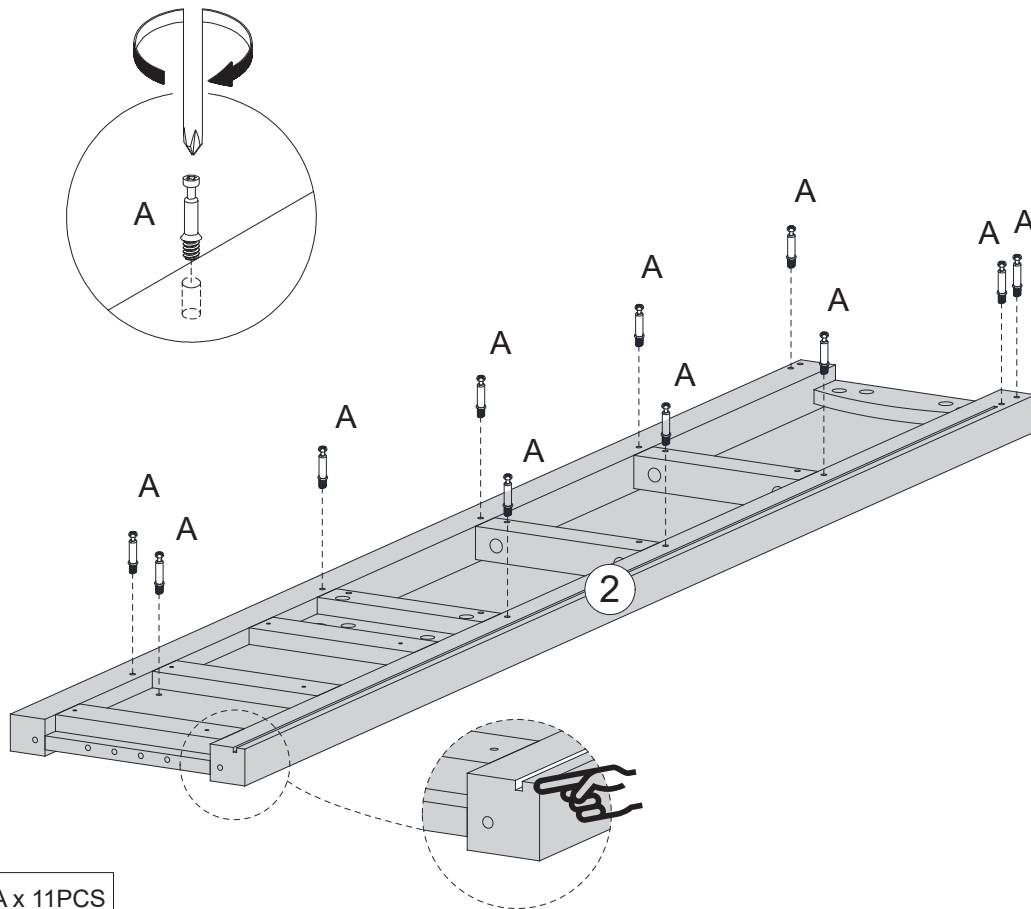

A x 11PCS

STEP 2

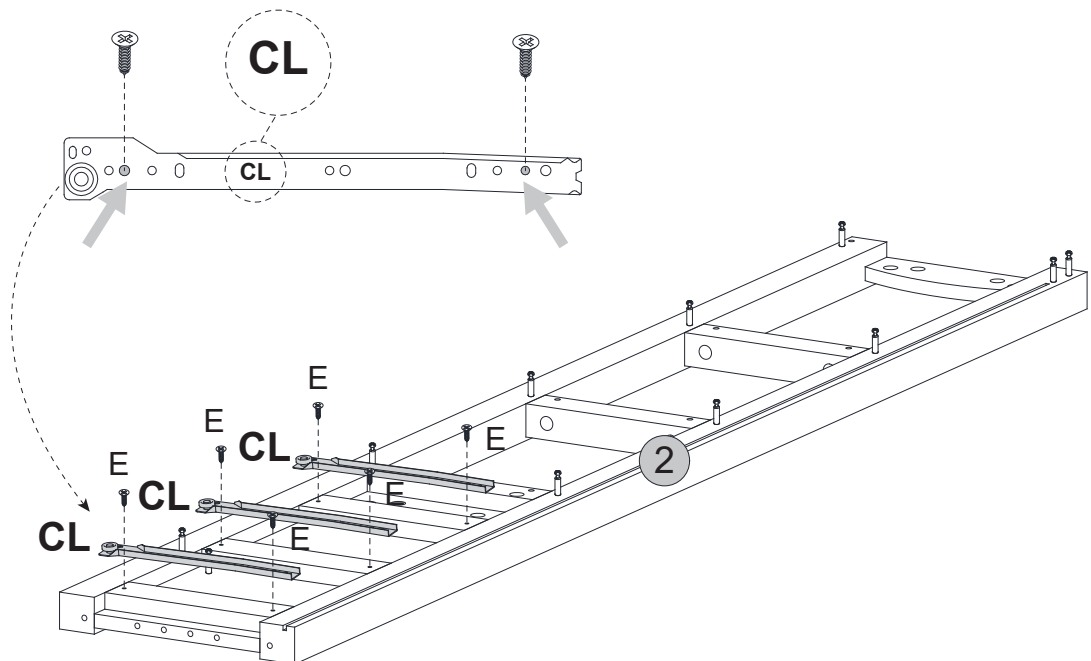


E x 6PCS



CL x 3PCS


Assembly Steps(EN)

STEP 3

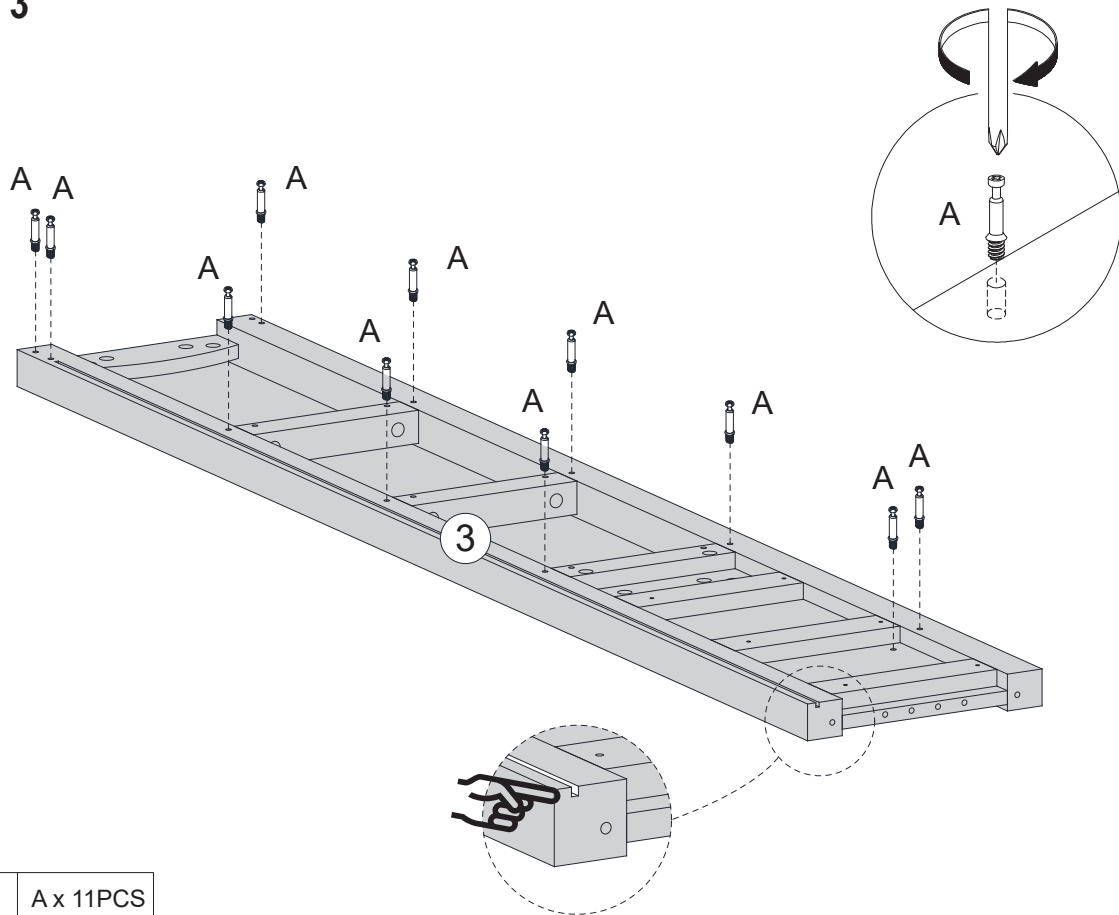

 A x 11PCS

STEP 4

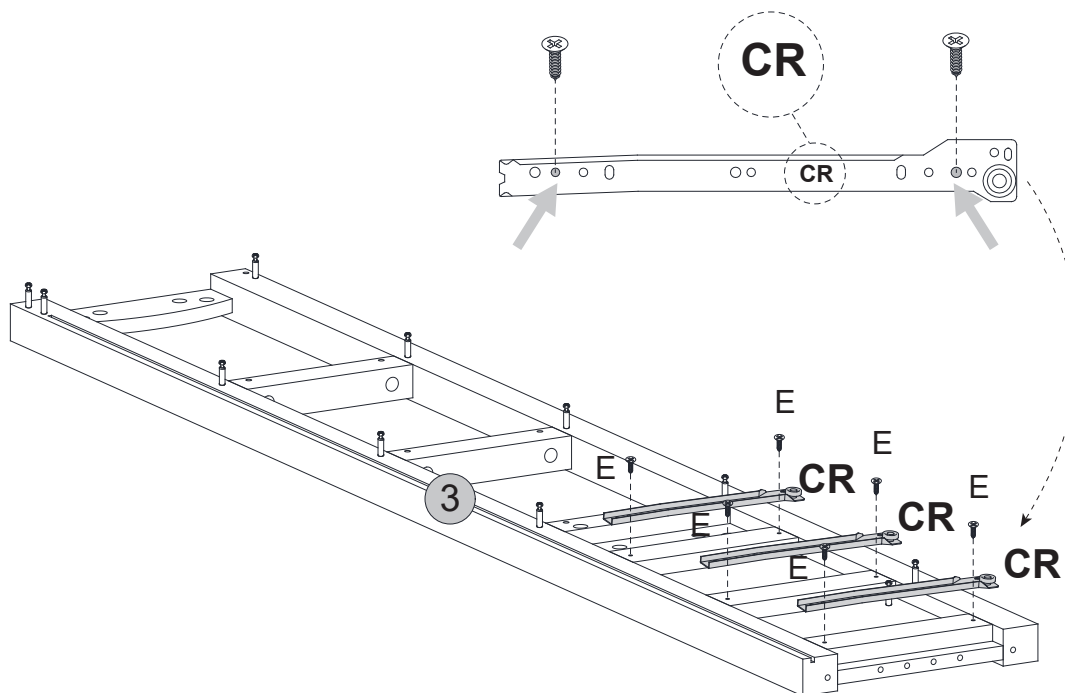





E x 6PCS



CR x 3PCS





Assembly Steps(EN)

STEP 5

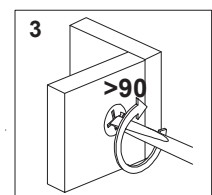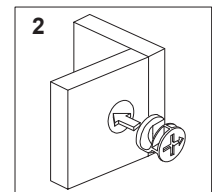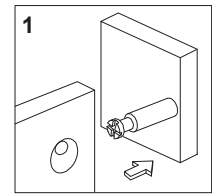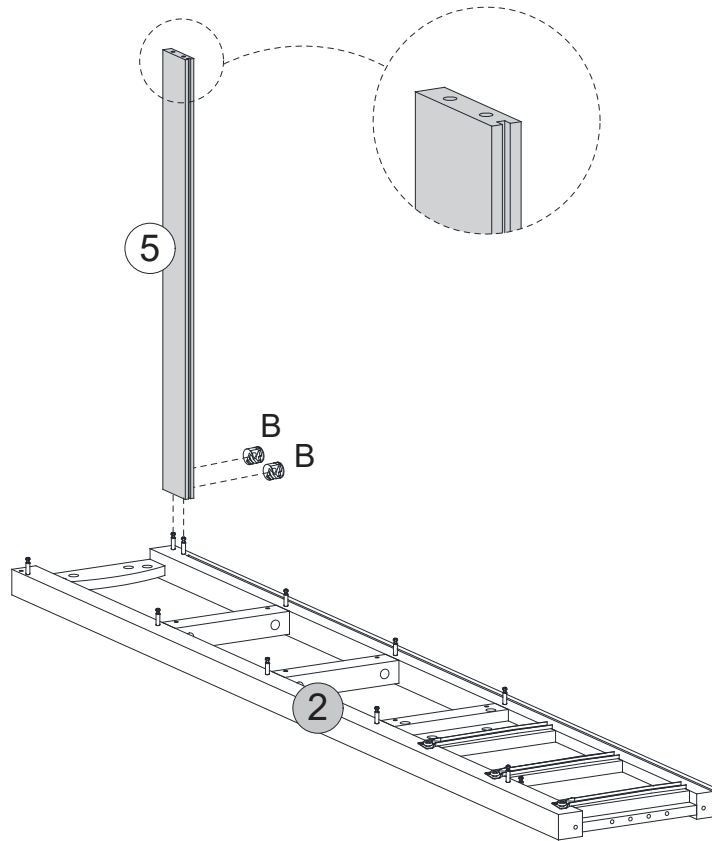

B x 2PCS

STEP 6

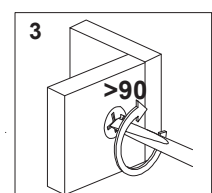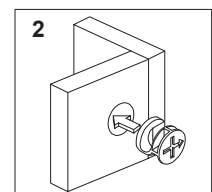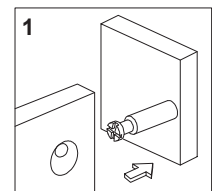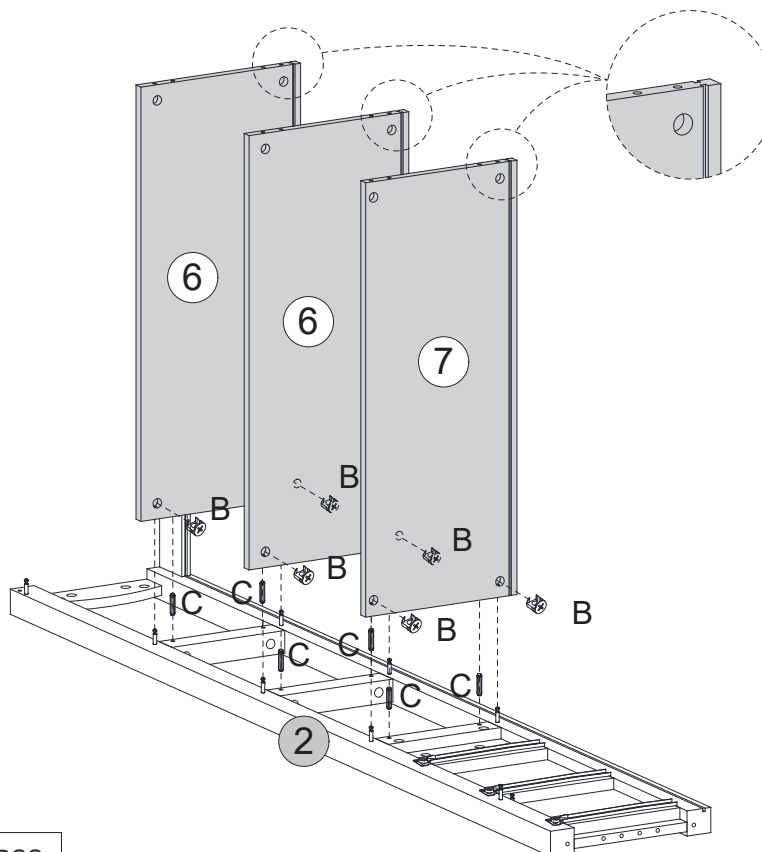


B x 6PCS







C x 6PCS

Assembly Steps(EN)

STEP 7

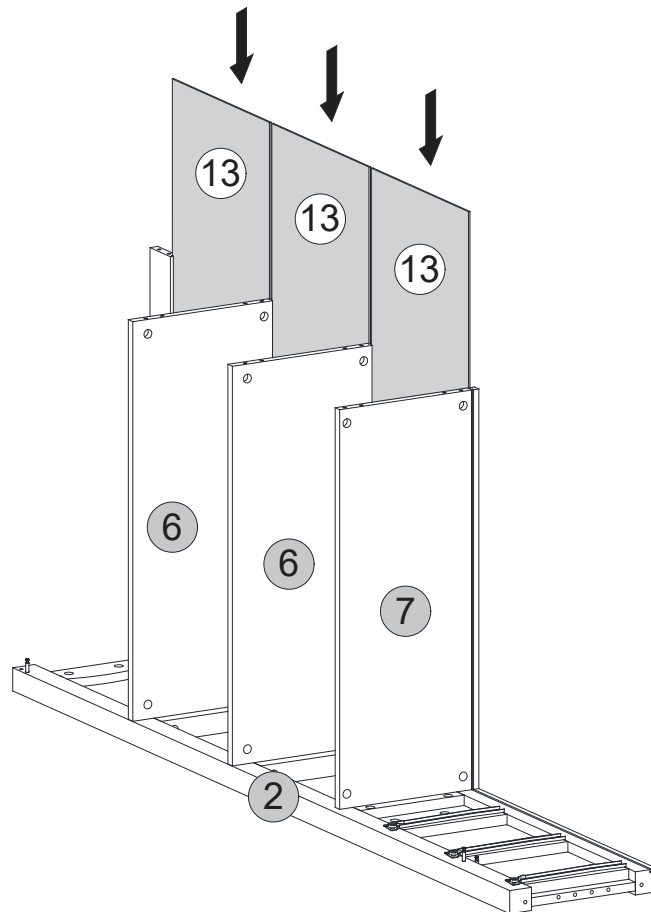

STEP 8

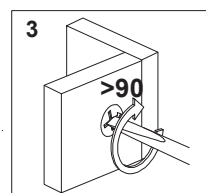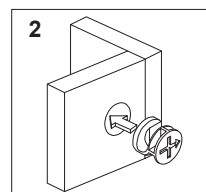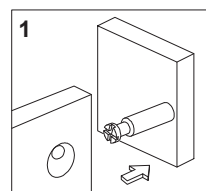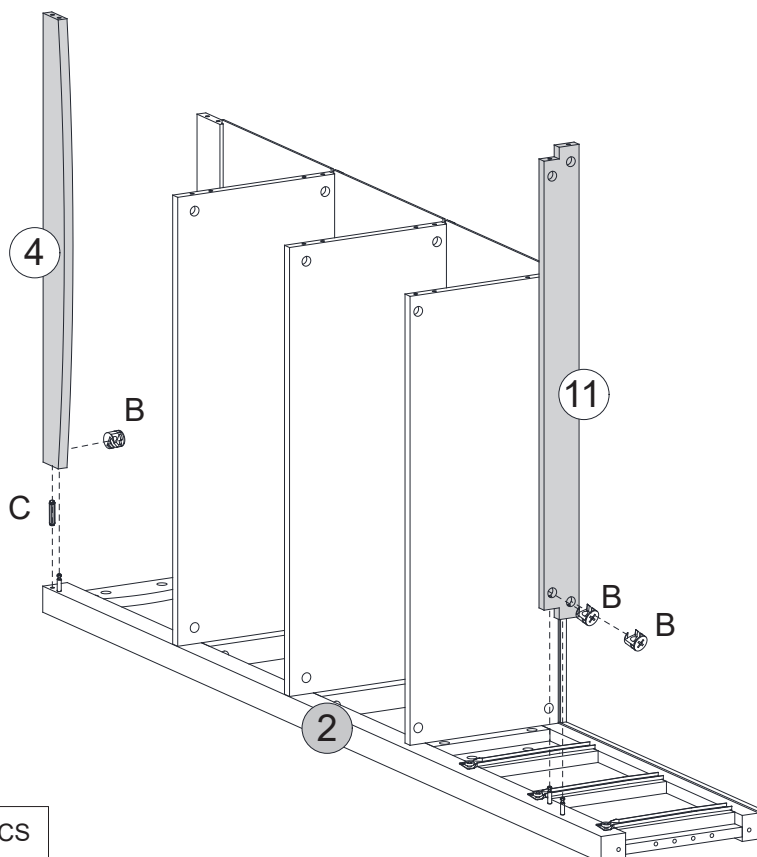





	B x 3PCS
	C x 1PC

Assembly Steps(EN)

STEP 9




Note: Two people are required to assist with installation

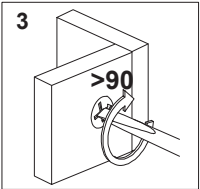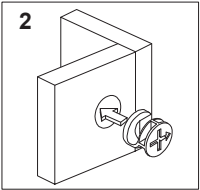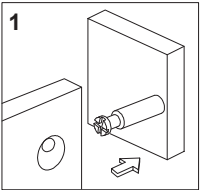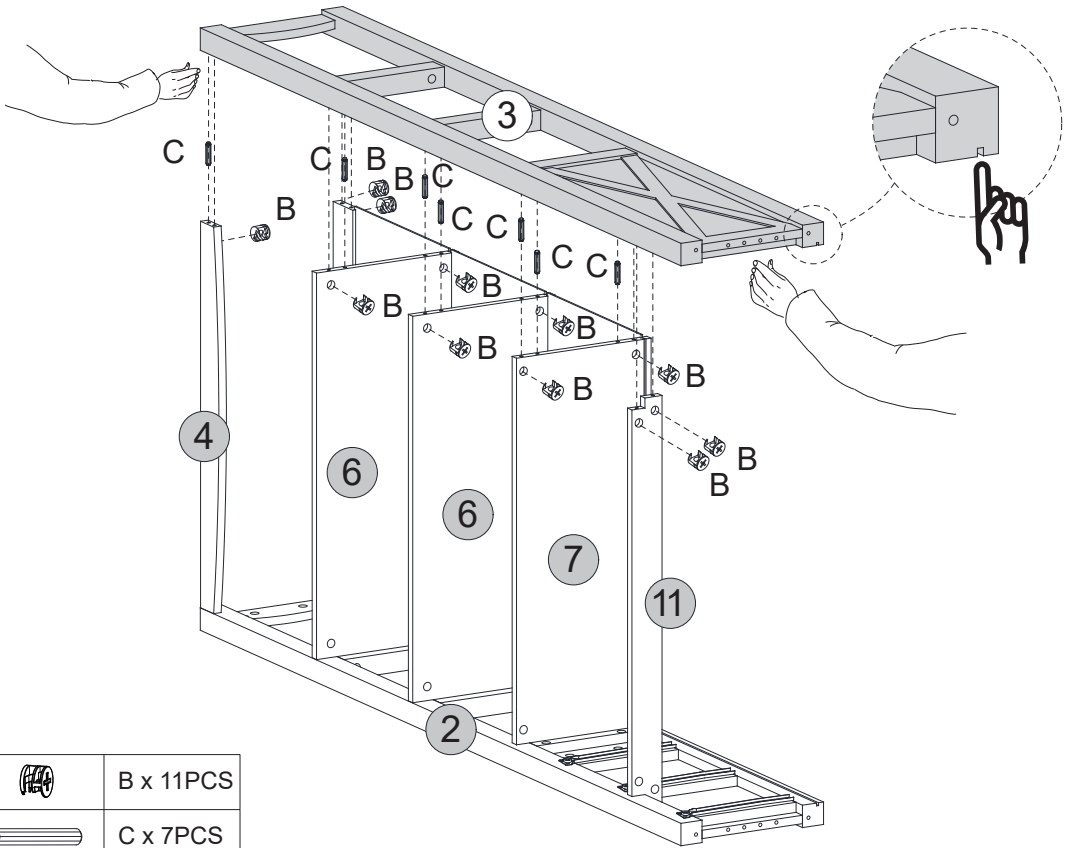



	B x 11PCS
	C x 7PCS

STEP 10

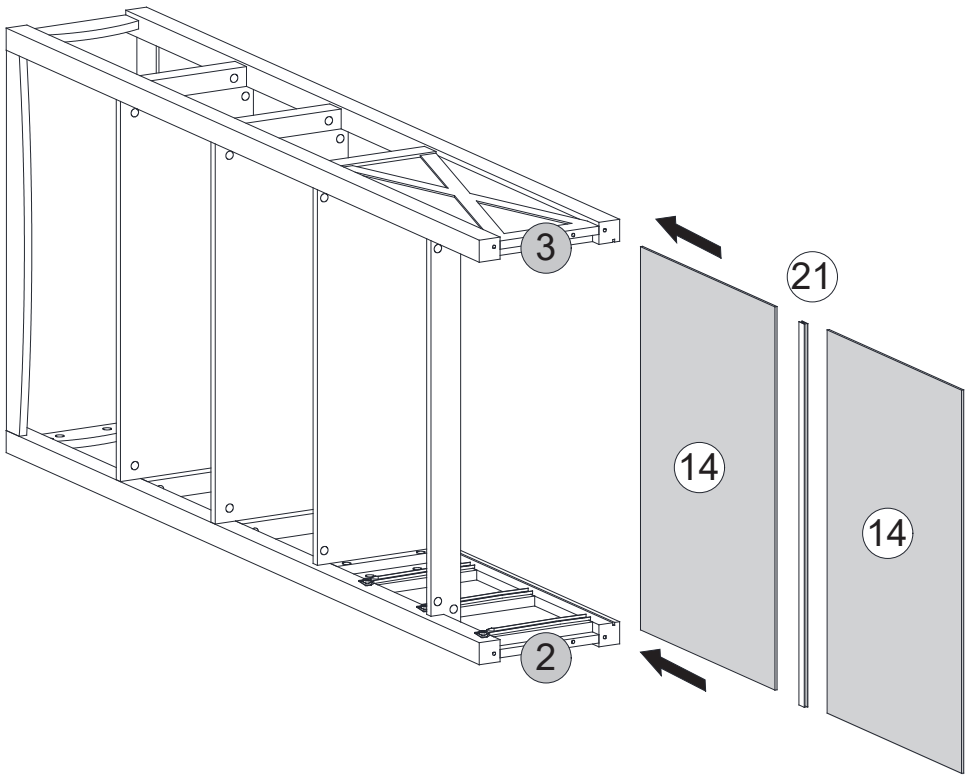


Assembly Steps(EN)

STEP 11

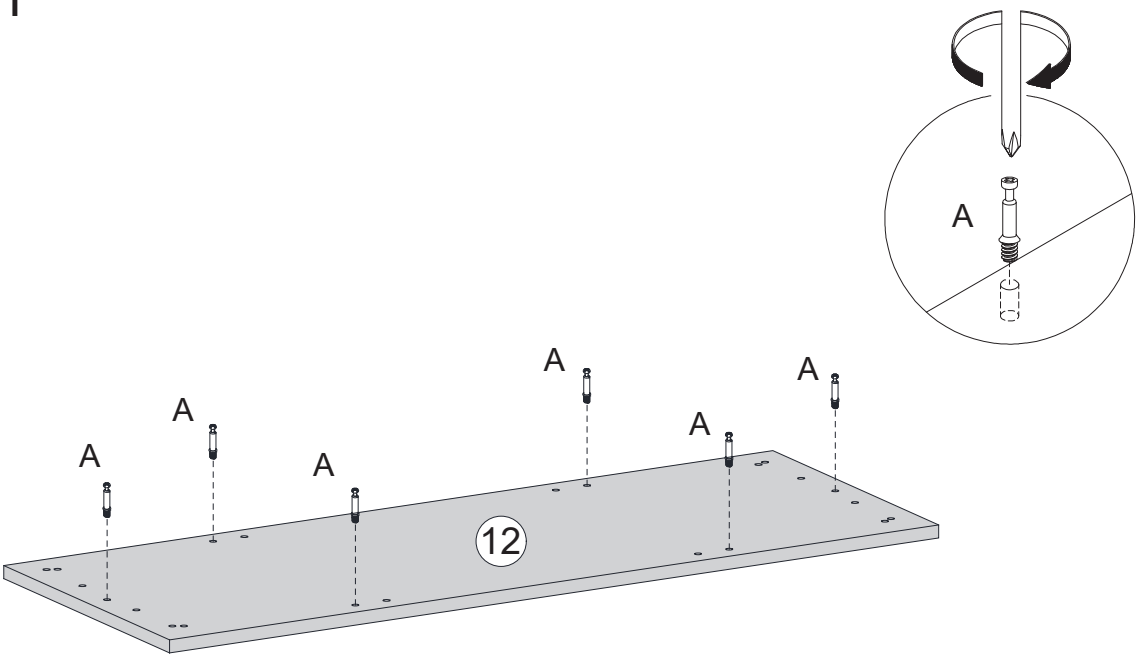

A x 6PCS

STEP 10

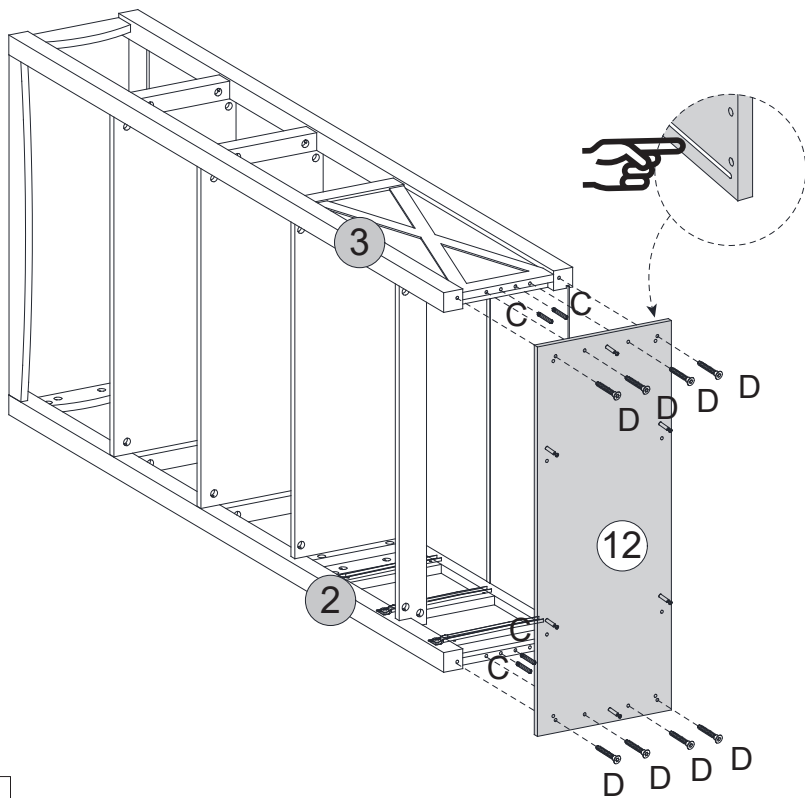


C x 4PCS



D x 8PCS





Assembly Steps(EN)

STEP 12

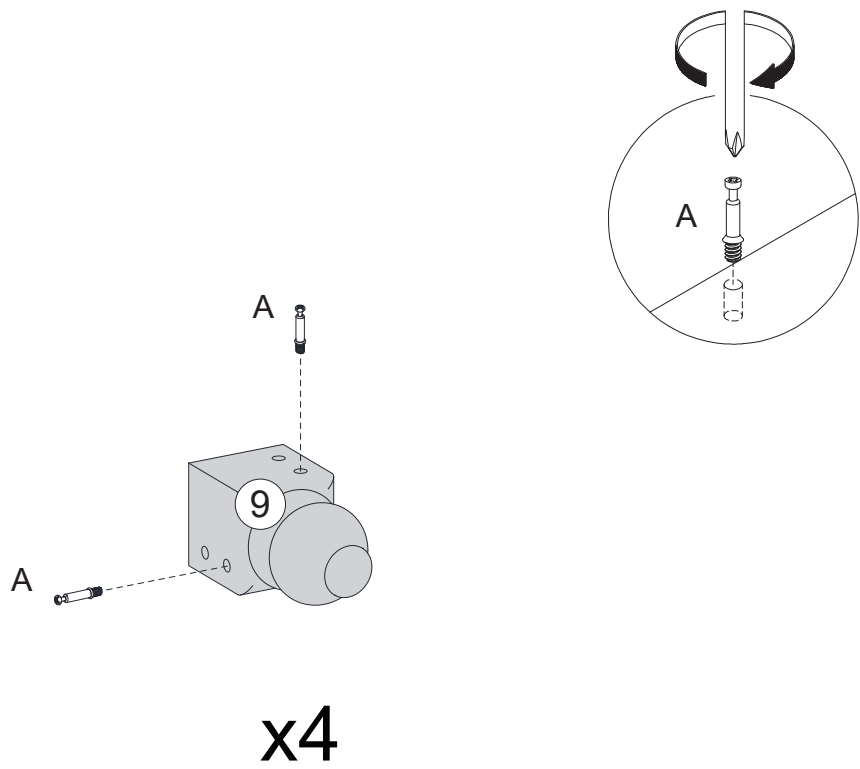

A x 8PCS

STEP 13

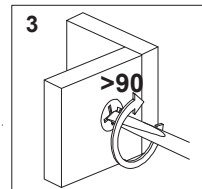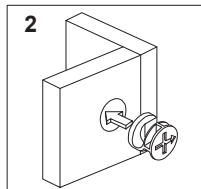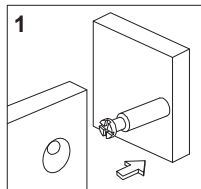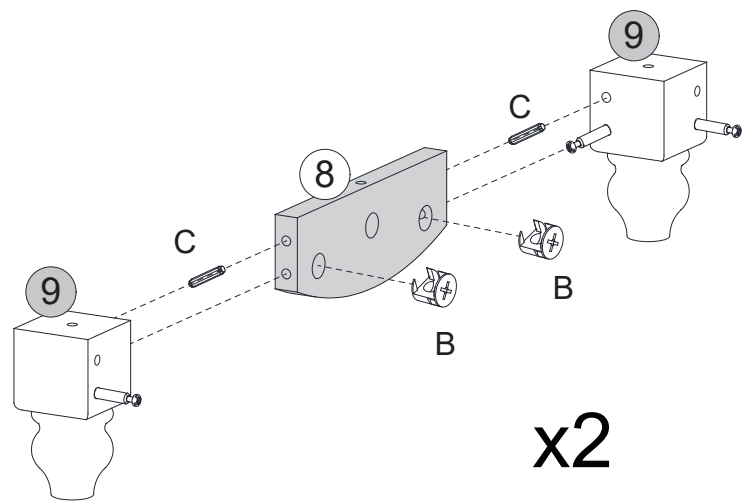





B x 4PCS



C x 4PCS





Assembly Steps(EN)

STEP 14

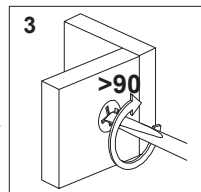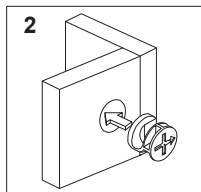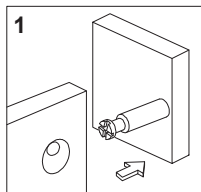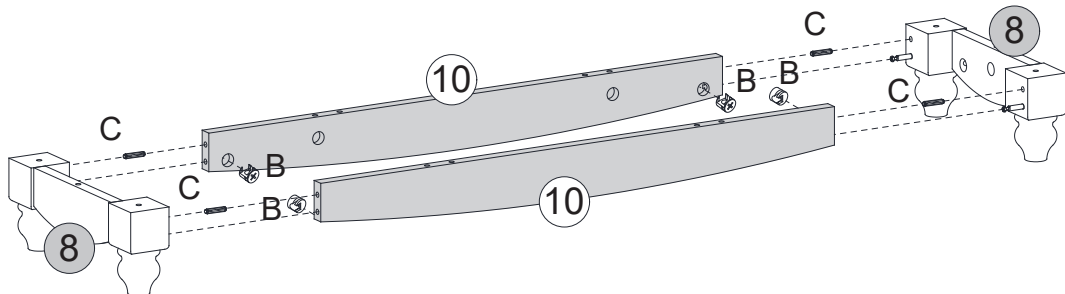

	B x 4PCS
	C x 4PCS


STEP 15

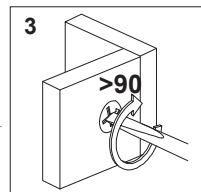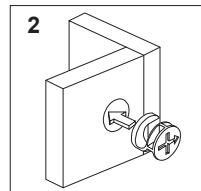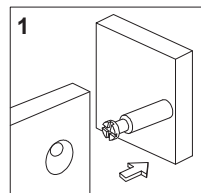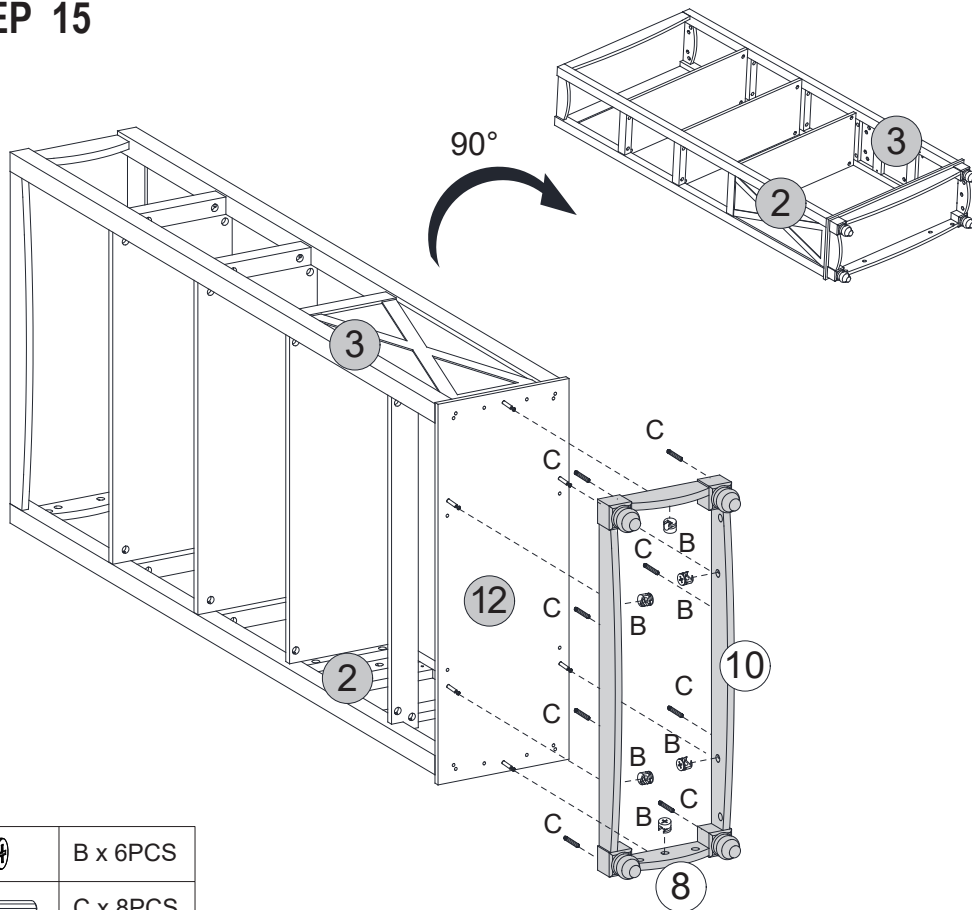

	B x 6PCS
	C x 8PCS


Assembly Steps(EN)

STEP 16

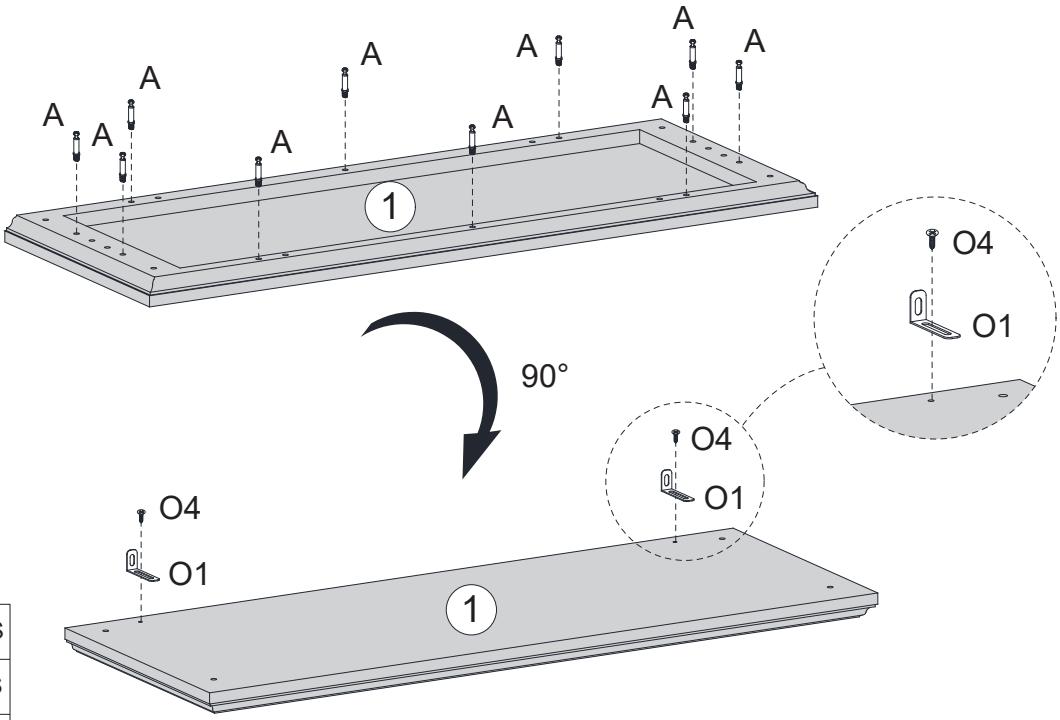

	A x 10PCS
	O1 x 2PCS
	O4 x 2PCS





STEP 17

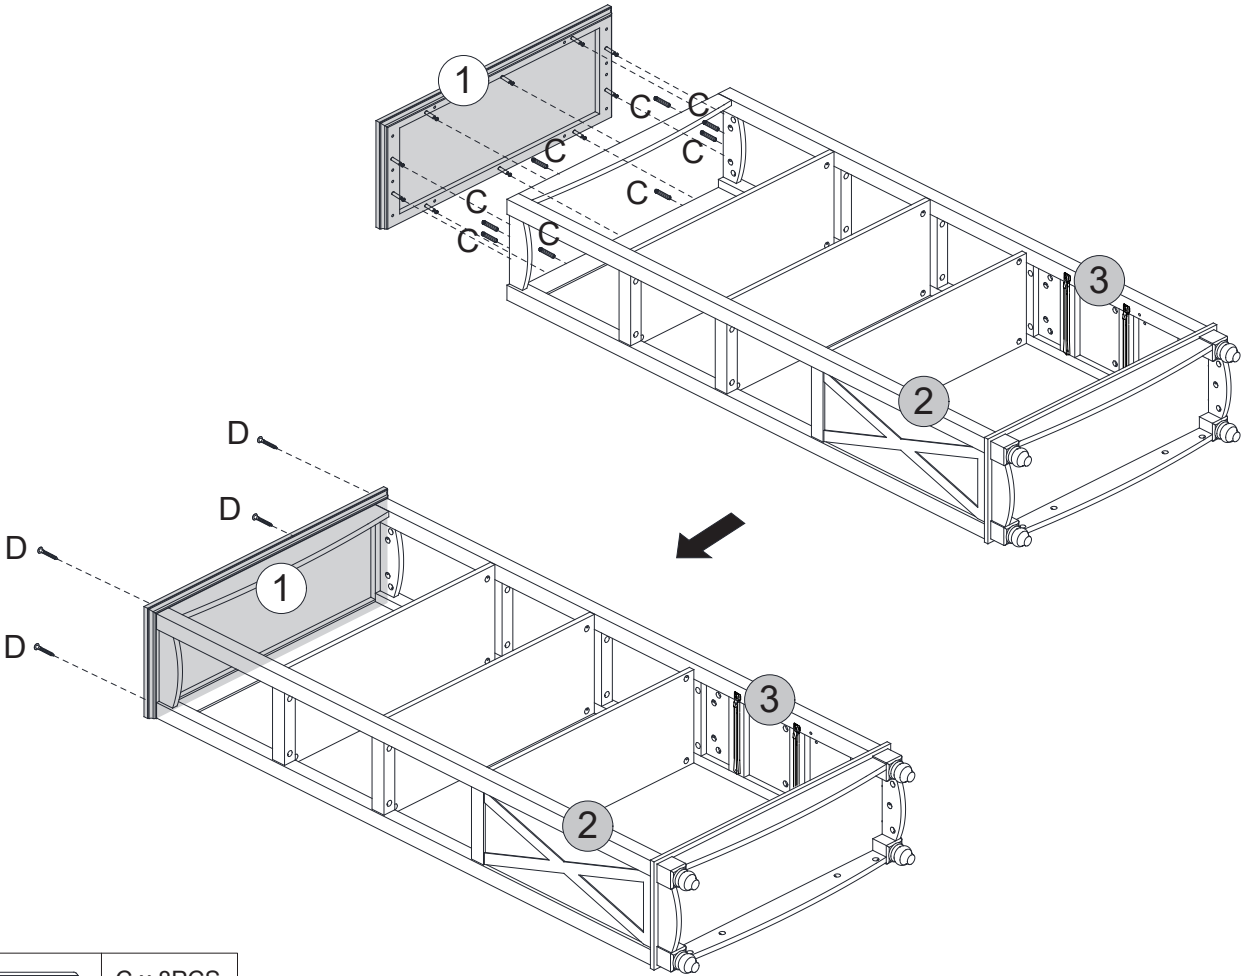

	C x 8PCS
	D x 4PCS

Assembly Steps(EN)



STEP 18

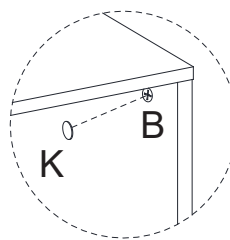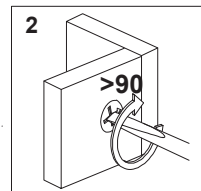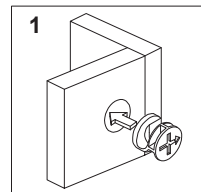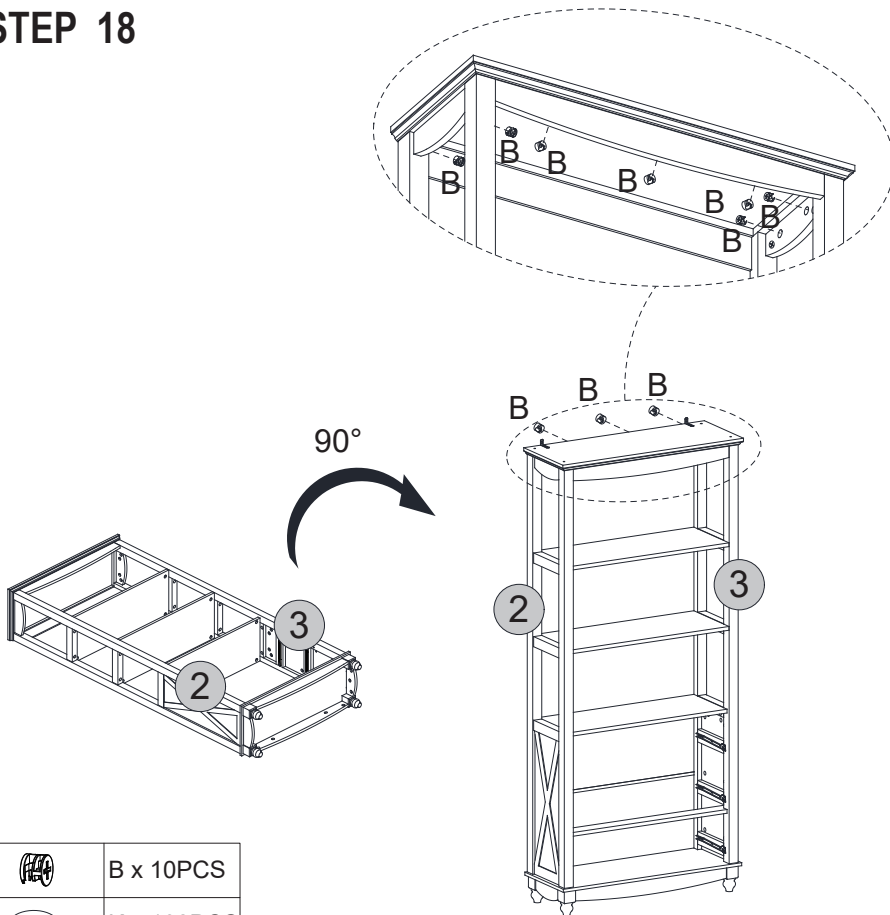

Use **K** to cover **B** as your
needs for aesthetic.

	B x 10PCS
	K x 102PCS

STEP 19


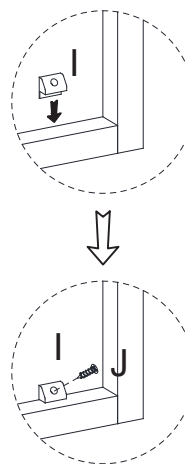
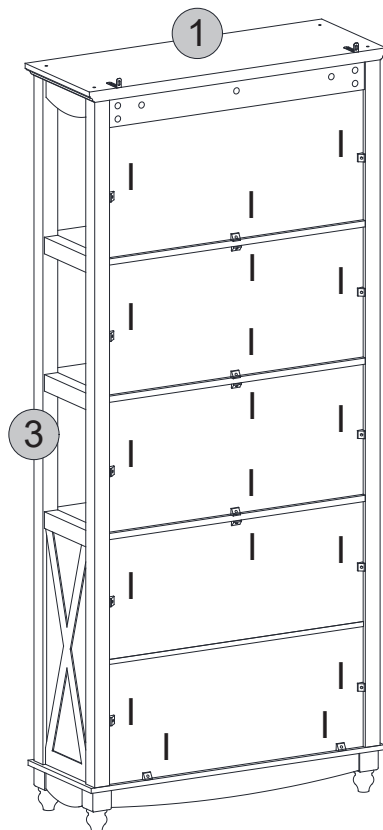


Use **I** and **J** to reinforce the boards.

	I x 18PCS
	J x 18PCS


Assembly Steps(EN)

STEP 20

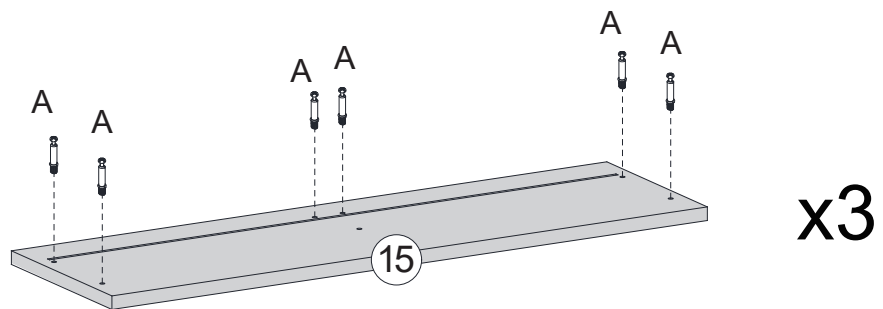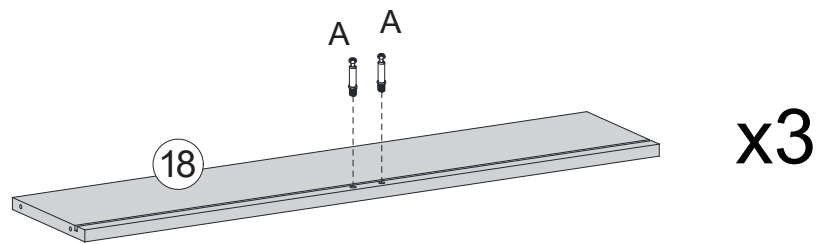

A x 24PCS


STEP 21

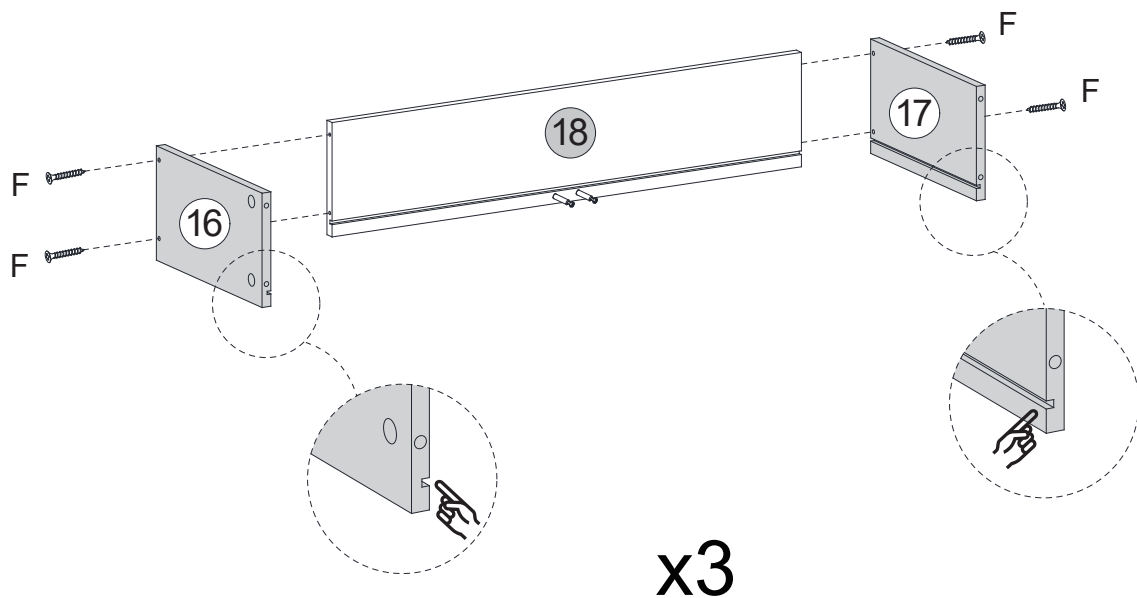




F x 12PCS

Assembly Steps(EN)


STEP 22

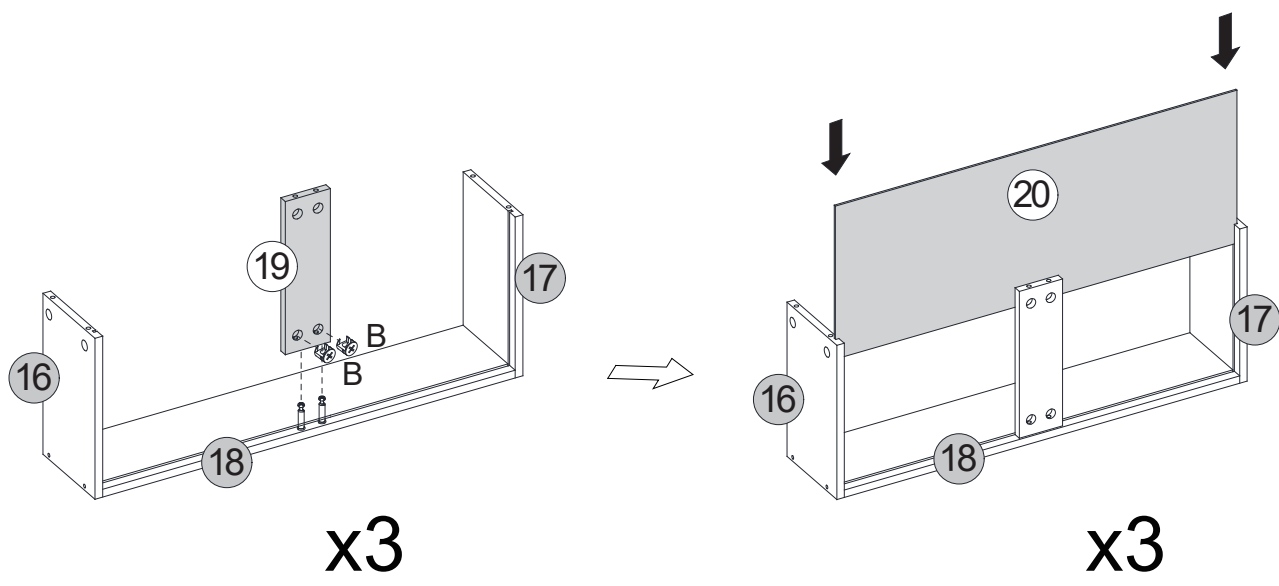

B x 6PCS

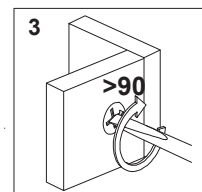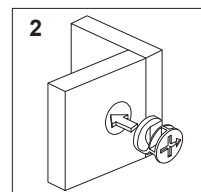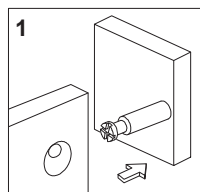

STEP 23

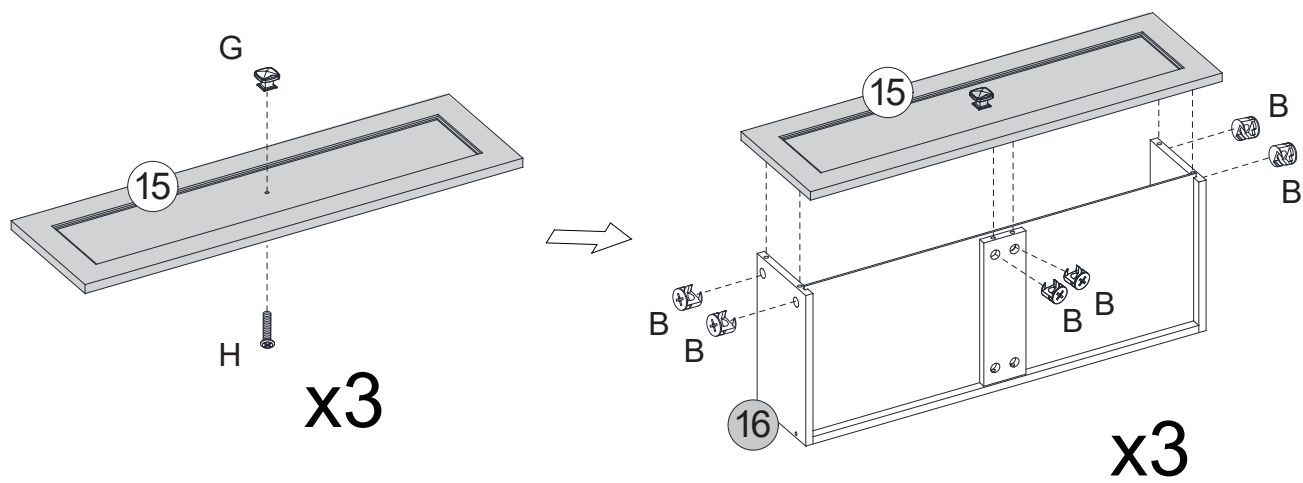




B x 18PCS



G x 3PCS





H x 3PCS

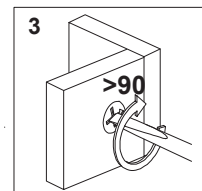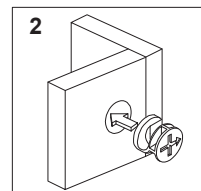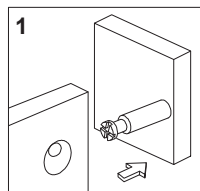

Assembly Steps(EN)

STEP 24

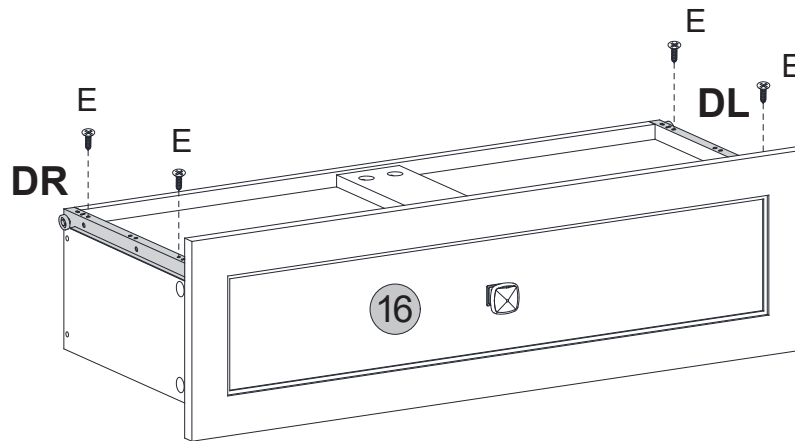
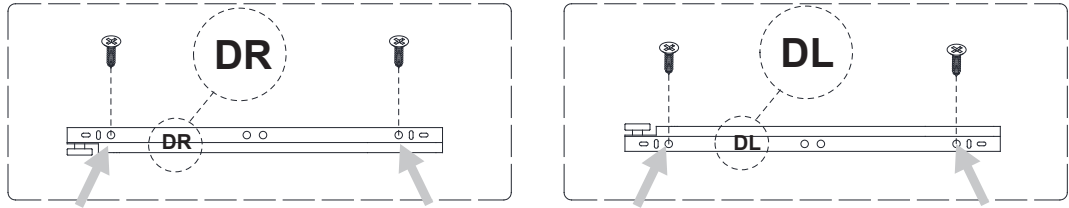


x3

	E x 12PCS
	DL x 3PCS
	DR x 3PCS



STEP 25

About the drawer:
Push the 2 pulleys tightly and slightly down into the drawer.
If it is not smooth, please change the angle and try again.

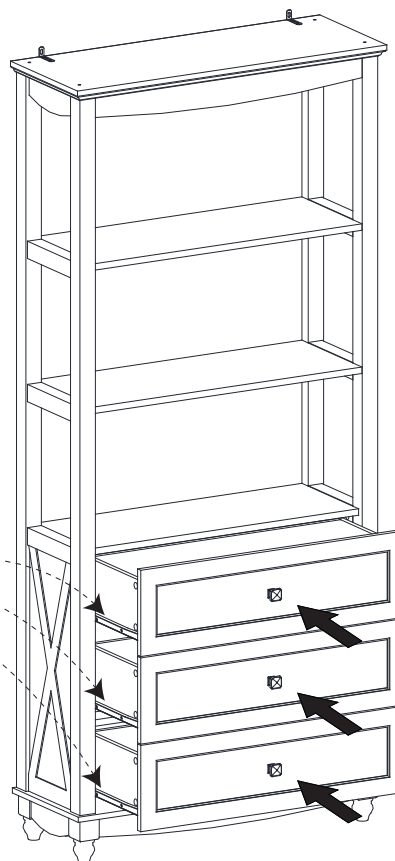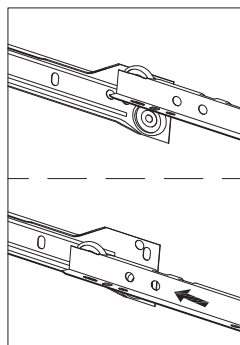


Assembly Steps(EN)


STEP 26

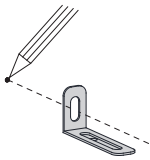


Step 1: mark the hole locations on the wall.

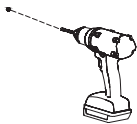

Step 2: drilling hole.



Step 3: drive **O2** into the wall.

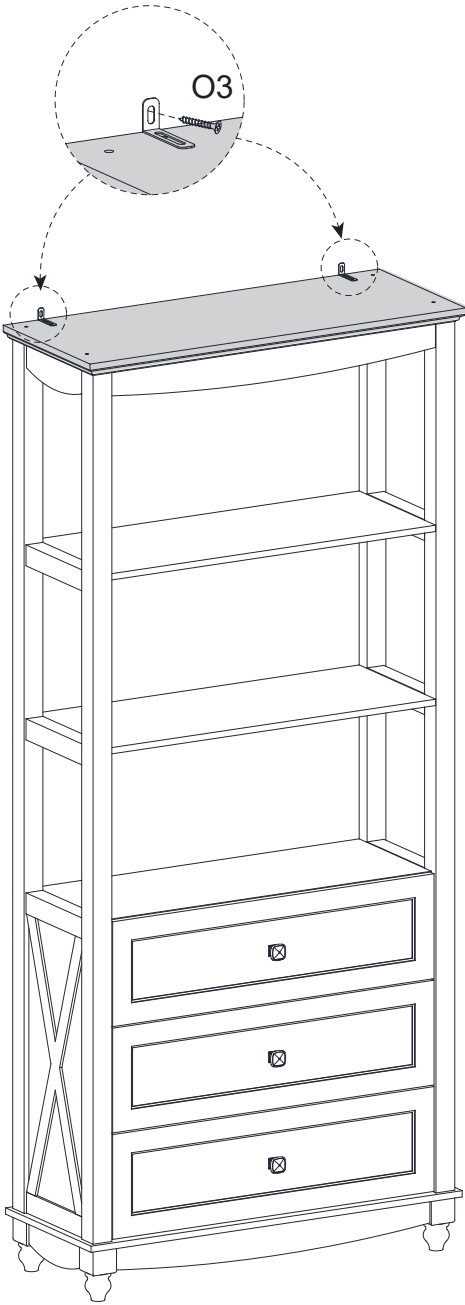

Attention: For safety and stability, we suggest you secure the anti-tip accessories to the wall to prevent tipping, injury, and property damage.

	O2 x 2PCS
	O3 x 2PCS

Made in China

