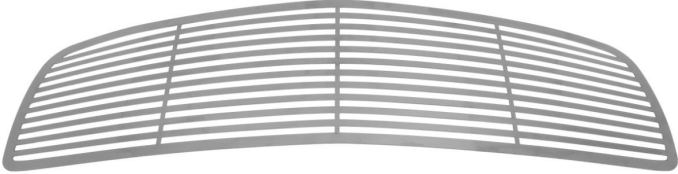
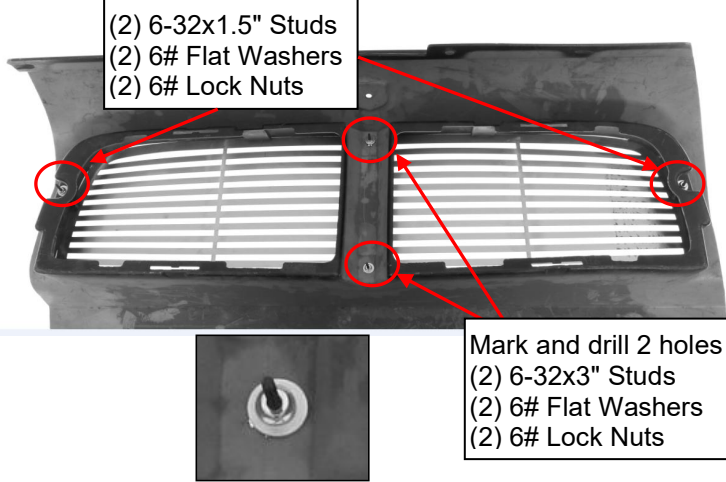
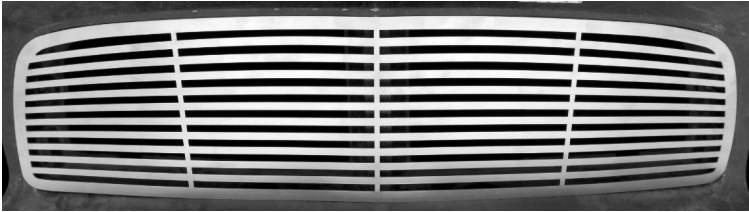


Part#	D45320A/H	Application	For 2005-2010 Dodge Charger 1 PC Cover All
-------	-----------	-------------	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Grille	1	Stainless steel	4	Studs	2	6-32×1.5 "
	2	Studs	2	6-32×3 "	5	Lock Nuts	4	6#
	3	Plastic Clip	6		6	Flat Washers	4	6#

Install Notes: Overlay ☐ Replacement ☒ Drill ☒ Cut ☐

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	
3	Thread a stud in each nut welded to the grille. Hold the grille against the OEM grille shell, center and mark holes for drilling. Remove billet grille and drill holes according to your mark. Secure grille using the flat washers and lock nuts from the back side of the OEM grille shell.	 <p>(2) 6-32x1.5" Studs (2) 6# Flat Washers (2) 6# Lock Nuts</p> <p>Mark and drill 2 holes (2) 6-32x3" Studs (2) 6# Flat Washers (2) 6# Lock Nuts</p>
4	Make sure the grille is centered and tighten the fasteners, but do not over-tighten.	
5	Reinstall the black plastic cover which was removed in step 2.	
6	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.
Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.
We are not responsible for any damage caused by the installation. Thank you for choosing our product!