


## Installation Instructions for Trane® Perfect Fit® Replacement Filter

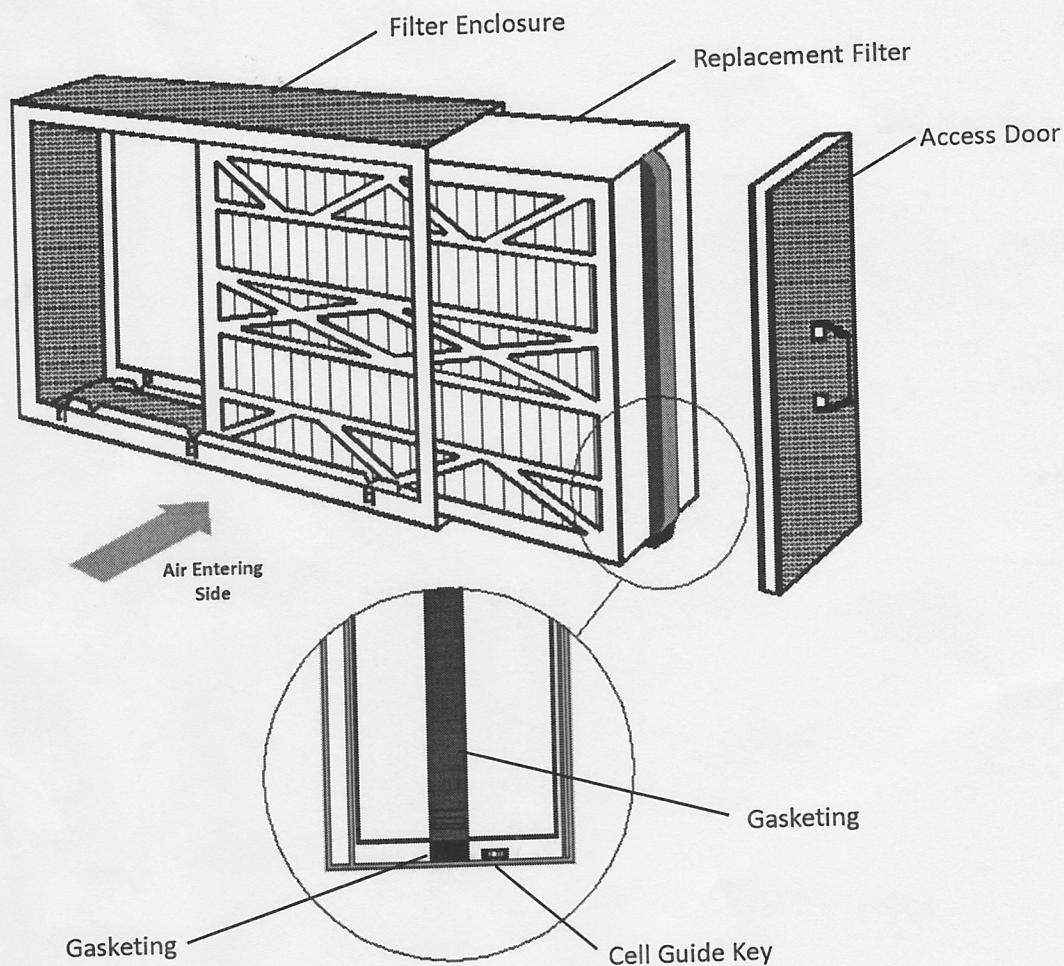

### FILTER INSTALLATION INSTRUCTIONS:

- A. Turn off blower.
- B. Remove access door to air cleaner cabinet.
- C. Slide out old filter.
- D. Place the new filter in the frame with the air flow arrow pointing toward the air handling unit.
  - a. Gaskets on filter should be on the side with the Cell Guide Key and at the filter access door.
- E. Replace filter access door and turn latches to close.

20 April 2016