

# MAVERICK R BRP GO SUB/RCA OUTPUT HARNESSSES

PART #: UTVS-GO-SUB-OUT  
UTVS-GO-RCA-OUT

## PARTS LIST:

BRP GO Sub Harness	x1
BRP GO RCA Harness	x1

## TIPS:

If you lose audio, for example when doing software updates, revert back to steps 1 & 2.

If ever your Bluetooth won't connect, "Forget Device" from phone, then try resetting headunit and repeat steps 1 & 2

## ATTENTION:

MAKE SURE YOUR SOFTWARE IS AT LEAST VERSION 3.1.1 OR NEWER.

### TO UPDATE:

1. Connect the vehicle to Wifi
2. Go to Settings > Preferences > General Settings > Software Update

## RECOMMENDED PRODUCTS:

**ROCKER SWITCH  
BASS KNOB**

PART #: UTVS-RKR-BASS-KNOB

\*SOLD SEPARATELY



Scan to watch  
the Installation  
Video!



**UTVstereo**  
PERFORMANCE AUDIO


## THESE SETTINGS ARE REQUIRED TO ACTIVATE AUDIO OUTPUT




Start by going to Settings > Preferences




On the Audio tab, tap "Audio Output"

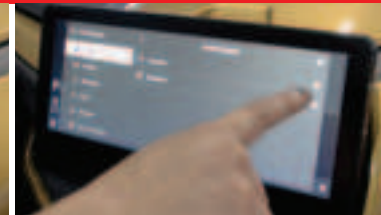


Change the Audio Output to "Speakers"  
\*DEFAULT IS SET TO HEADSET

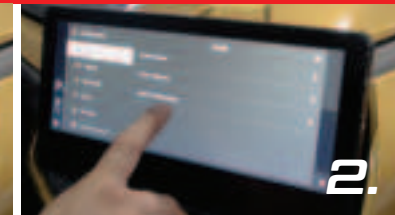


Tap "Audio Configuration"

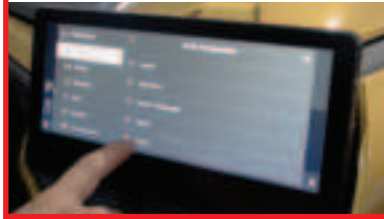


Select "Level 5"  
\*YOU WILL BE PROMPTED TO RESTART THE VEHICLE

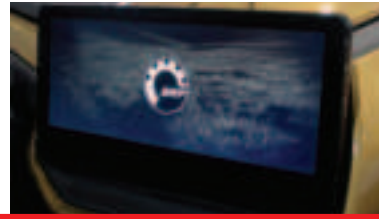

Restart the Ignition

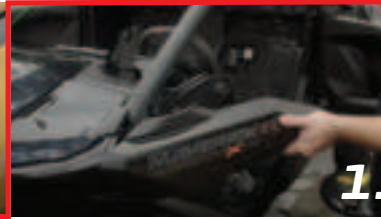

Open the side panel as shown

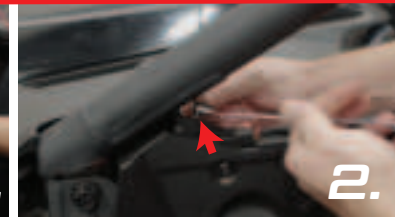

Remove the T-25 screw & remove the A-pillar cover



Remove the 10mm bolt & T-30 screw



Remove the hood piece



Remove the dash panel



Remove both 10mm bolts



Remove the Panel




Locate the OEM plugs



Remove the OEM caps on both plugs




Plug in the white harness plug into the LARGER OEM plug

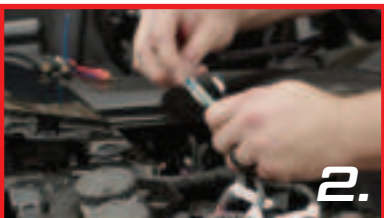

Connect the remote (blue) wire



Plug in the white harness plug into the SMALLER OEM plug

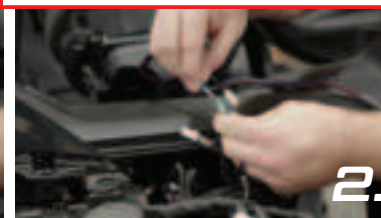

Connect the remote (blue) wire

## RCA OUTPUT

**RUN RCA'S & REMOTE  
WIRE TO AMP(S)**