
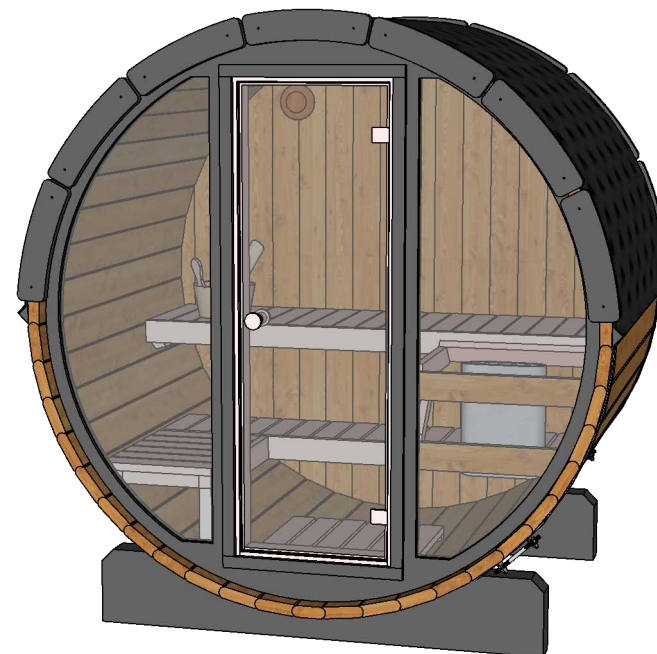


Sauna 160, Ø200 (EDDA &TORA)


Please read the whole manual before
You start.

All dimensions are given in
millimeters.

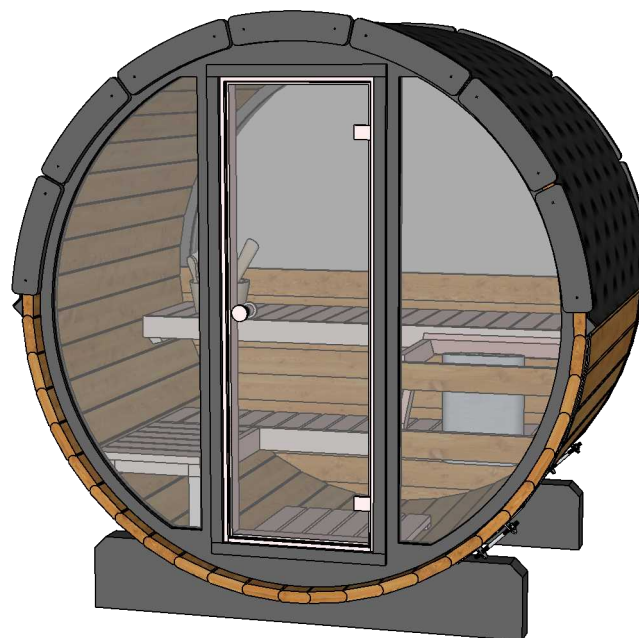


Sauna 160, Ø200

Details list Nr. 1


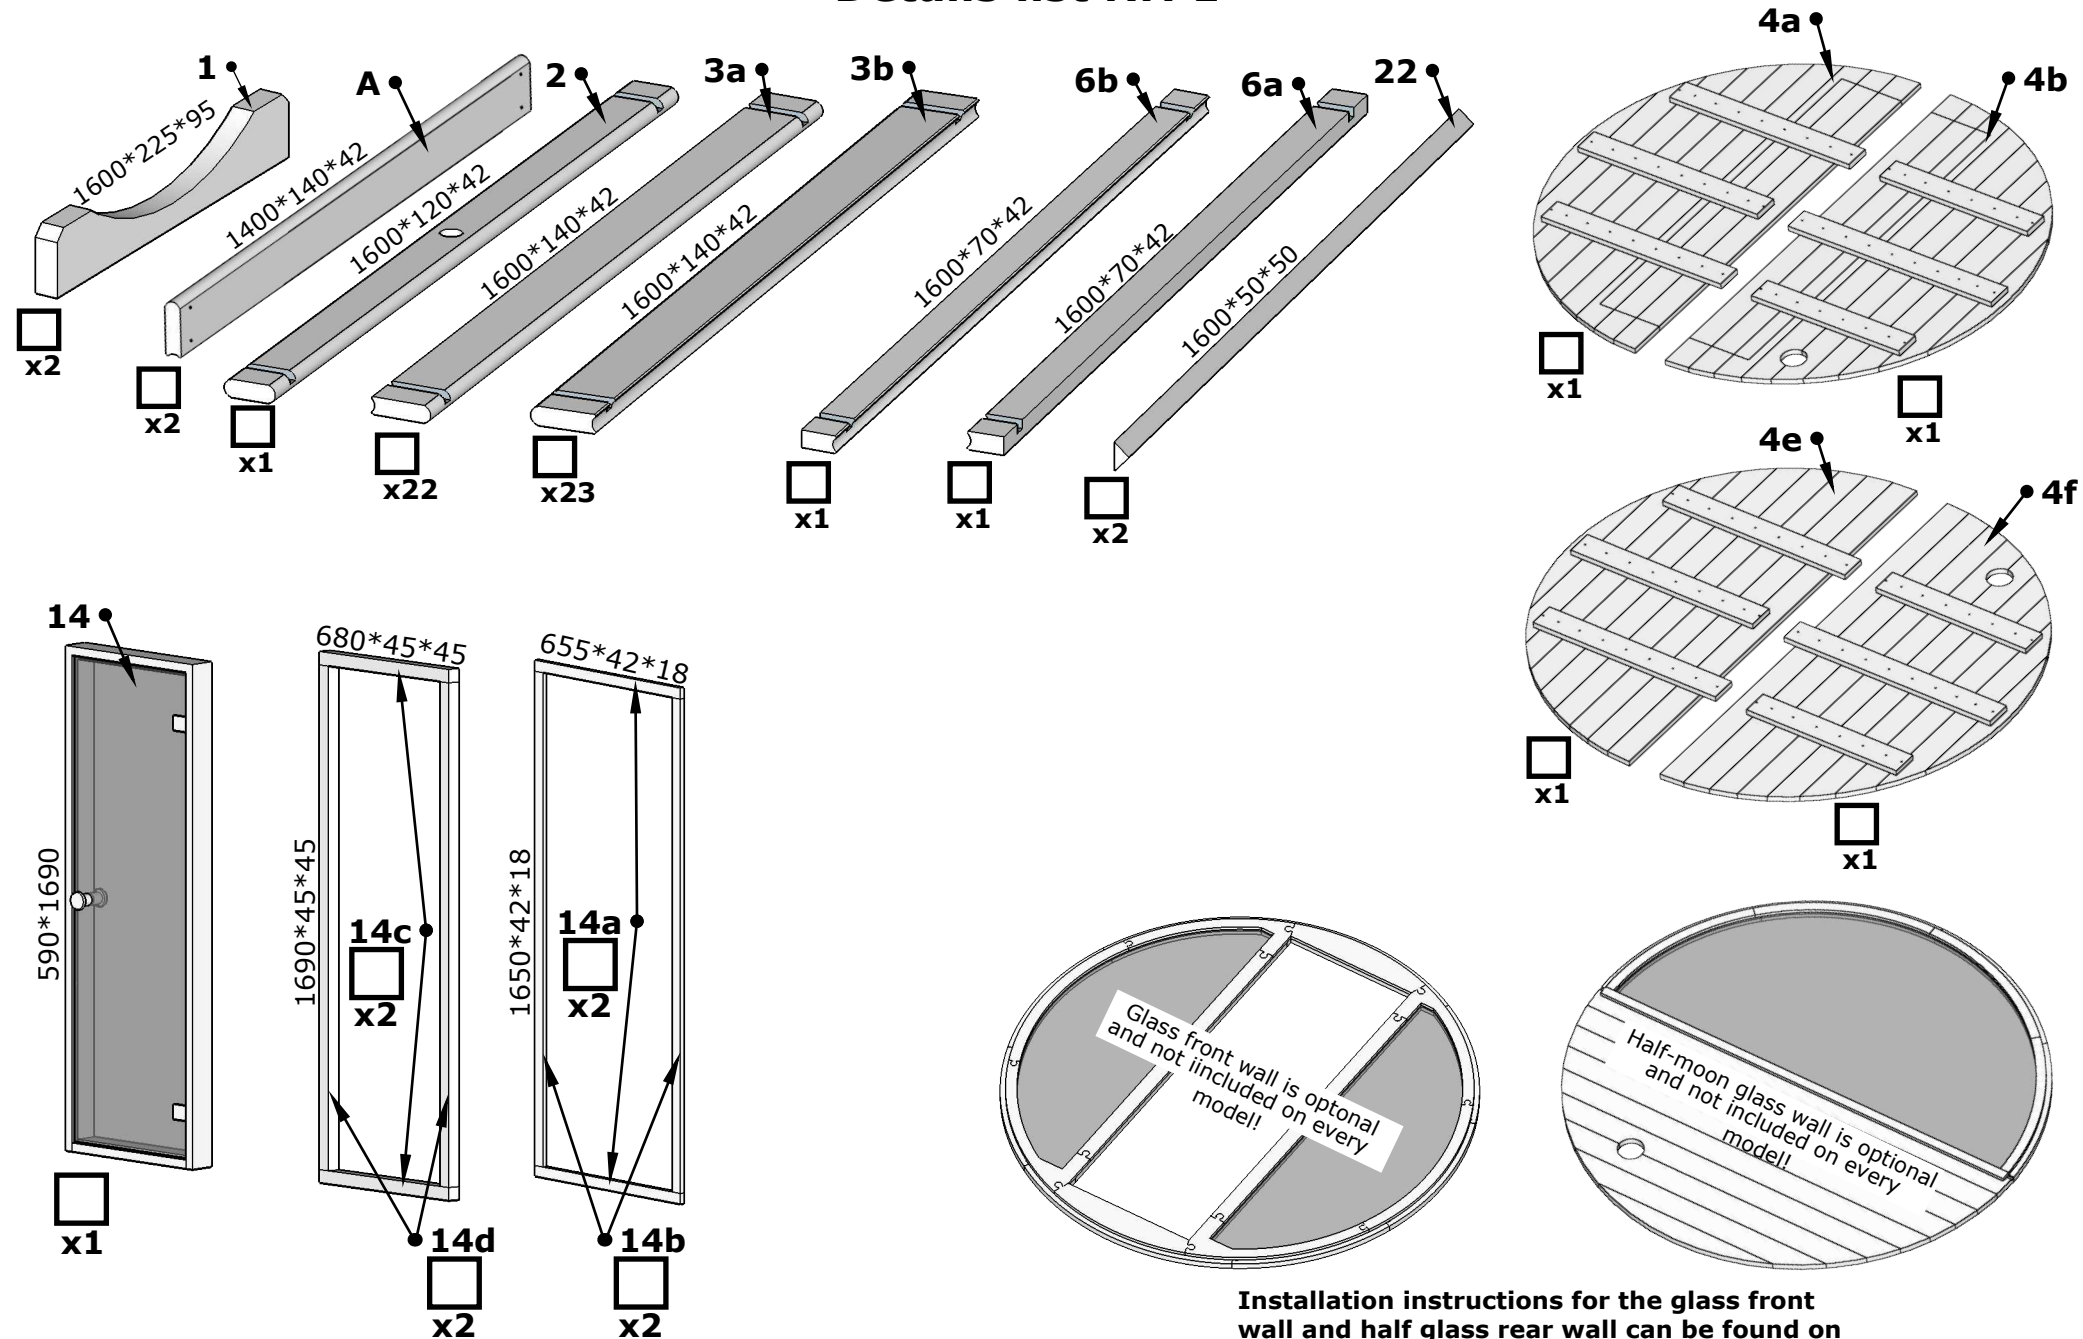


Sauna 160, Ø200

Details lis Nr. 2

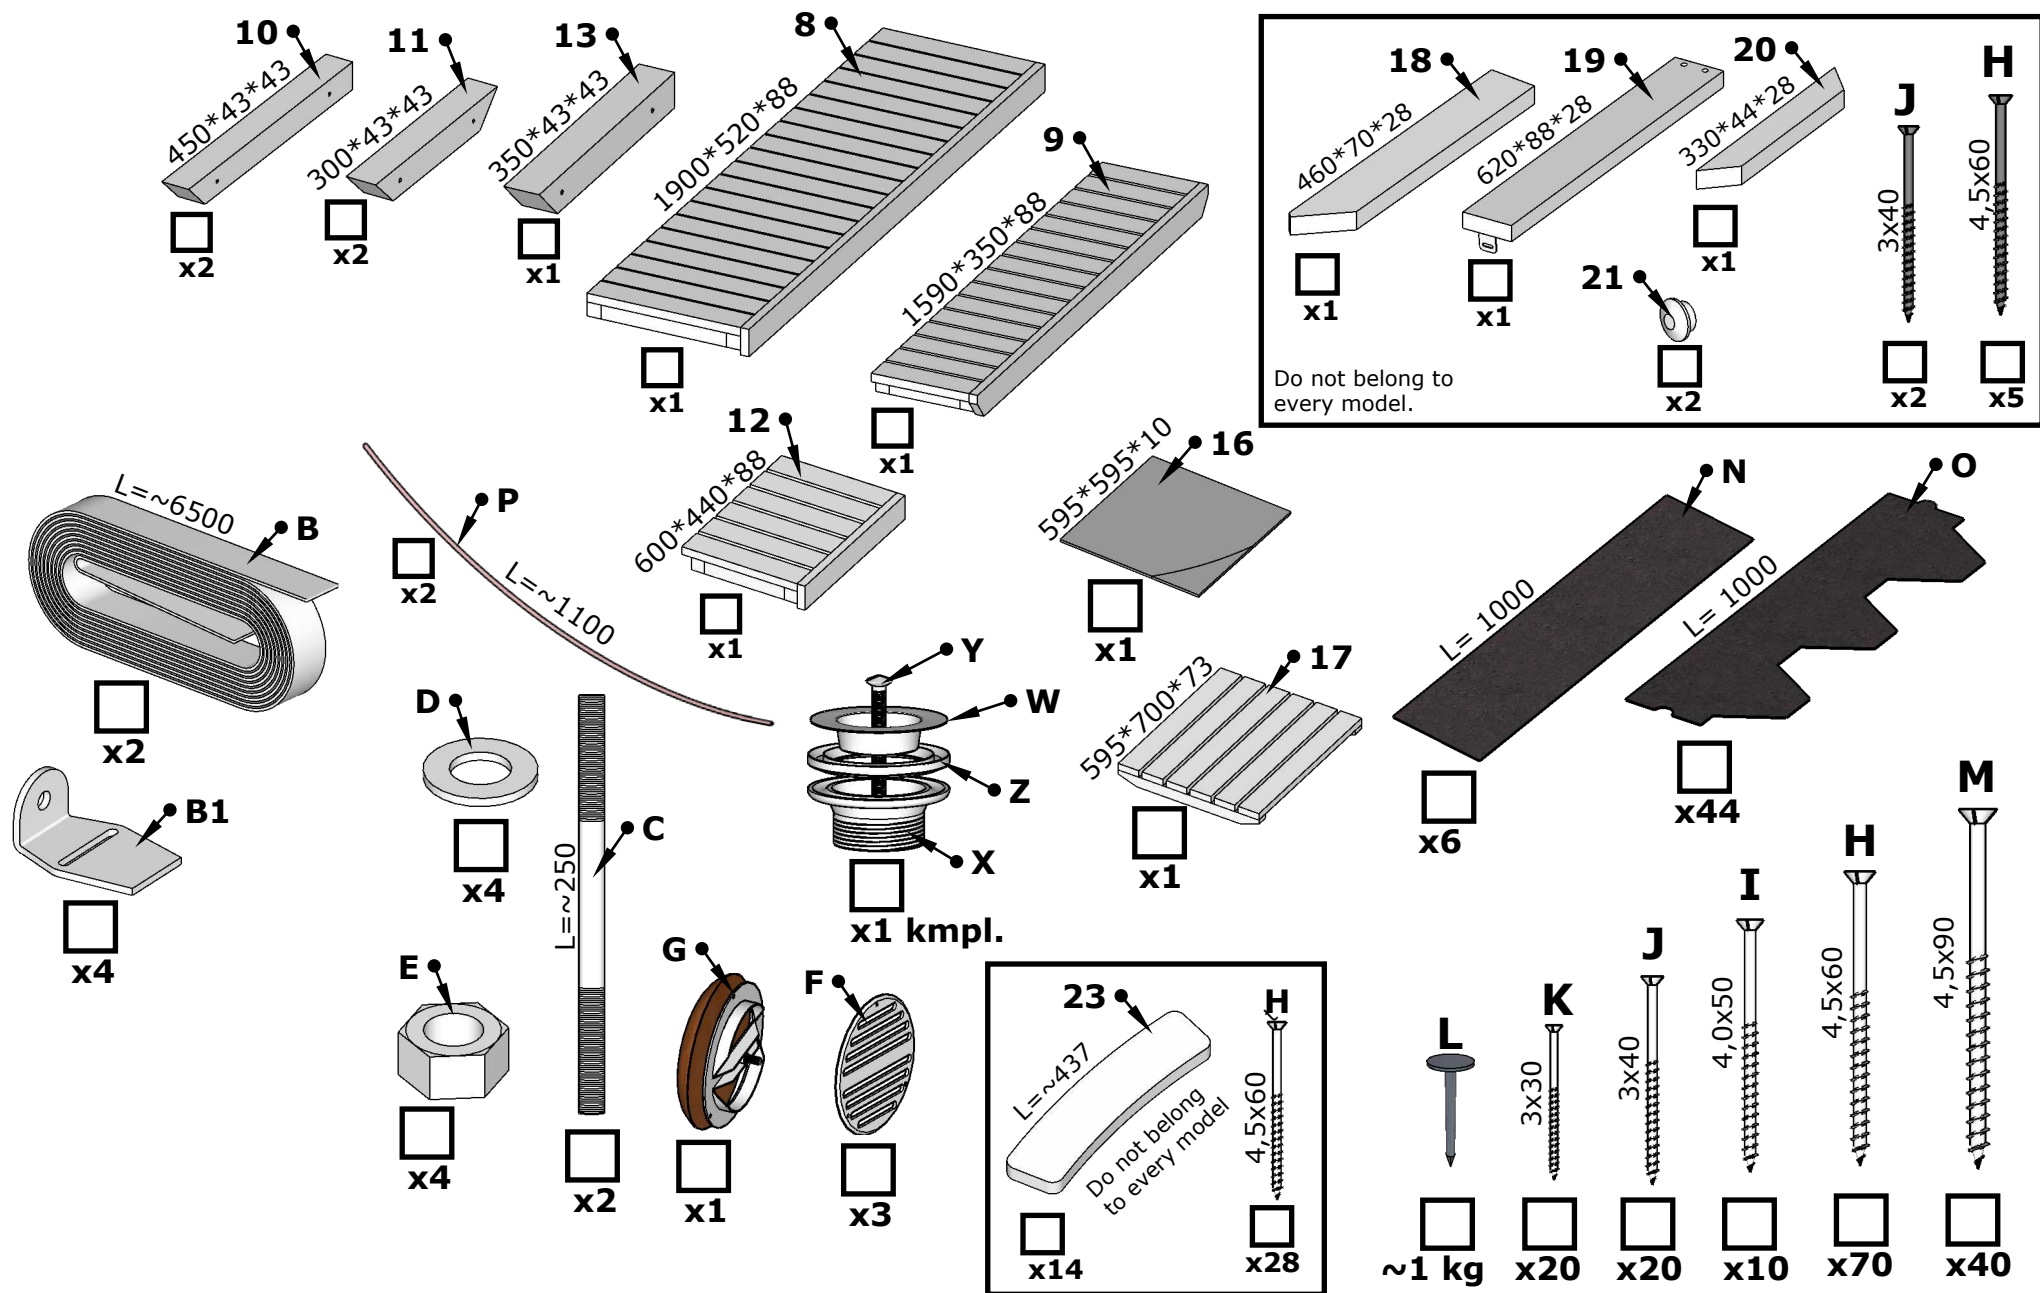

Sauna 160, Ø200

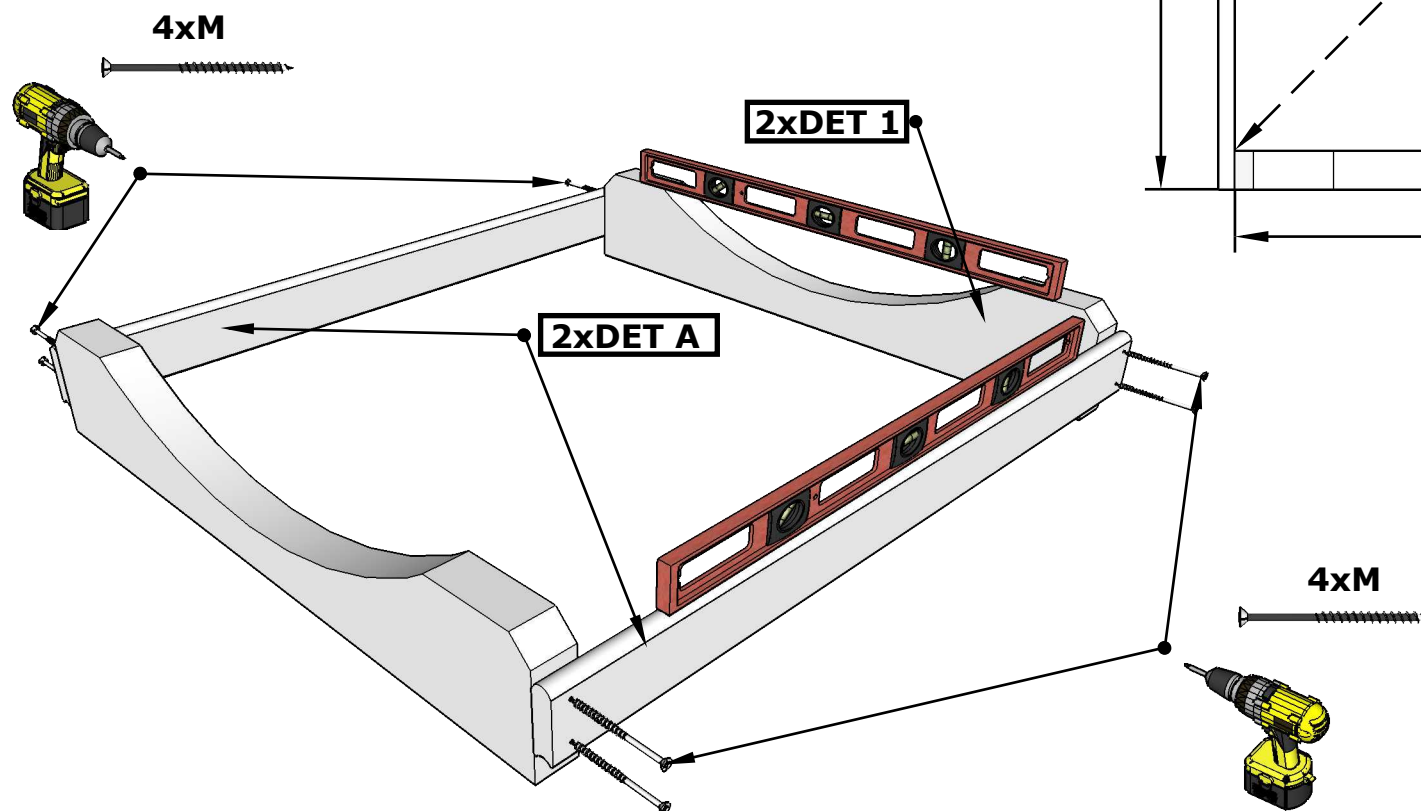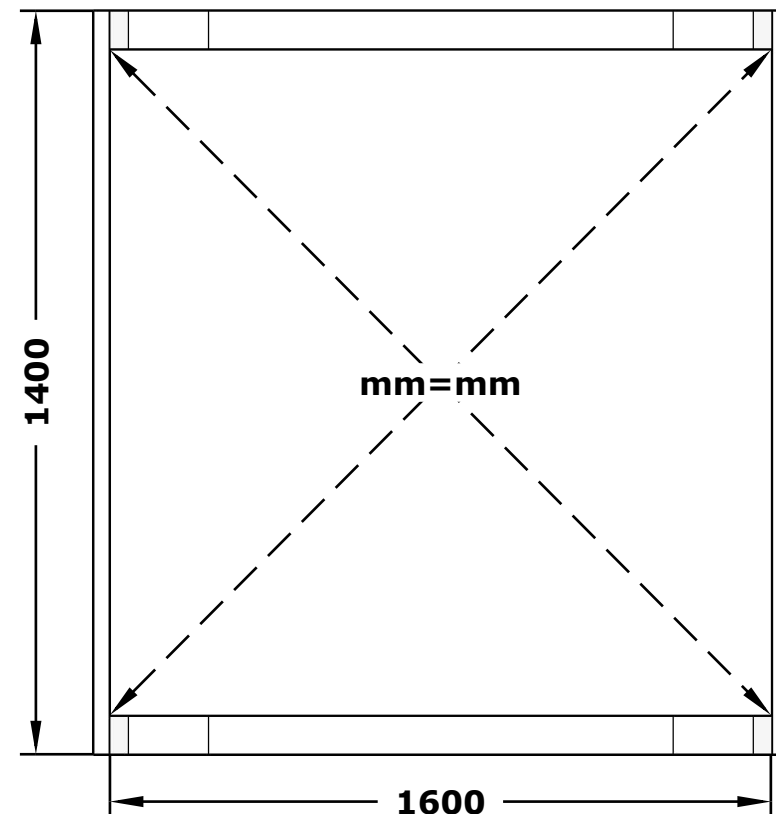


1.

(POL 004)




Sauna 160, Ø200



4 x DET 3a
4 x DET 3b


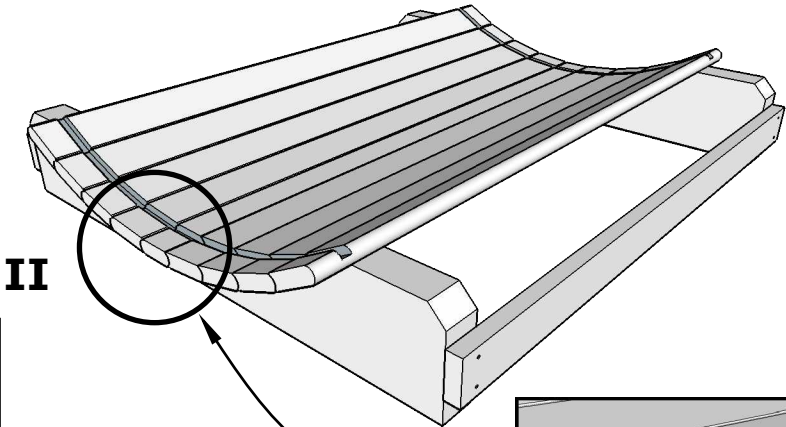


II

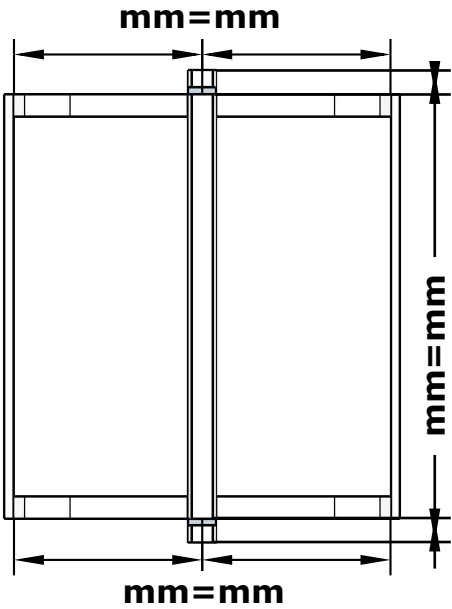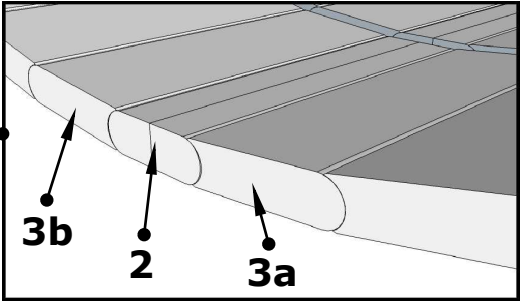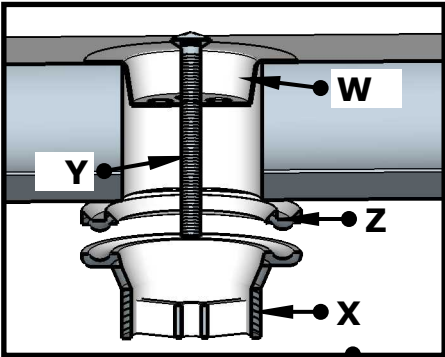


I




1x DET 2

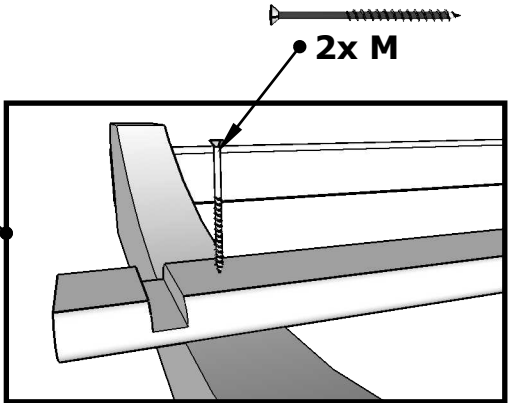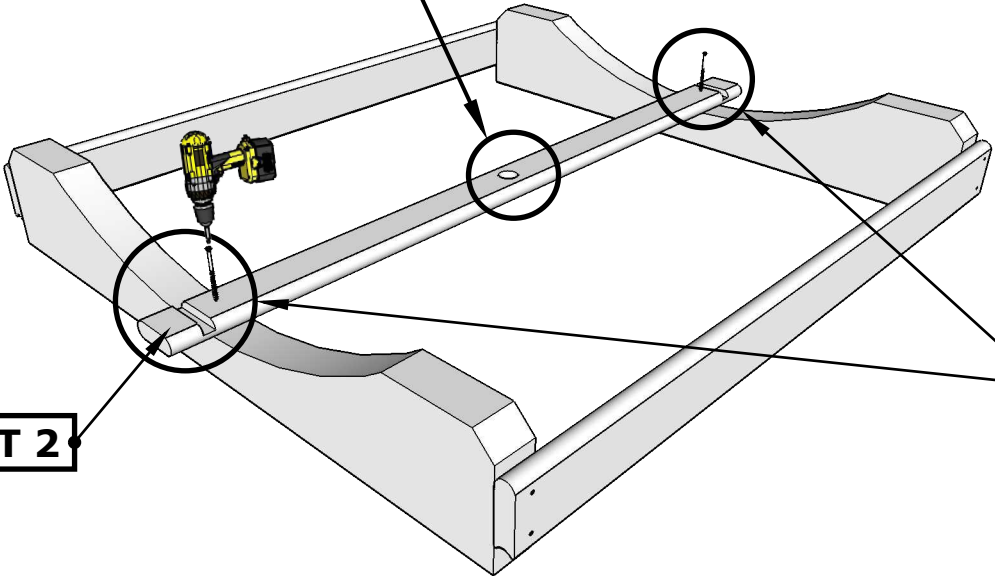




Sauna 160, Ø200

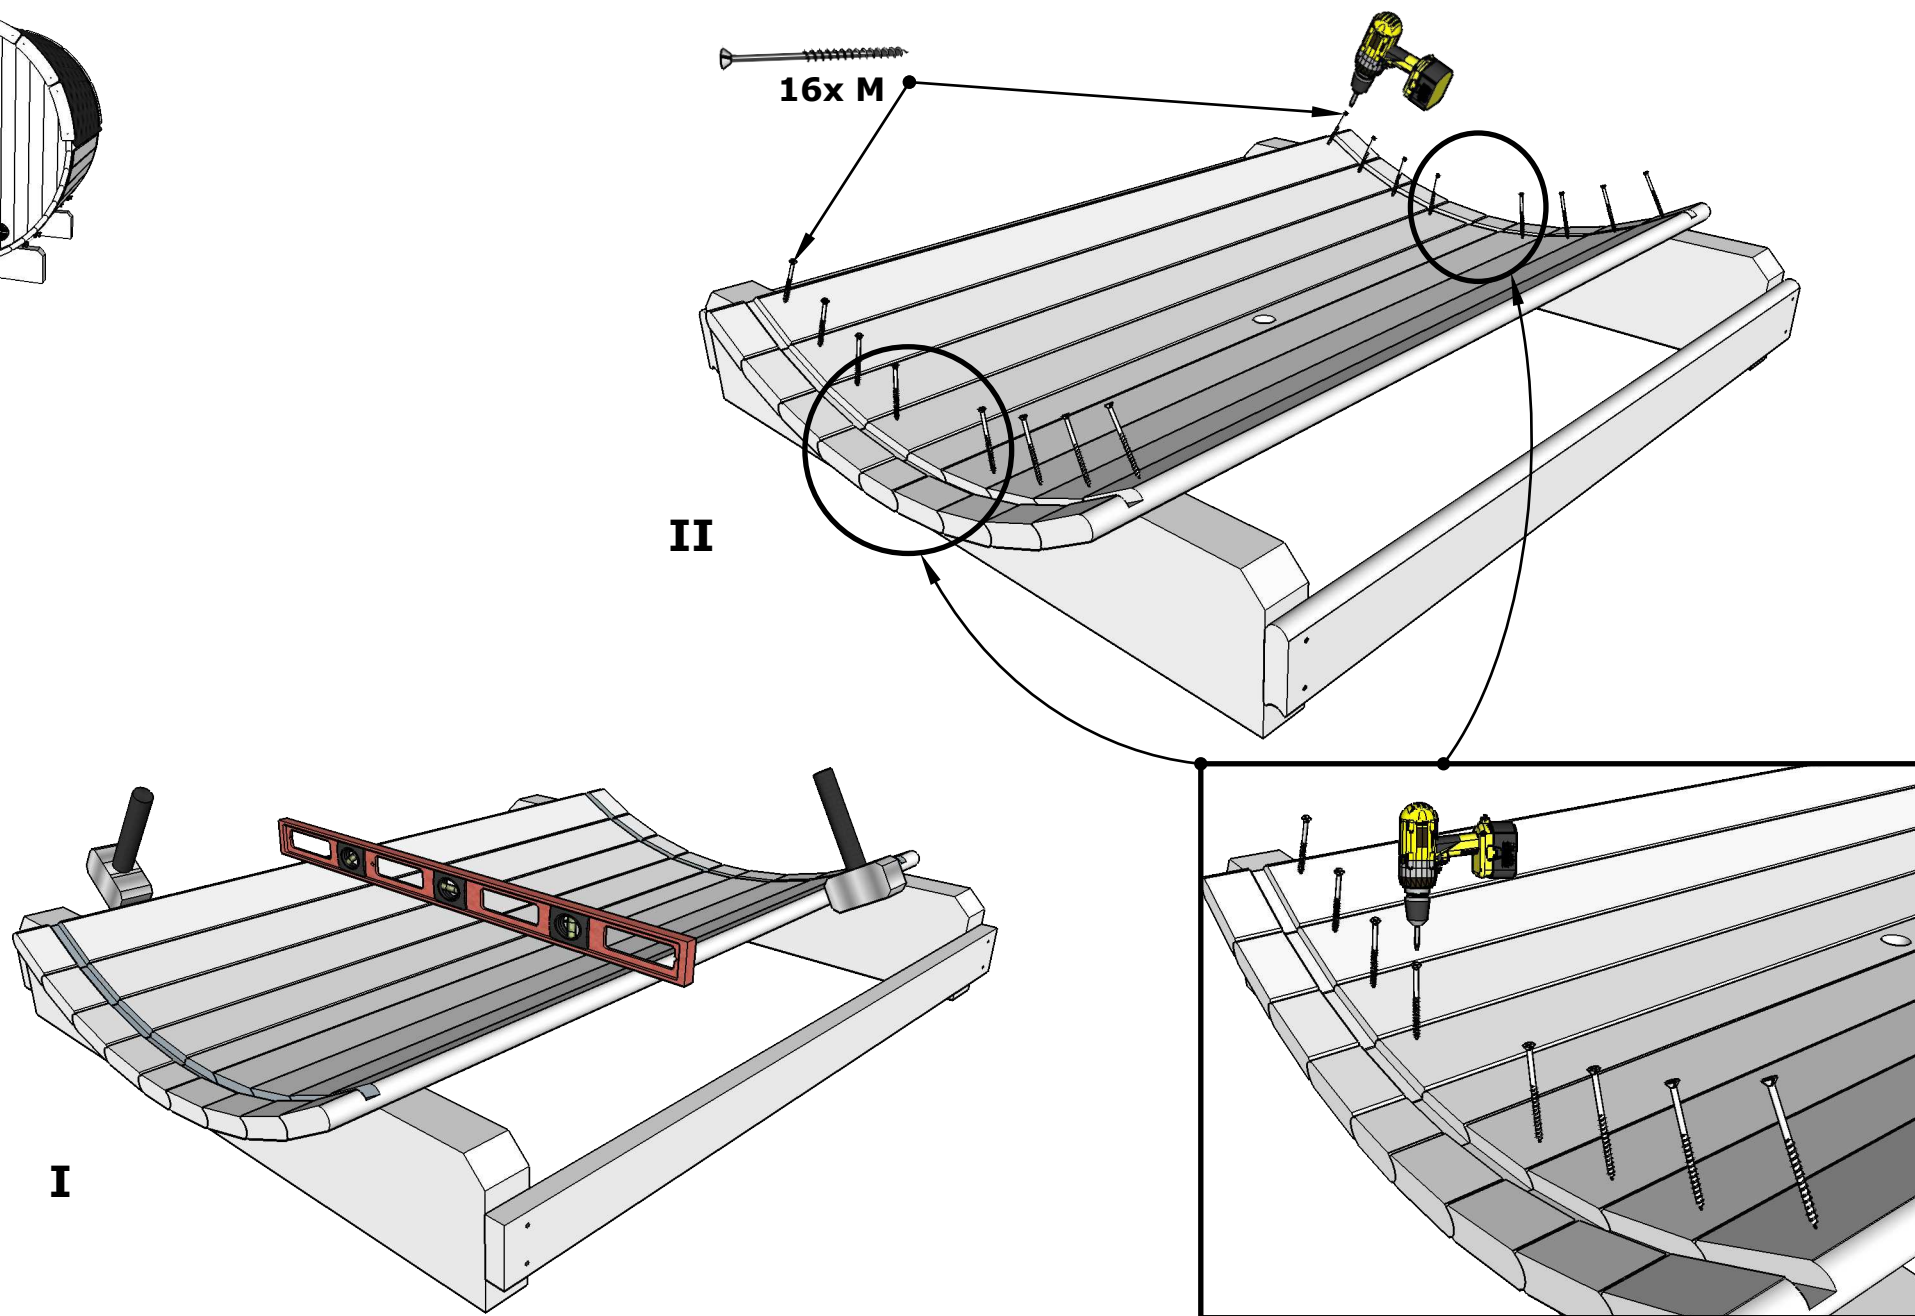


Sauna 160, Ø200

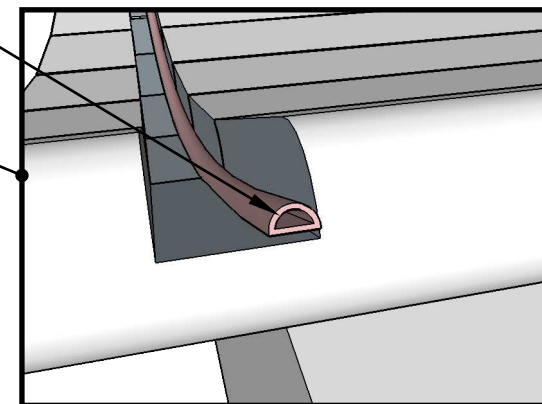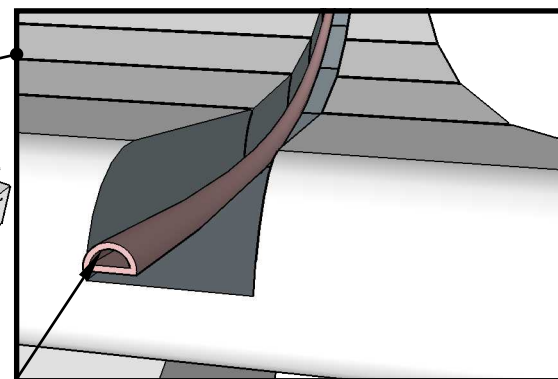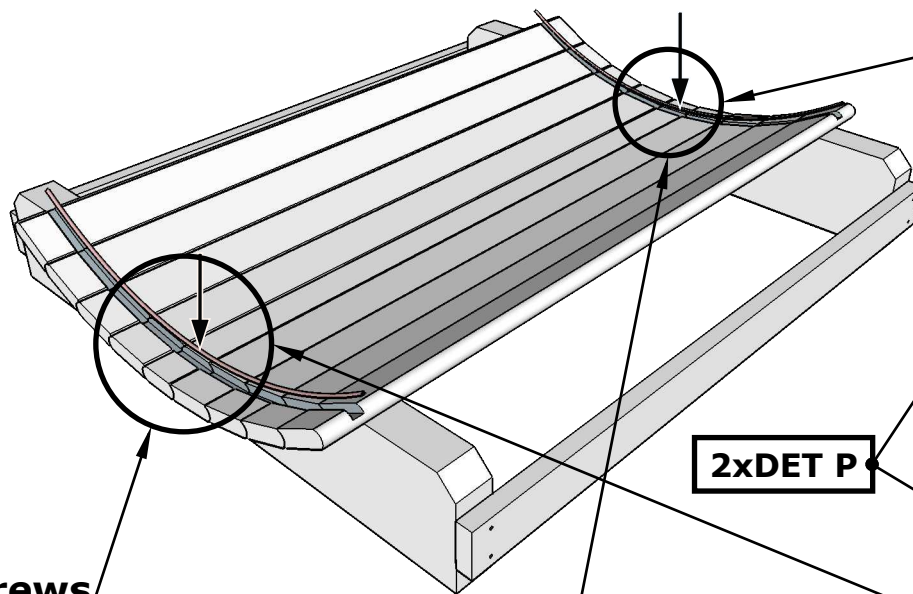


Drill 4 holes before screws
• DET 2 Ø10 mm •

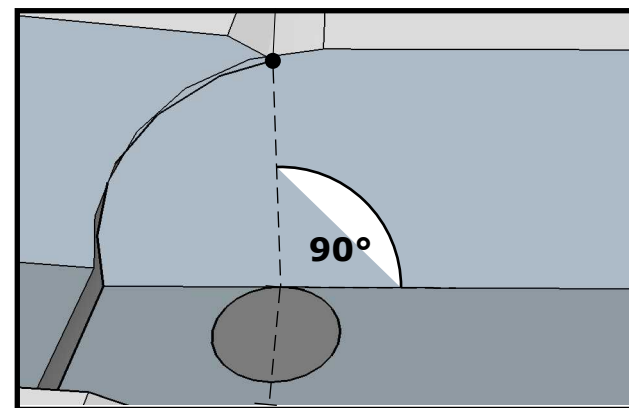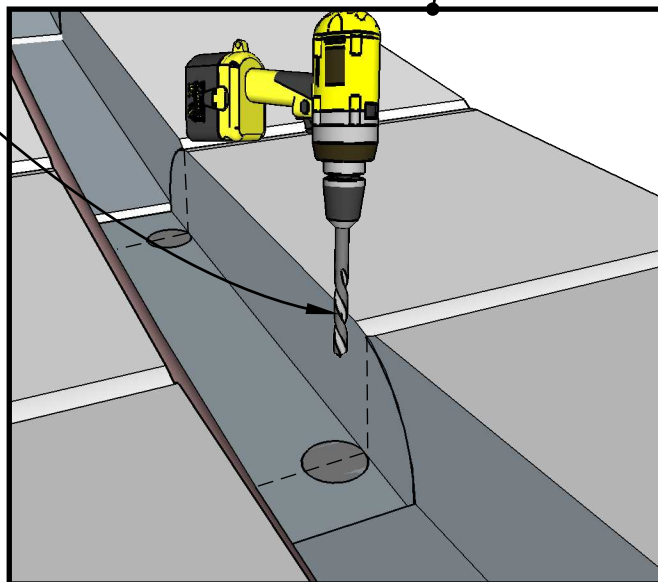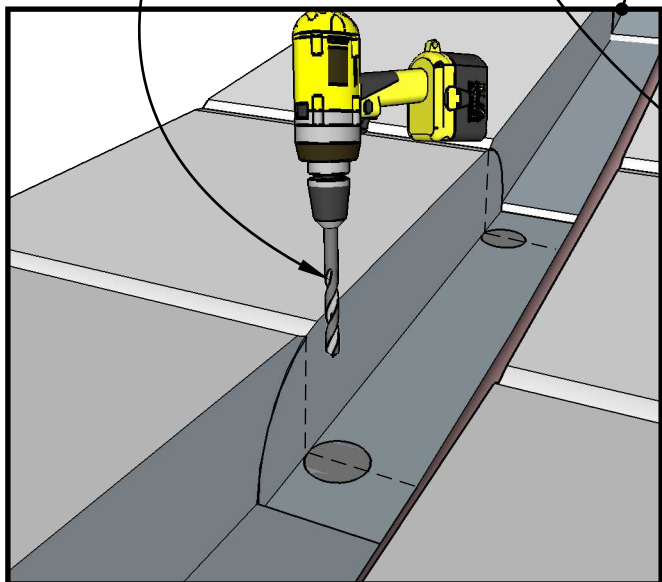

Sauna 160, Ø200

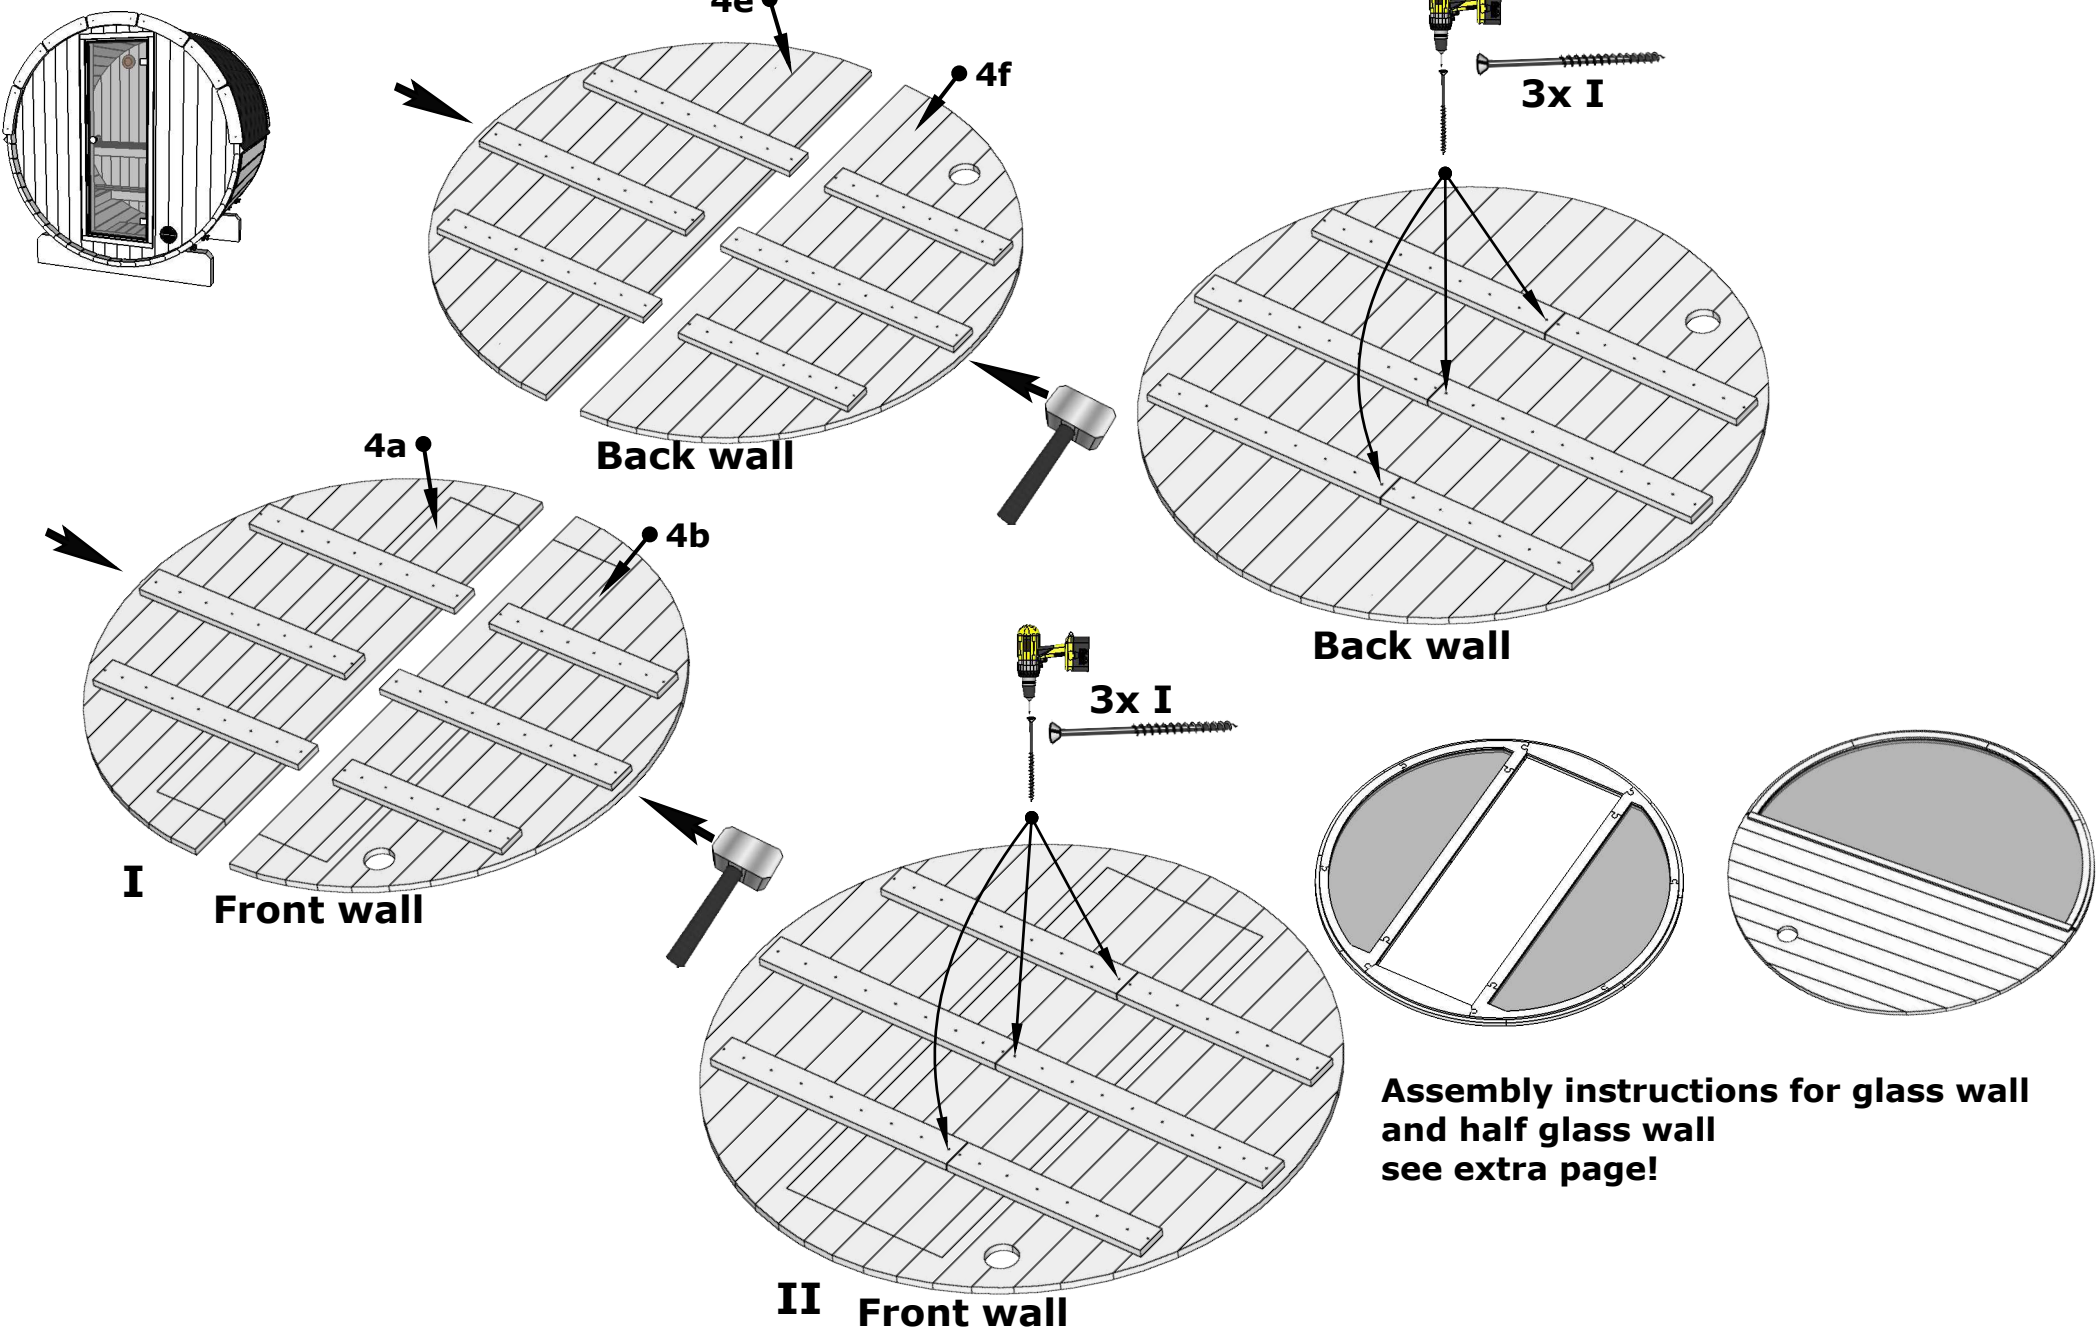


Sauna 160, Ø200

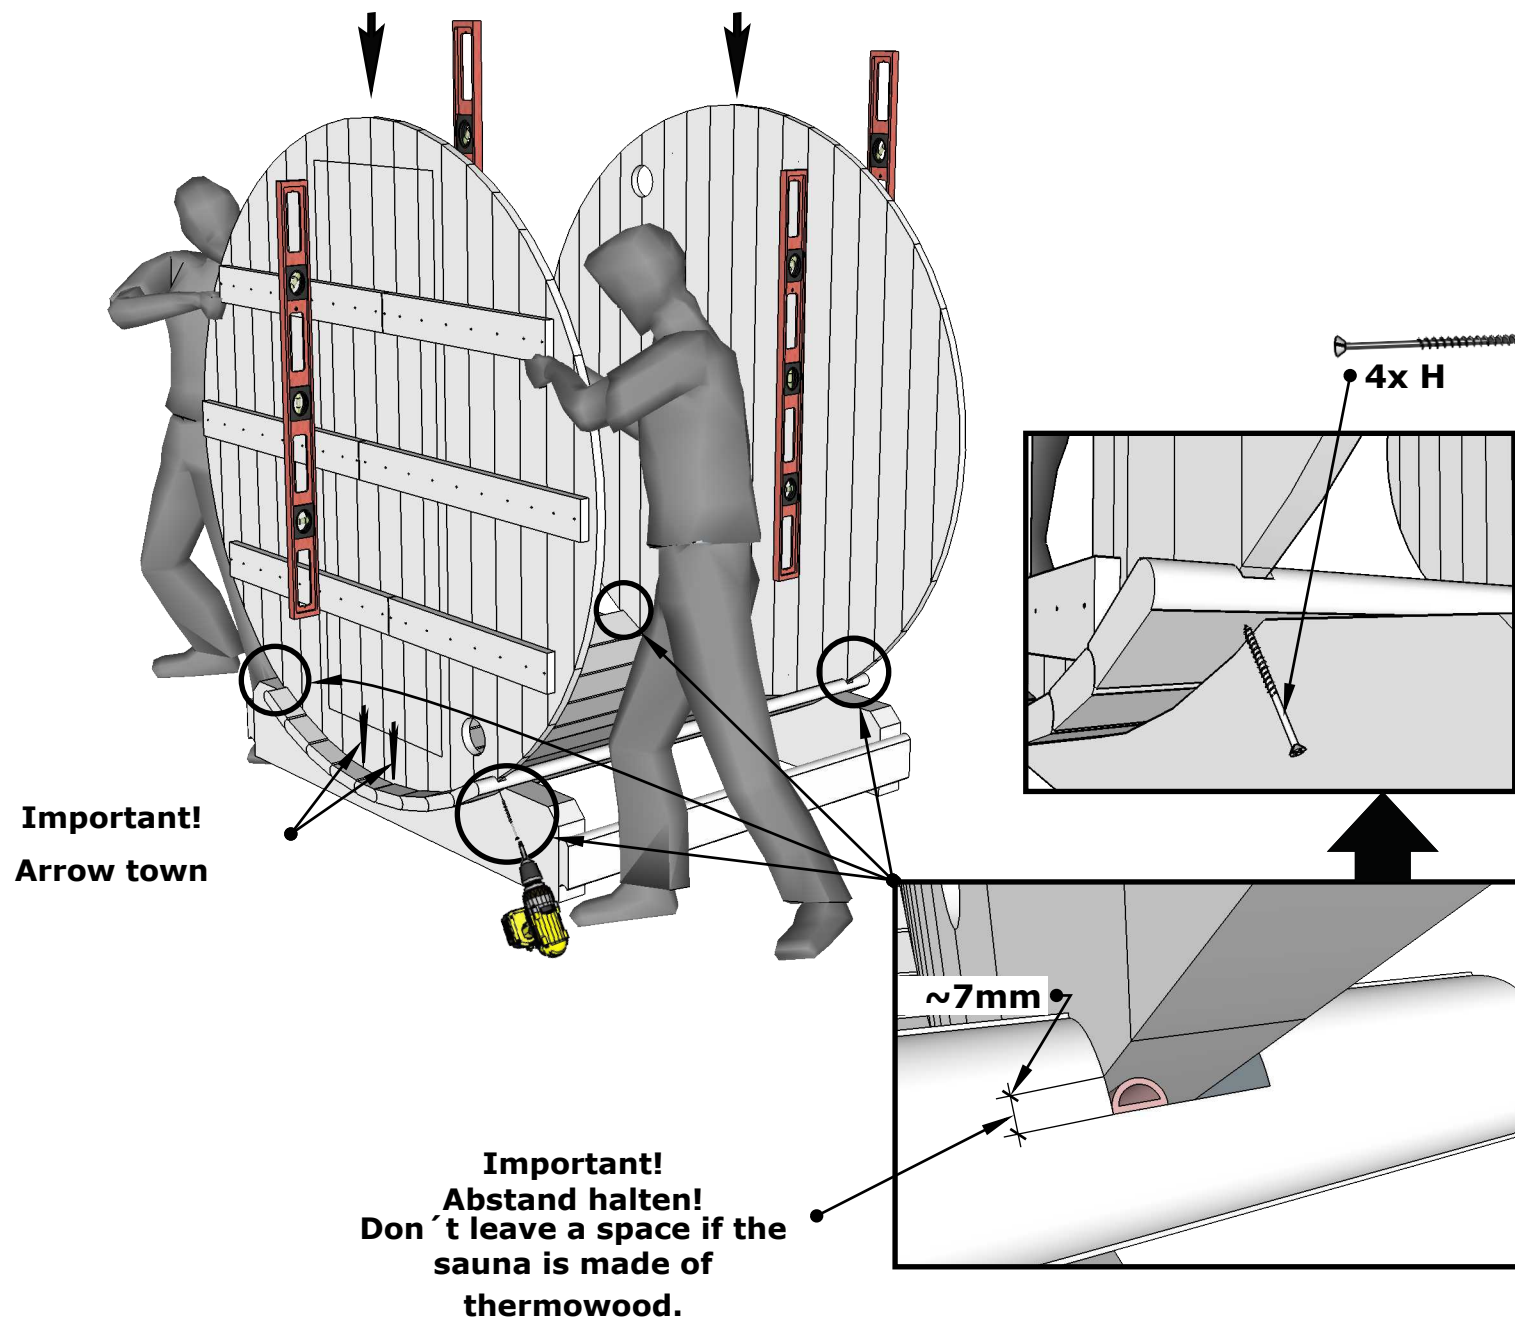


Sauna 160, Ø200





See page 8.

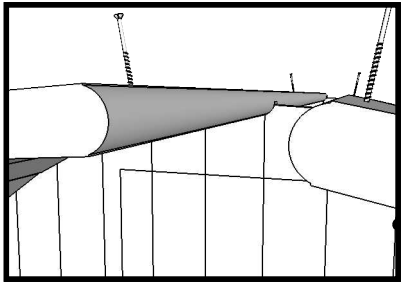

11x DET 3a
10x DET 3b

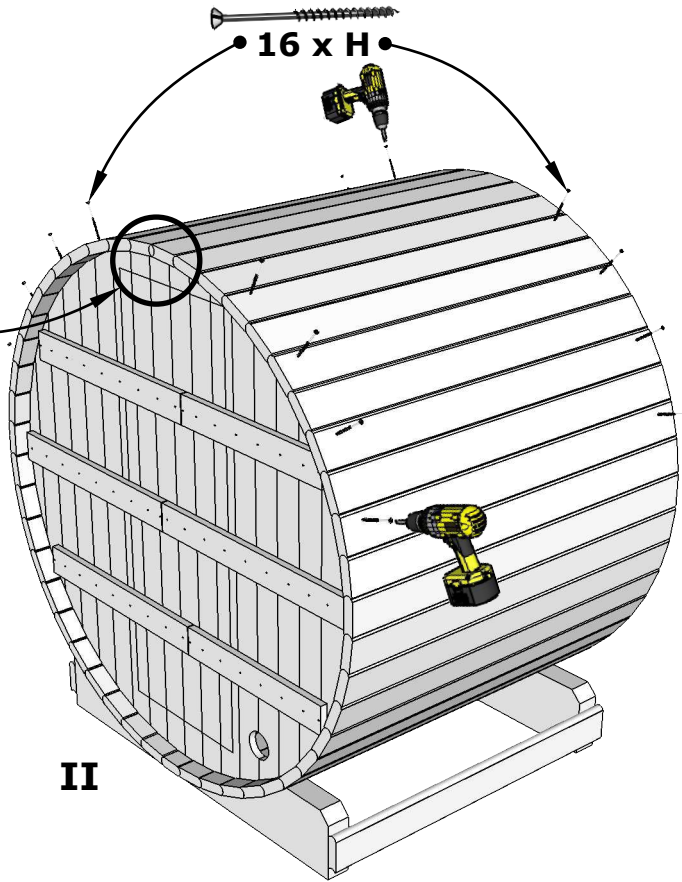


II

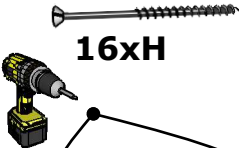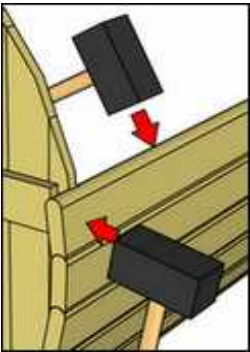

8x DET 3a
8x DET 3b

I

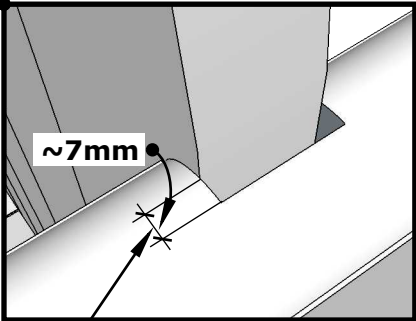




16xH

Important!
Keep distance!


Sauna 160, Ø200




Important!!!

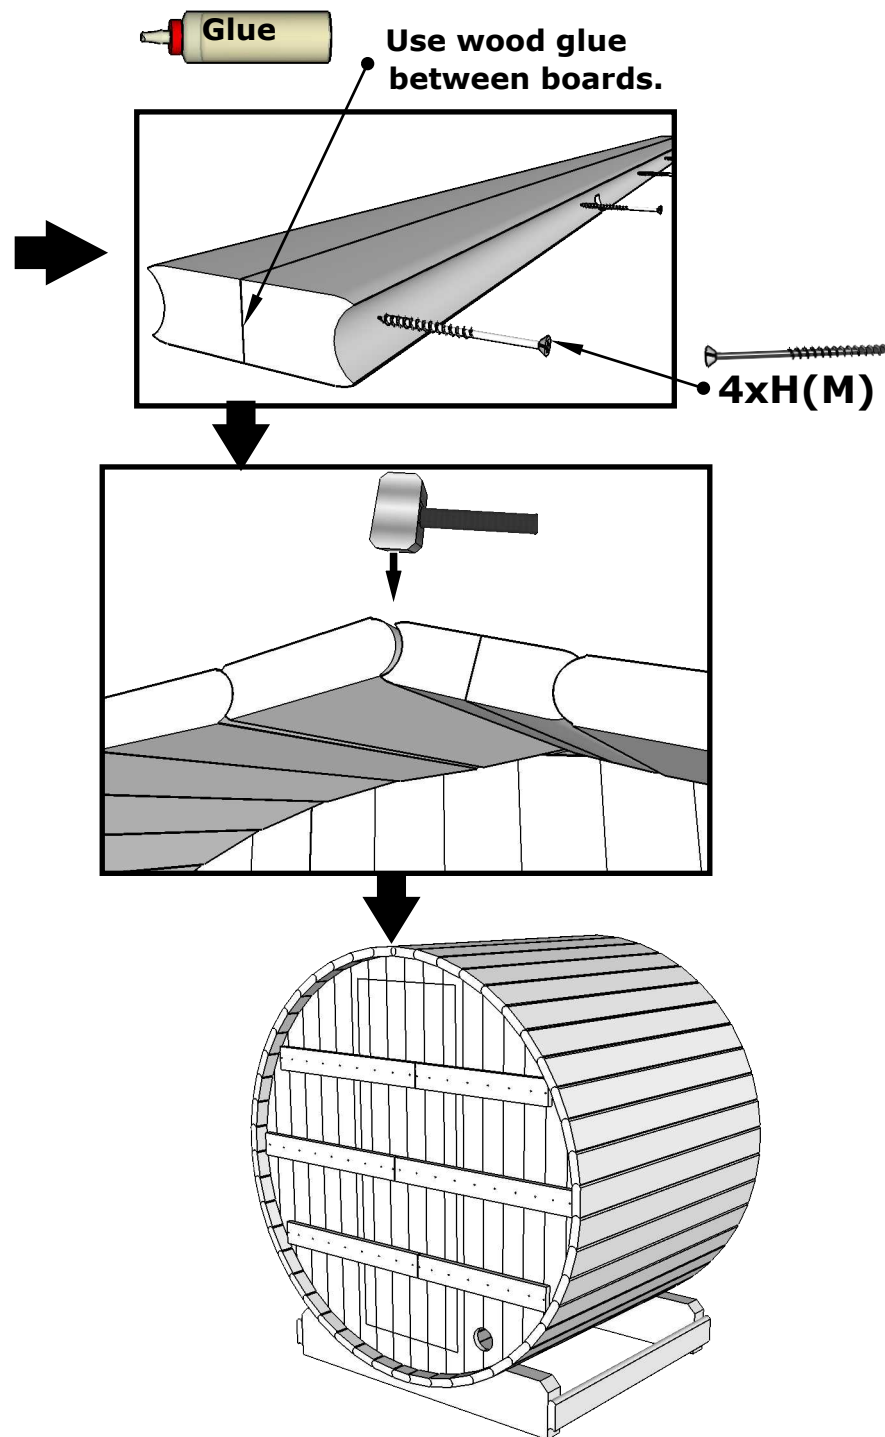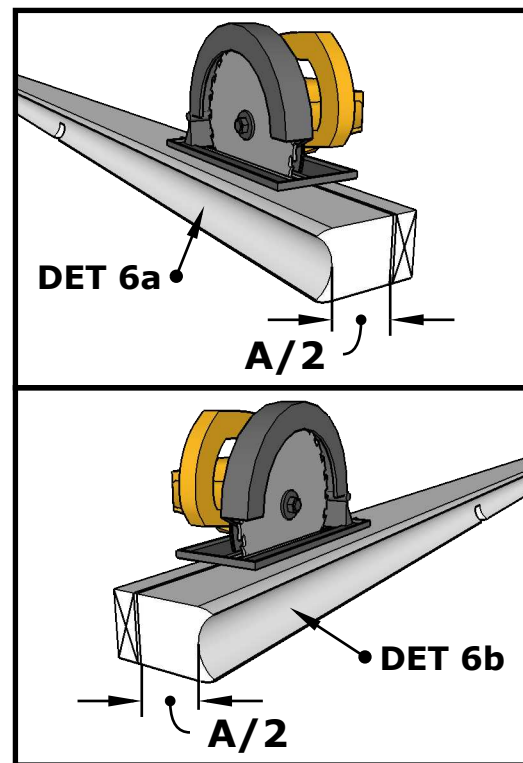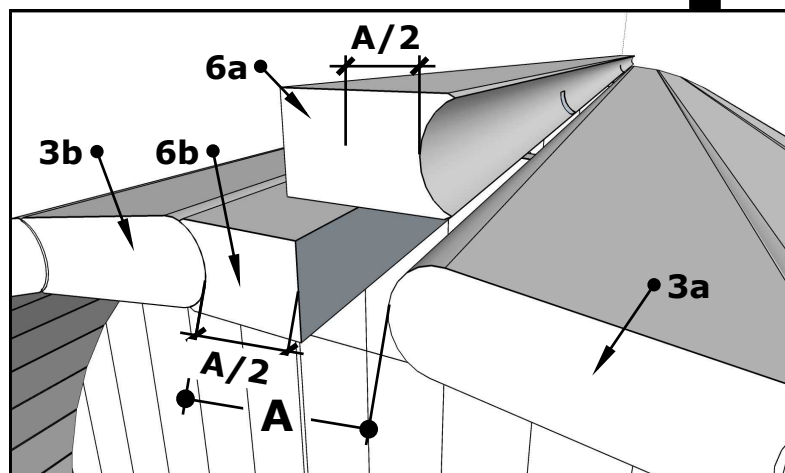

Sauna 160, Ø200


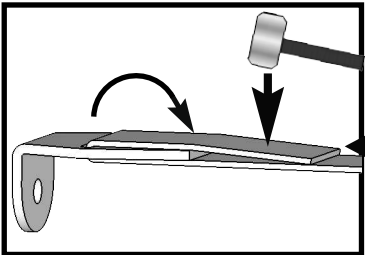


DET B1

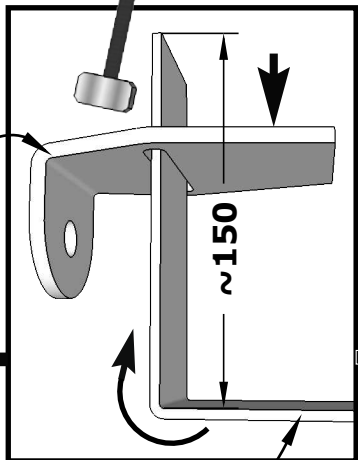


II


DET B

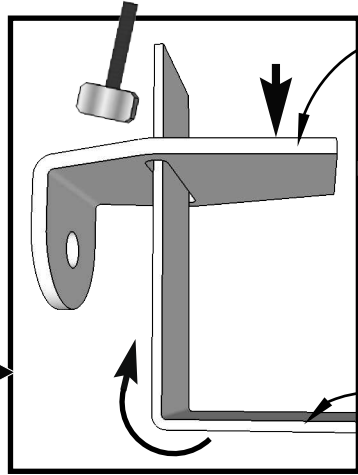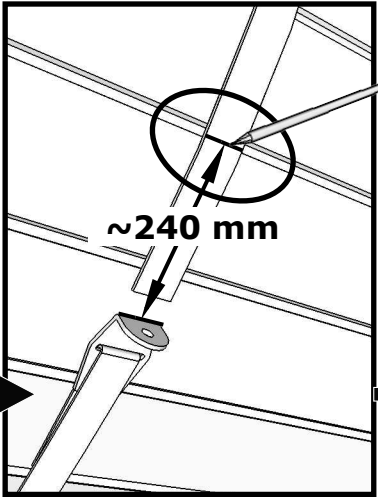

DET B1

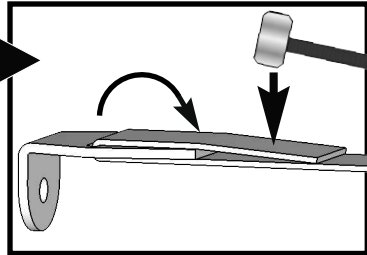


DET B

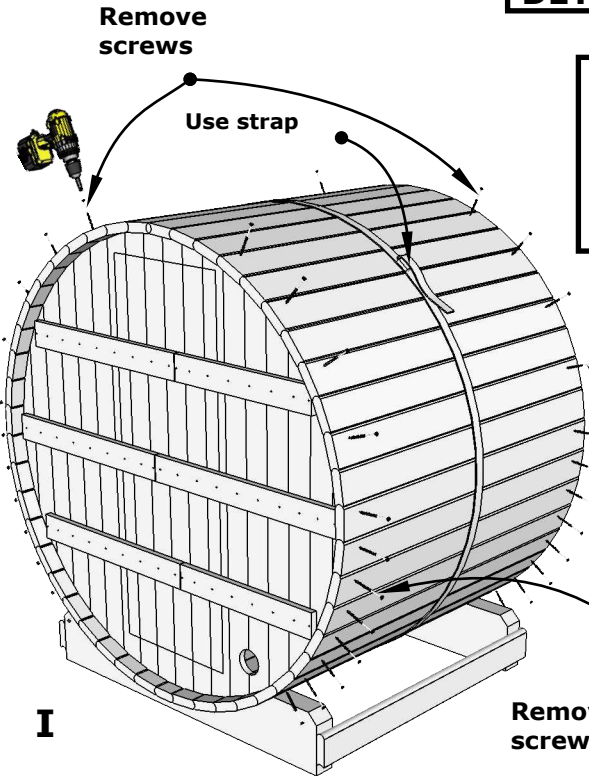



Remove screws

Use strap

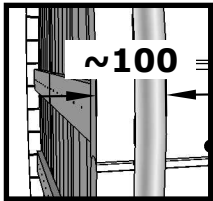

2x DET B

Remove

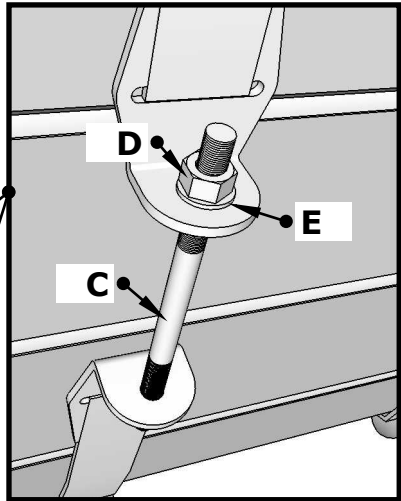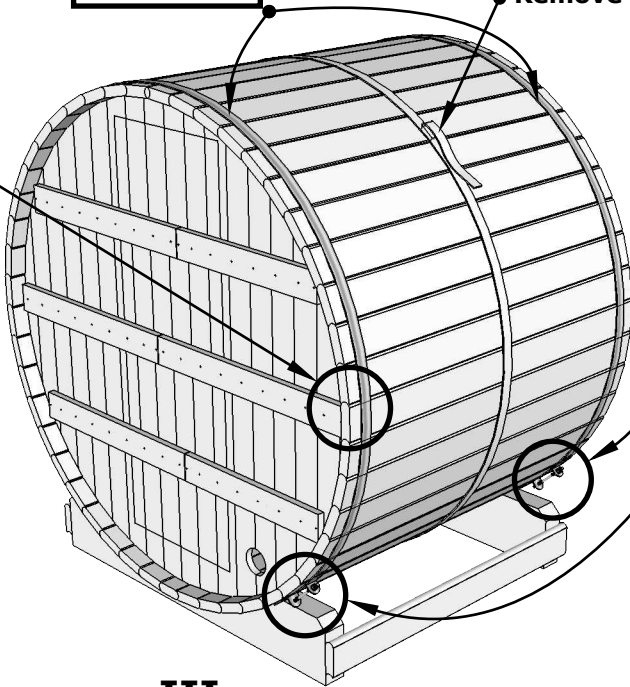

Attention!!!


During assembly and retightening the threaded rods, use oil (Würth HPS 1400 or similar) to avoid "cold welding" and it is also easier tightening.





Sauna 160, Ø200



Follow the guidelines
when cutting

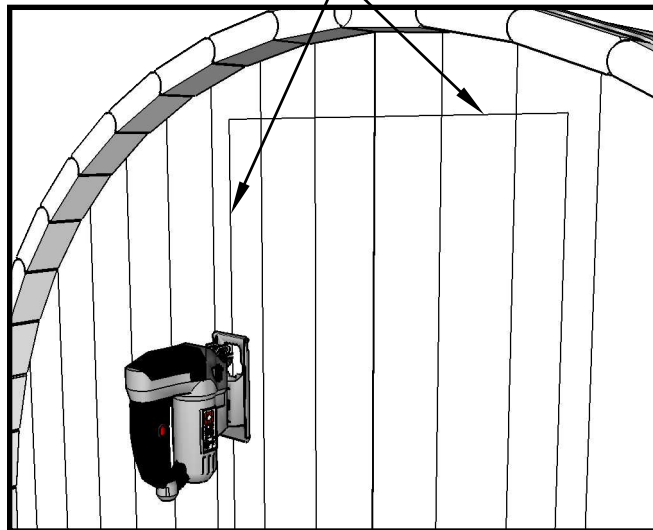


II

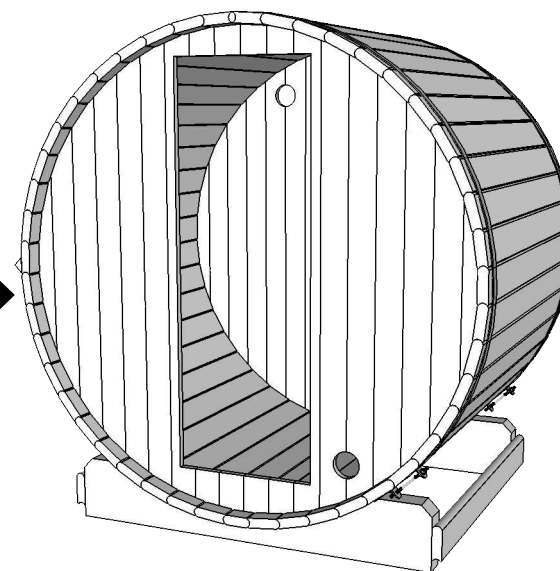


III

Remove all
brackets

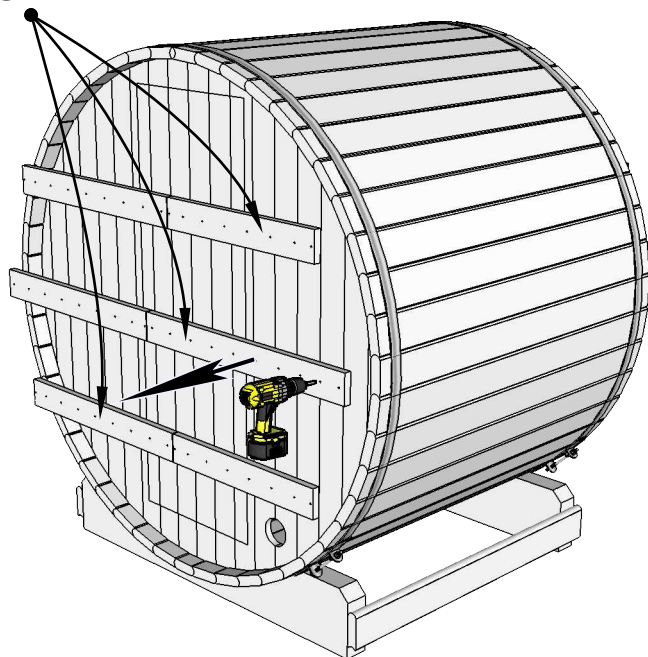

Remove all
brackets

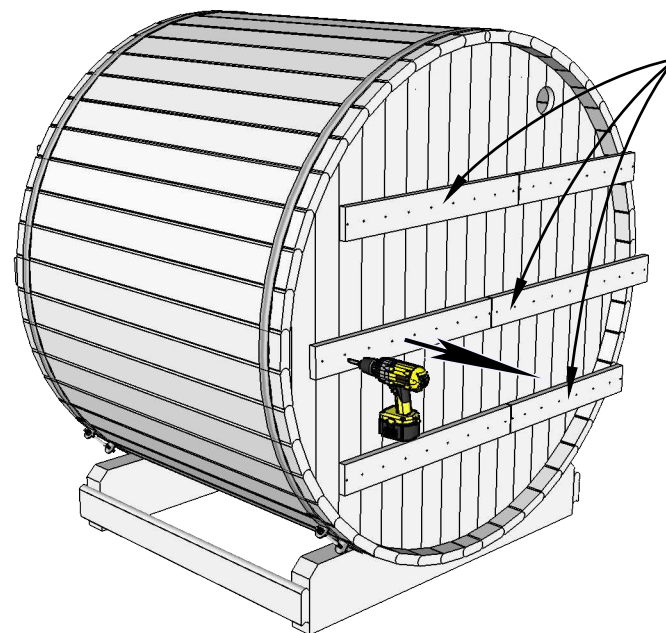


I
10.

(POL 004)

Sauna 160, Ø200







Assembly instructions for glass wall and
half glass wall
see extra page!

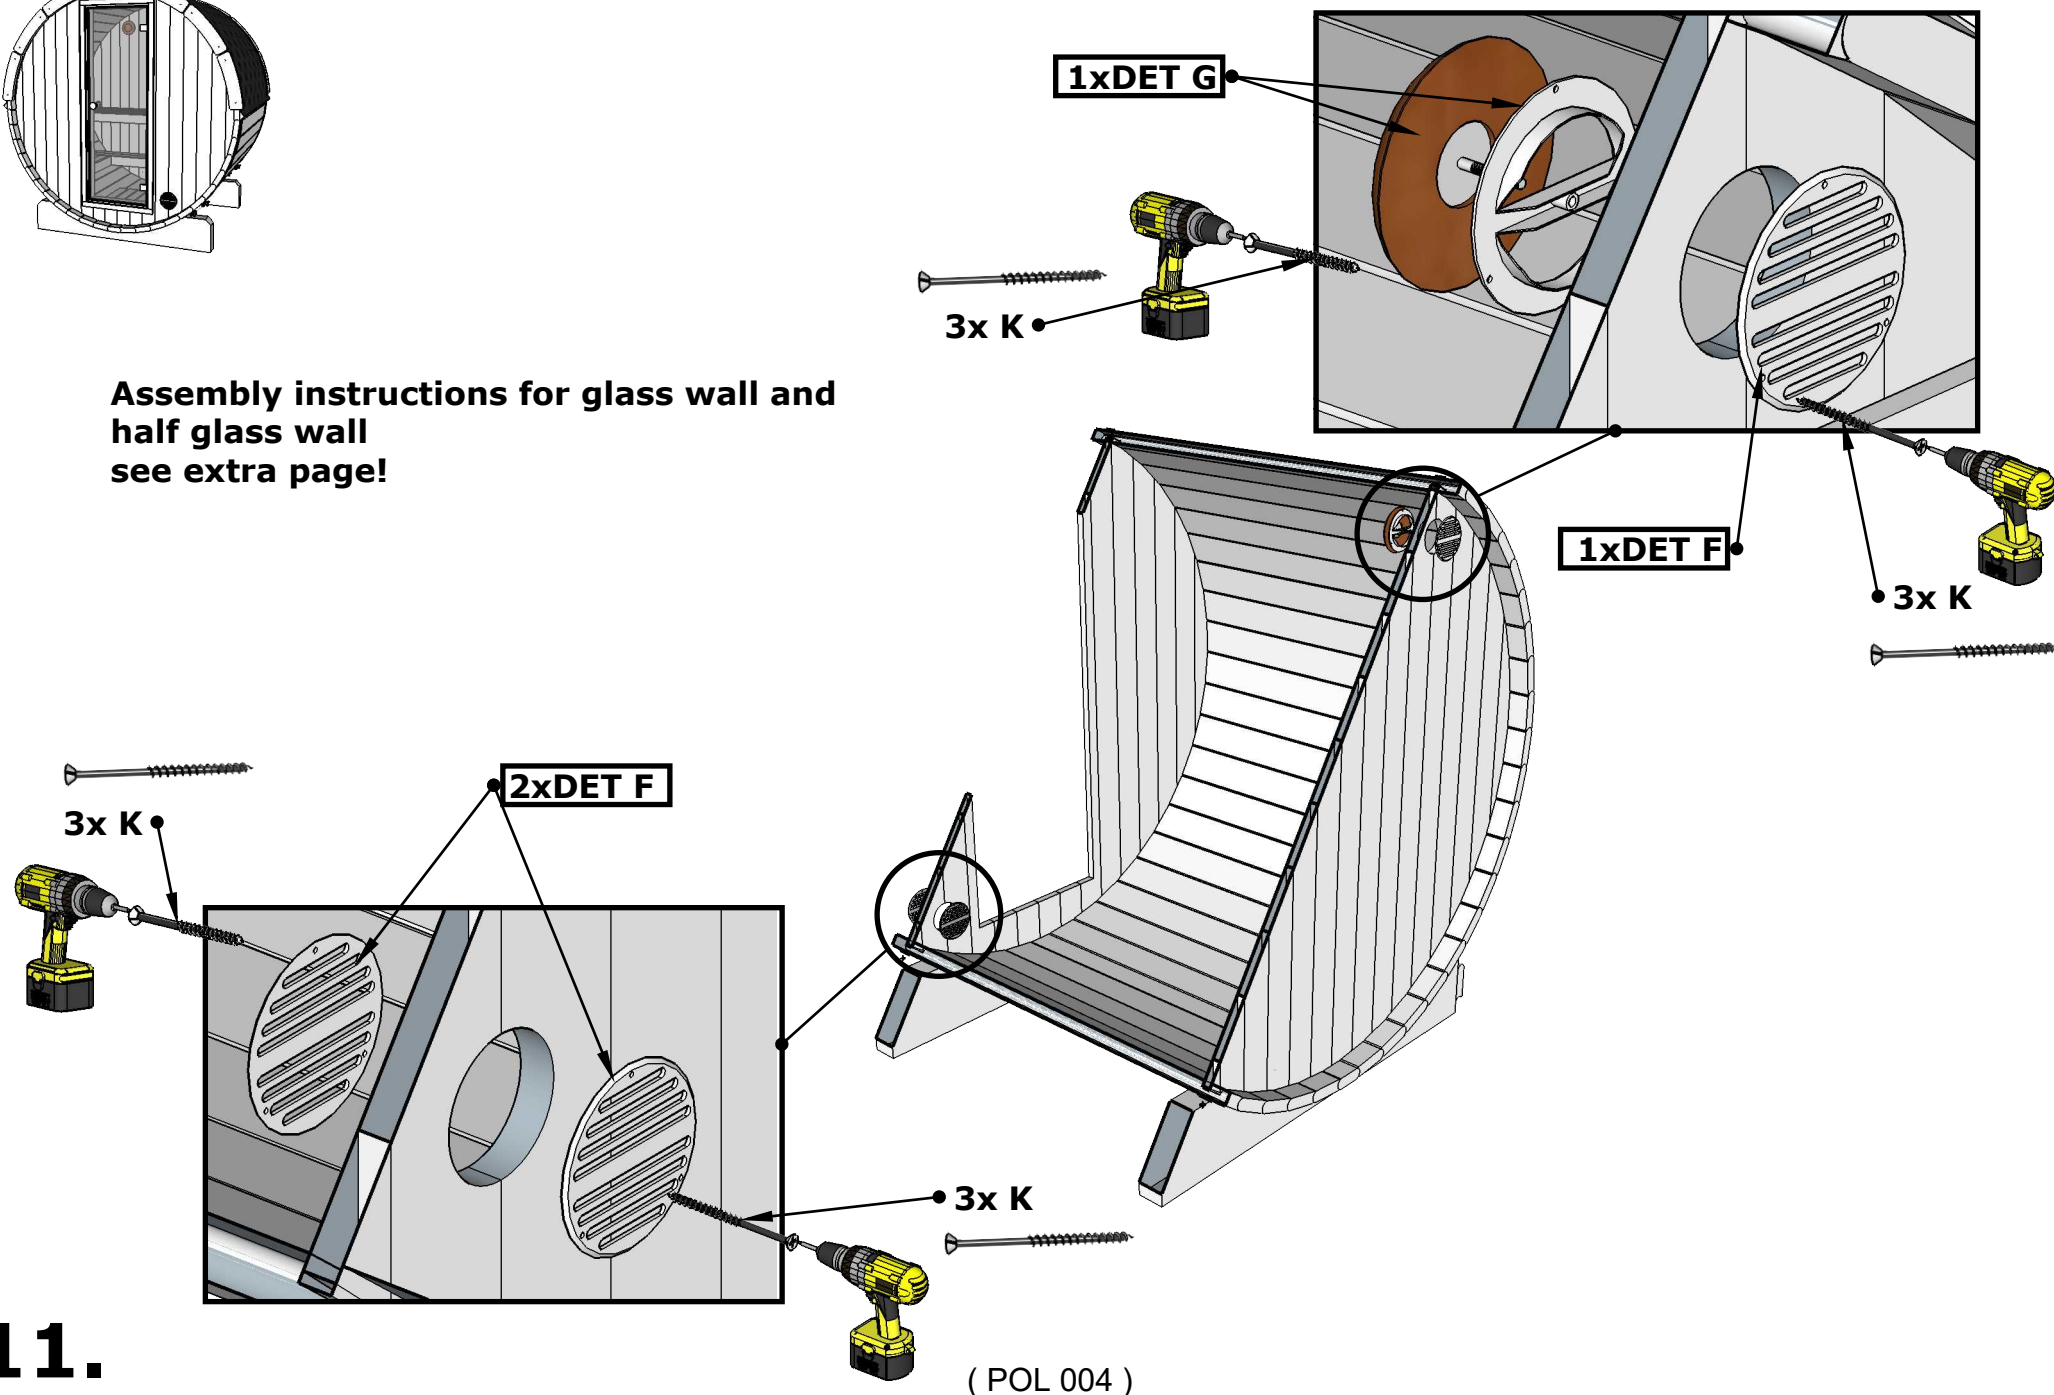

11.

(POL 004)





Sauna 160, Ø200

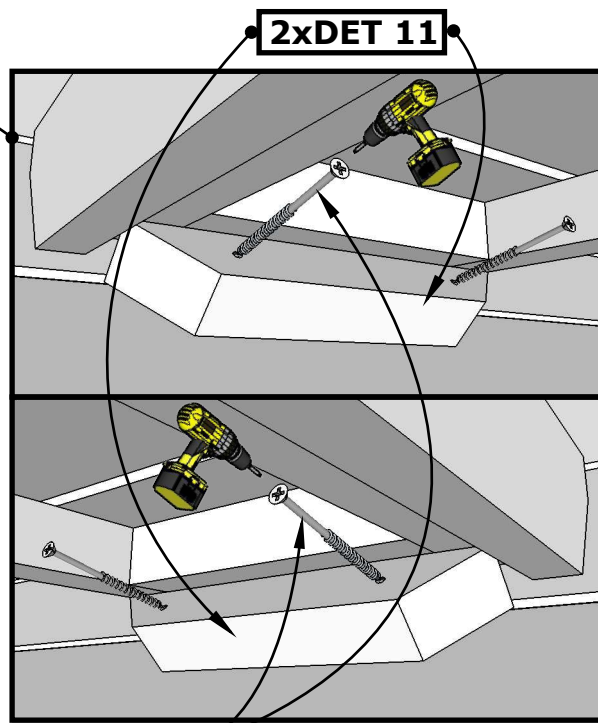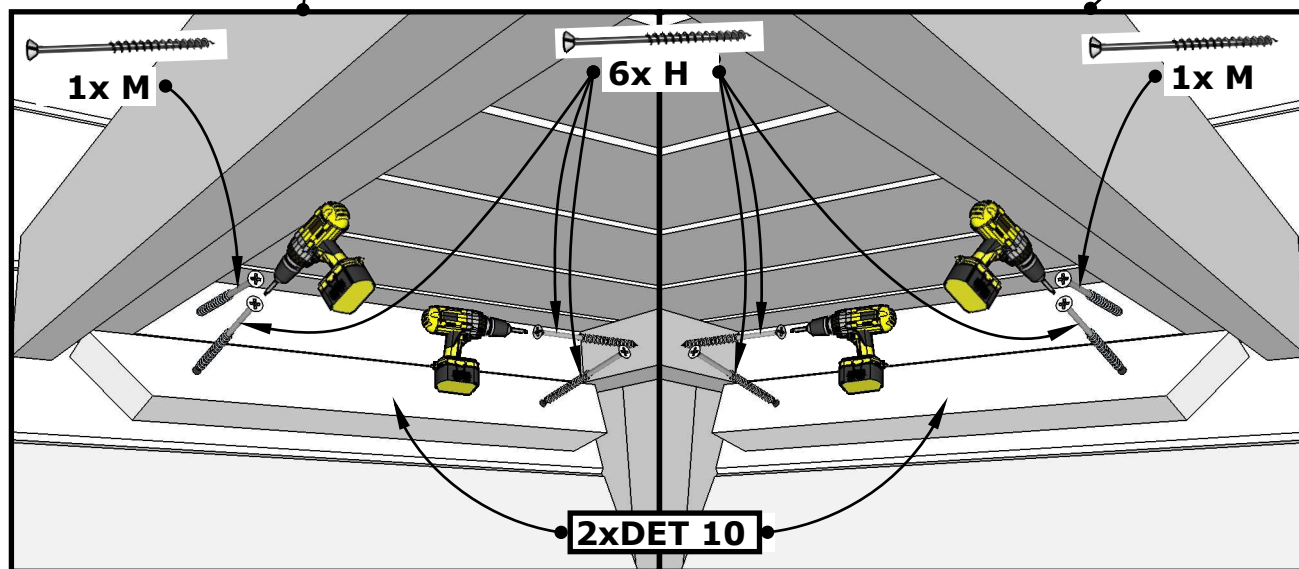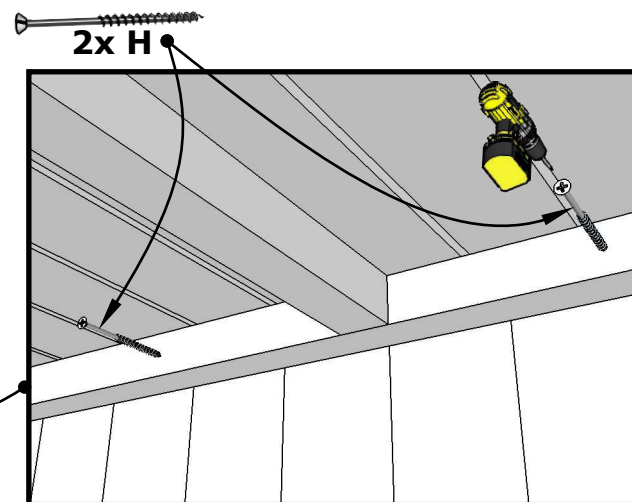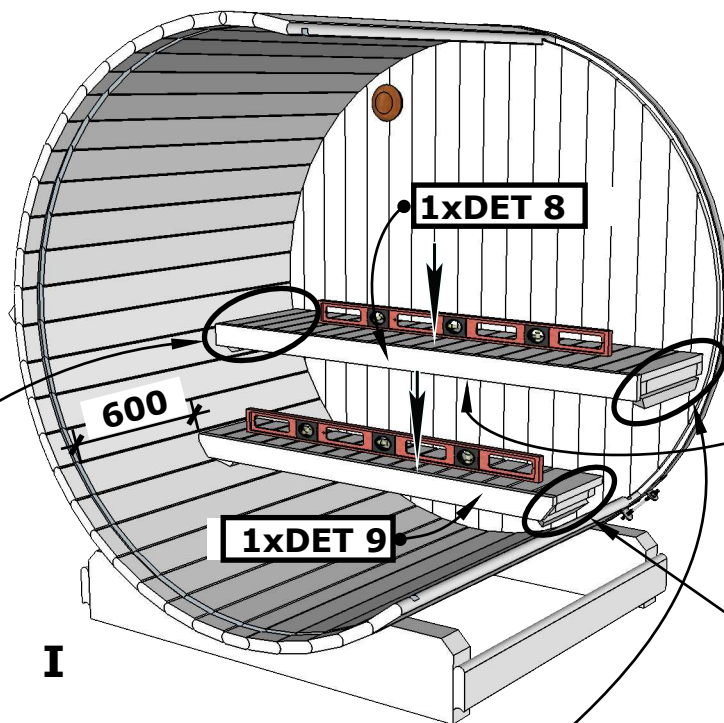

Sauna 160, Ø200



Detail 12
Assembly instructions for
the glass front wall can be
found on the extra page!

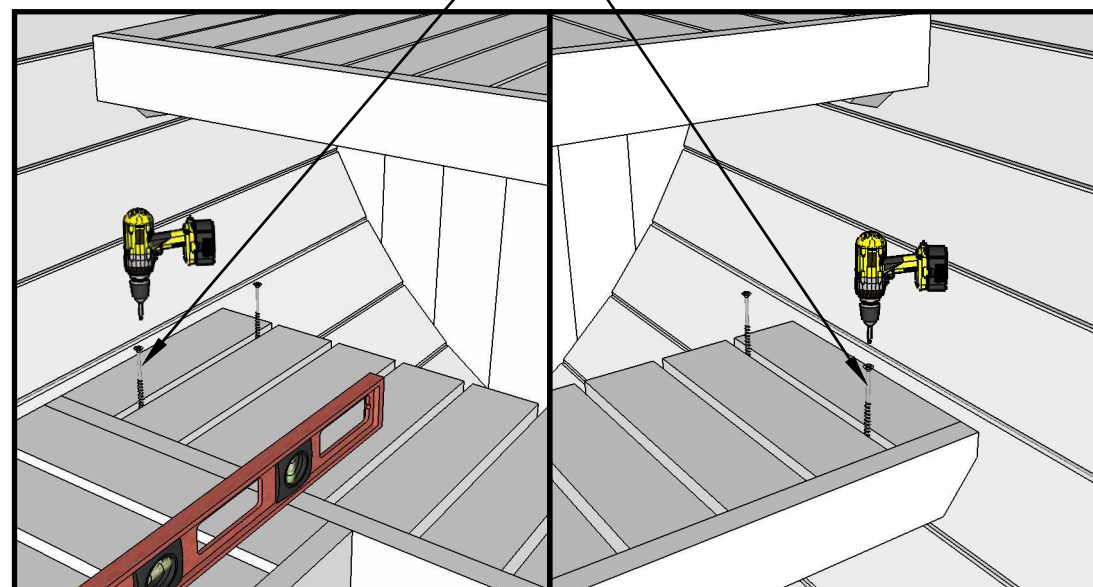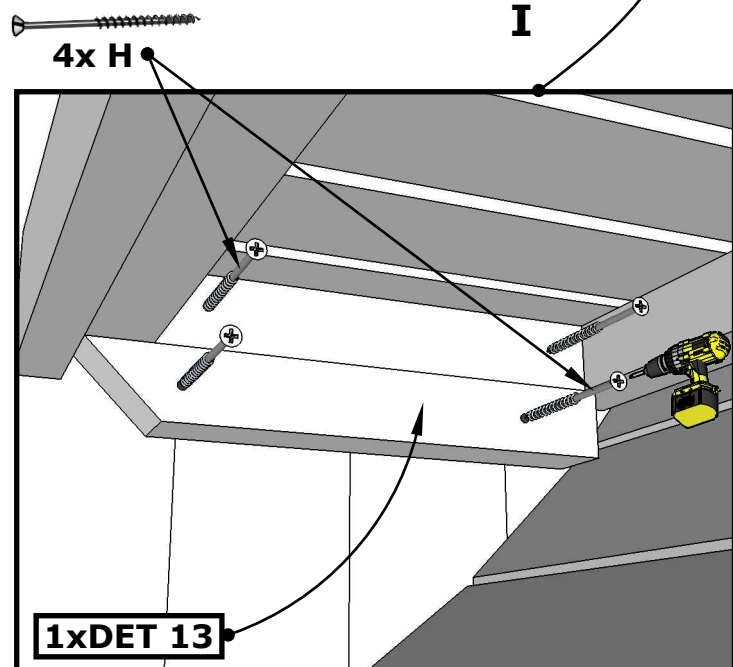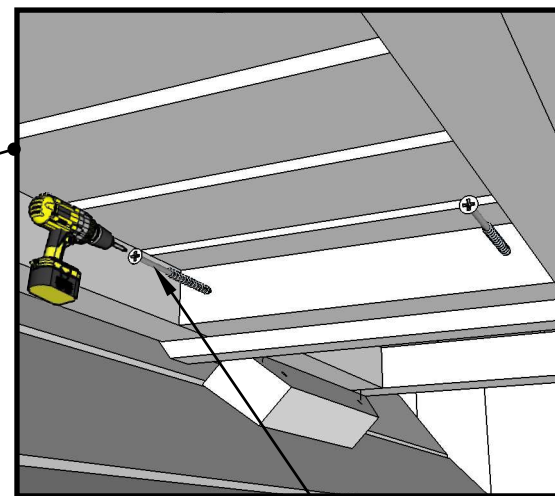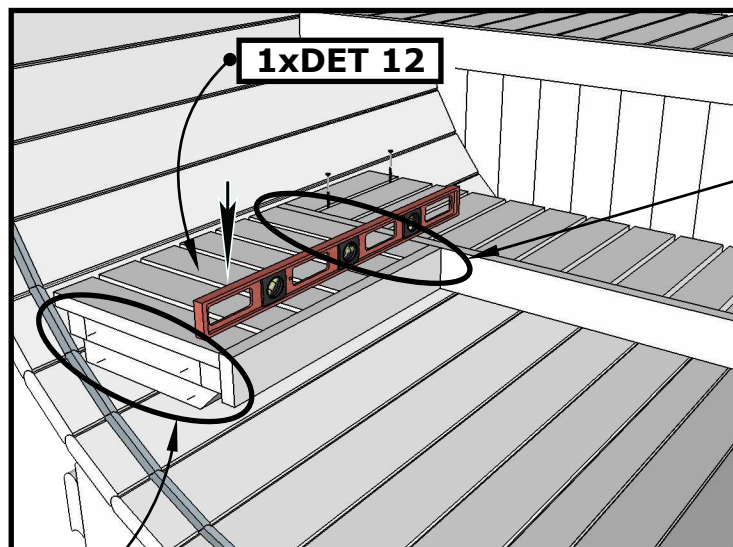

II

Sauna 160, Ø200




Door assembly instructions
for glass front wall see
extra page!




Use waterlevel for
installation.
NB! Place door from
inside!

1x DET 14

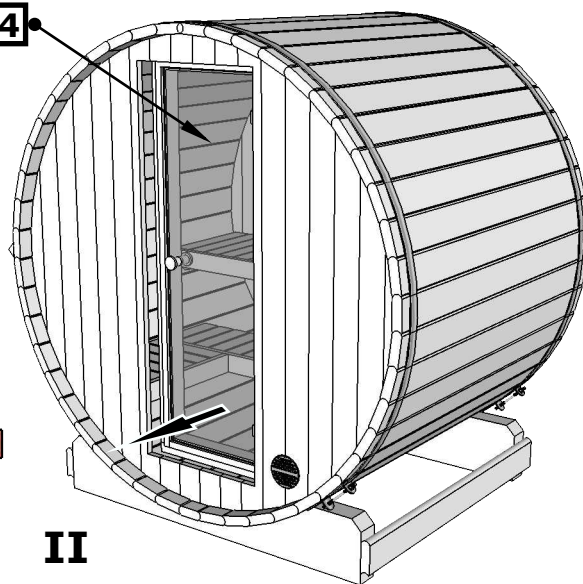

II

42mm. for the
glass front wall

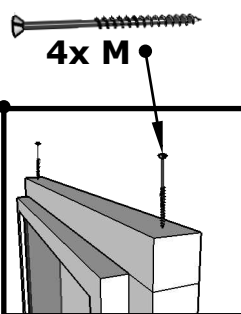


4x M

1x DET 14


2x DET 14c
2x DET 14d

I

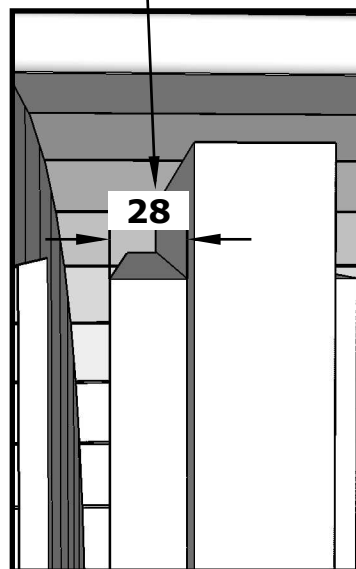


28

14x J

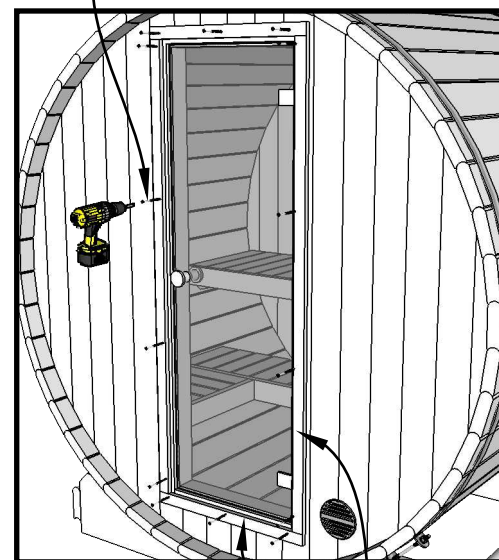

IV


2x DET 14a
2x DET 14b

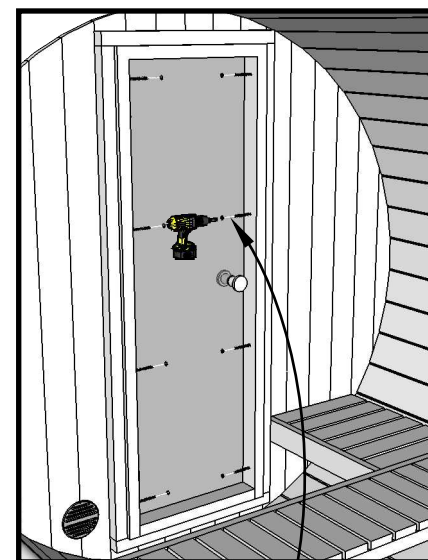

8x H

V

Horizontally fix screws
in every board.

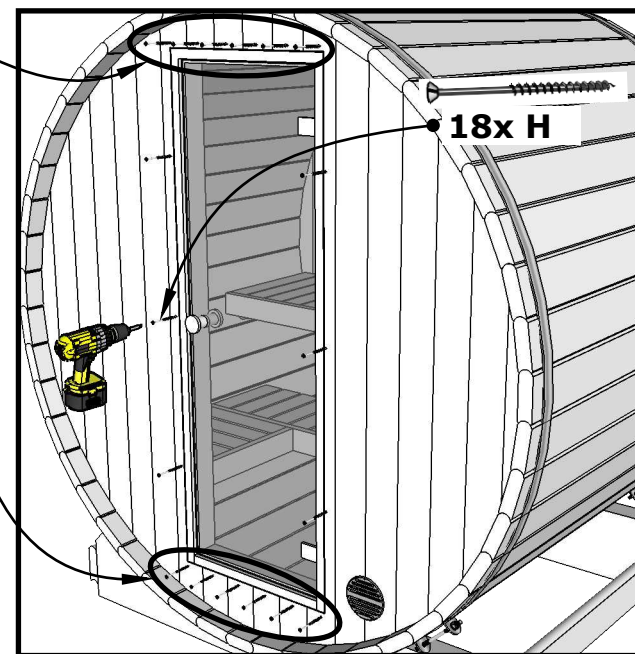

III


18x H

Sauna 160, Ø200





Door assembly instructions
for glass front wall see extra page!

1x DET 16

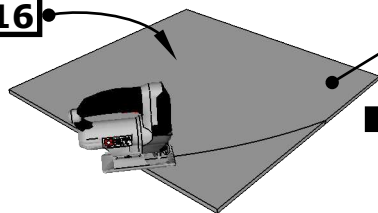



I

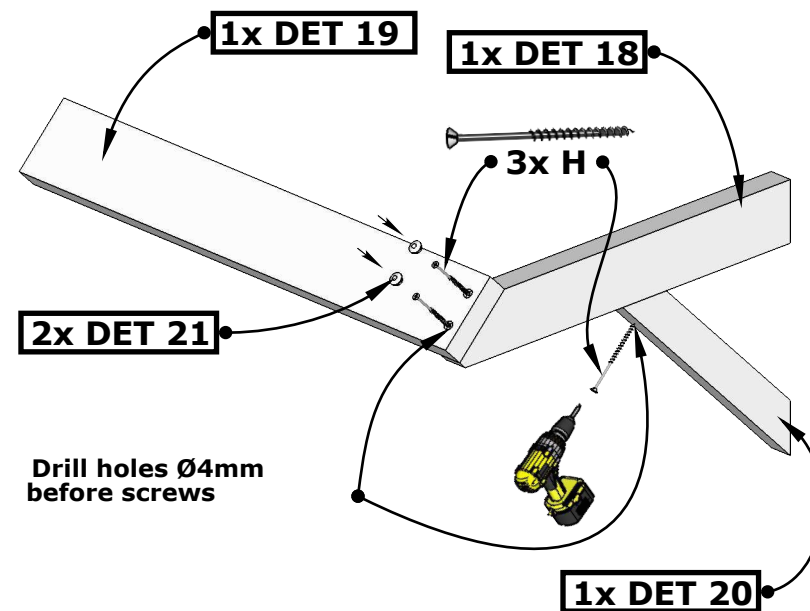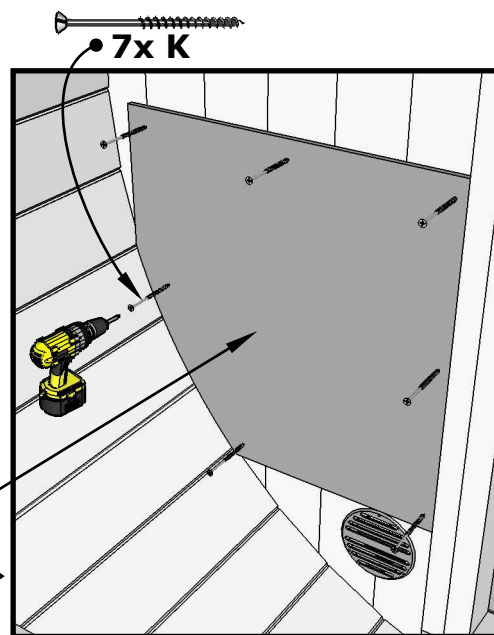



II

Drill holes Ø4mm
before screws

Drill holes Ø4mm
before screws

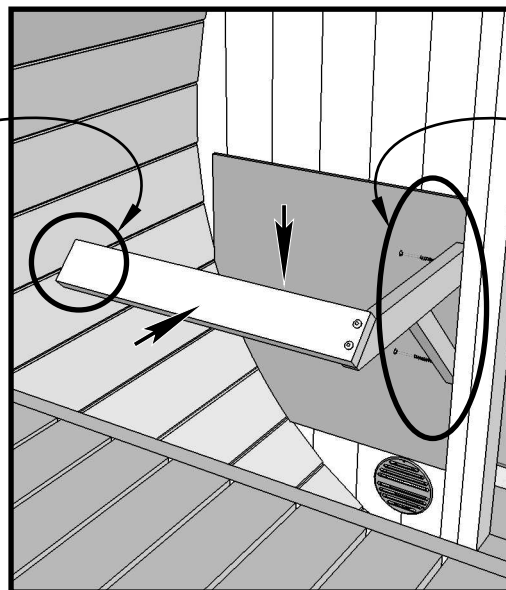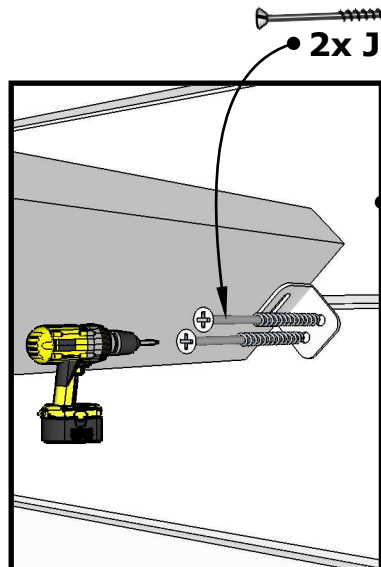

III

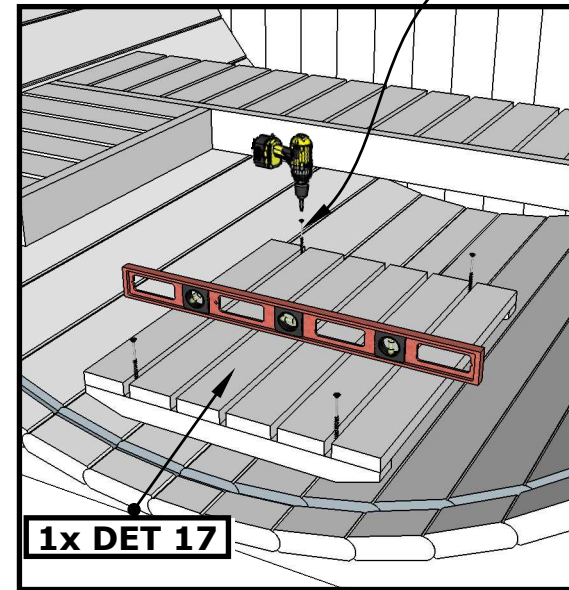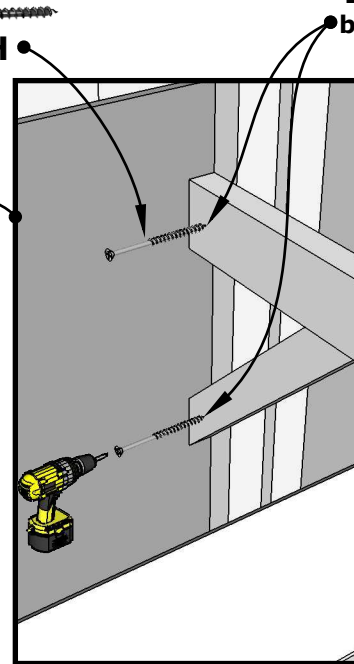

IV





Sauna 160, Ø200







Variant without frames.

Frames are not included with every model

NB! Clapboard assembly with extra line!

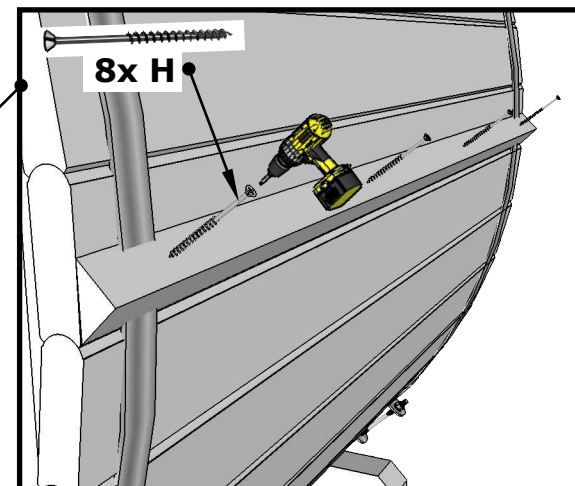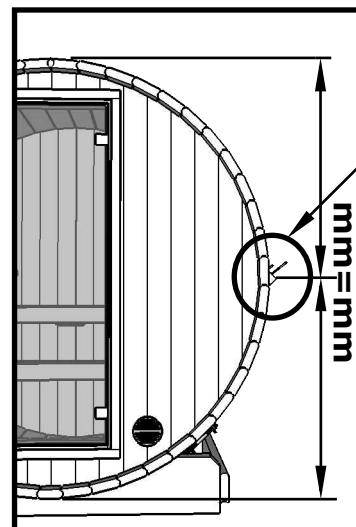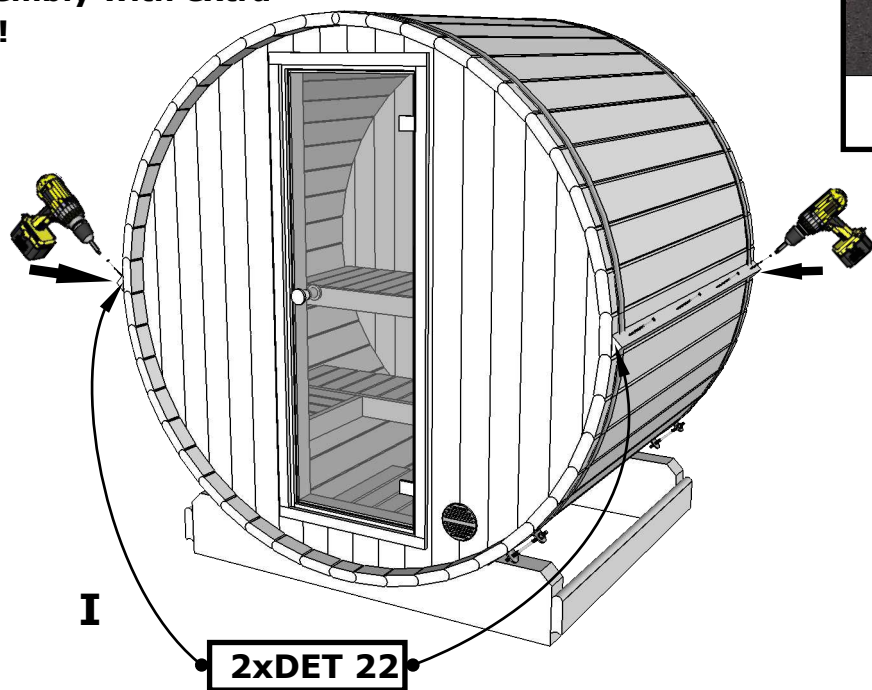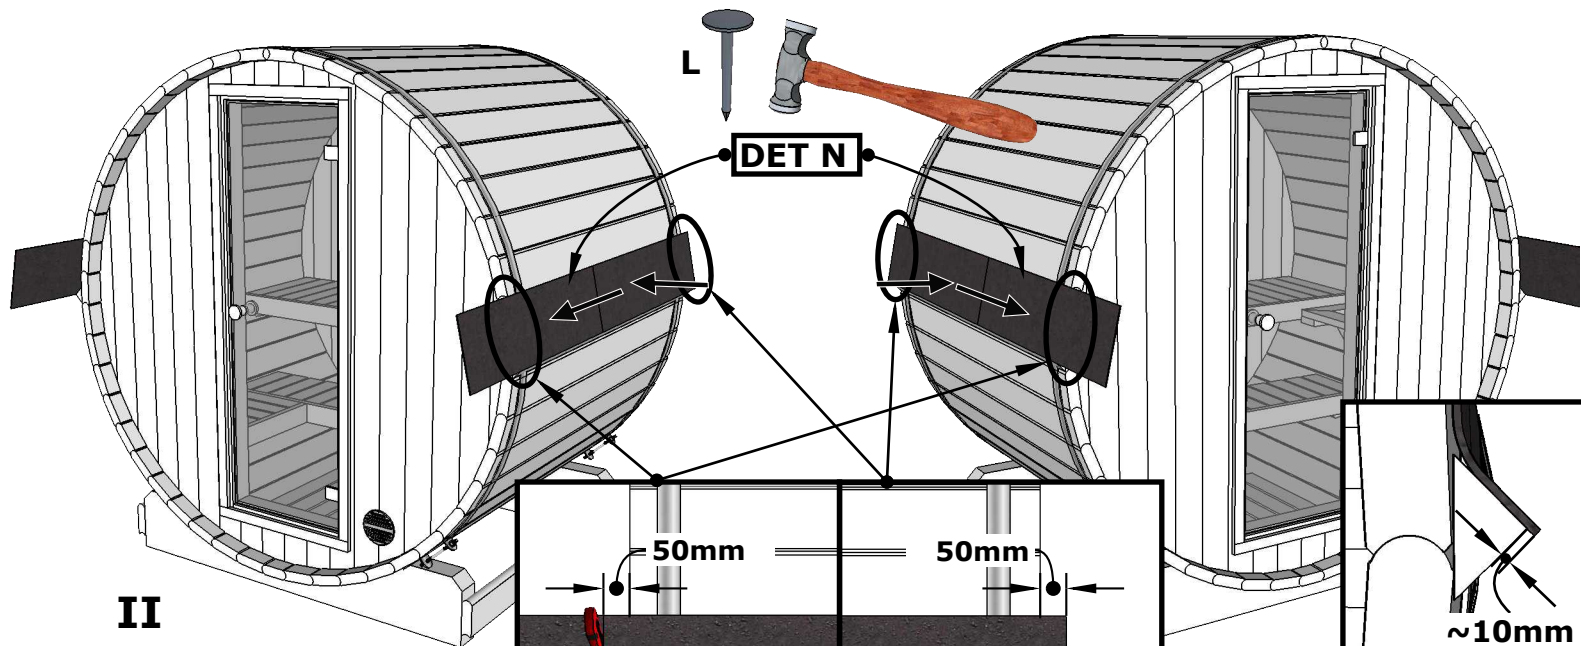

Sauna 160, Ø200

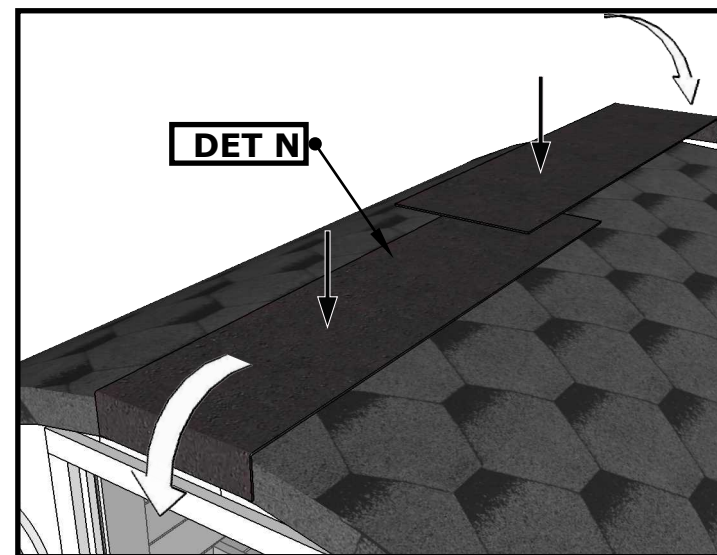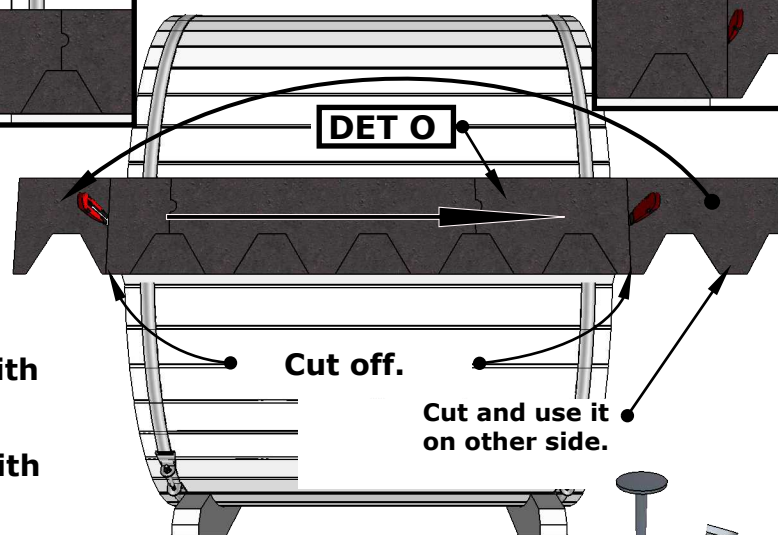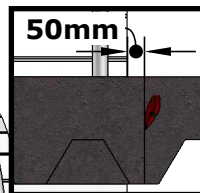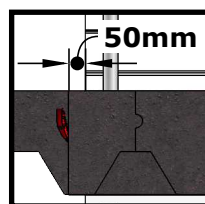






Variant without frames.

Frames are not included with every model.

NB! Clapboard assembly with extra line!

I

III

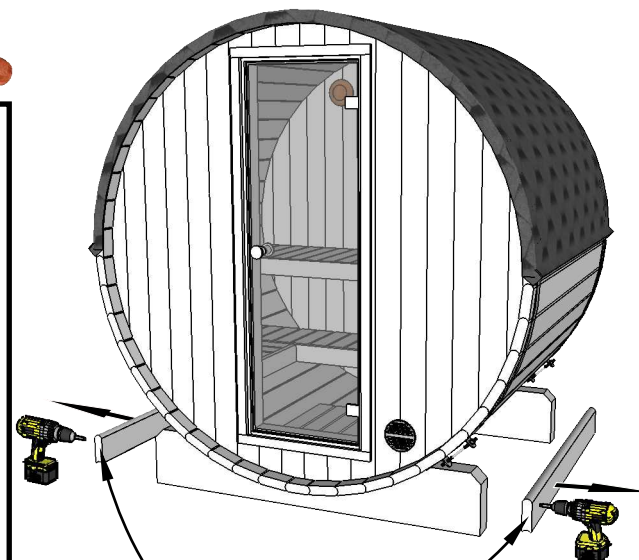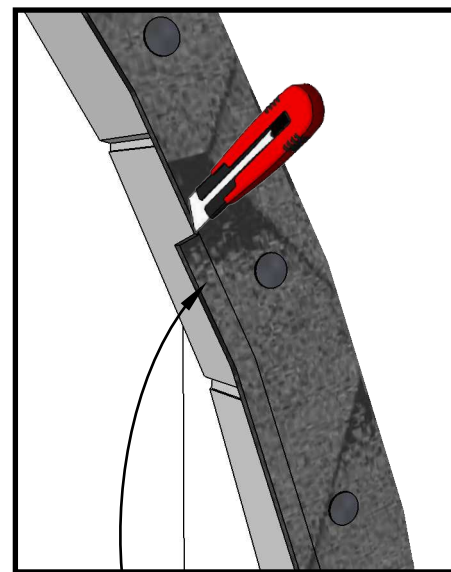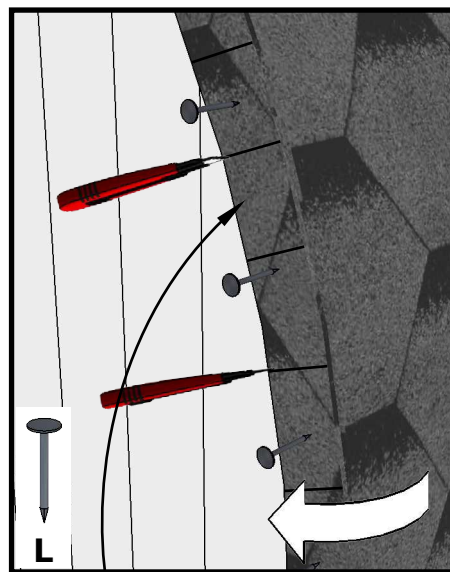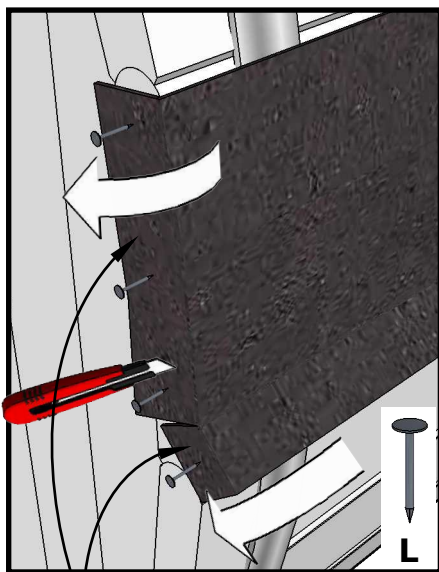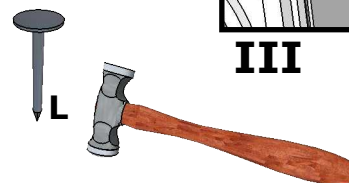

II

Turn the shingles over

Turn shingles over

Cut off

IV

Remove
DET A


Sauna 160, Ø200




Variant without frames.

Frames are not included with every model.


NB! Clapboard assembly with extra line!

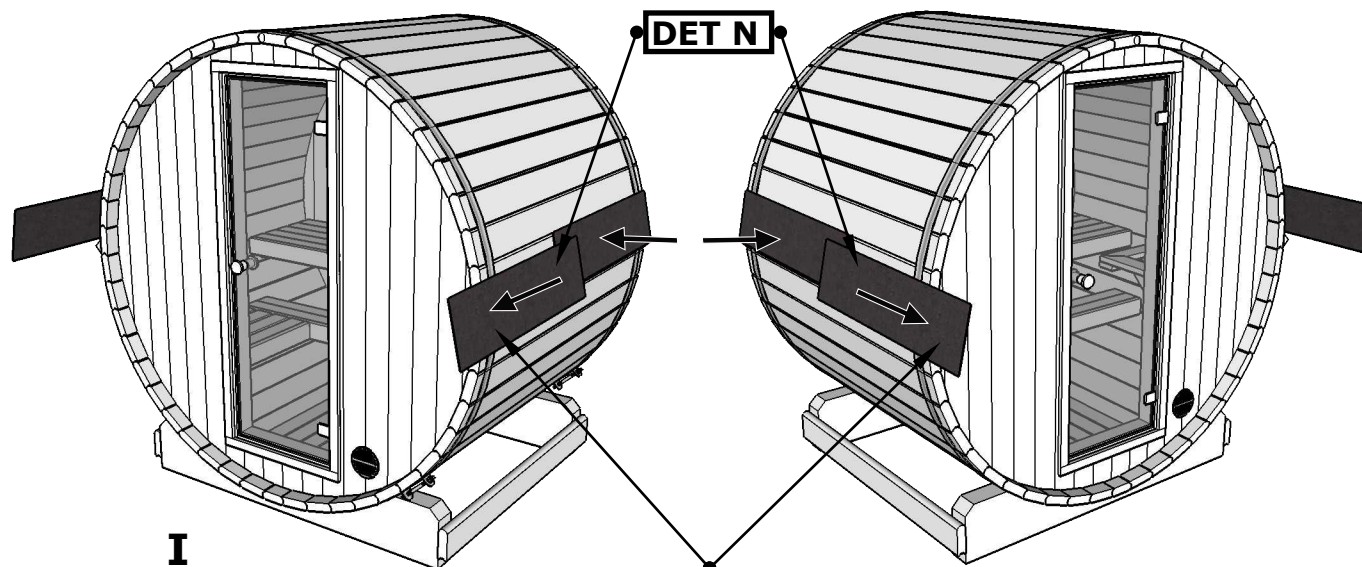

I

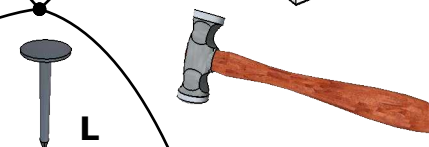

L

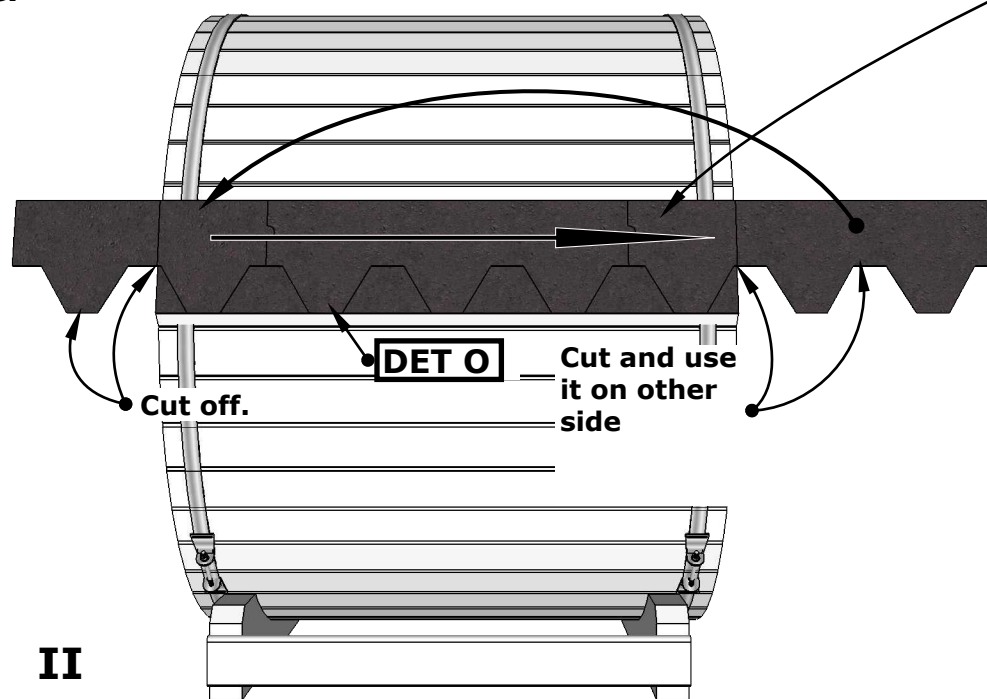


DET O

Cut off.

Cut and use it on other side

II

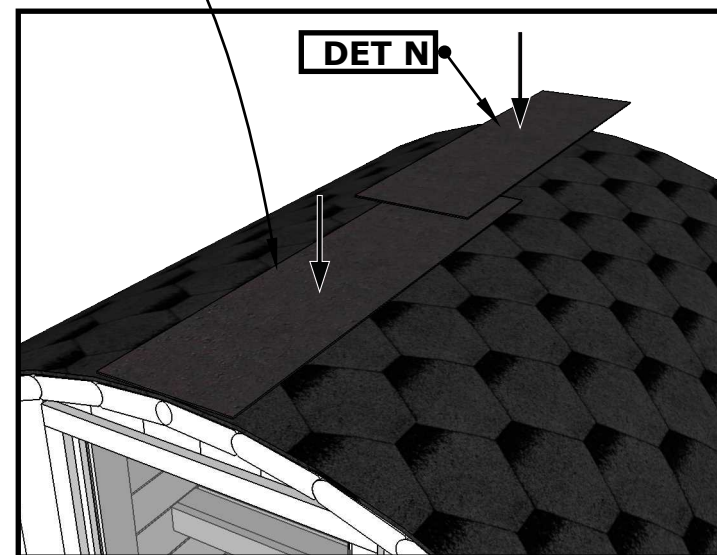

DET N

Sauna 160, Ø200



Variant without frames.

Frames are not included with every model.

