



Hitch Installation Instruction



REV.20240901

Part#	HT-X30201	Application	For 2009-2020 Dodge Journey					
Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B (For Hitch Installation)	1#	Square Hole Spacer	2	6X32X75-13	4#	Fishwire	2	For installing bolts
	2#	Hex Flange nut	6	M12X1.75	5#	Square Hole Spacer	4	6X25.4X51-13
	3#	Carriage bolt	6	M12X1.75-40	6#	Wedge Spacer	2	M12
HW A (For Hitch Assembly)	7#	Hex Bolts	6	M12X1.75-35	9#	Lock Washers	6	M12
	8#	Flat Washers	10	M12	10#	Hex Nuts	4	M12X1.75

Gross Load Capacity When Used As A Weight Carrying Hitch: 4000 LBS. Trailer Weight & 400 LBS. Tongue Weight.
Gross Load Capacity When Used As A Weight Distribution Hitch: 4000 LBS. Trailer Weight & 400 LBS. Tongue Weight.

DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

No Drilling Required

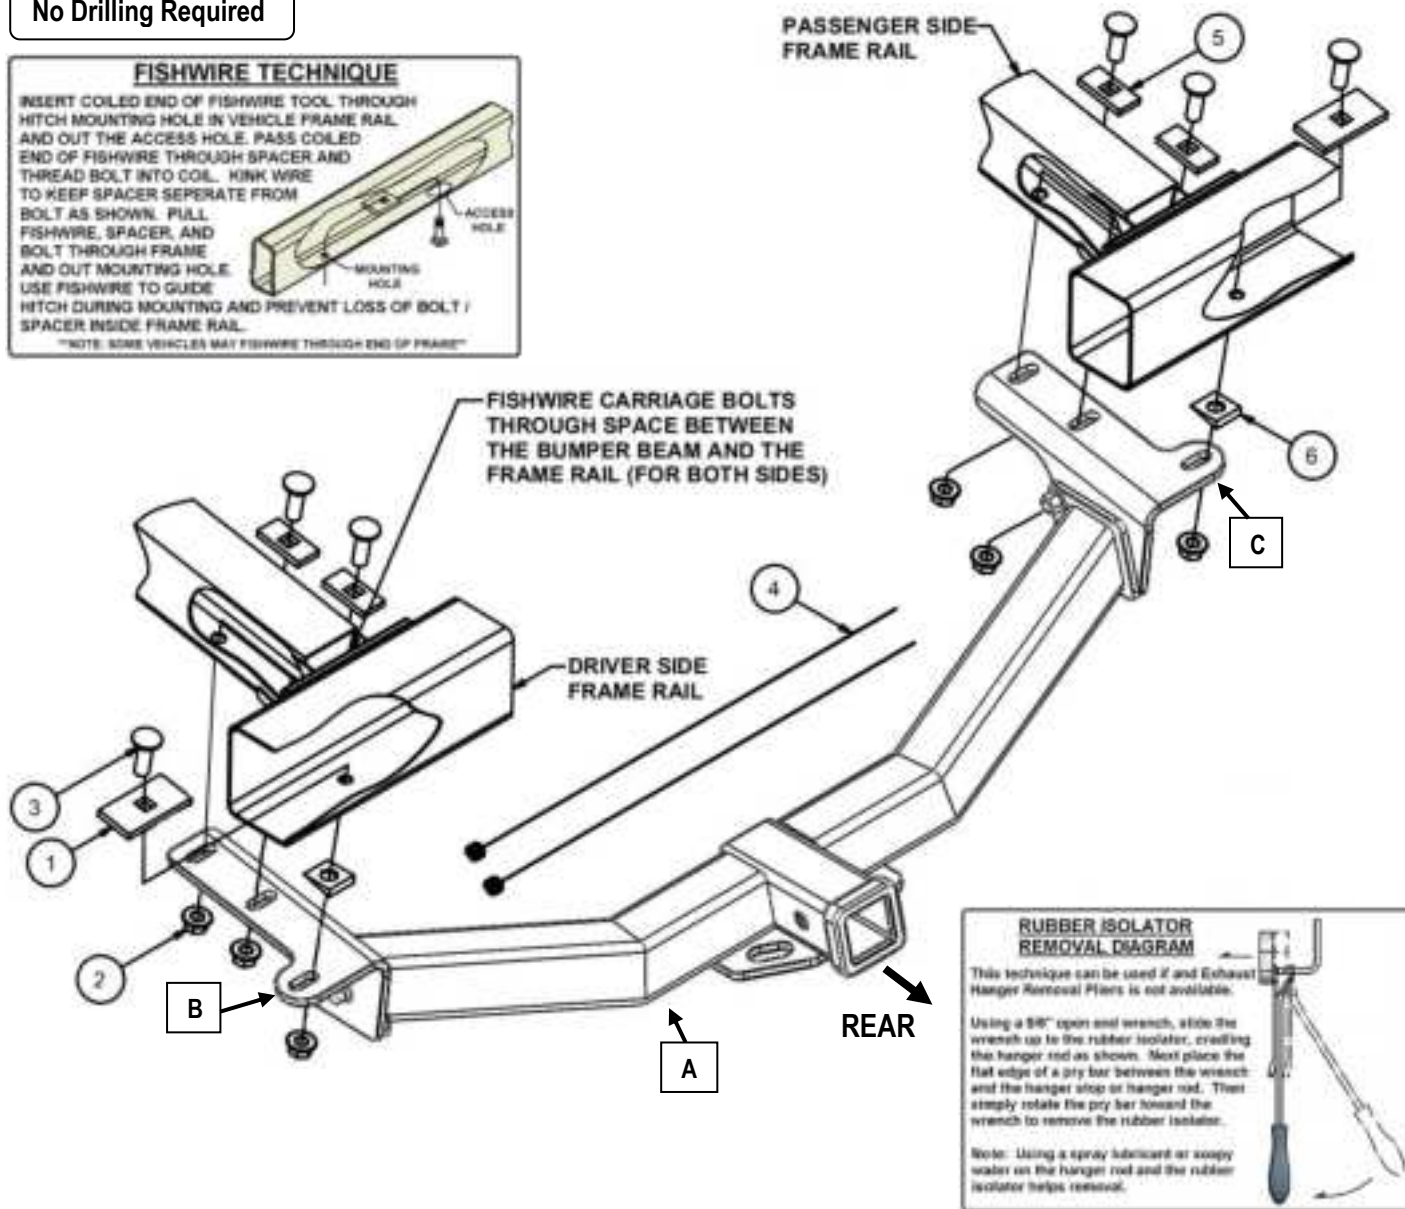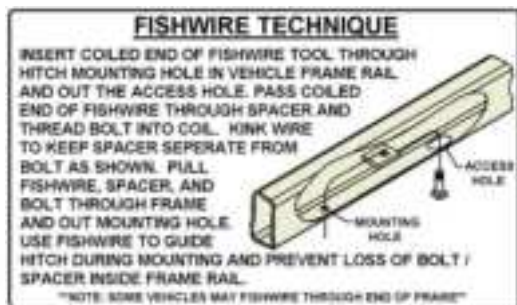







The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instruction

REV.20240901







Part#	HT-X30201	Application	For 2009-2020 Dodge Journey
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (6) M12X1.75-35mm Hex Bolts, (10) M12 Flat Washers, (6) M12 Lock Washers, (4) M12 Hex Nuts.(Hardware in "HW A").		
2	Lower exhaust by removing rubber isolators (3 each side) as shown in the above diagram. NOTE: Support exhaust from underneath after lowering.		
			
3	Fishwire the carriage bolts and small square hole spacers through the space between the bumper beam and the end of the frame rail for both sides.		
			
4	Fishwire the remaining carriage bolts and large spacers through the bumper beam and into position.		
			
5	Raise hitch into position with the "wedge" shaped spacers between as shown and secure with hex flange nuts. NOTE: If equipped, temporarily disconnect driver side electrical connector for clearance while securing the hitch.		

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instruction

REV.20240901

Part#	HT-X30201	Application	For 2009-2020 Dodge Journey
			
6	Torque M12 fasteners to 58 ft-lbs.		
			
7	Raise exhaust back into position and reinstall the (6) rubber isolators removed in Step 1. NOTE: Apply lubricant or soapy water to ease installation.		
			
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!