


ASSEMBLING THE KIT

ISO DIN MOUNT: (DIN-E RADIO WITH SIDE MOUNTING HOLES)

1. Snap the ISO DIN side mounting brackets to the back of the mounting panel (1 left and 1 right). Use supplied hardware to bolt them to the back of the kit panel.
2. Load the radio from the REAR of the mounting panel until the nosepiece of the radio comes through the front of the kit.
3. Use the 5mm screws to secure the radio from the sides.

CAUTION:

Rear supporting the radio adds to the installation's structural integrity.

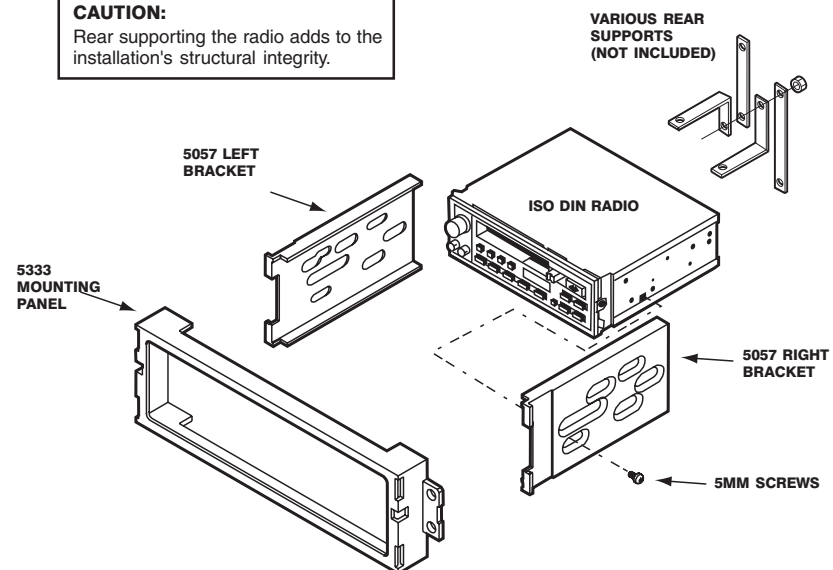

2002-05 Hyundai Accent


RADIO REMOVAL:

1. Open cup holder and extract (2) Phillips head screws from behind.
2. Open glovebox and release stoppers so that glove box is hanging down and release (1) cable from behind.
3. From above gas pedal, release (2) cables.
4. Carefully unsnap perimeter of dash bezel and slowly remove dash bezel. Disconnect and remove.

SCOSCHE®

HY1603

IN-DASH INSTALLATION KIT FOR 2002-2005 HYUNDAI ACCENT

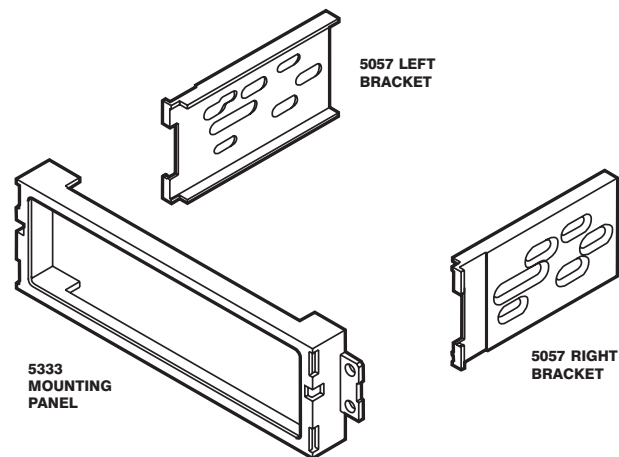

INTRODUCTION

This premium installation kit is for 2002 Hyundai Accent vehicles. Included are all the parts you need to mount your car stereo/cassette or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

CAUTION: Disconnect your vehicle's negative battery terminal before the installation to help prevent electrical damage. We recommend the use of a volt/ohm meter over a test light to check wiring. A test light or grounded wire probe can cause damage to the vehicle's computer and/or diagnostic systems. Avoid all factory air bag wiring - air bags can accidentally deploy causing serious injury or death.

NOTES:

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo/cassette player for proper wiring and mounting instructions.

CAR STEREO CONNECTORS

PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS.

HY03
2000-UP Hyundai



LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (#HY1603) in 2002 Hyundai Accent Vehicles. Scosche Industries, Inc. can not be held responsible for discrepancies/inconsistencies that may occur due to the automobile during the installation of components while using this booklet.