


HZQD-V1

FTOFWF-9003


FTOFWF-9004















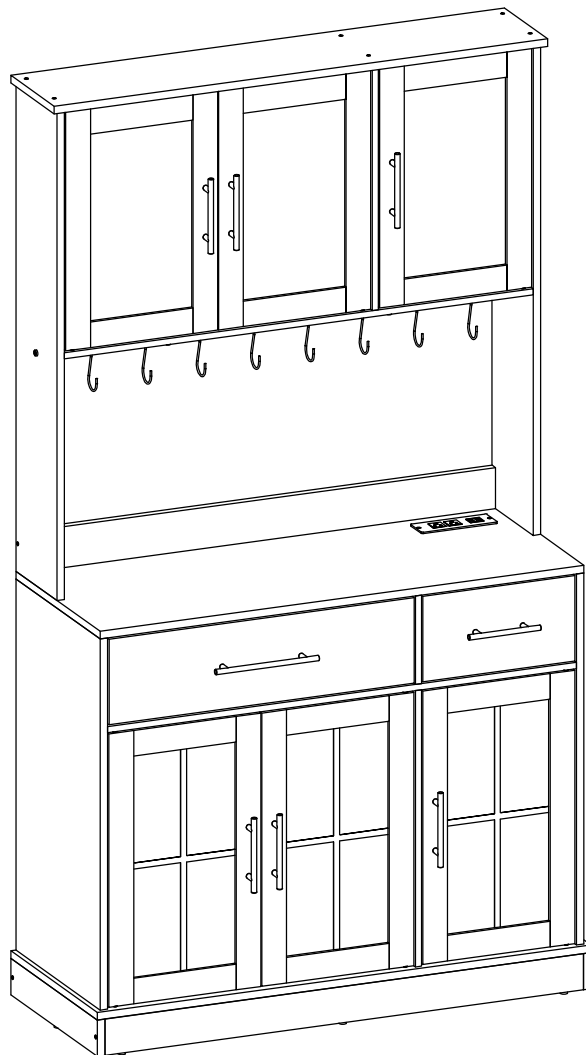


















Kitchen Pantry Cabinet




















Notice:

1. Follow the installation instructions. Please confirm all accessories are present before installation.
2. Do not fully tighten the screws during initial assembly. Fully tighten screws only after all pieces are correctly assembled.
3. If you encounter any problems during installation, please contact our customer service.

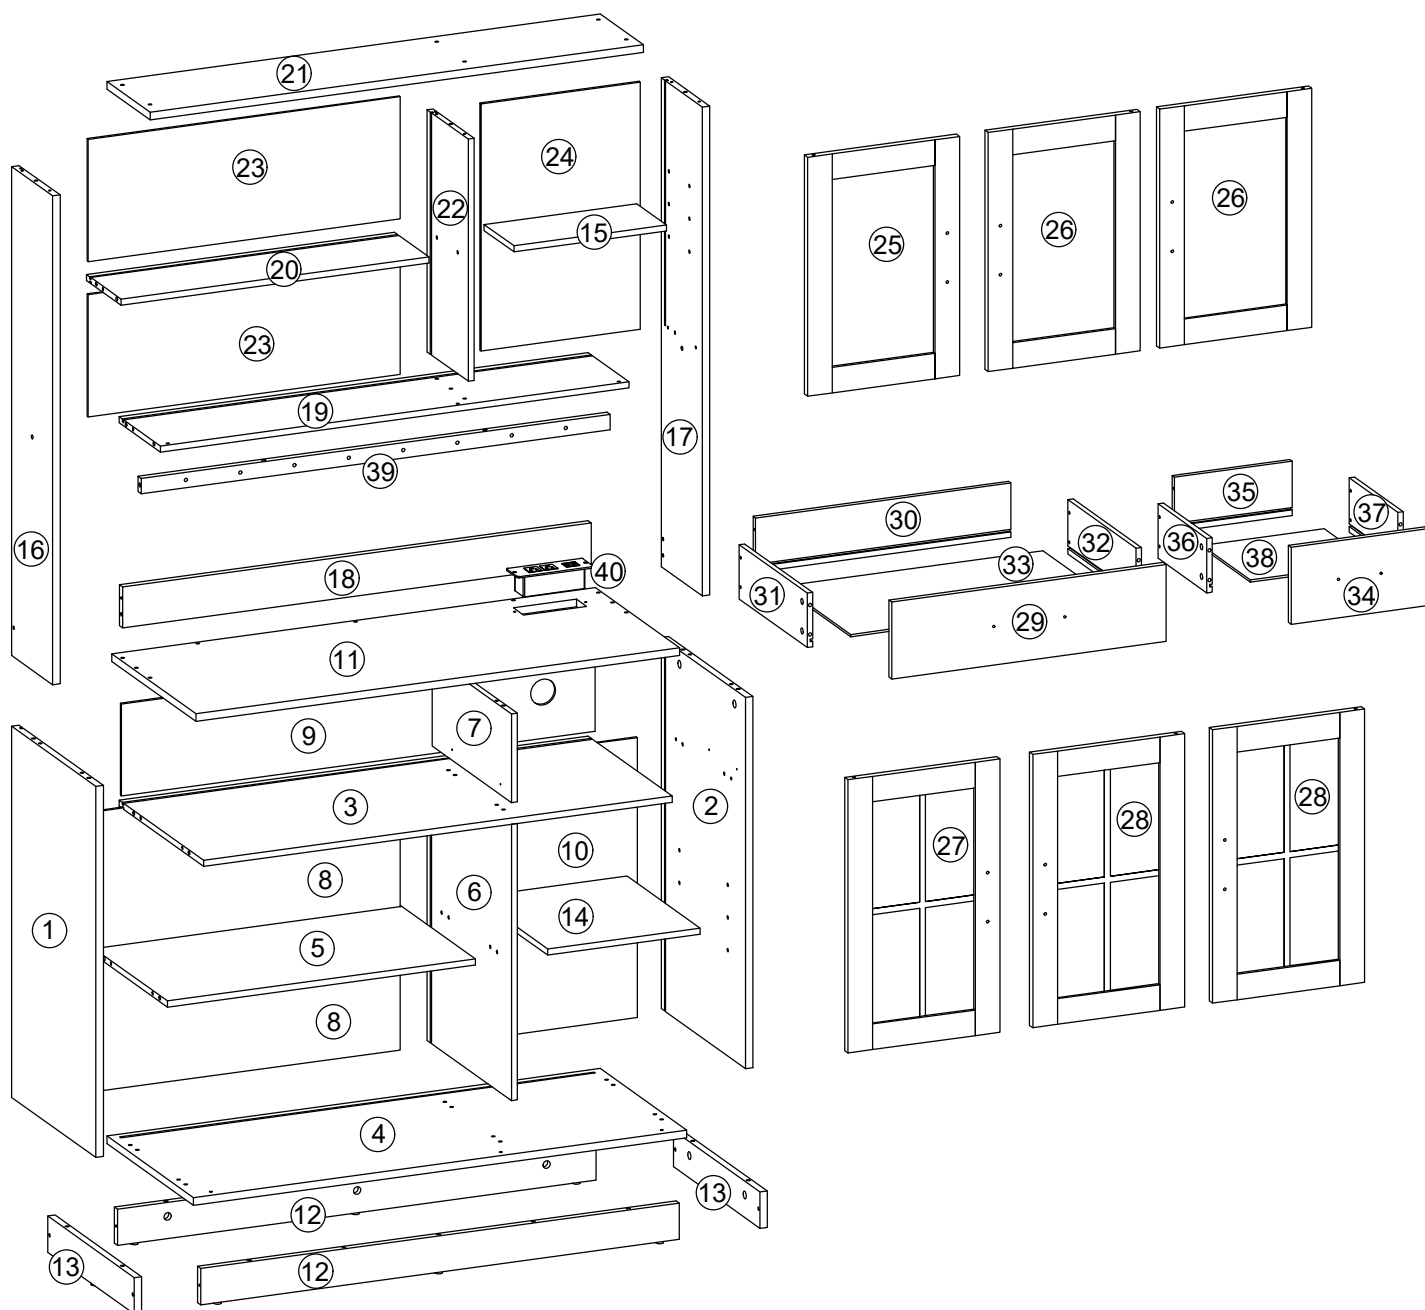


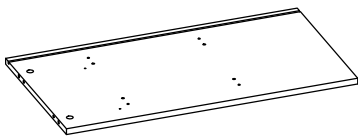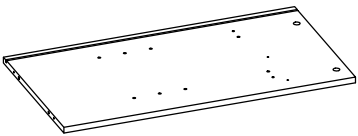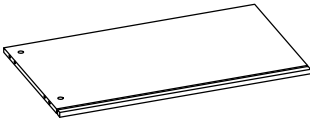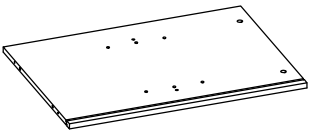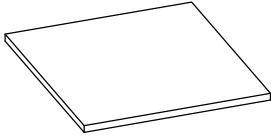① x1 	② x1 	③ x1 	④ x1 
⑤ x1 	⑥ x1 	⑦ x1 	⑧ x2 
⑨ x1 	⑩ x1 	⑪ x1 	⑫ x2 
⑬ x2 	⑭ x1 	⑮ x1 	⑯ x1 
⑰ x1 	⑱ x1 	⑲ x1 	⑳ x1 

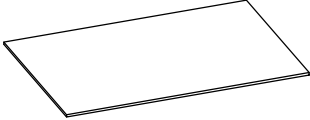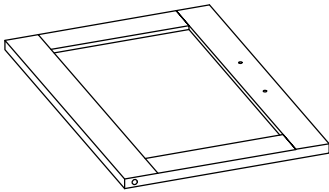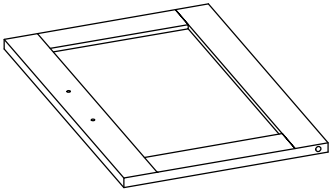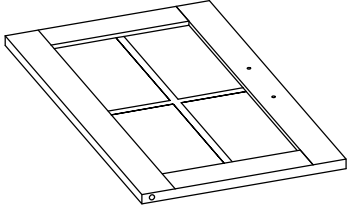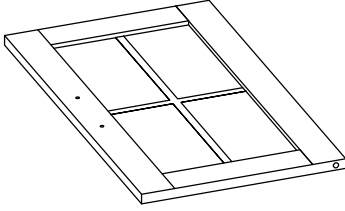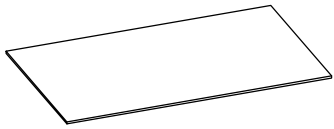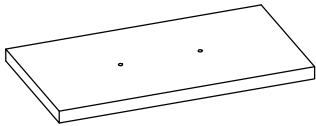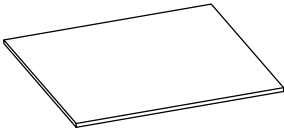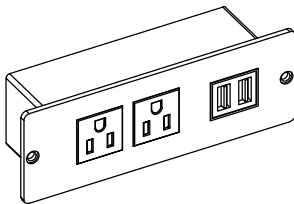21 x1 	22 x1 	23 x2 	24 x1 
25 x1 	26 x2 	27 x1 	28 x2 
29 x1 	30 x1 	31 x1 	32 x1 
33 x1 	34 x1 	35 x1 	36 x1 
37 x1 	38 x1 	39 x1 	40 x1 

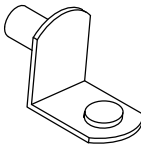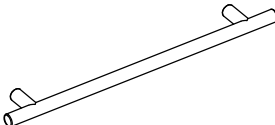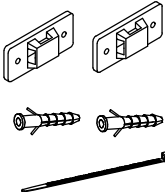
A x 41+3  Ø5x40	B x 4+1  M6x38	C x 14+1  Ø15	D x 24+2  Ø12
E x 38+3  Ø6x35	F x 2  M4x10	G x 4+1  3.5x12	H x 28+2  3.0x12
I x 6+1 	J x 6+1 	K x 8+1 	L x 6  3.0x16
M x 6 	N x 37+3  Ø6x35	O x 1 	P x 7 
Q x 16  M4x25	R x 2  4*35	S x 10+1  3.0x14	T x 8 
U x 1  350mm	V x 1  250mm	TOOL  3mm  4mm 	

STEP 1

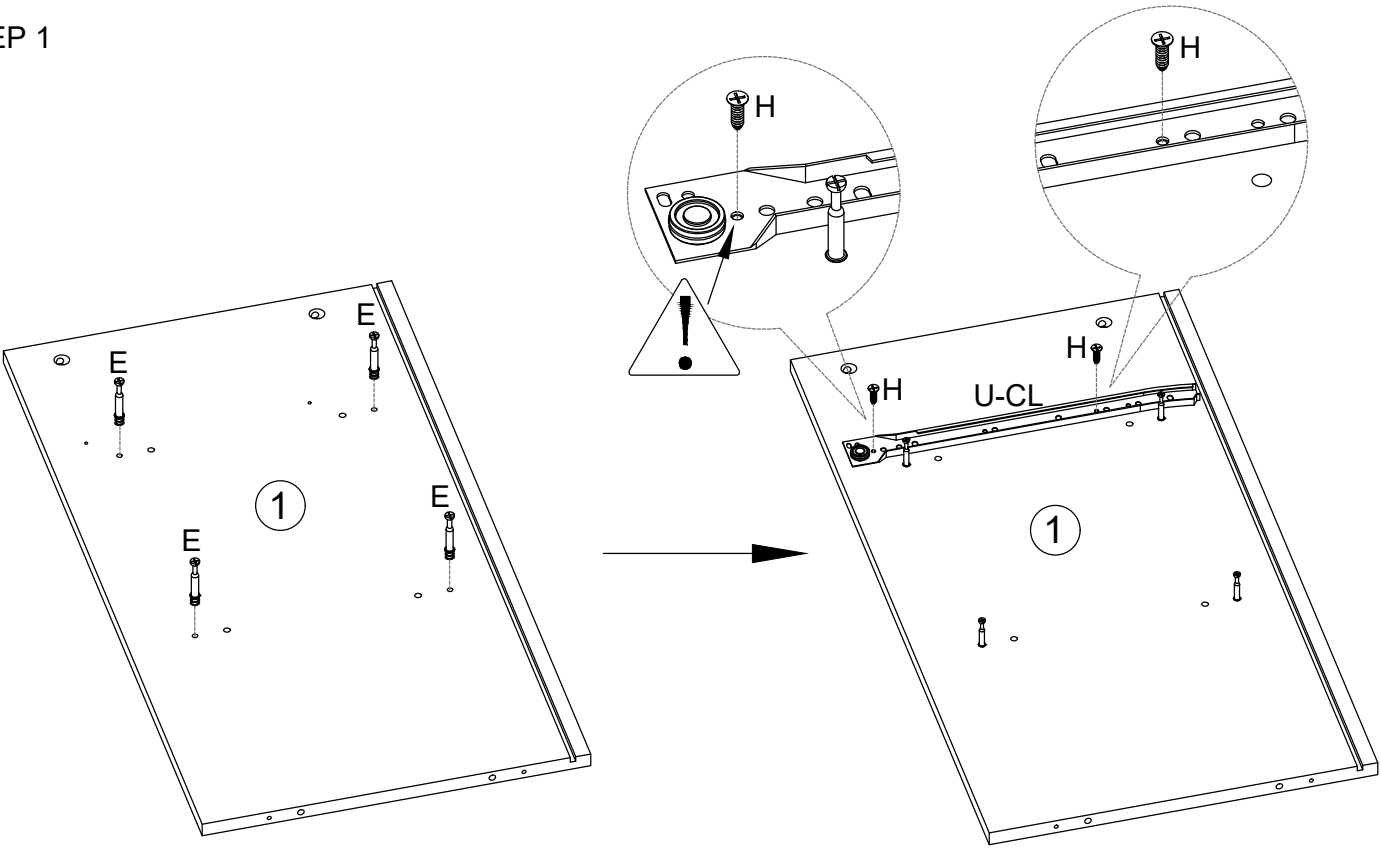


H		x2	
U		x1	E  x4

STEP 2

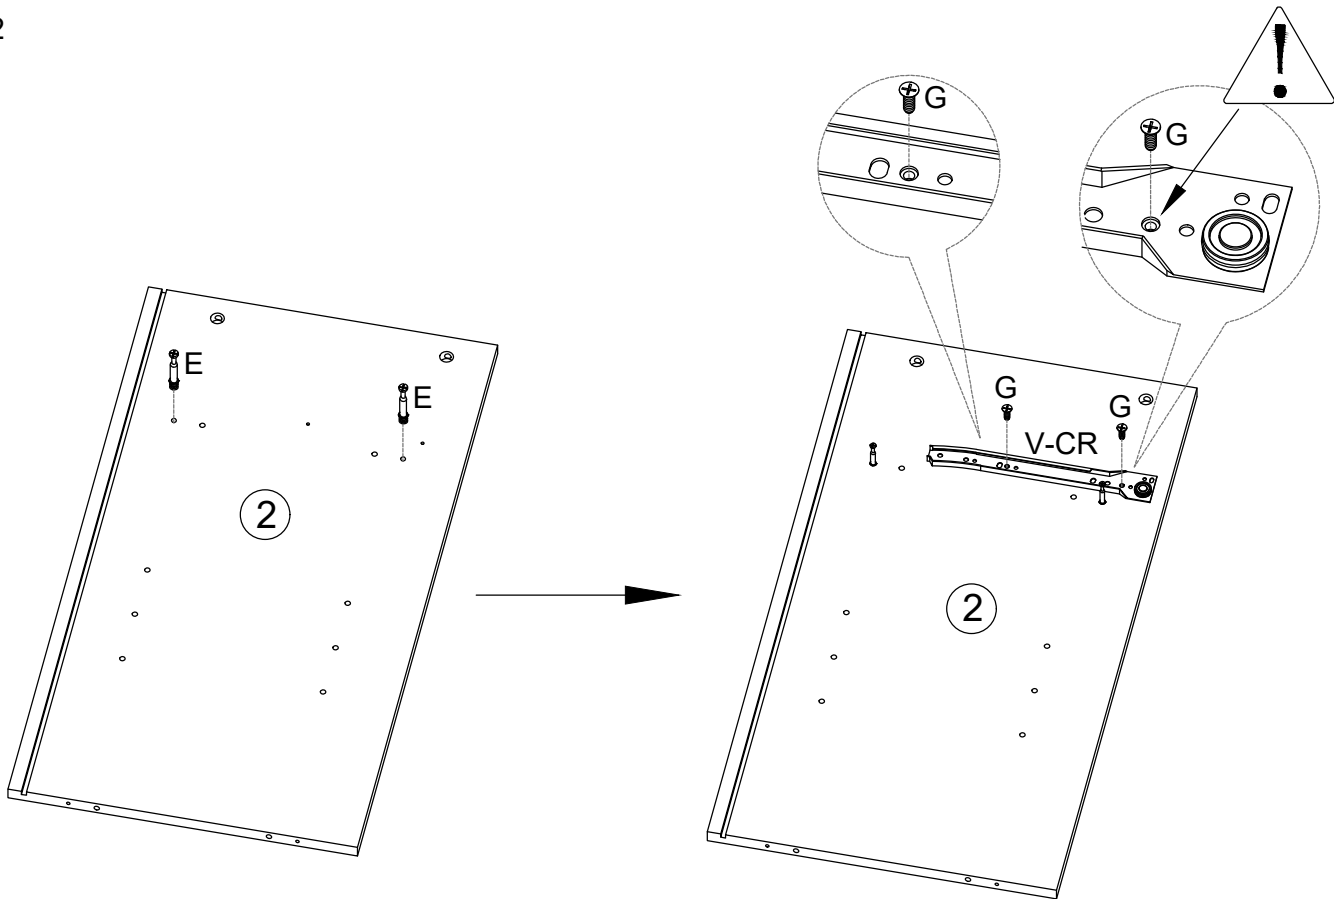


G		x2	
V		x1	E  x2


STEP 3

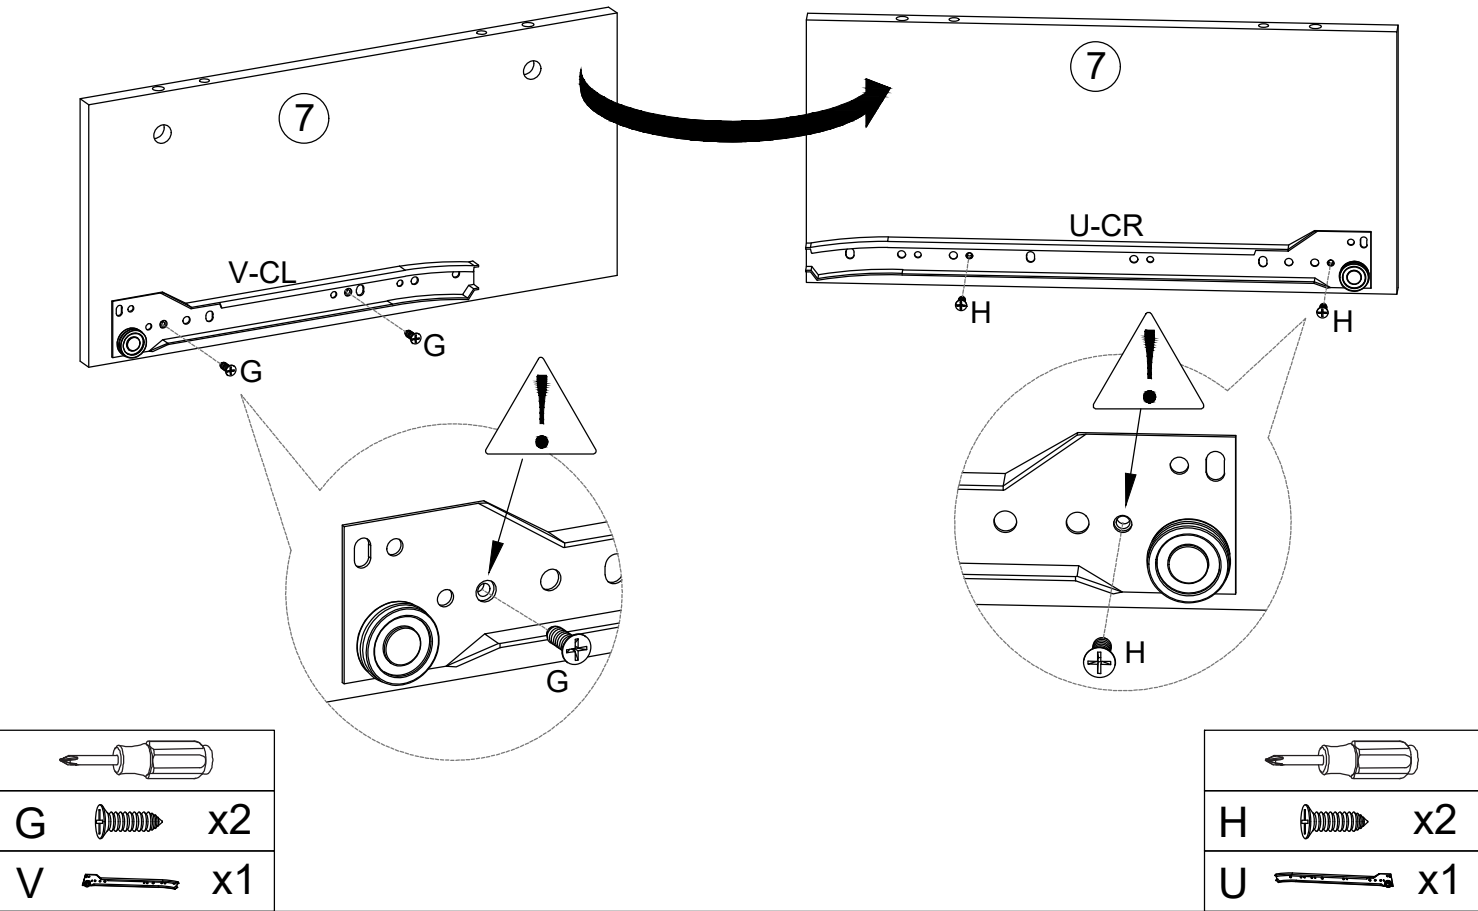


STEP 4

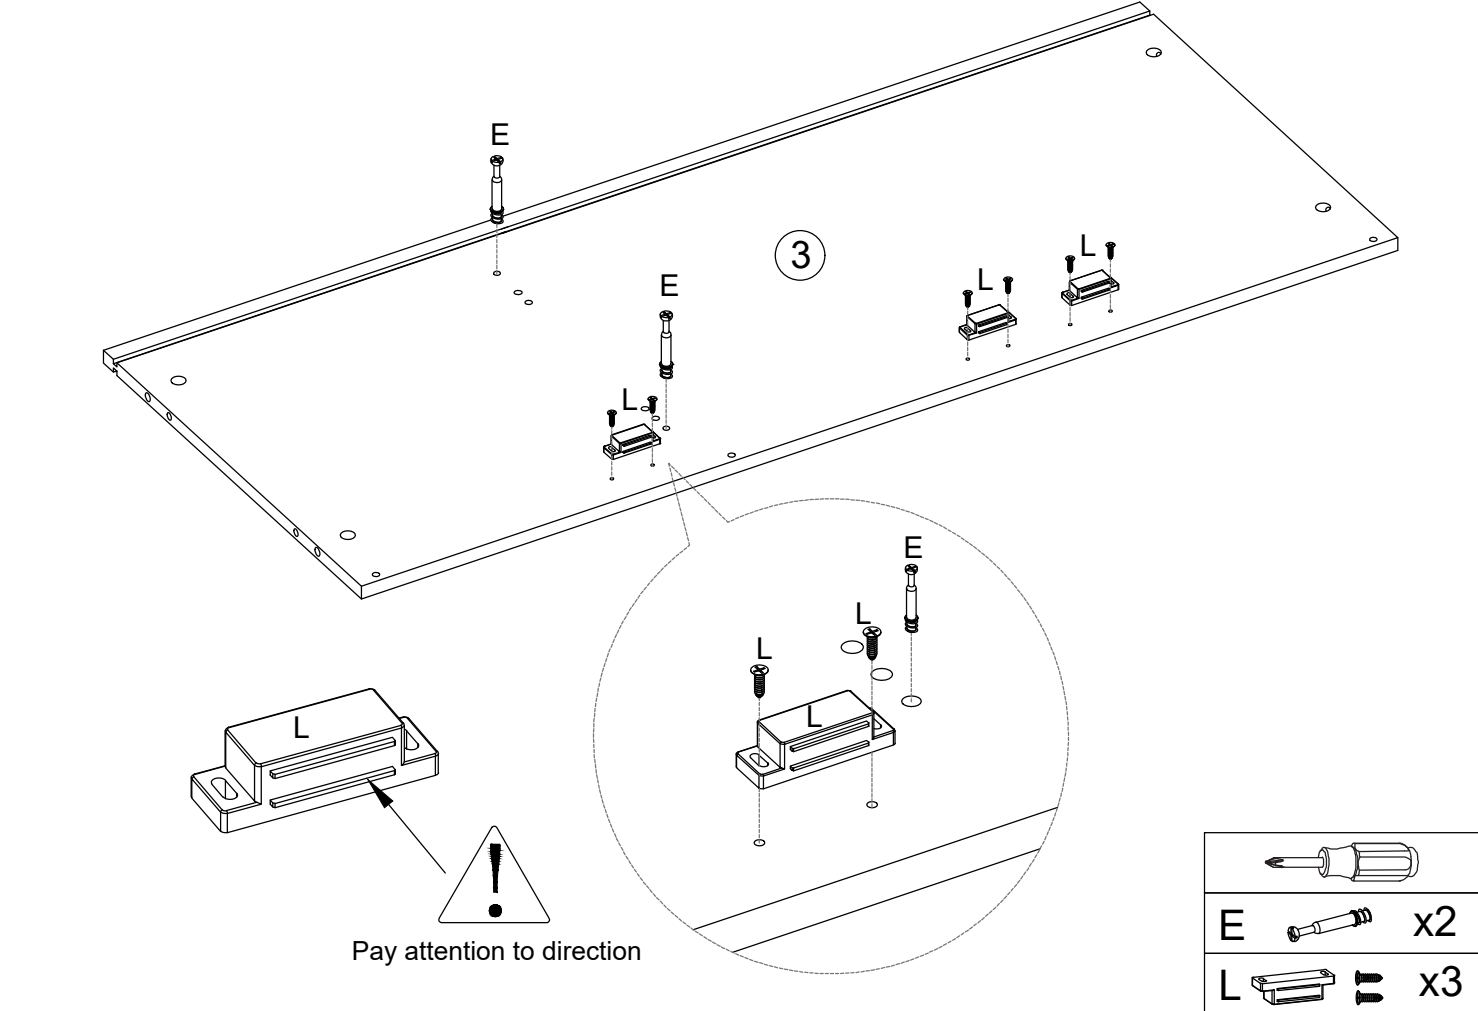


STEP 5

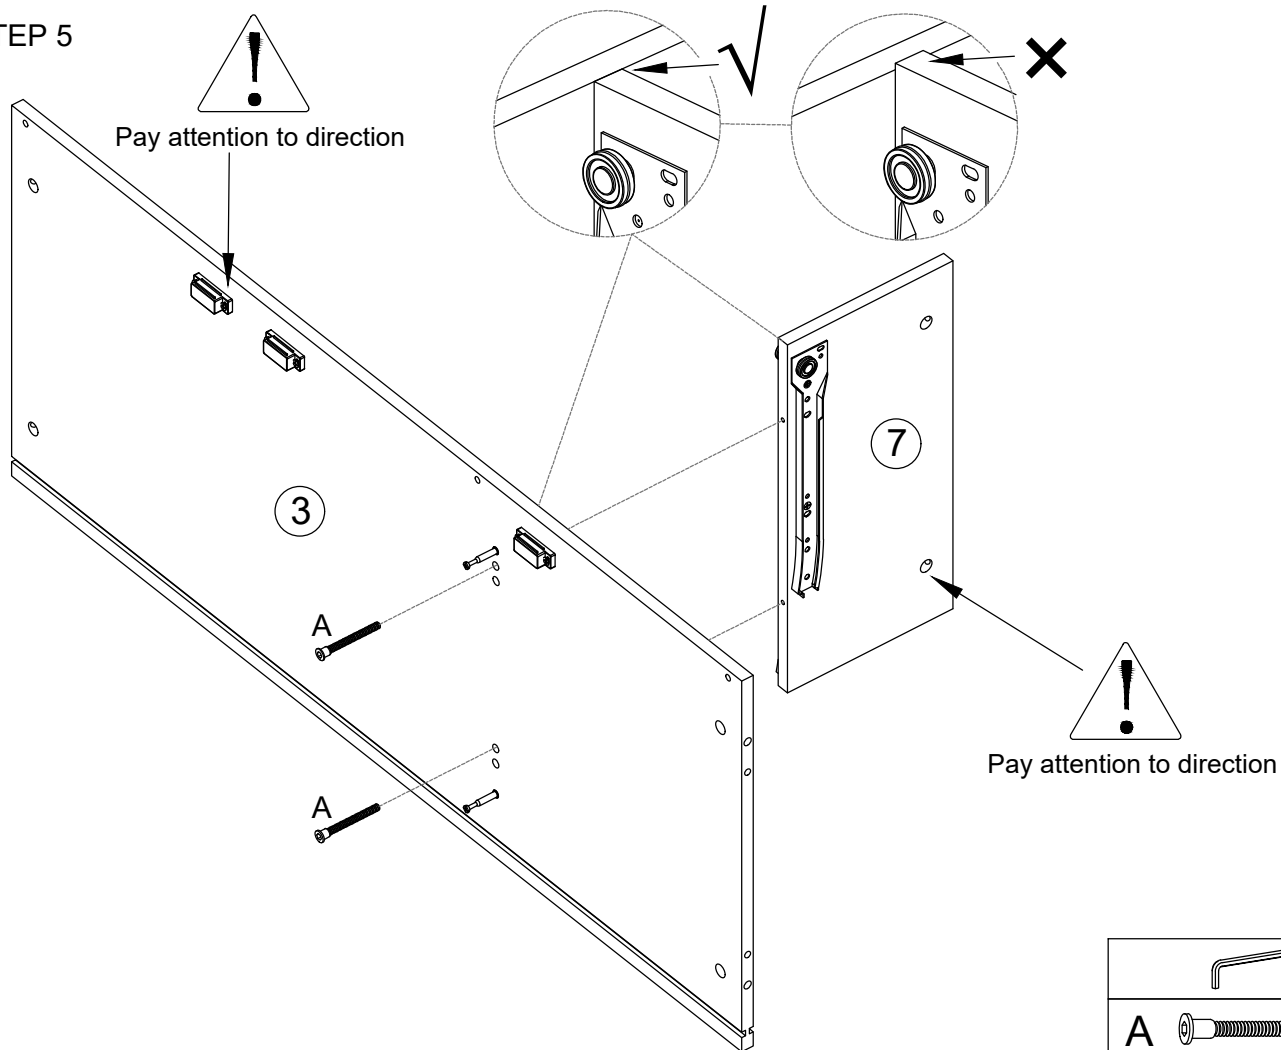

STEP 6

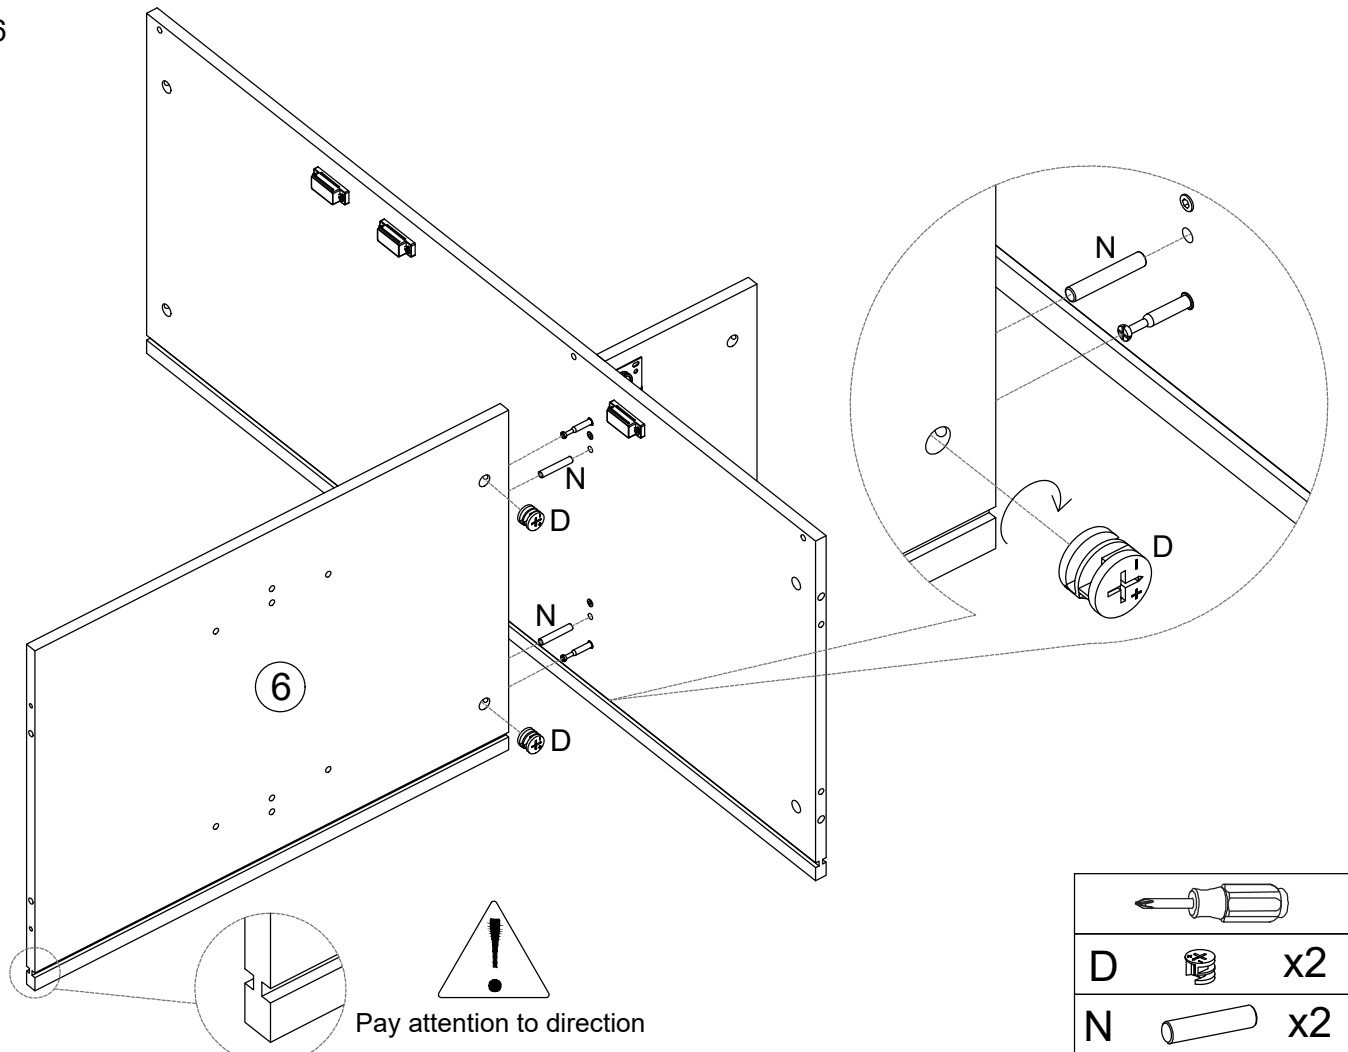


STEP 7

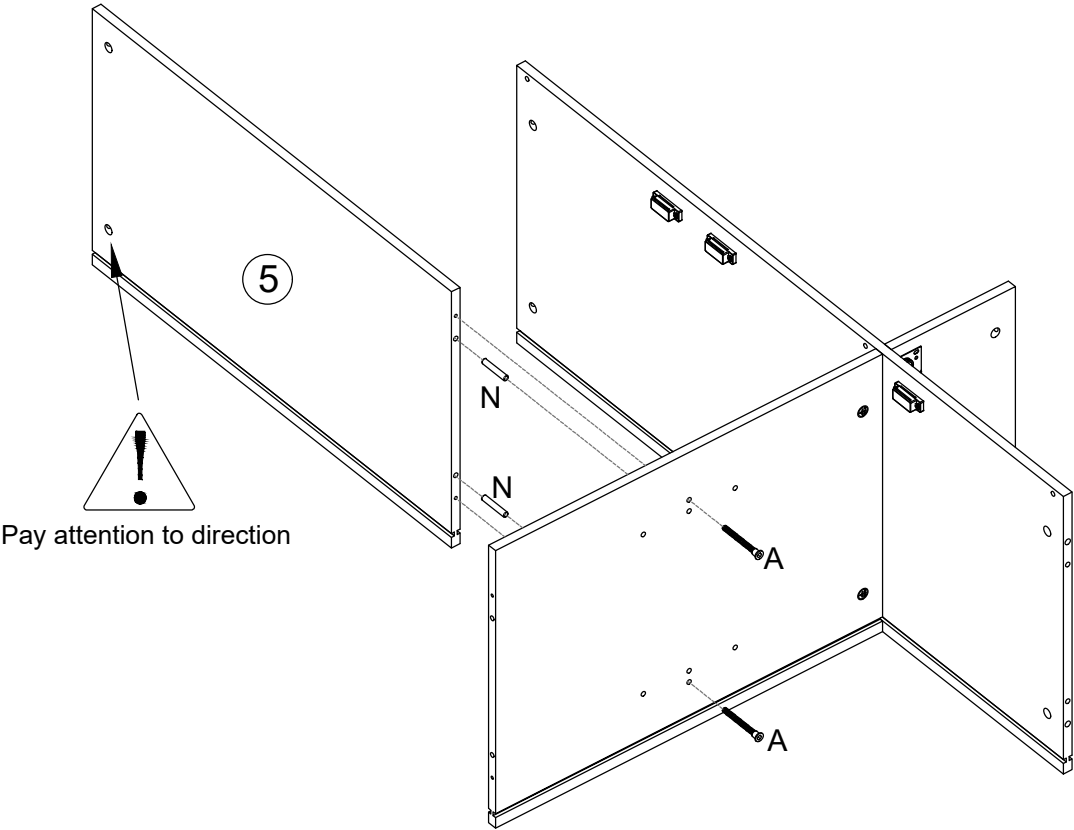


N		x2
		3mm
A		x2

STEP 8

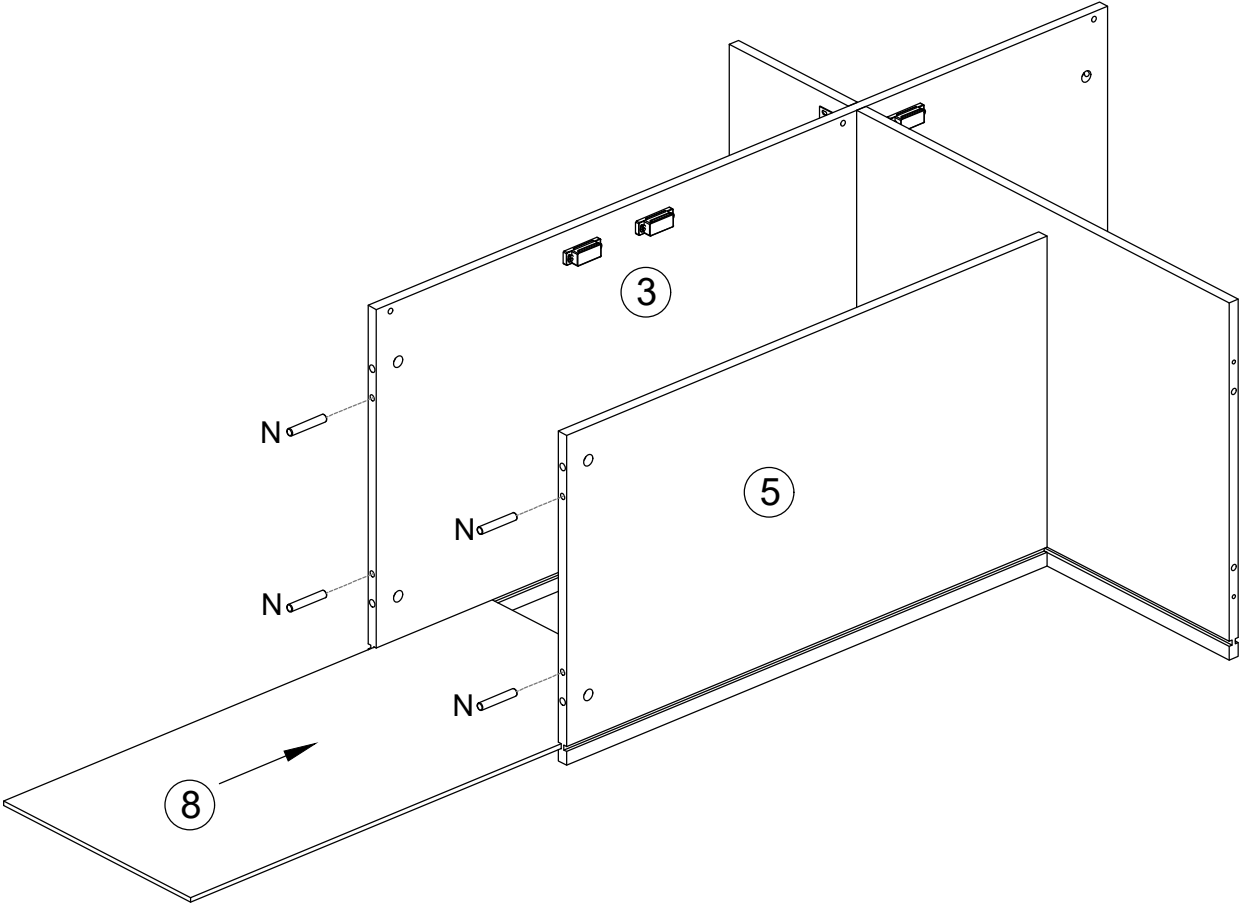


N		x4
---	---	----


STEP 9

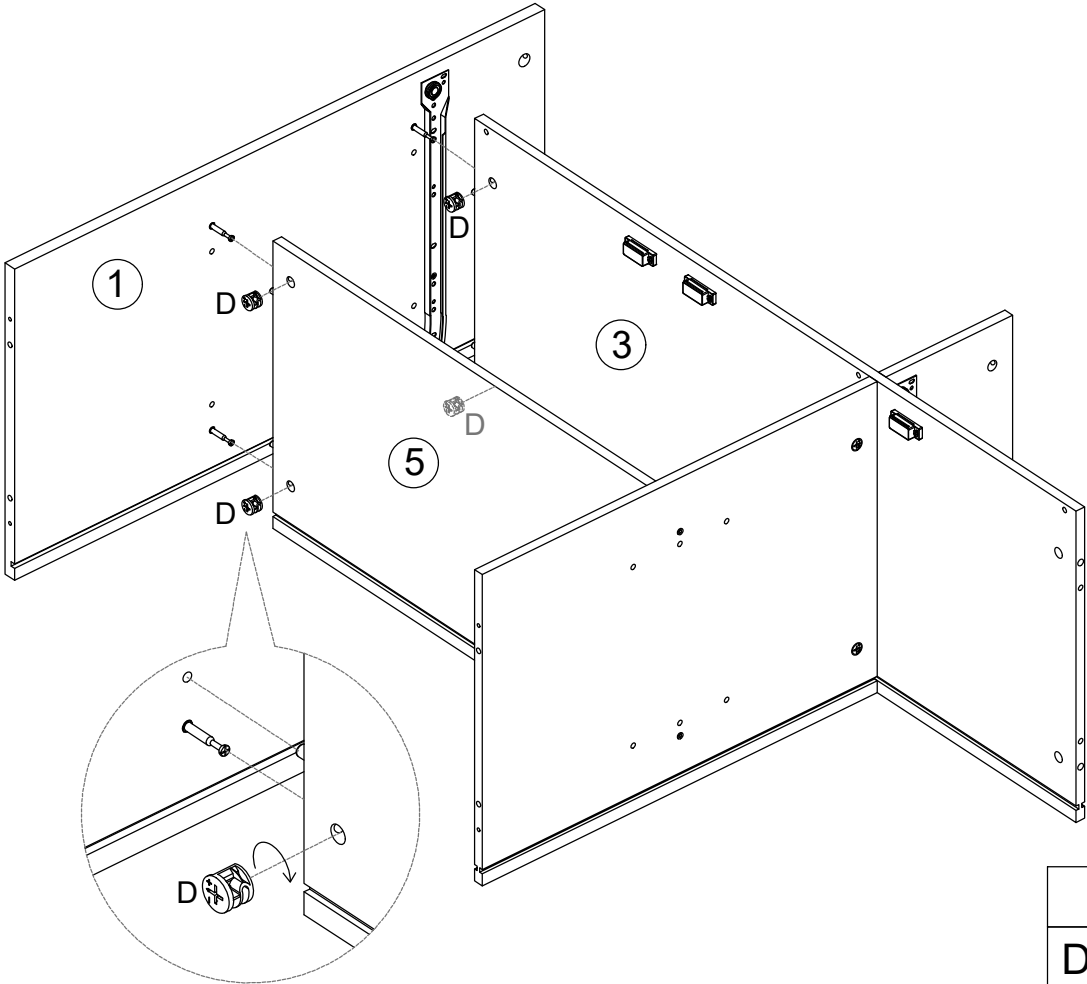

STEP 10

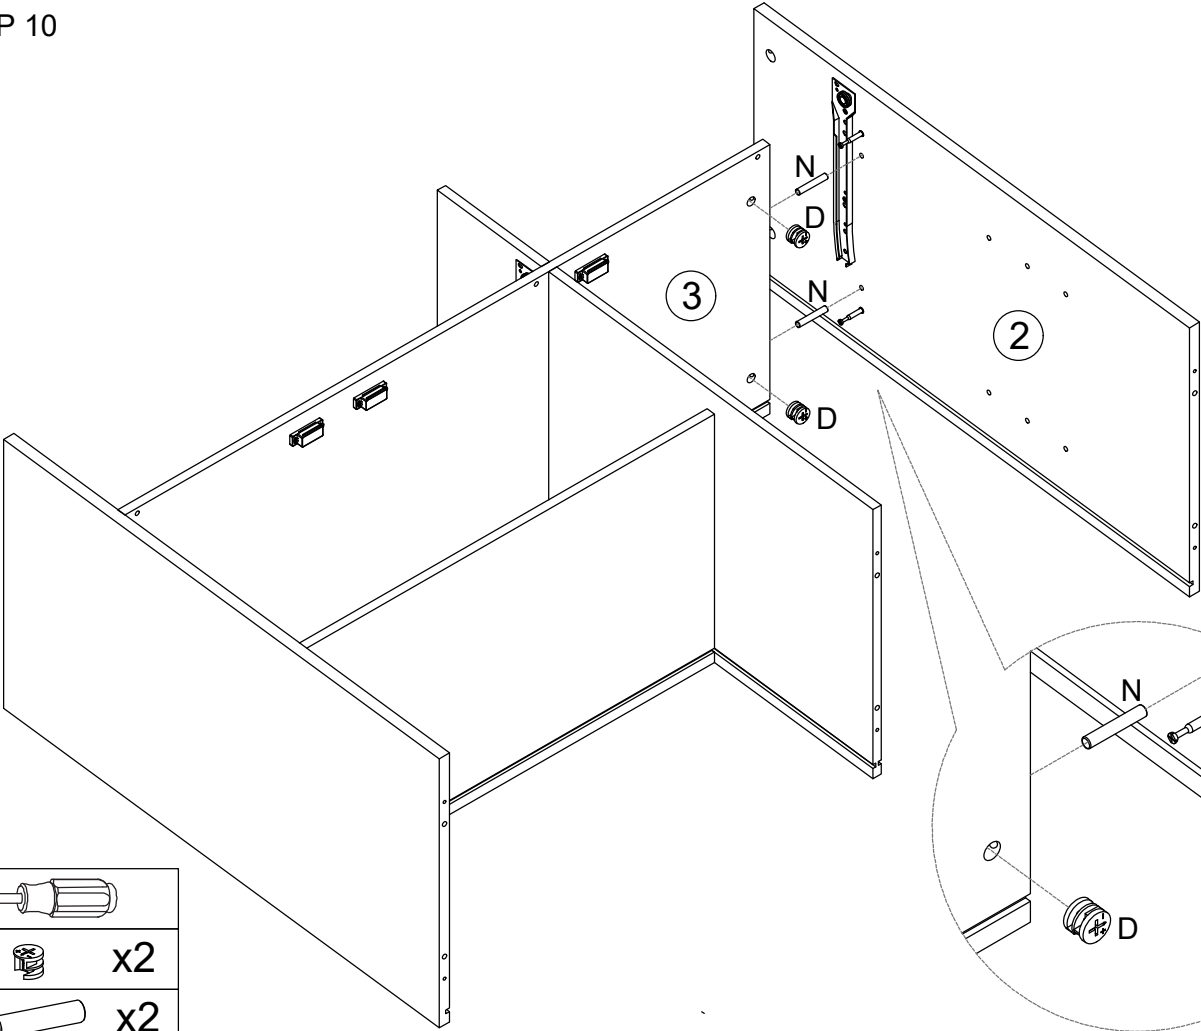


STEP 11

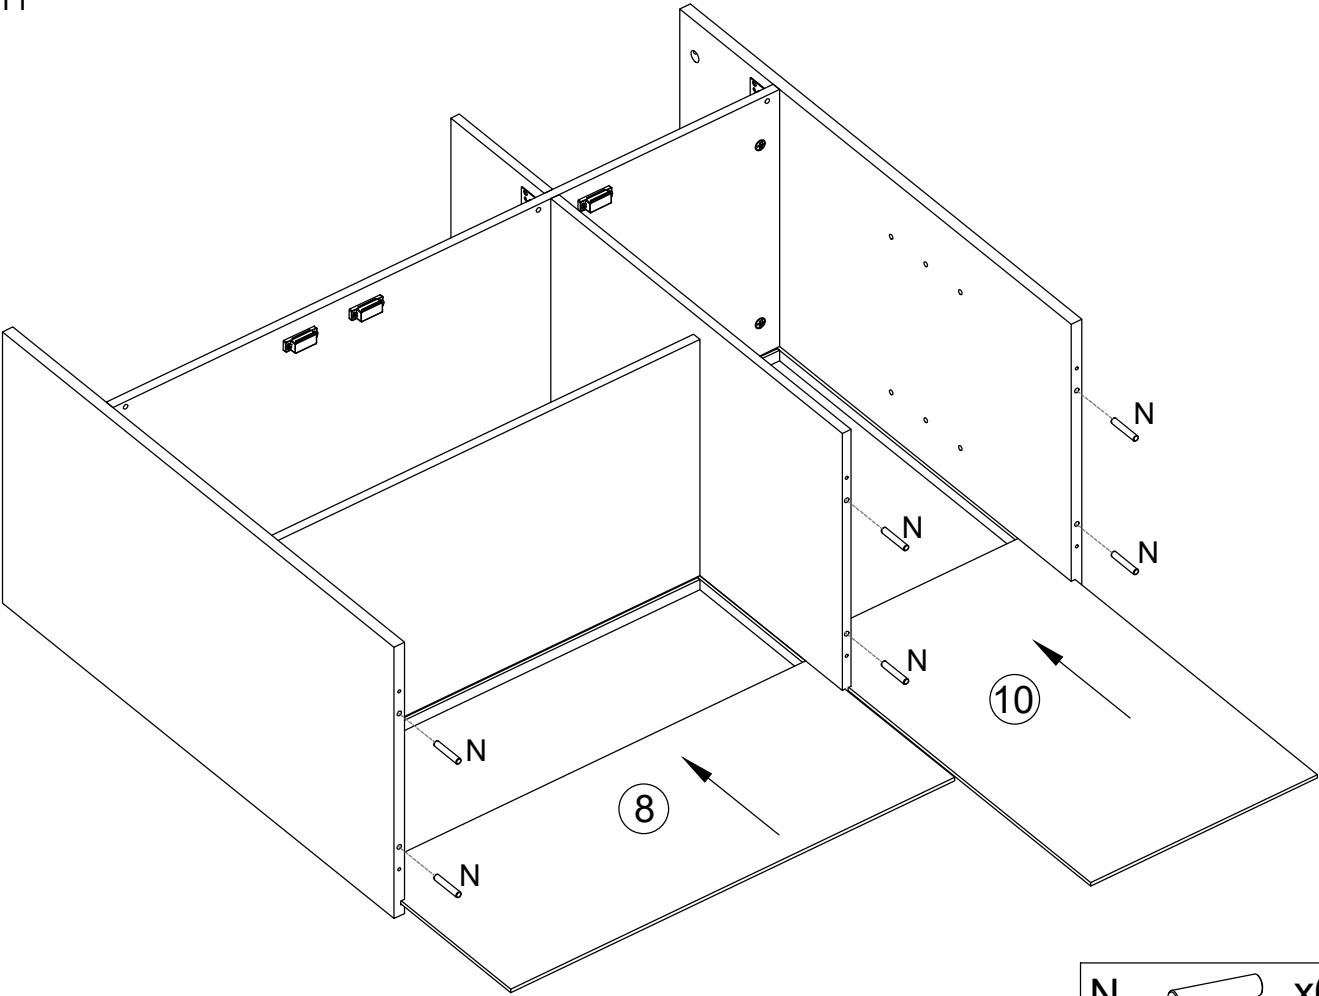


N  x6

STEP 12

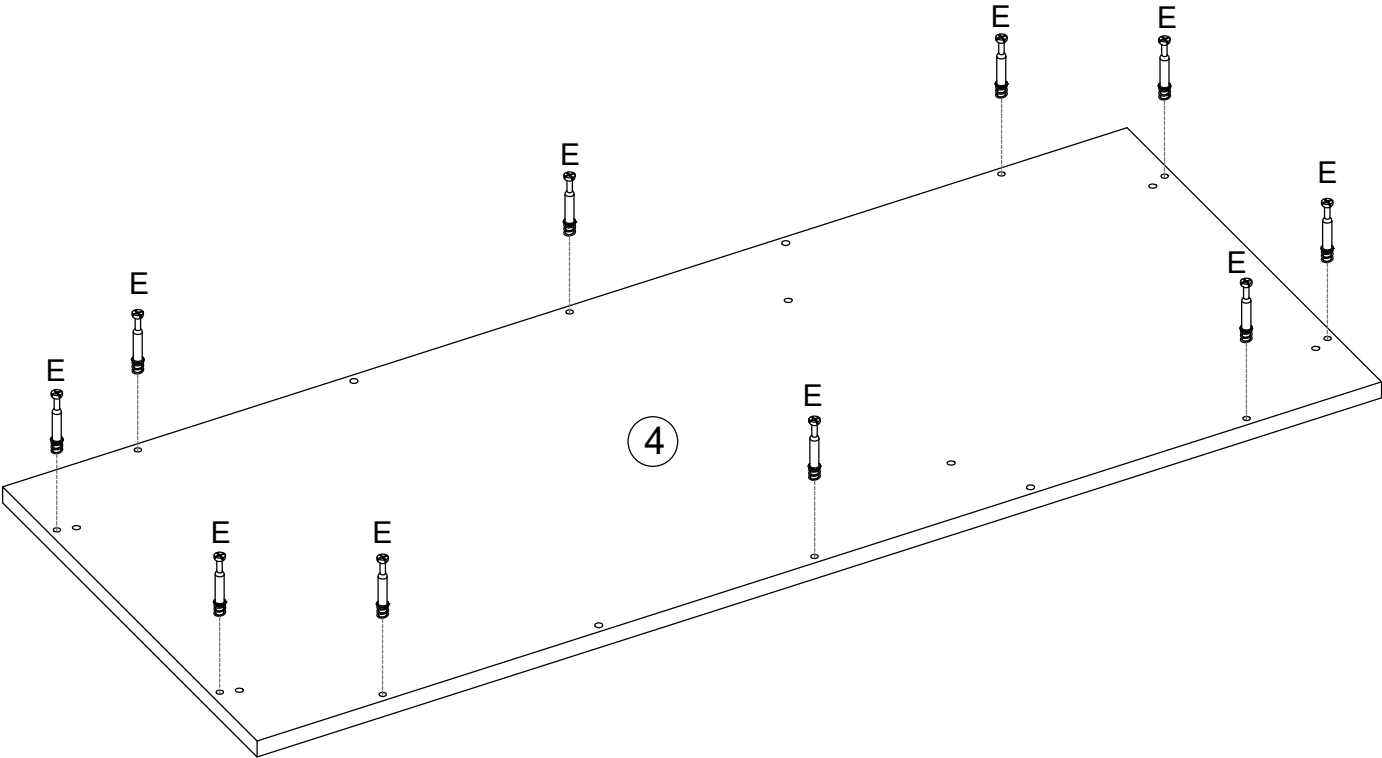



E  x10

STEP 13

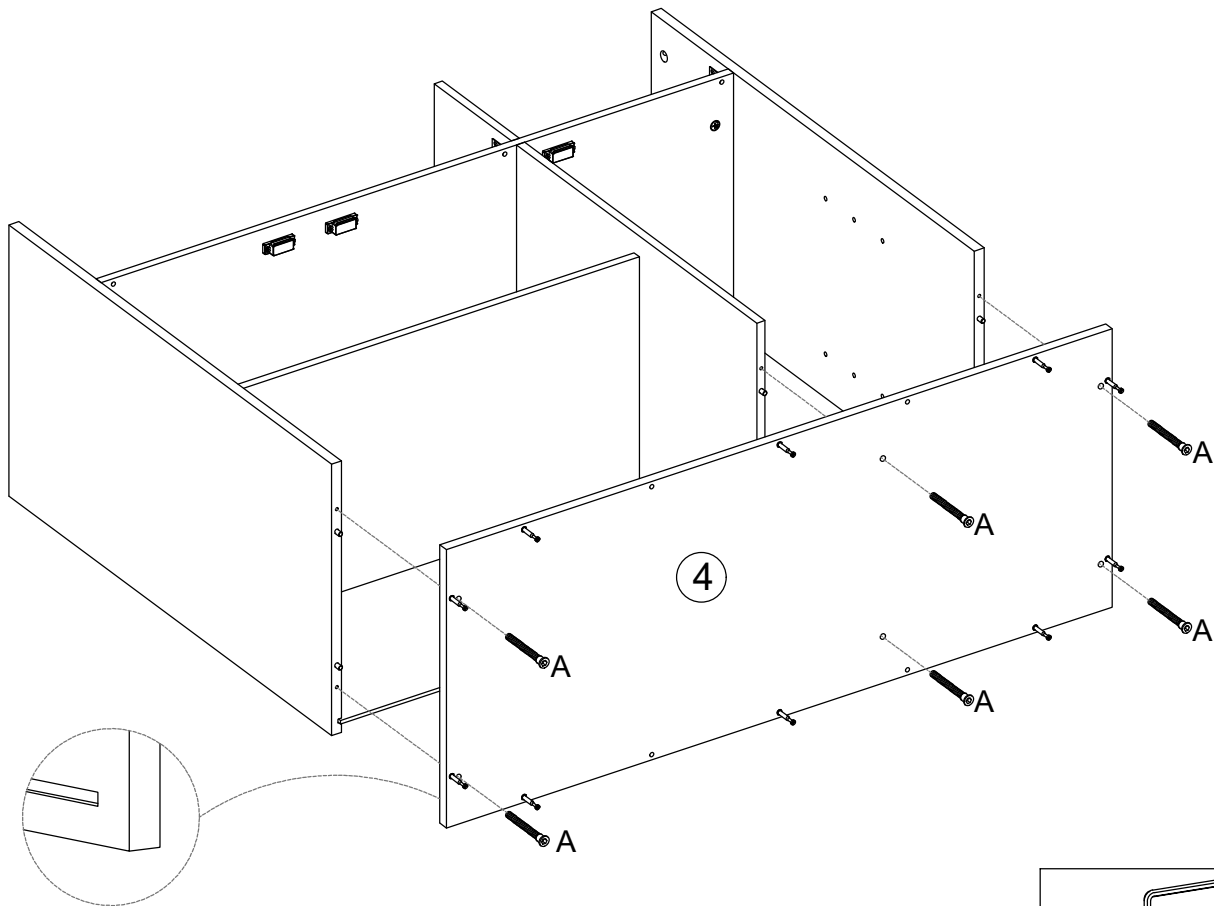


	3mm
A 	x6

STEP 14

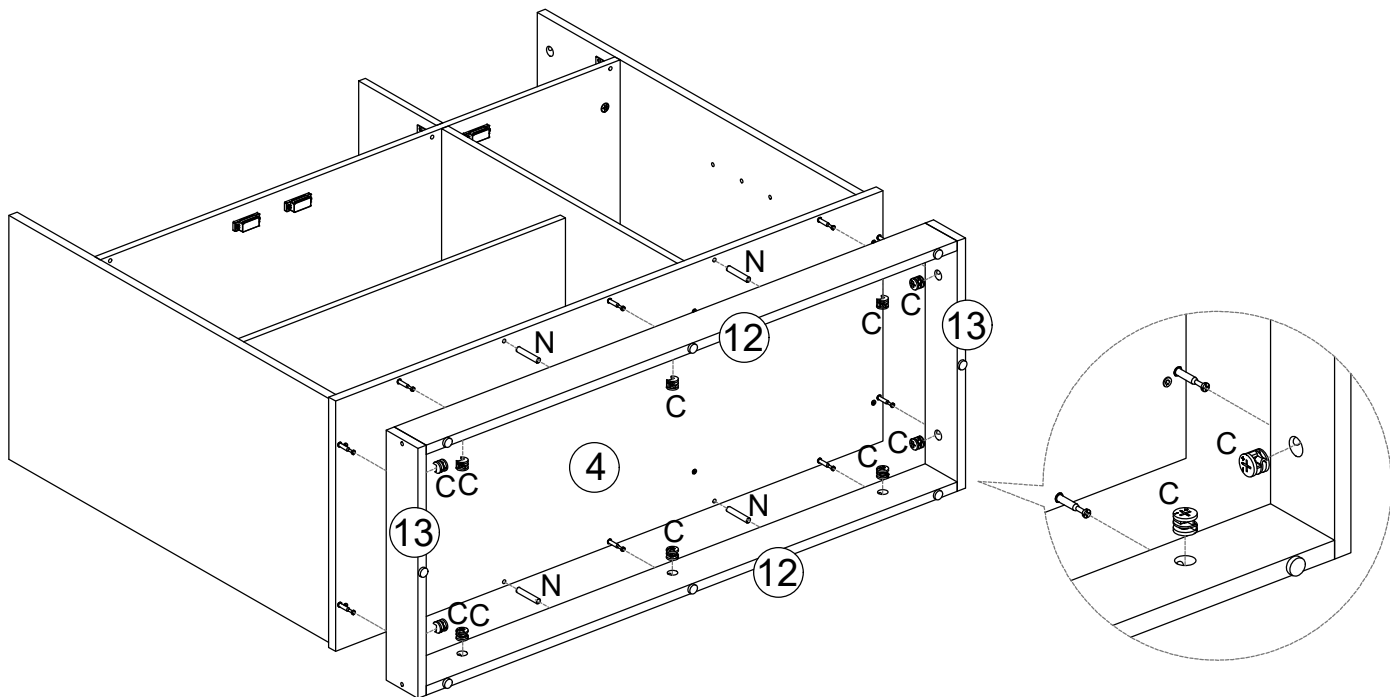


N 	x4
C 	x10

STEP 15

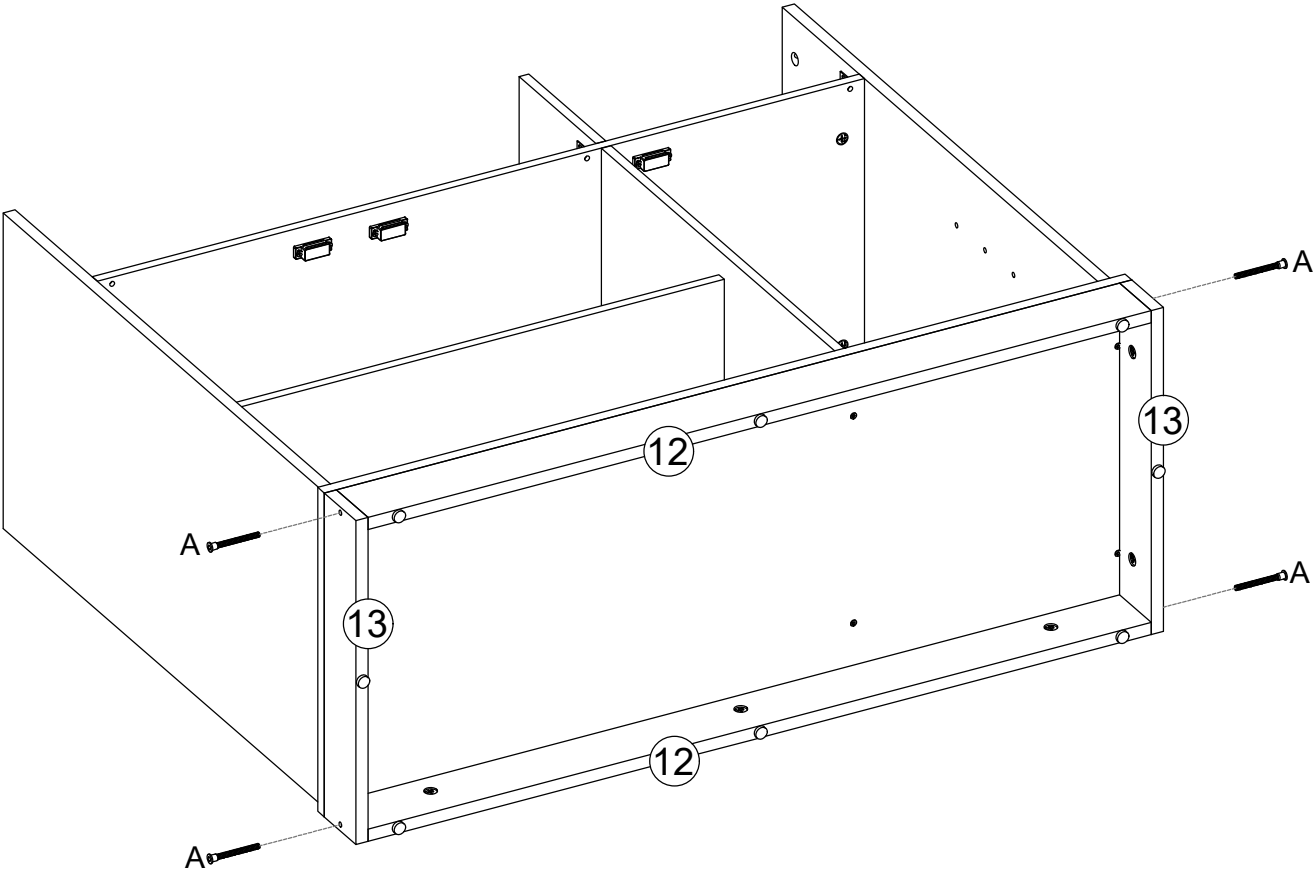


	3mm
A 	x4

STEP 16

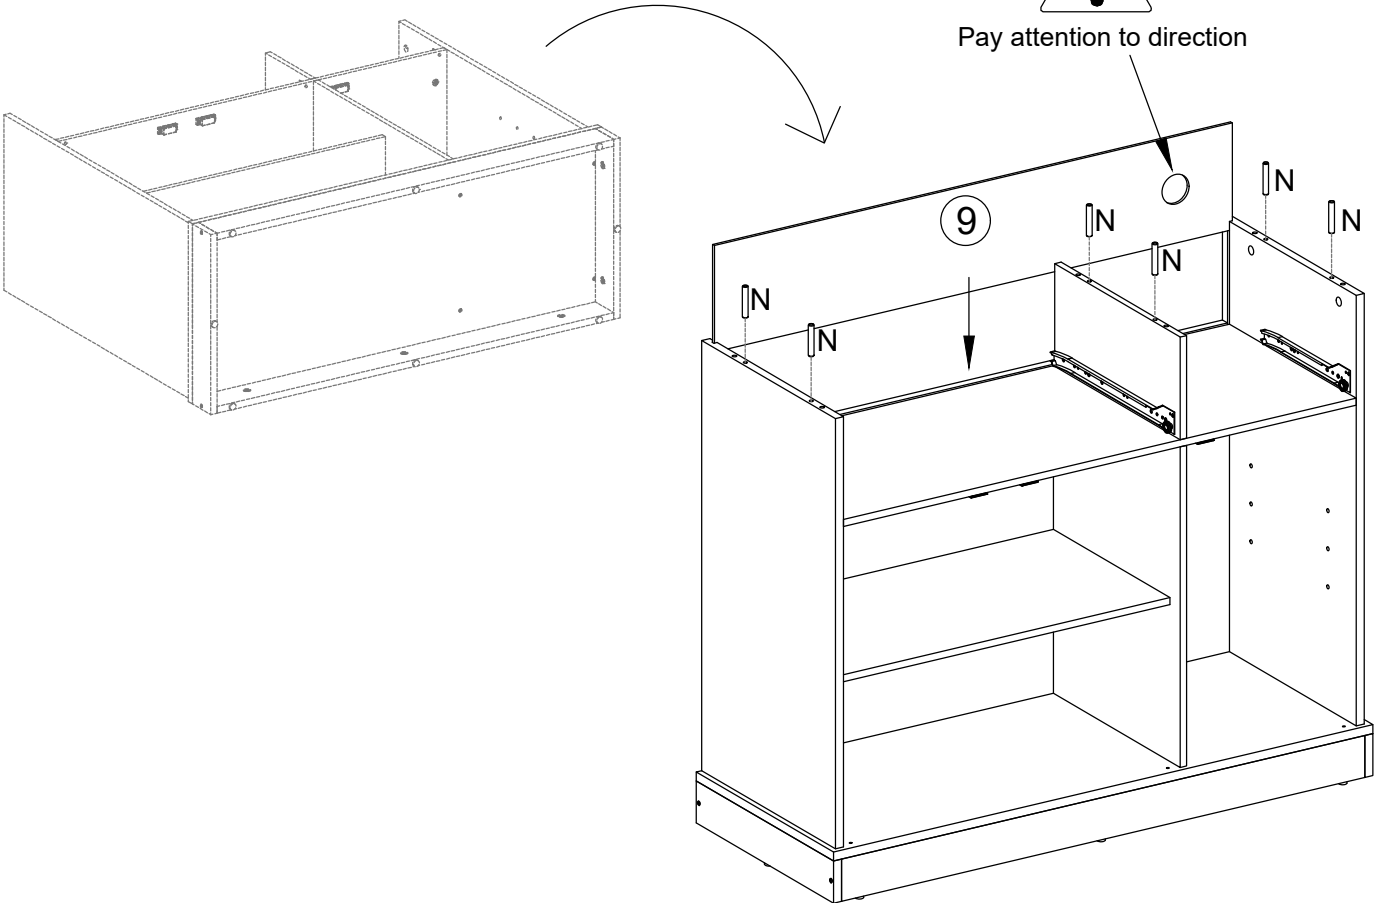


N  x6

STEP 17

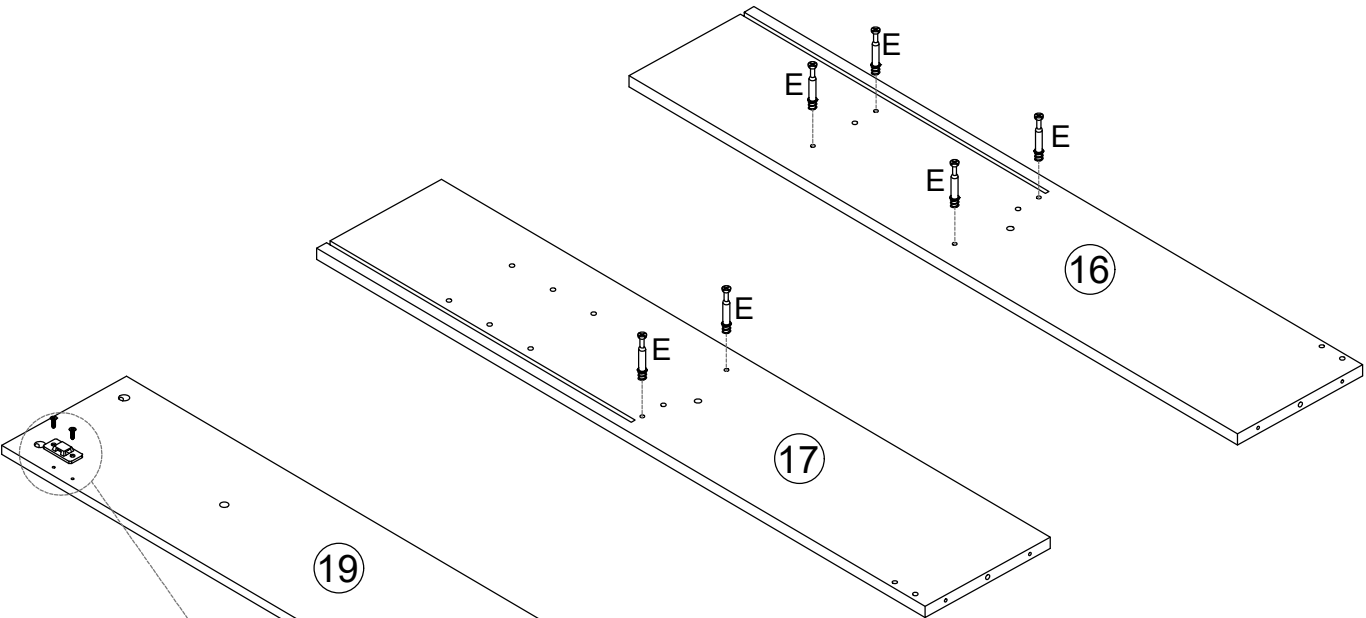


- | | | |
|---|---|----|
| U |  | x2 |
| H |  | x4 |
| |  | |
| E |  | x6 |

STEP 18

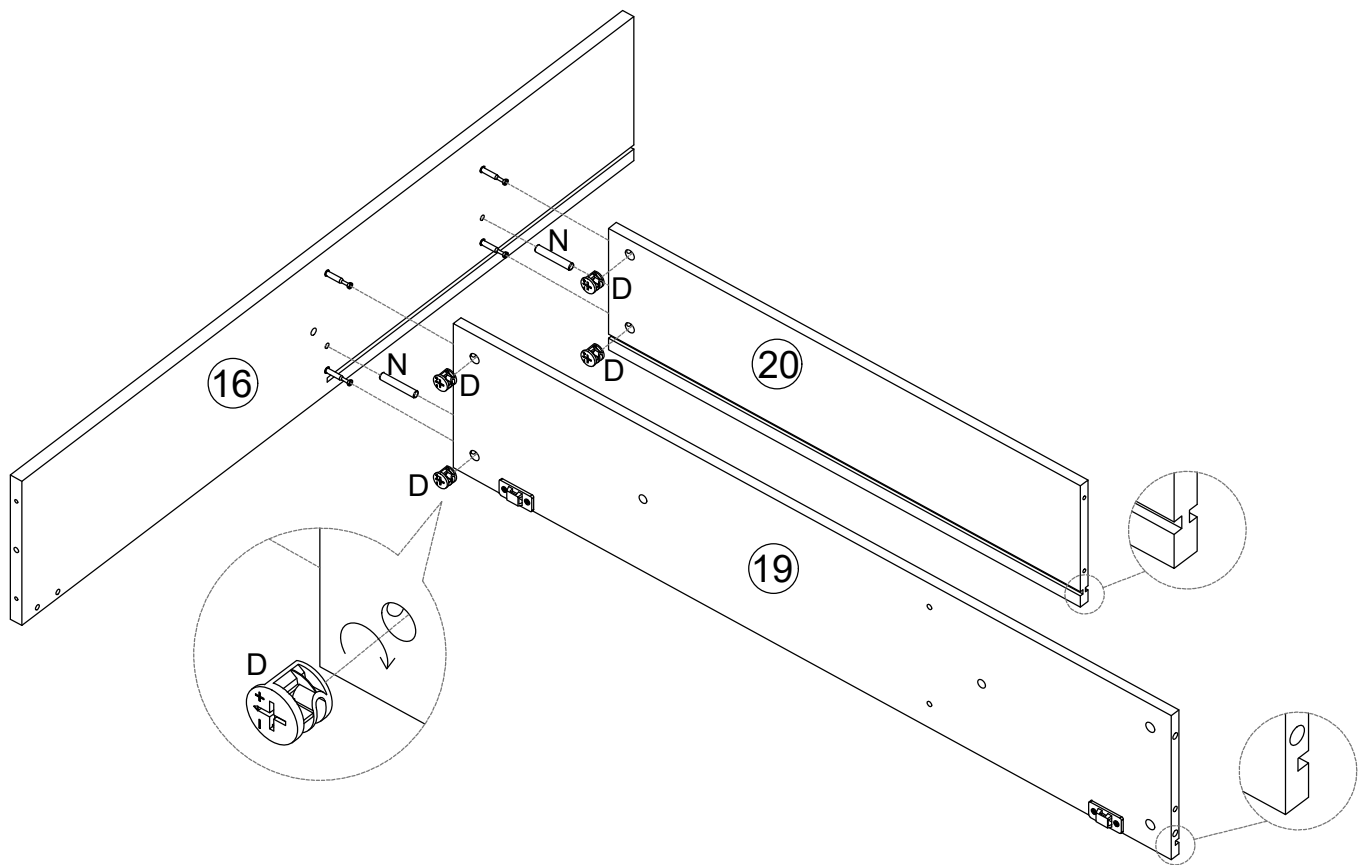


	D		x4
	N		x2

STEP 19

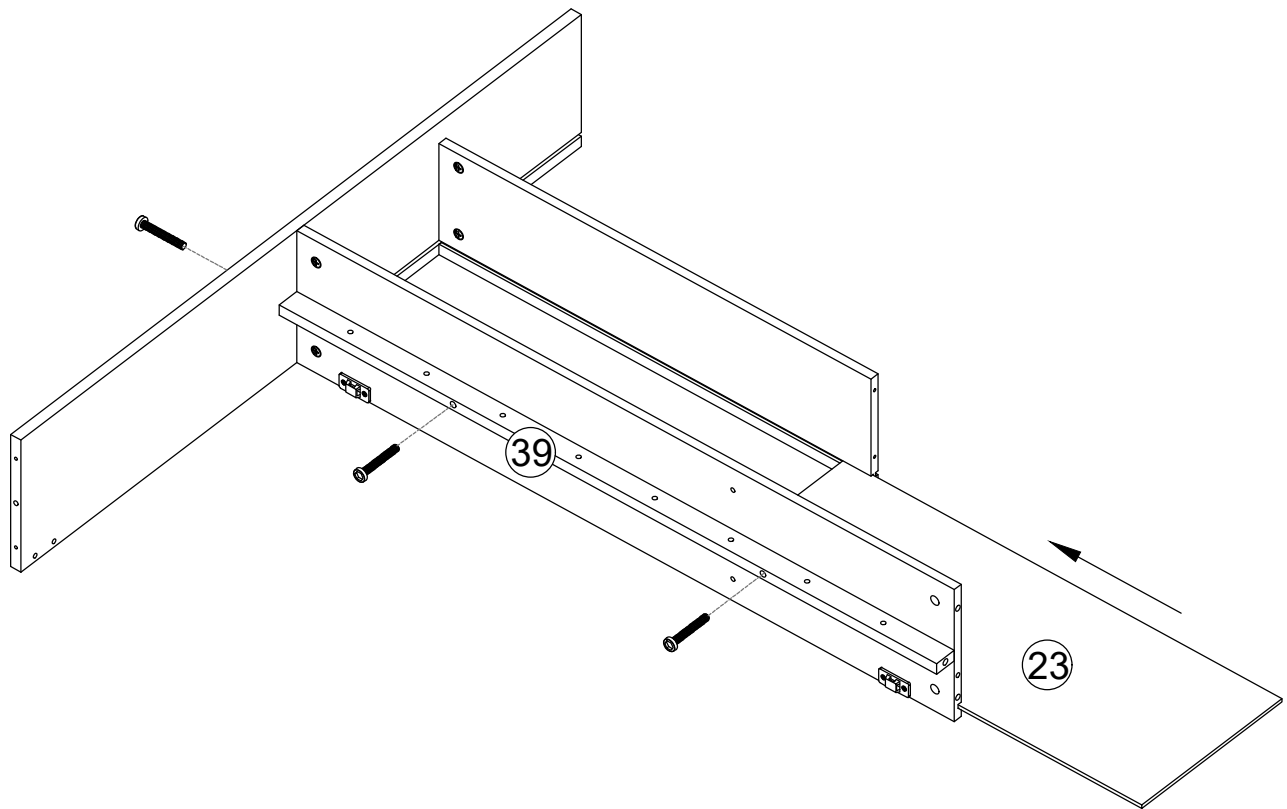


		4mm
B		x3

STEP 20

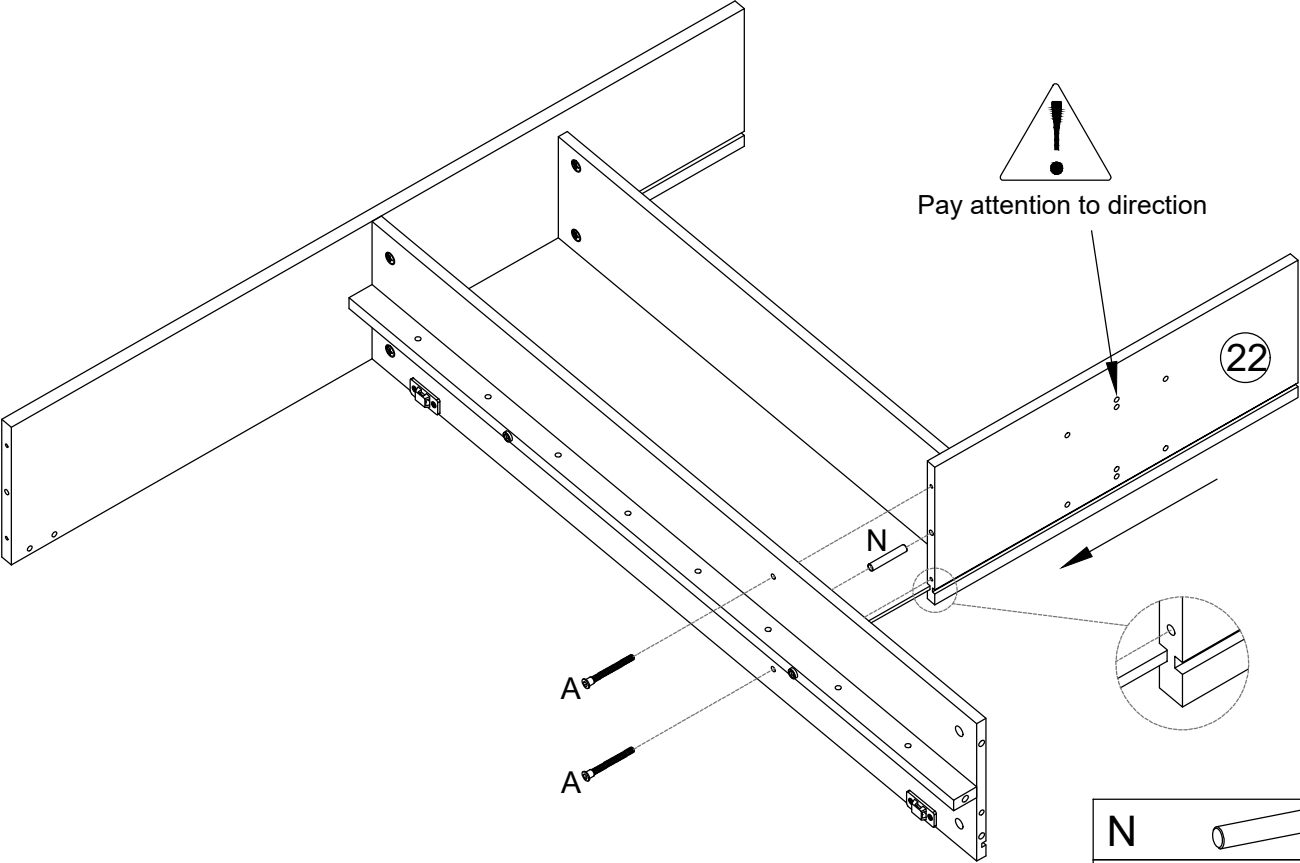


N		x1
		3mm
A		x2

STEP 21

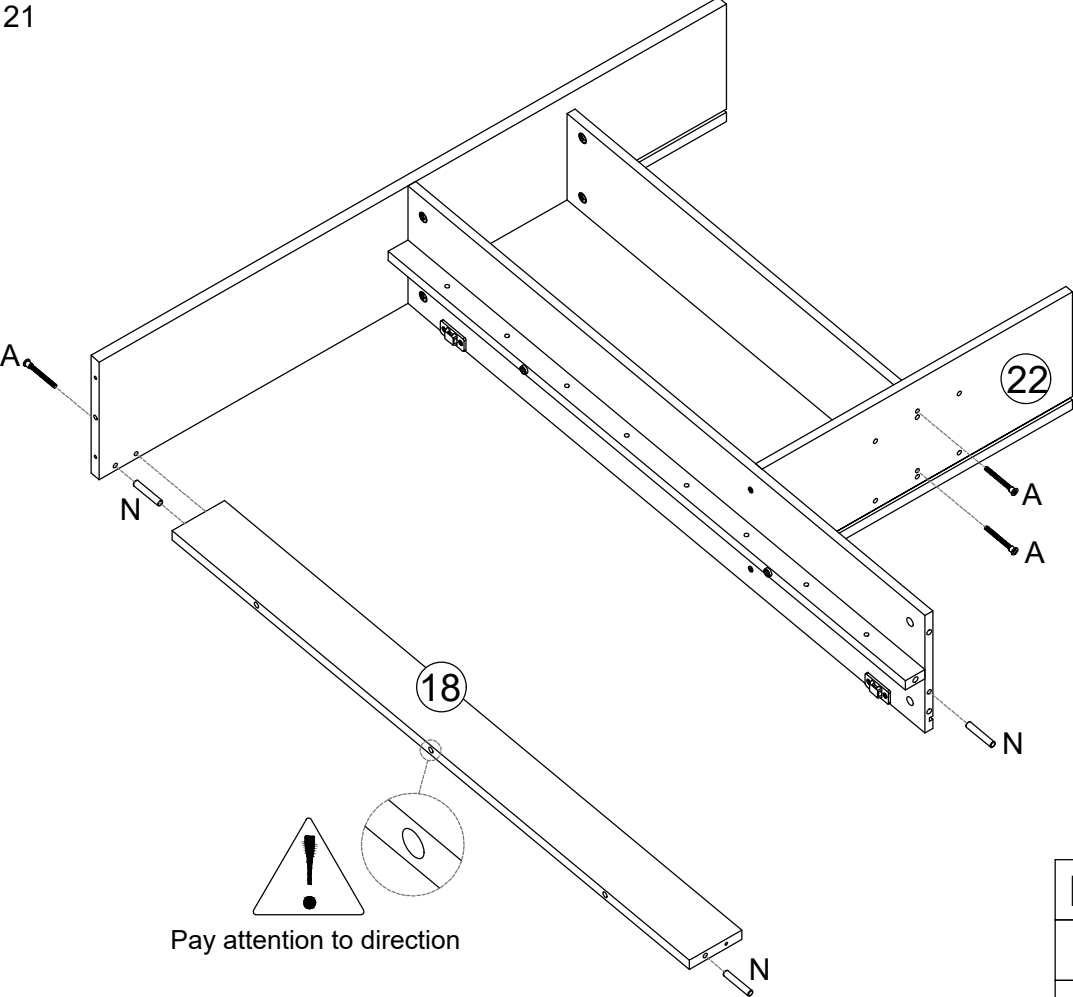


N		x3
		3mm
A		x3



STEP 22

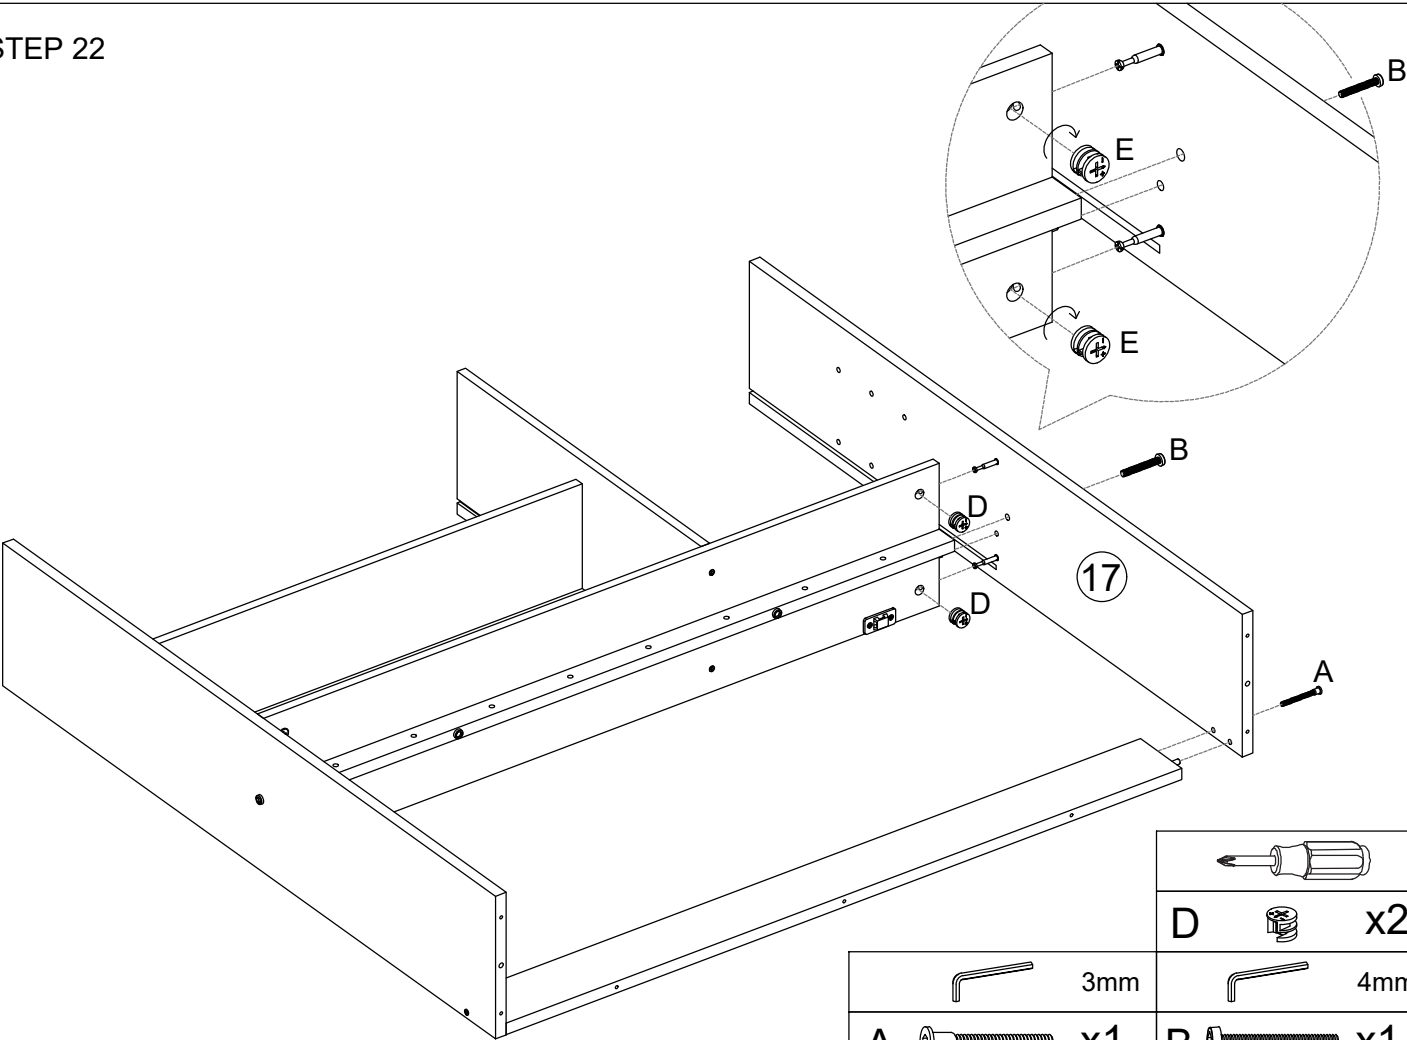



STEP 23

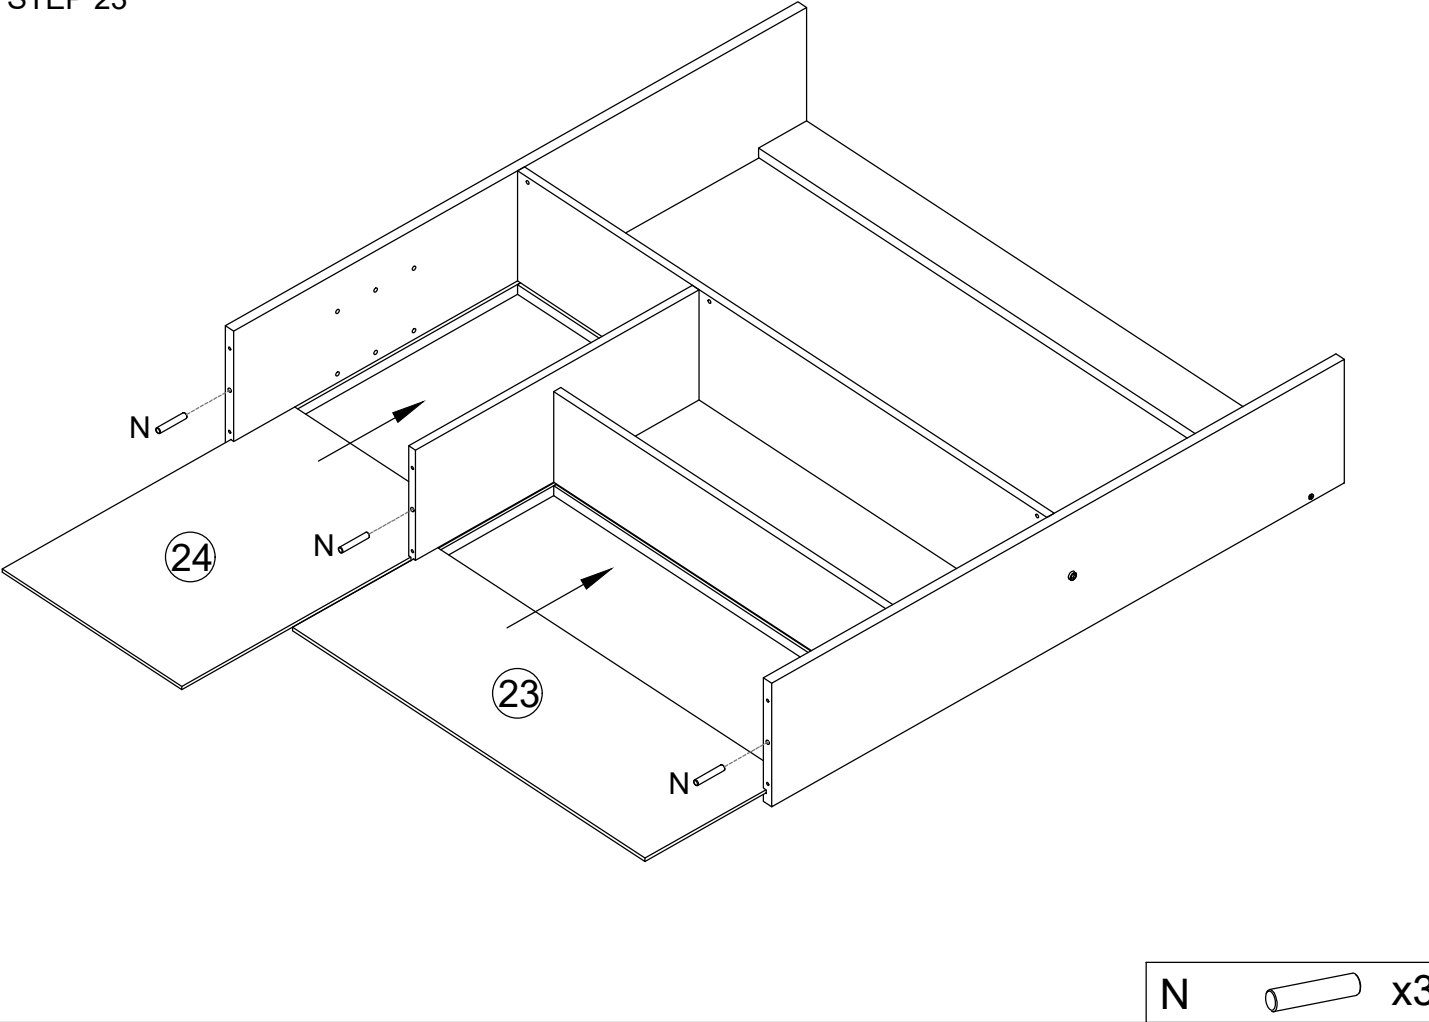


STEP 24

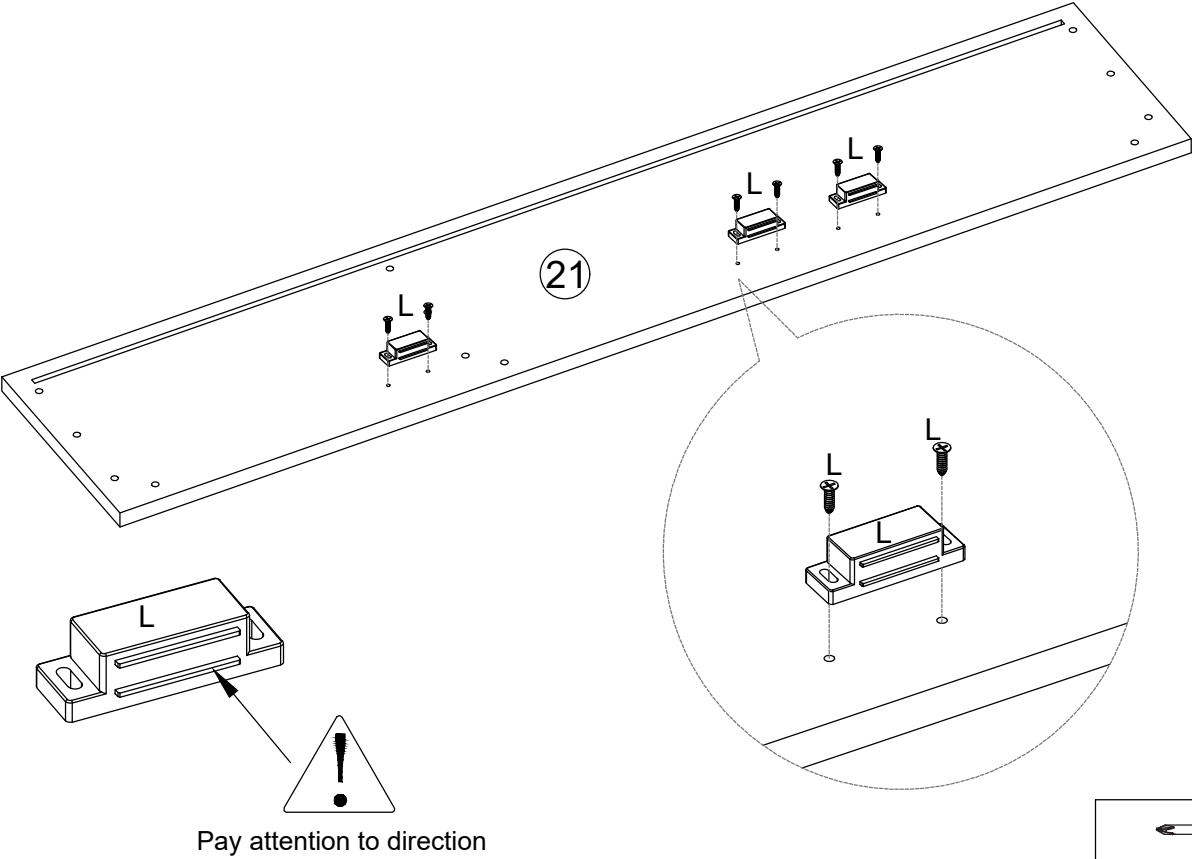

STEP 25

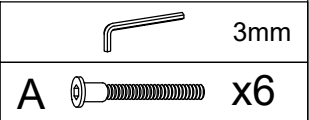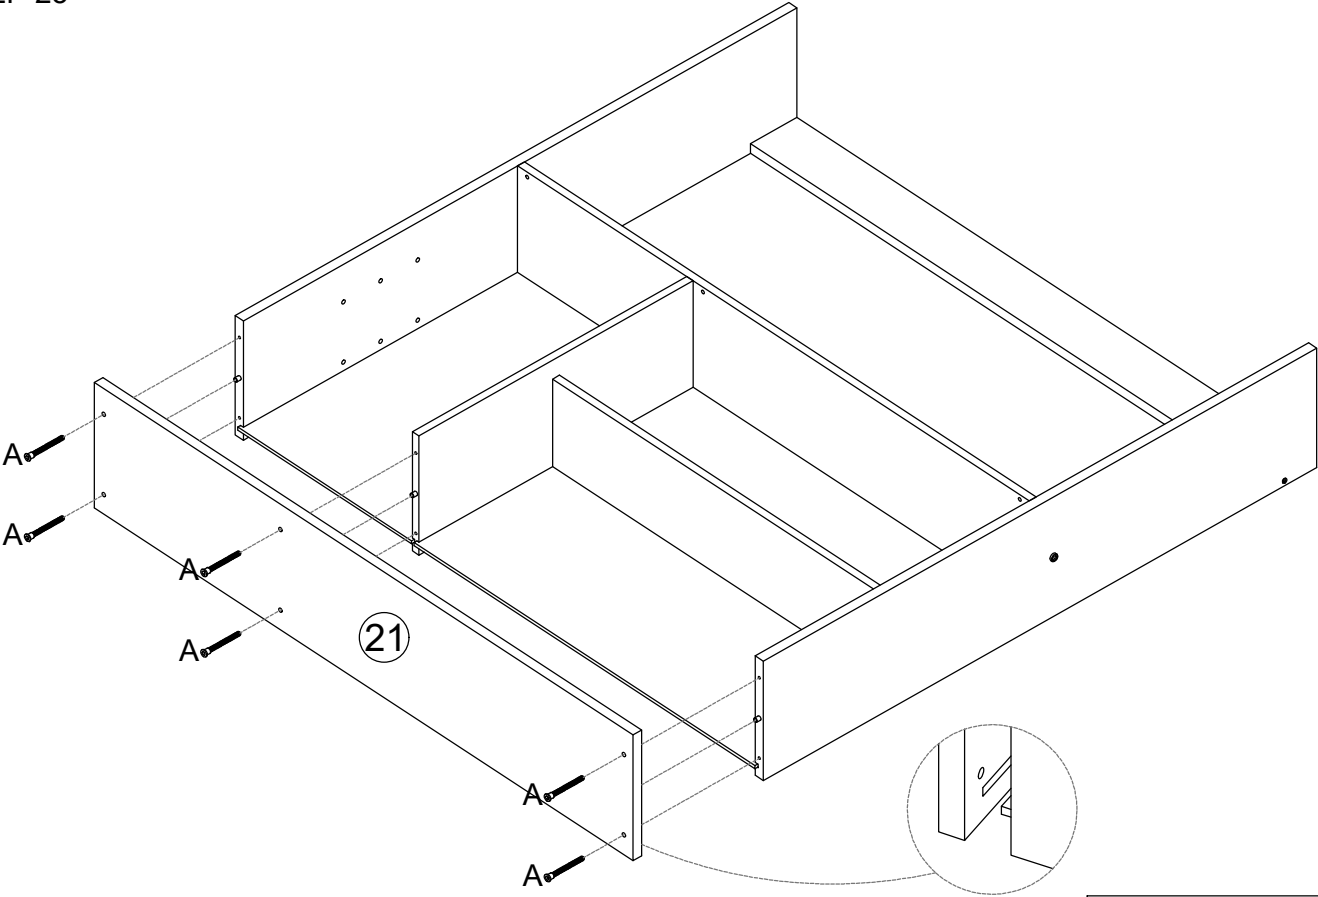


STEP 26

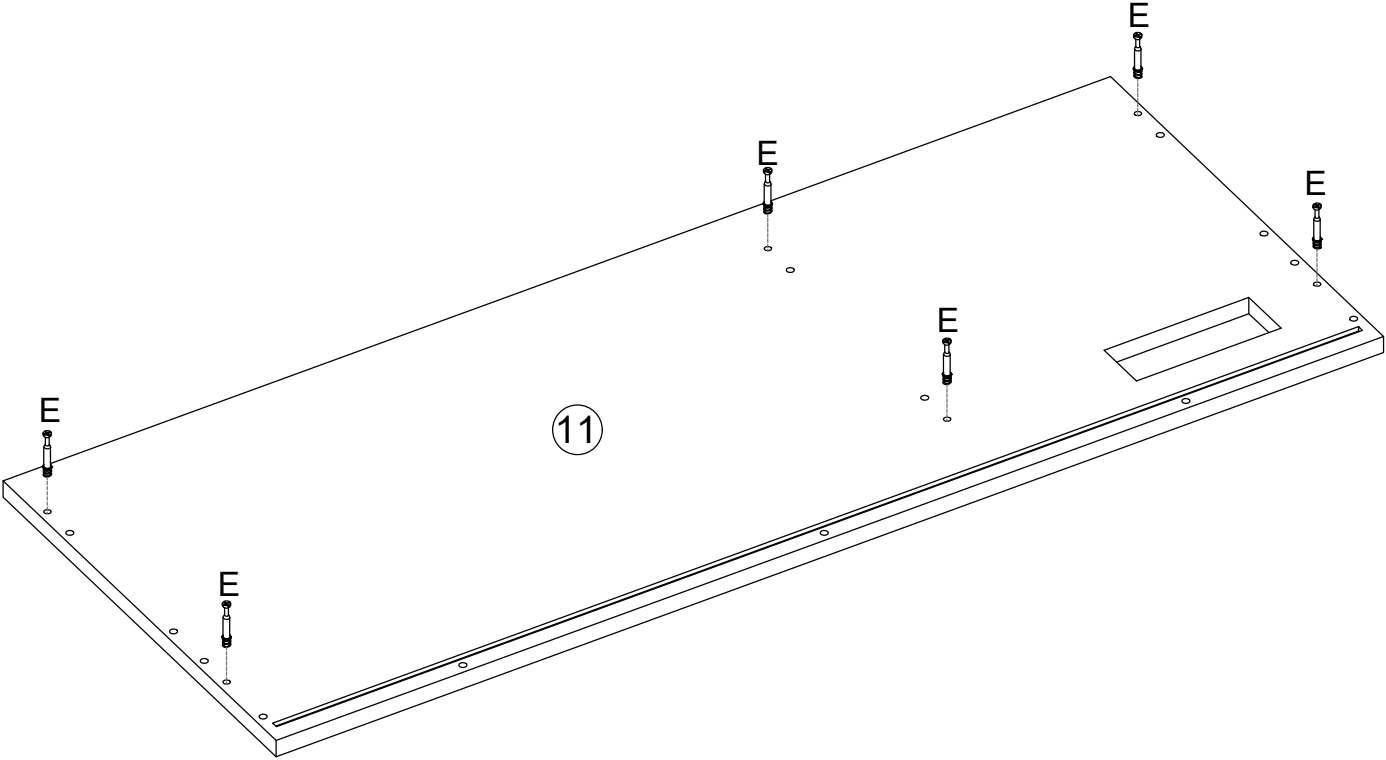




		
E		x6

STEP 27

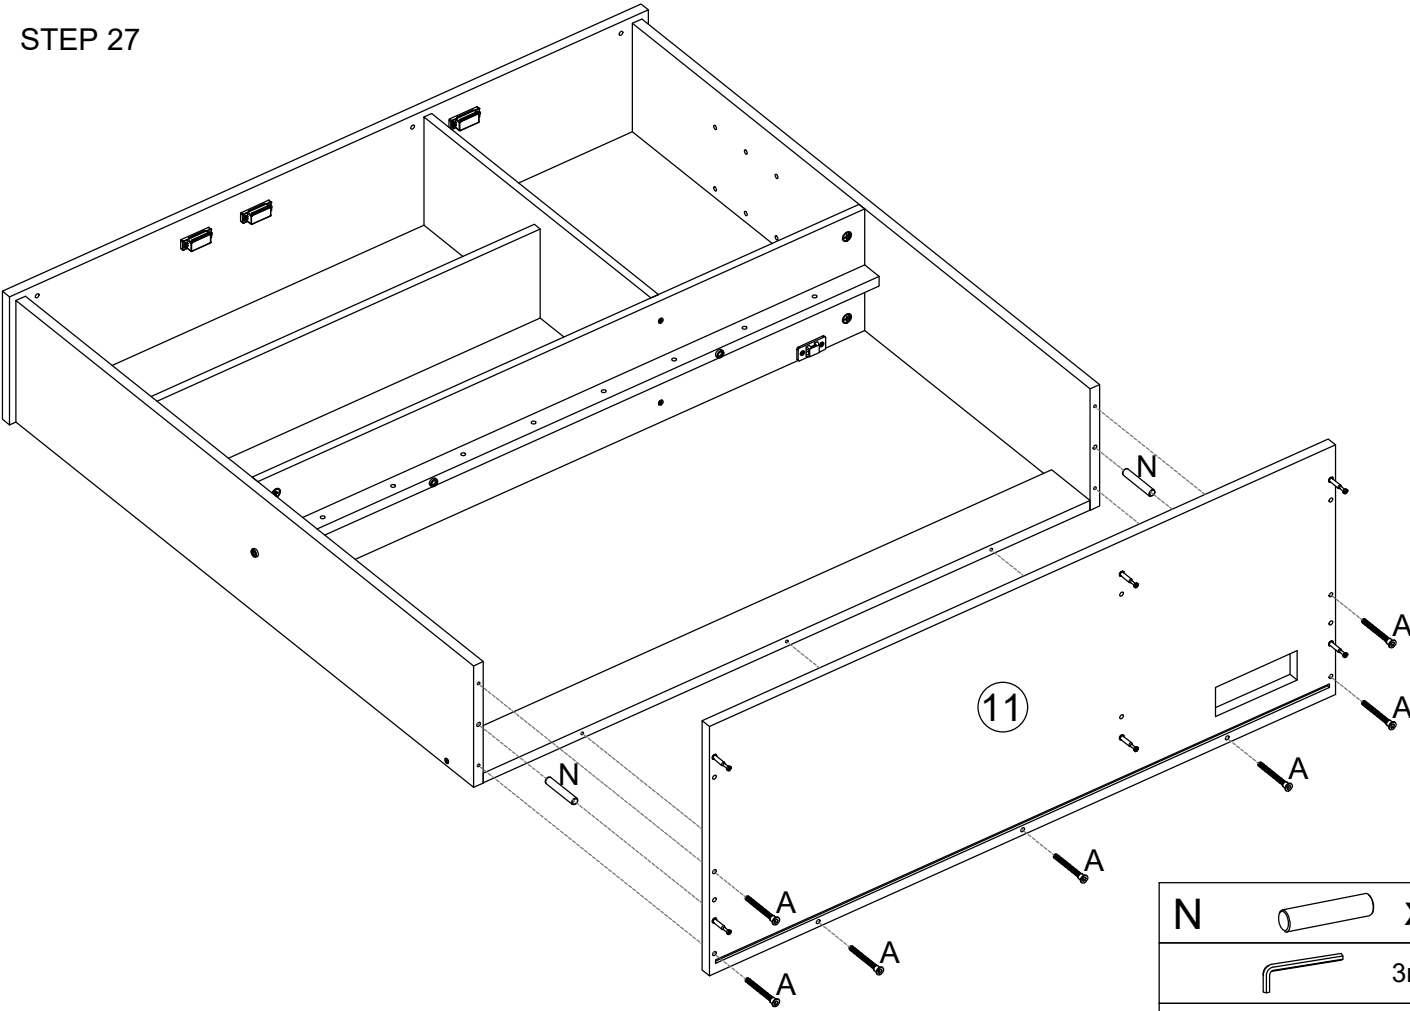




N		x2
		3mm
A		x7

STEP 28

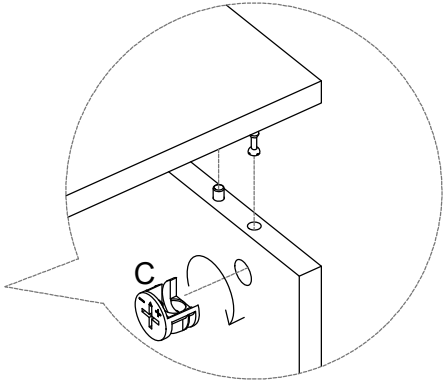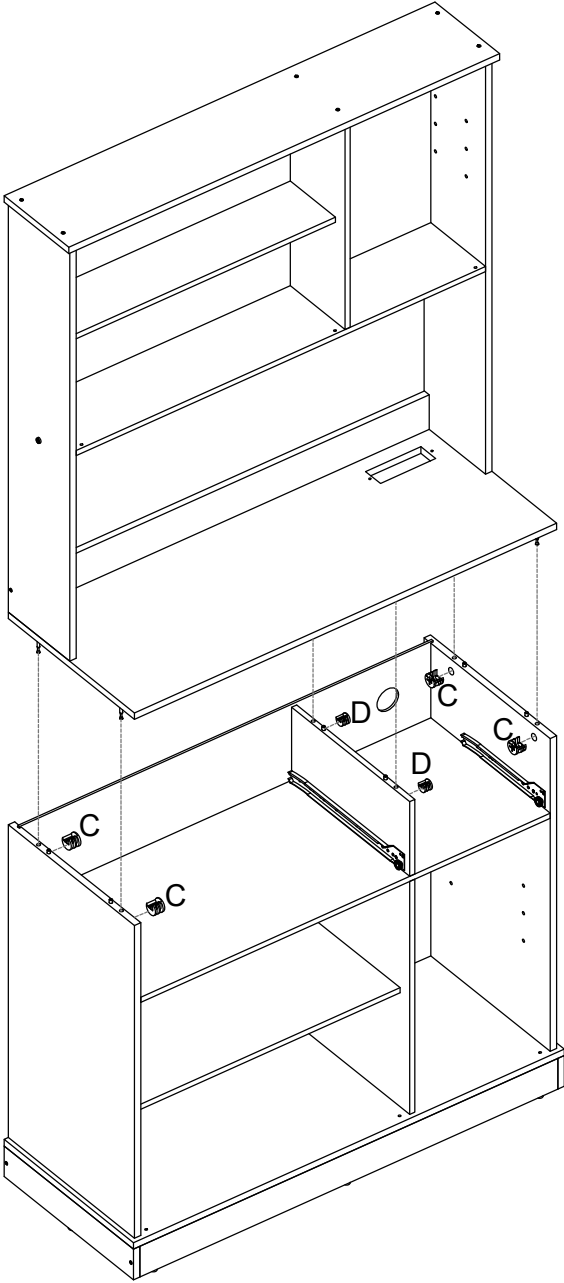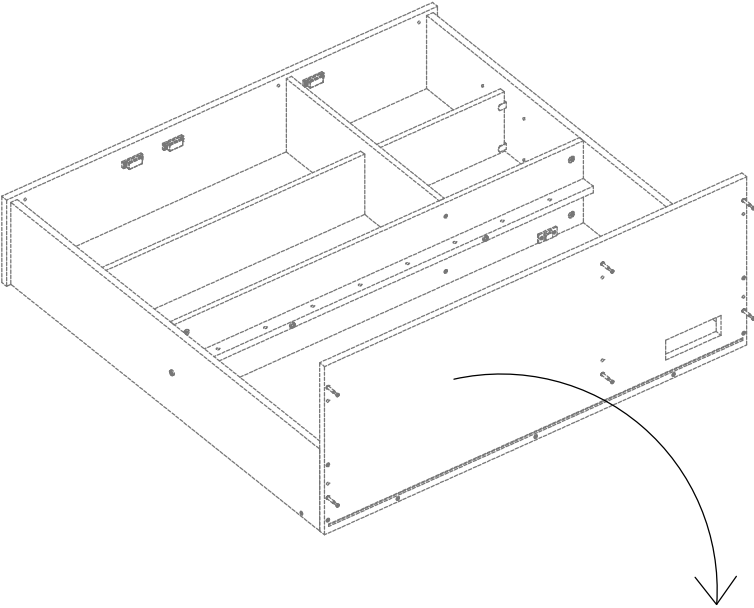



			
D		x2	
C		x4	


STEP 29

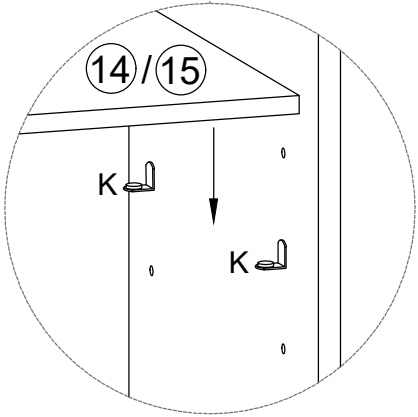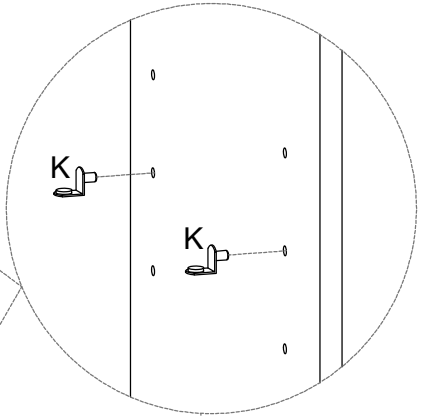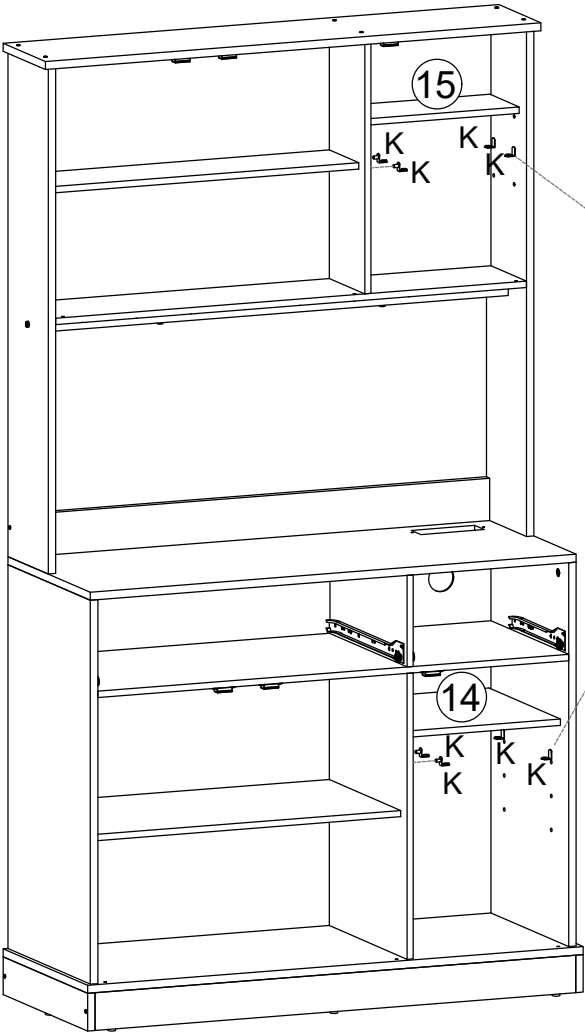


K  x8

STEP 30

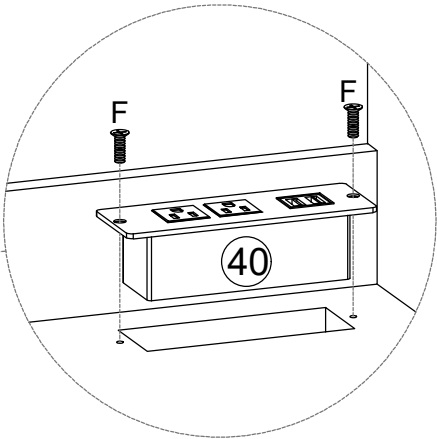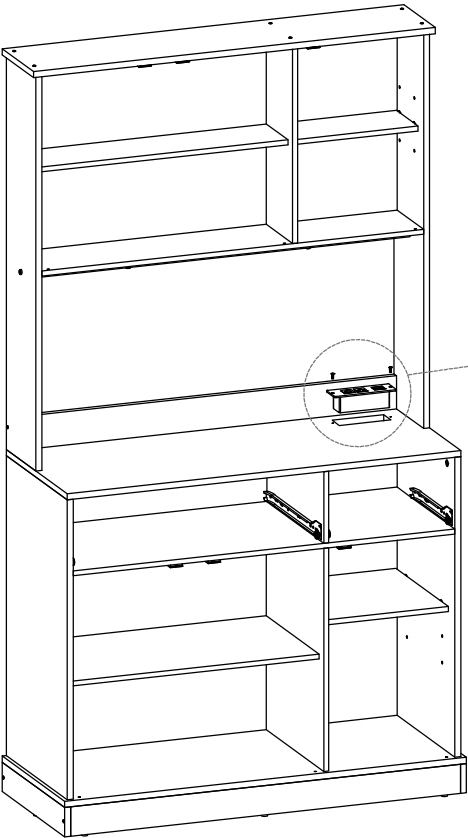



F  x2


STEP 31

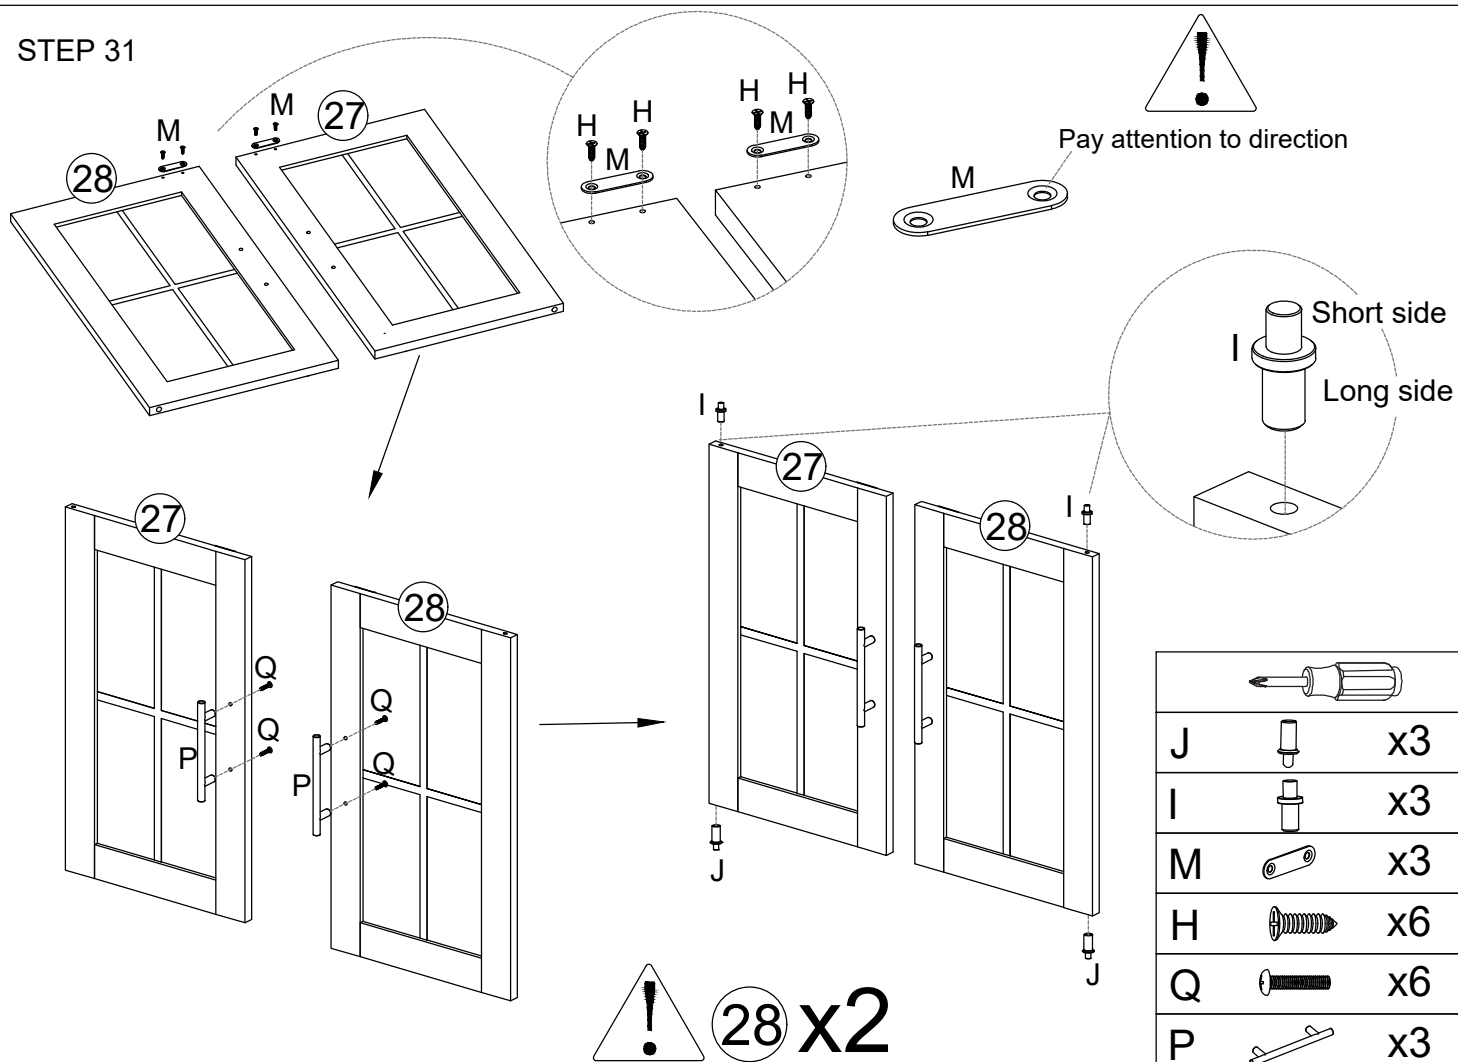


STEP 32

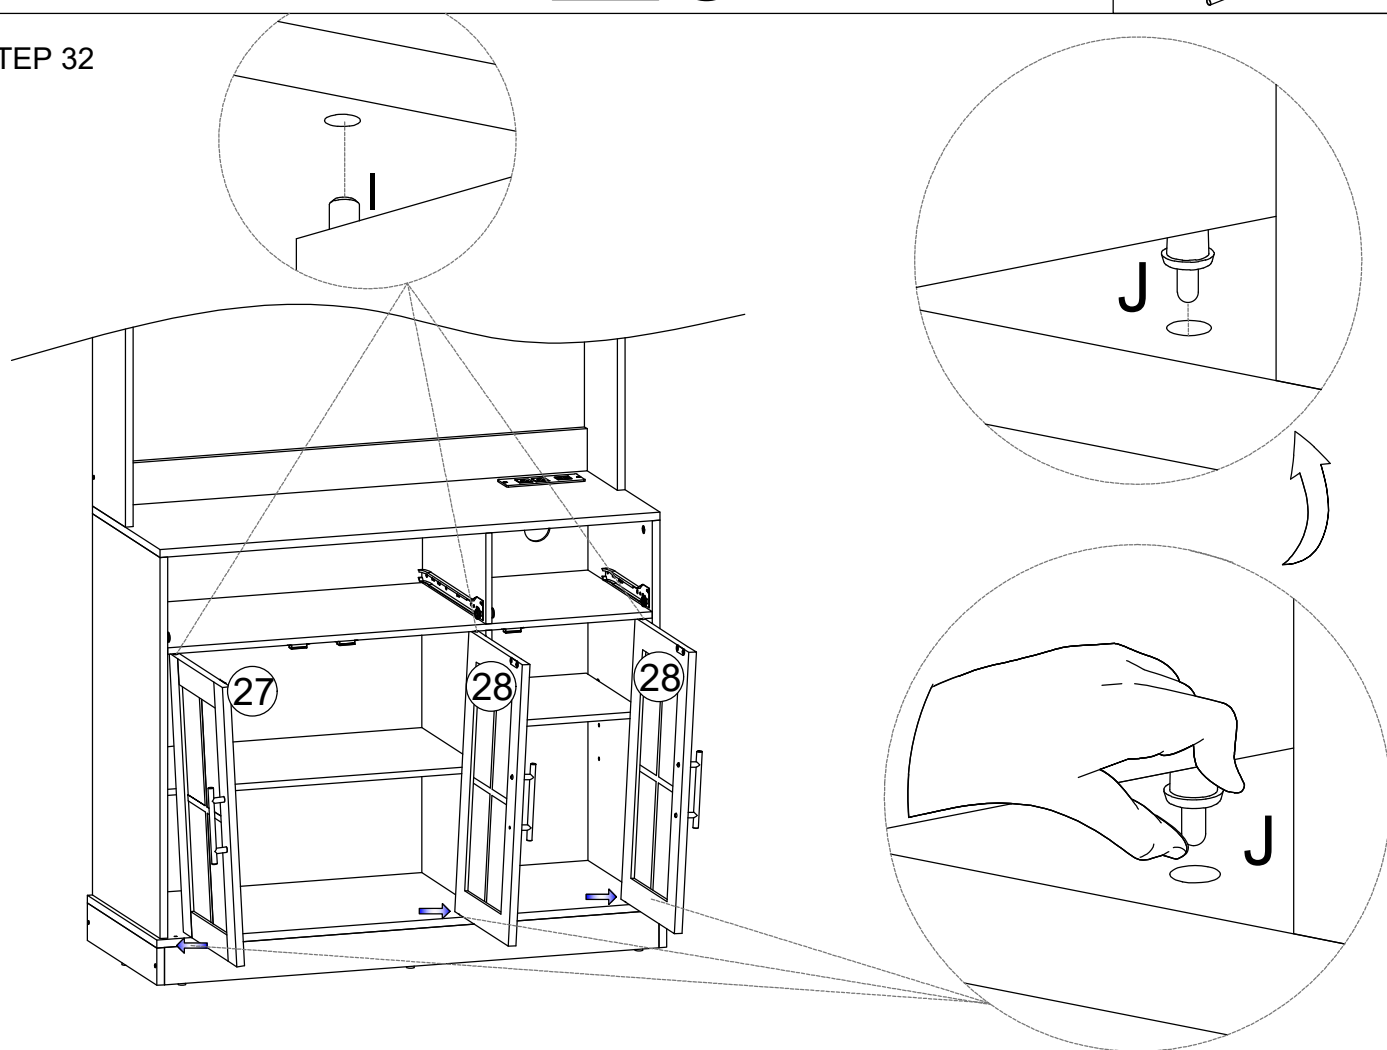


STEP 33

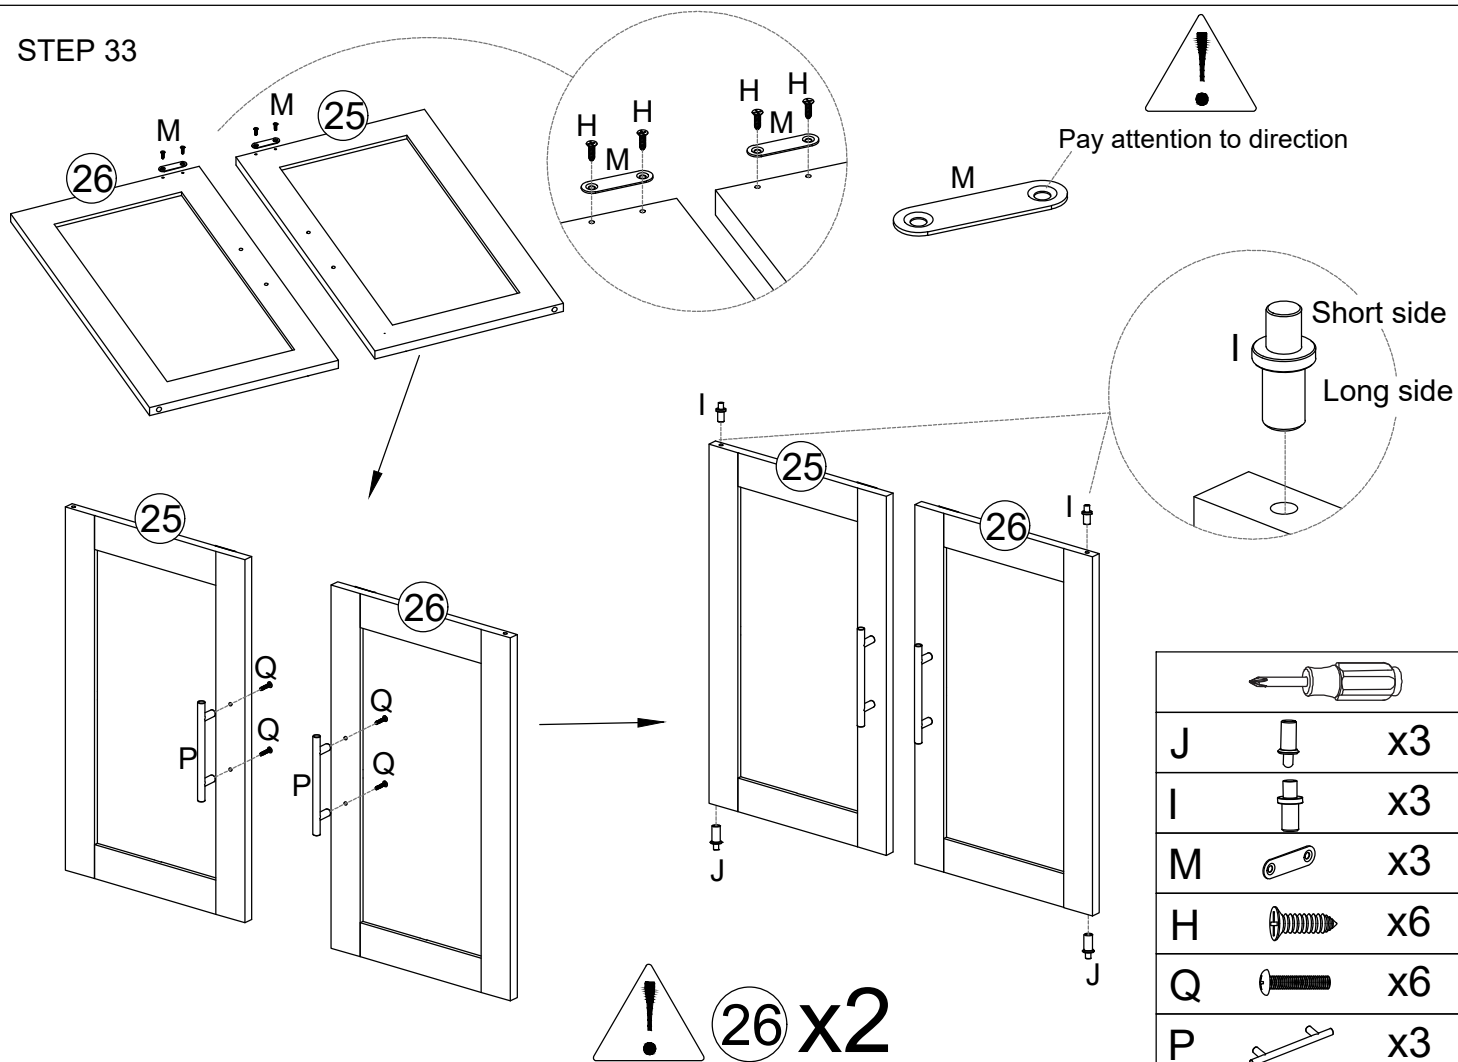


STEP 34

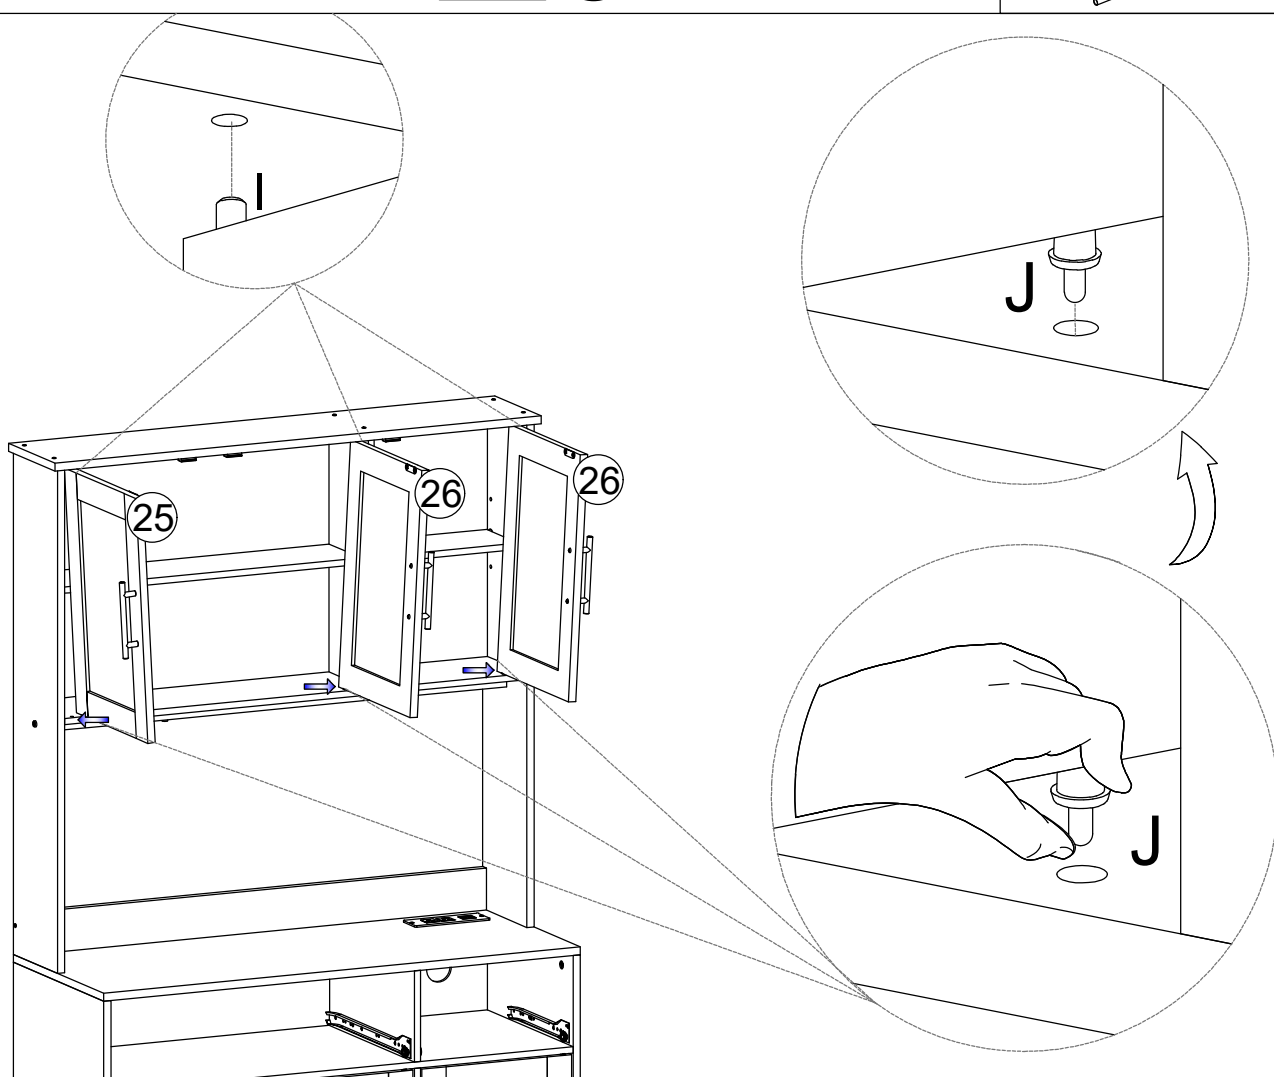


STEP 35

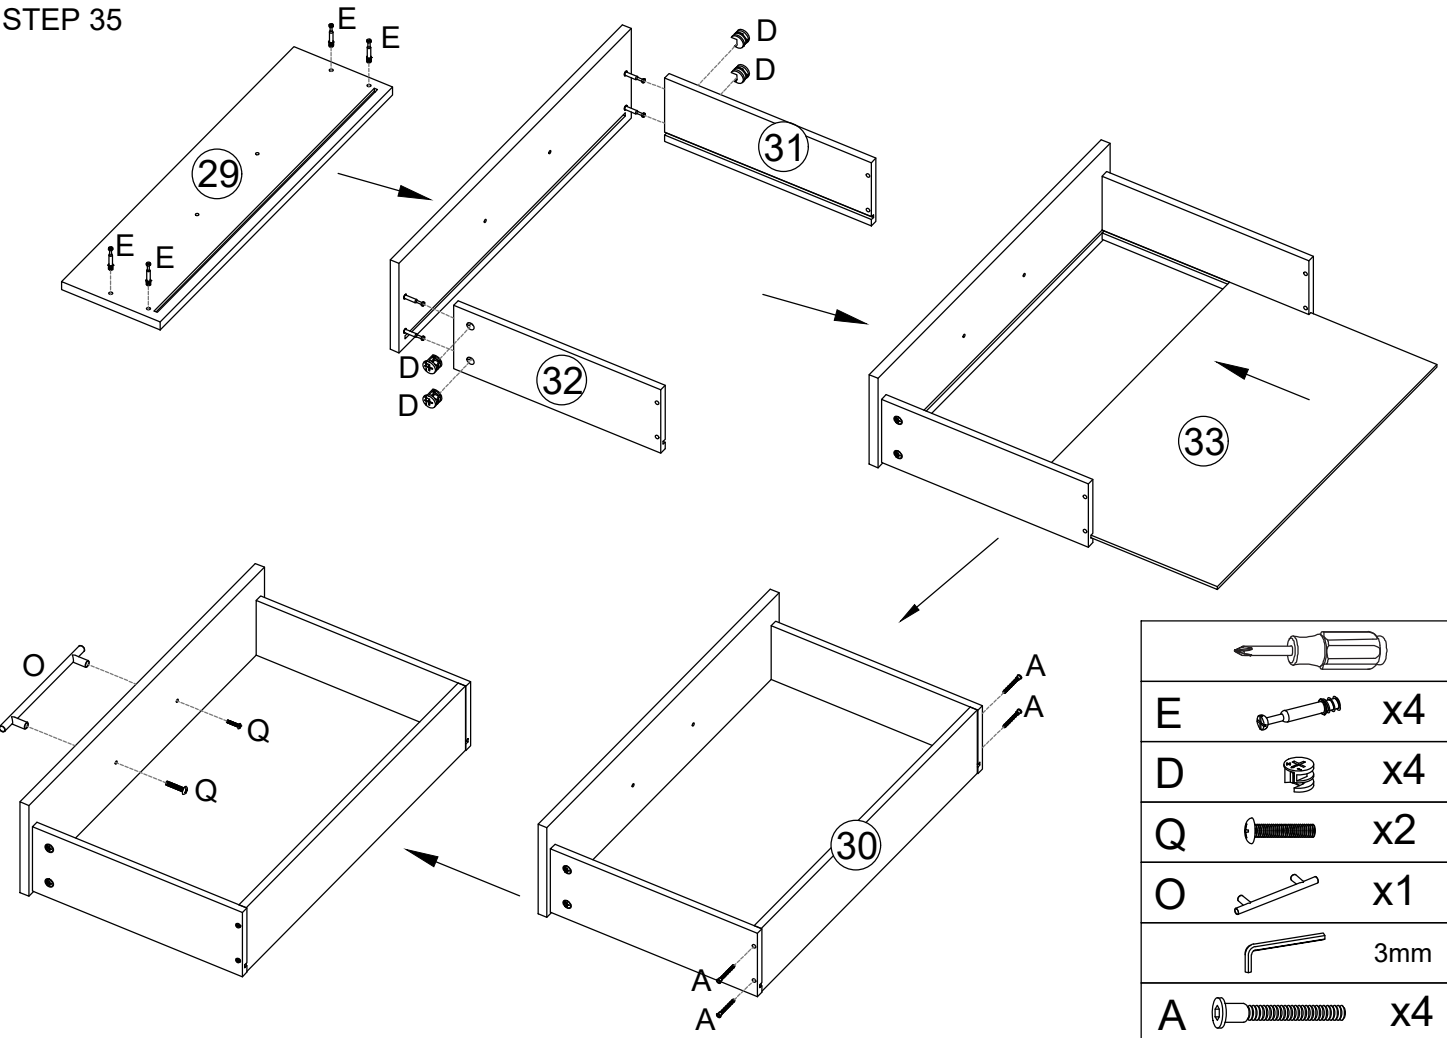

STEP 36

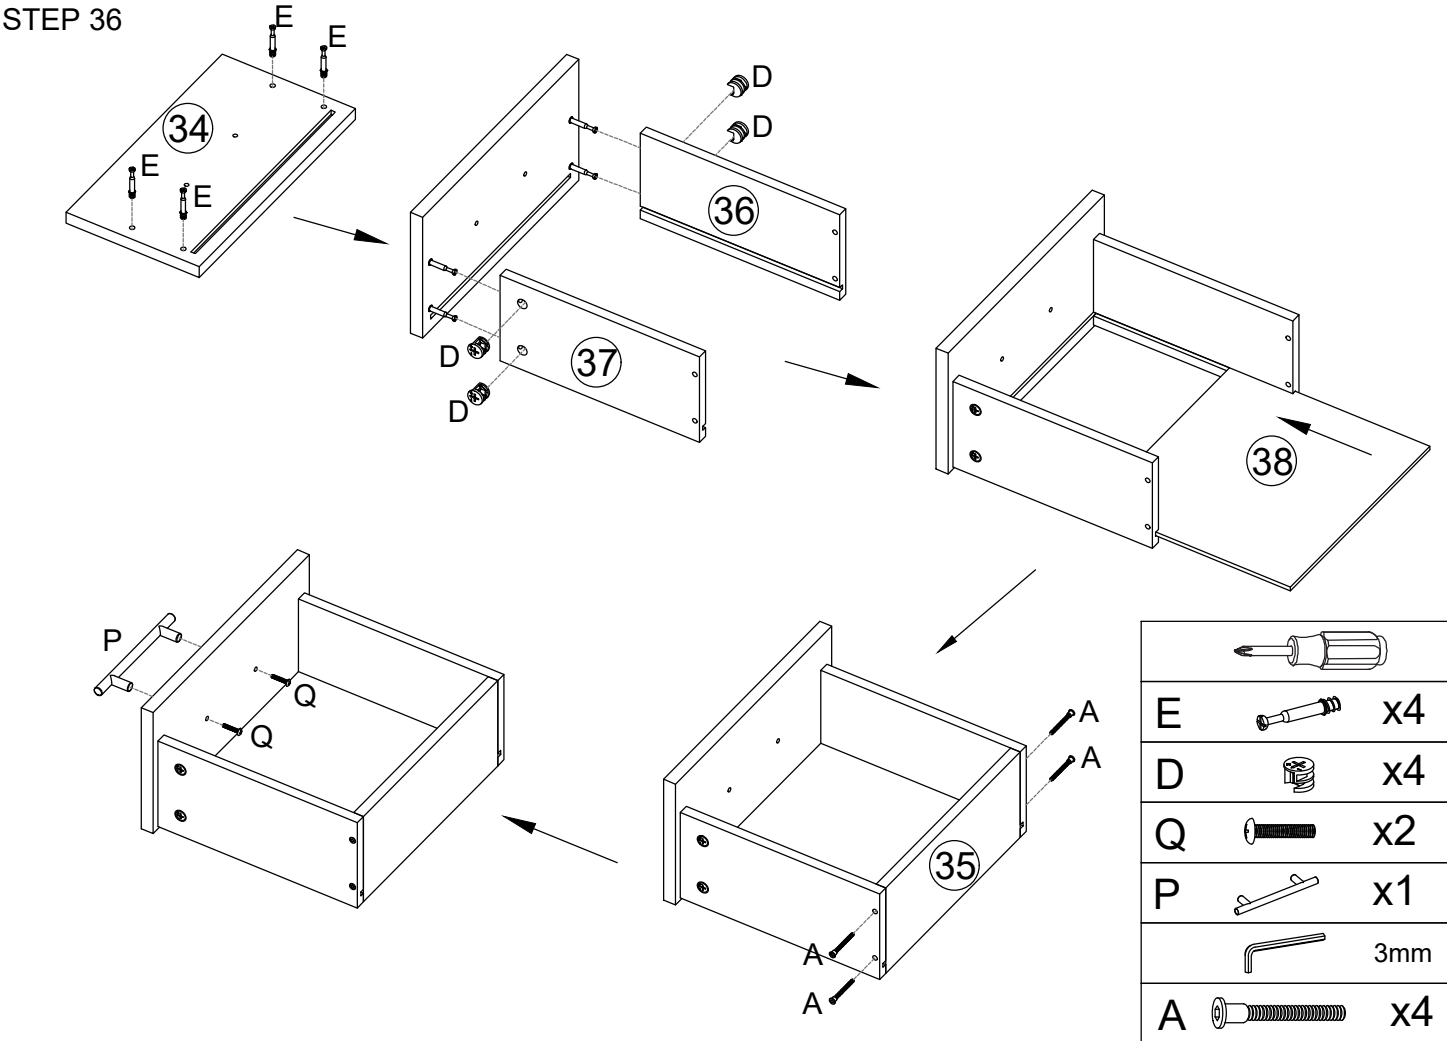


STEP 37

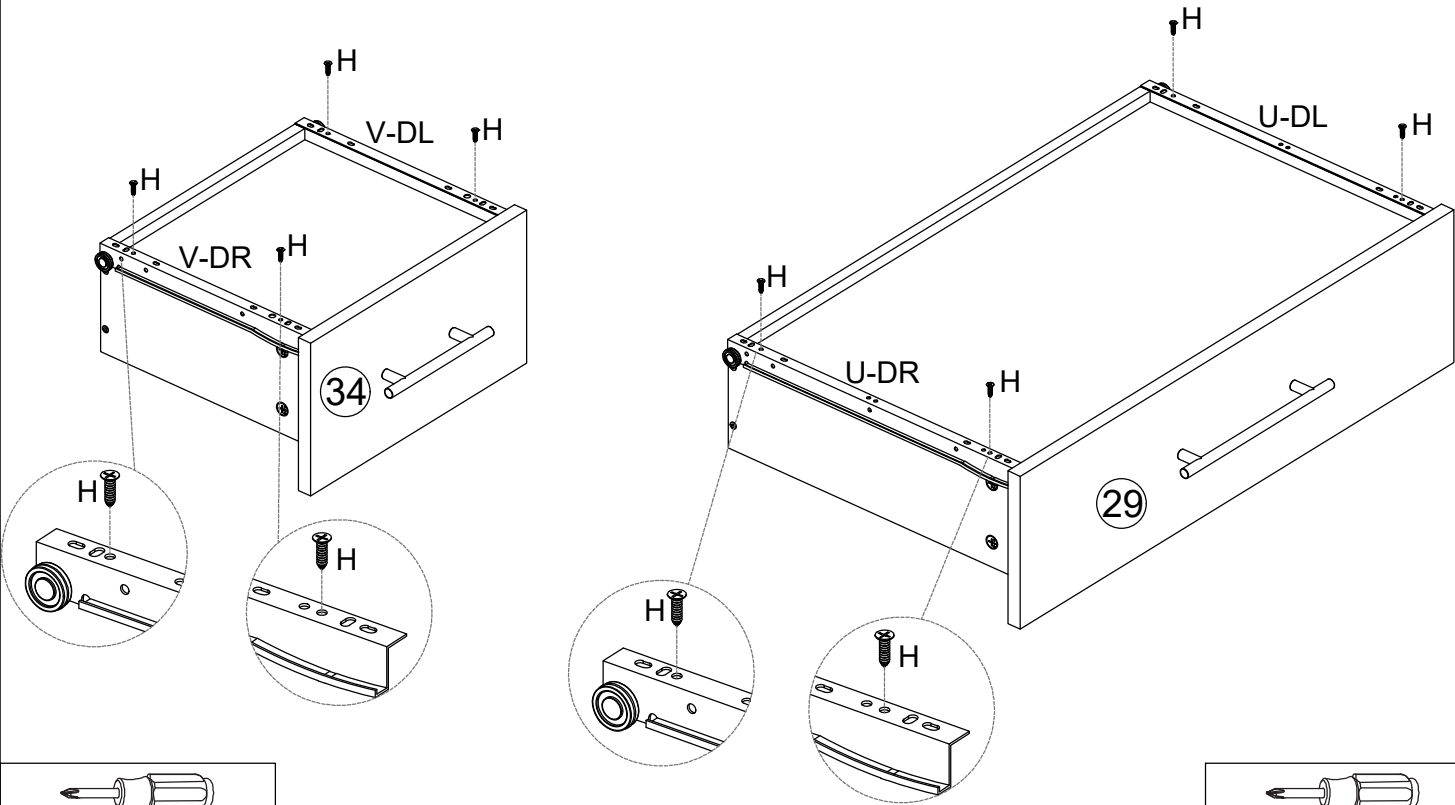

			
H		x4	
V		x1	



			
H		x4	
U		x1	

STEP 38

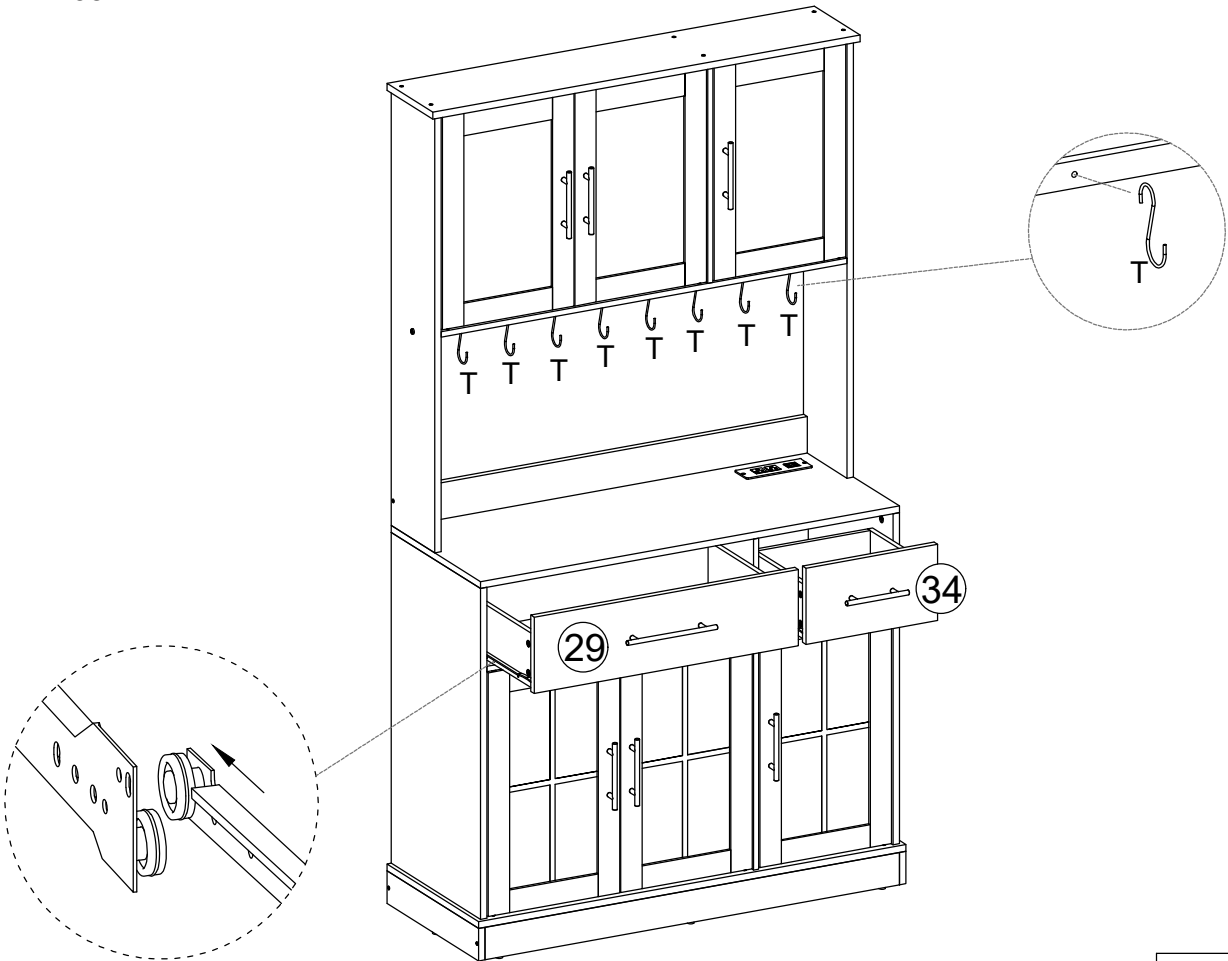



T		x8	
---	---	----	--

STEP 39

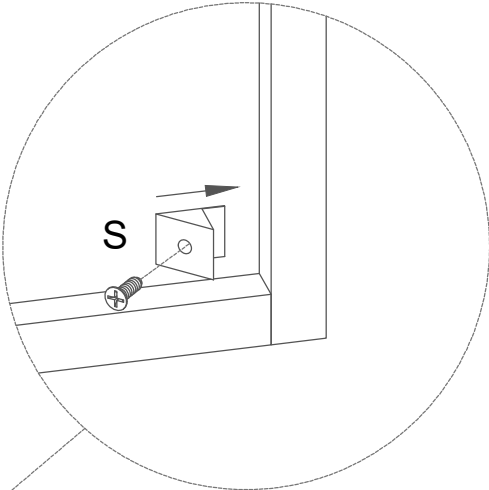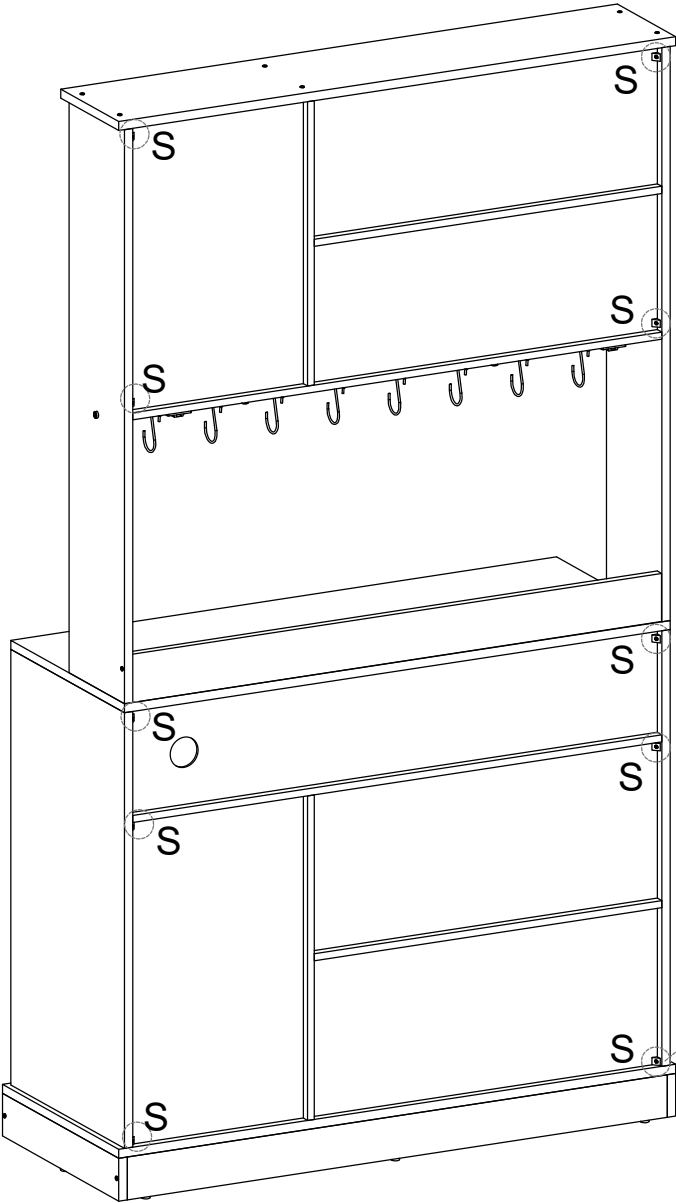


S		 x10
		


WALL

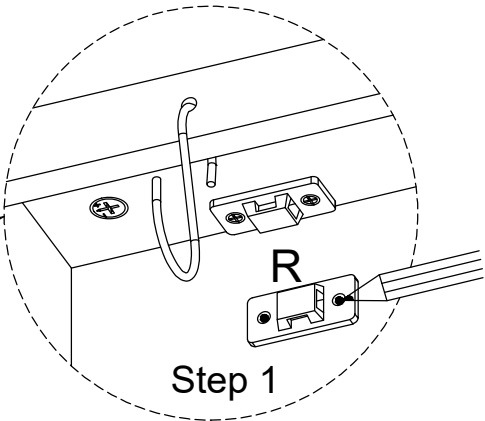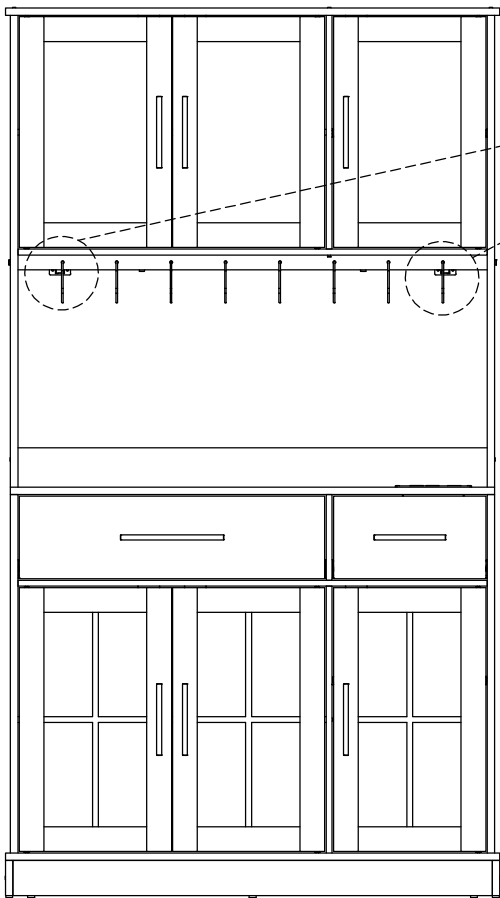


Step 1

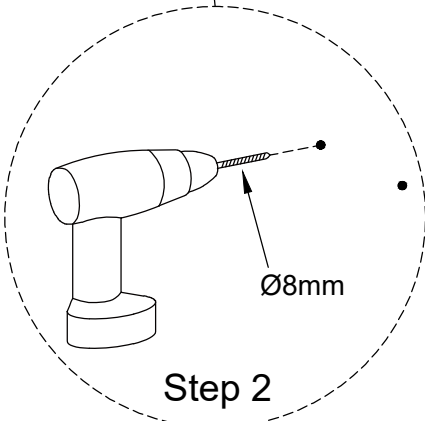


Step 2

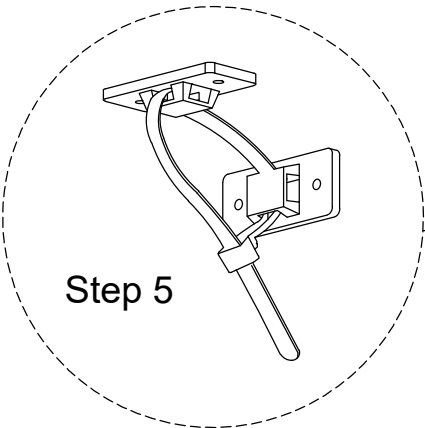

Step 5

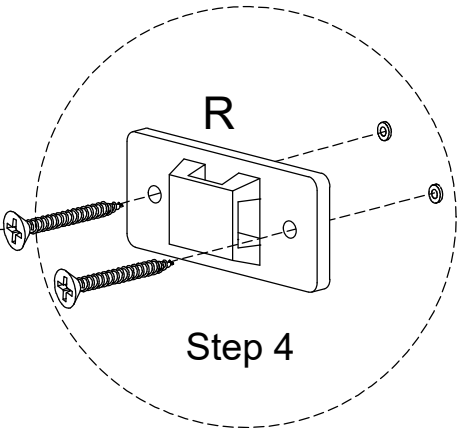


Step 4

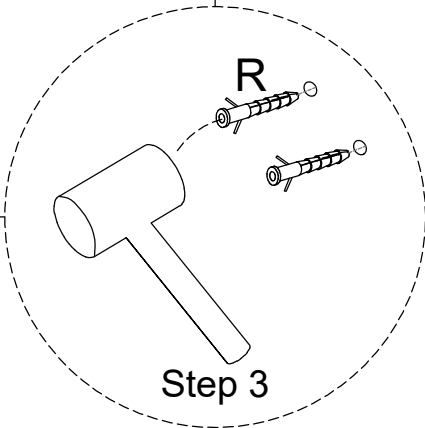

Step 3

 **Attention: For safety and stability, we suggest you have to secure the anti-tip accessories to the wall to prevent tipping, injury, and property damage.**

Installation Completed

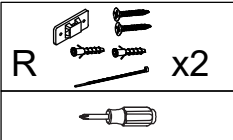



Pure & Easy