



LHHY-V2

FTPLCG-0144 FTPLCG-0145 FTPLCG-0146 FTPLCG-0147 FTPLCG-0148

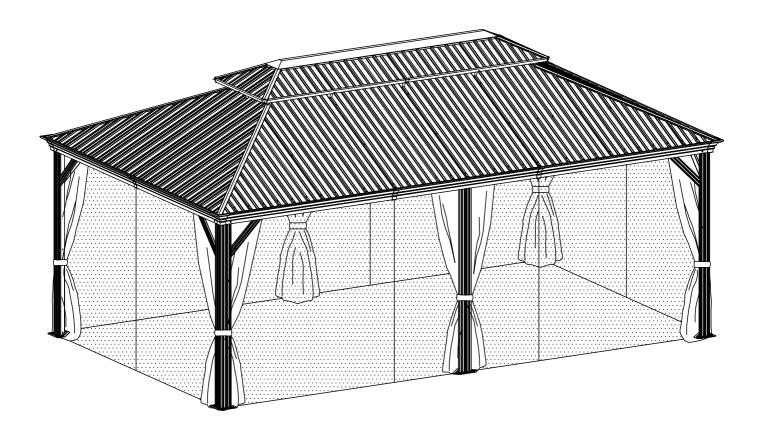

12X20 FT HARDTOP GAZEBO



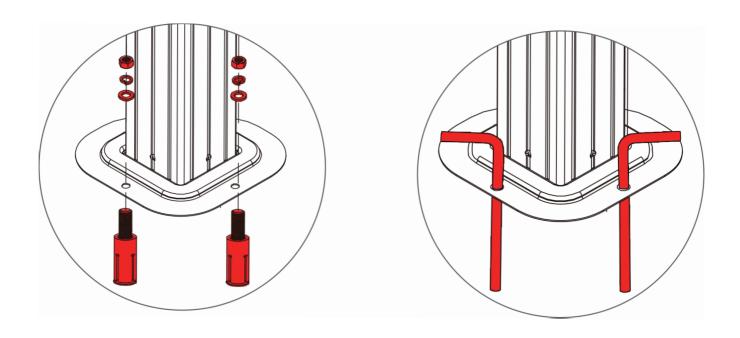

- 1. Must use ground nails, ropes, and expansions screws for whichever ground you install on for stability to avoid devastating injuries for people inside or nearby and property damage caused by a collapsing gazebo.
- 2. Do not use this gazebo in high winds, heavy snow, or inclement weather. It is not designed to withstand strong gusts of wind, heavy snow accumulation, or other inclement weather. Must take precautions when the wind speed exceeds 25Mph, and clear snow when it accumulates more than 2 inches.
- 3. Before use, thoroughly inspect the gazebo to make sure all bolts, nuts, and buckles have been completely tightened and securely fastened.
- 4. Warranty does not cover damages, losses, or injuries resulting from improper installation, misuse, not using stability accessories mentioned above, non snow cleaning, failure to take precautionary measures, etc.



- 1. Two or more people are required for assembly.
- 2. A ladder and electric drill may be necessary.
- 3. Do not erect the structure in heavy winds or inclement weather.
- 4. Do not leave up this unit for extended periods of time, as it is not a permanent structure or designed to withstand sustained wind or rain. It is a temporary, portable shelter that shields you from sunlight and rain. The screens also block flying insects.
- 5. Do not use candles, matches, or any open flames near the tent.
- 6. To better align the screws for practical situations, do not fully tighten screws initially.
- 7. Professional installation is highly recommended.

Item no.	Reference Image	Qty.
A		X4
A1		X2
В		X4
B1		X4
B2		X2
C		X4
	<i></i>	X4
C2		X2
C 3		X2
D		X2
01		X2
D2		X2
D3	~	X2



Item no.	Reference Image	Qty.
D4		X2
D5		X2
B		X4
(1)		X2
		X4
		X2
F	(o o o o	X4
(1)	0 0 0	X4
F2		X4
(1)	✓	X2
G 2		X2
G 3		X2
G4		X2
G 5		X2
G 6		X2
(1)		X4



Item no.	Reference Image	Qty.
		X4
•		X4
		X2
K		X4
K1		Х6
		X1
M		X1
N		X8
N1		X2
P		Х6
Q1		X2
Q 2	1	X2
Q3		X2
Q4		X2
Q4 Q5 Q6		X2
Q6		X2



Item no.	Reference Image	Qty.
O		X2
Q 8		X2
R1		X2
R2		X2
R3	1	X2
R4		X2
R5		X2
R6		X2
R7		X2
R8		X2
R9		X2
R10		X2
R11		X2
R12		X2
S	اله	X2
Sa		X2





Item no.	Reference Image	Qty.
<u>\$1</u>		X2
\$2		X2
\$3		X8
S4		X2
S5		X2
O		X4+X2
		X4+X2
O		X152
V		Х6
W		X4
W1		X8
Y		X160
2		X72
Z1		X16

Item no.	Reference Image	Qty.
V1		X2
V 2		X2
V3		X2
1	M6X15mm	X330
2	€ M6X23mm	X100
3	M6X25mm	X7
4	ST4.8X12mm	X28
5		X2
6	M6X42mm	X8


Item no.	Reference Image	Qty.
7	9 M6X47mm	X48
8	M6X15mm	X16
9	M6X10mm	X12
10		X18
11)		X1
12		X1
13		X1
14)		X1
15)		X18



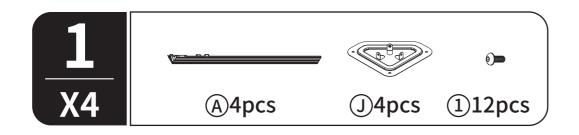


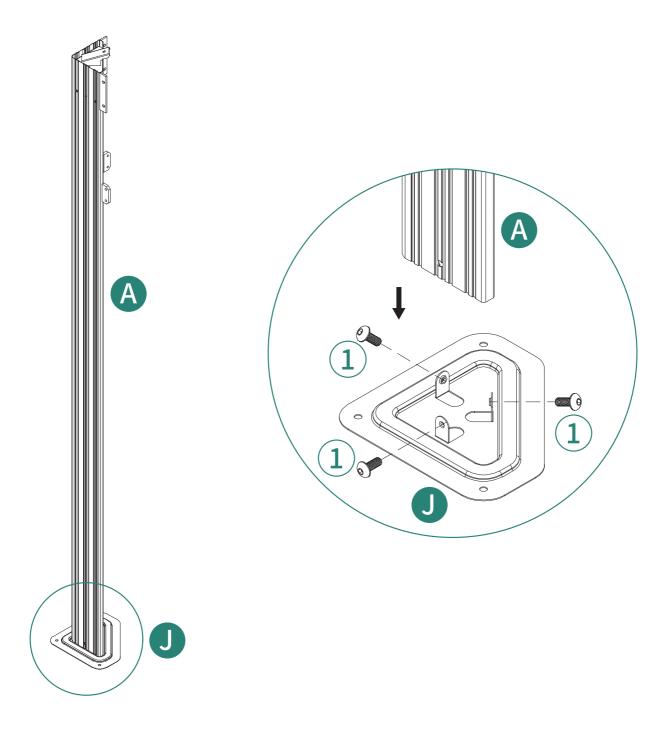





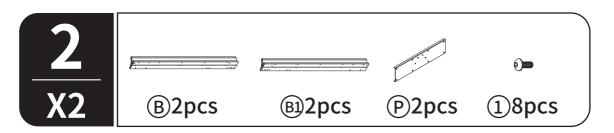


When connecting B and B1 via P, make sure that 3 holes on part P (as shown in the picture) should be facing upwards. Do not install it upside down.

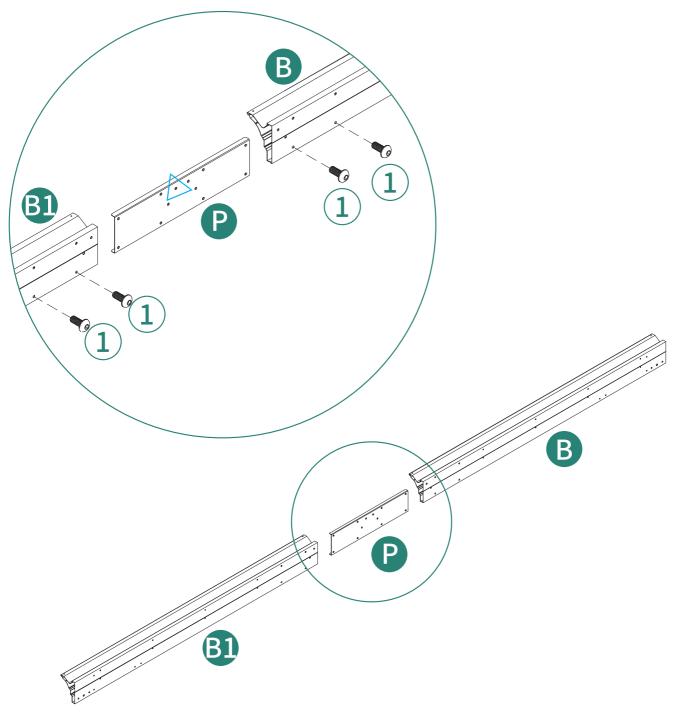


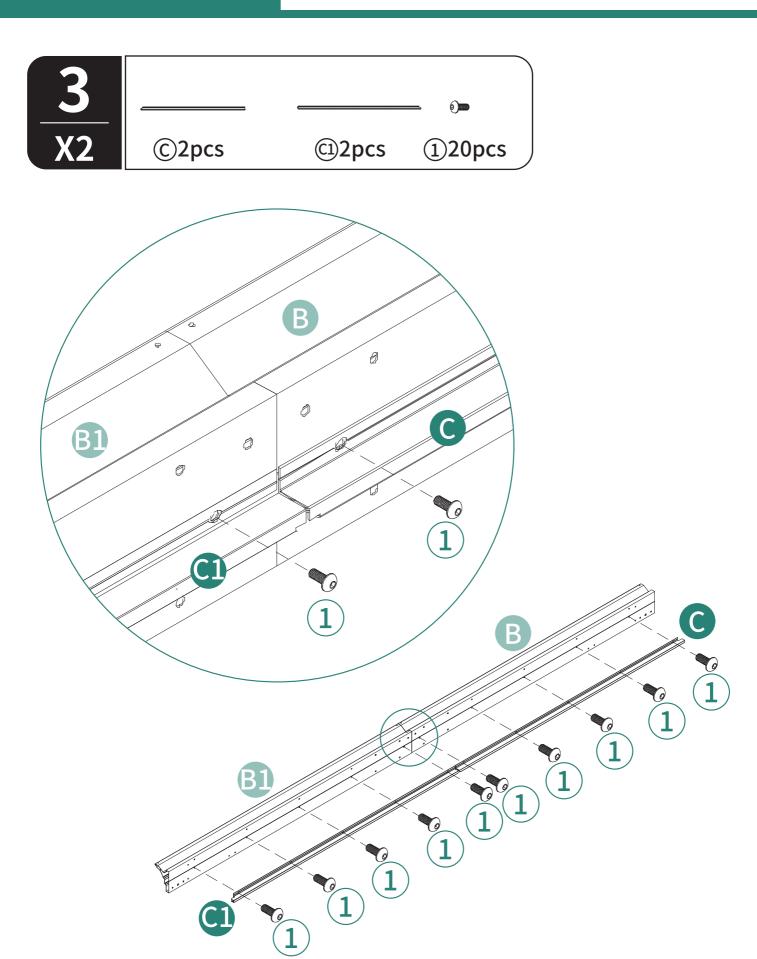


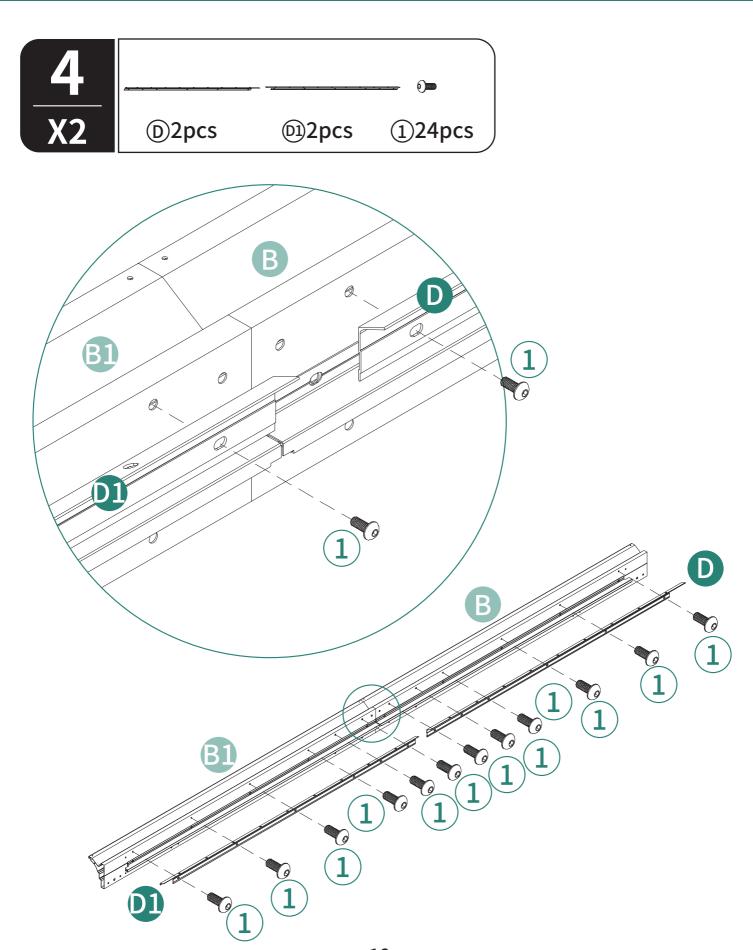


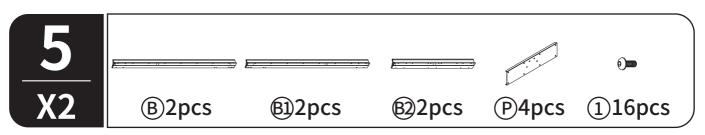



When connecting B1 and B2 via P, B2 and B via P, make sure that 3 holes on part P (as shown in the picture) should be facing upwards. Do not install it upside down.

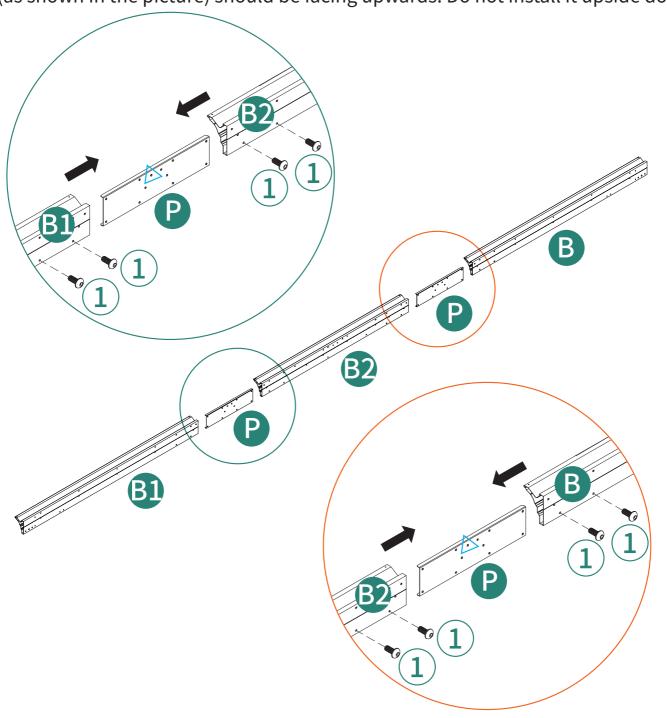


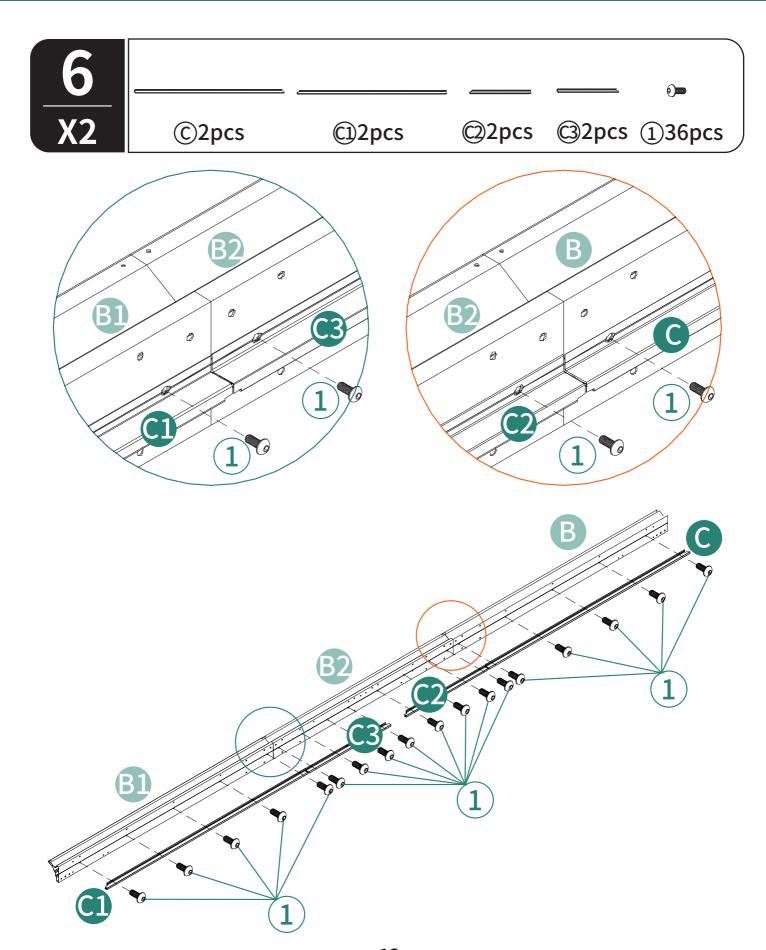


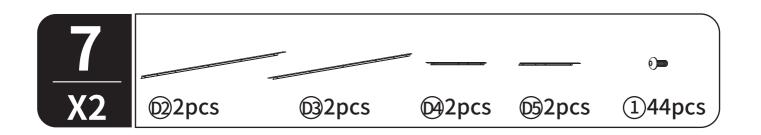


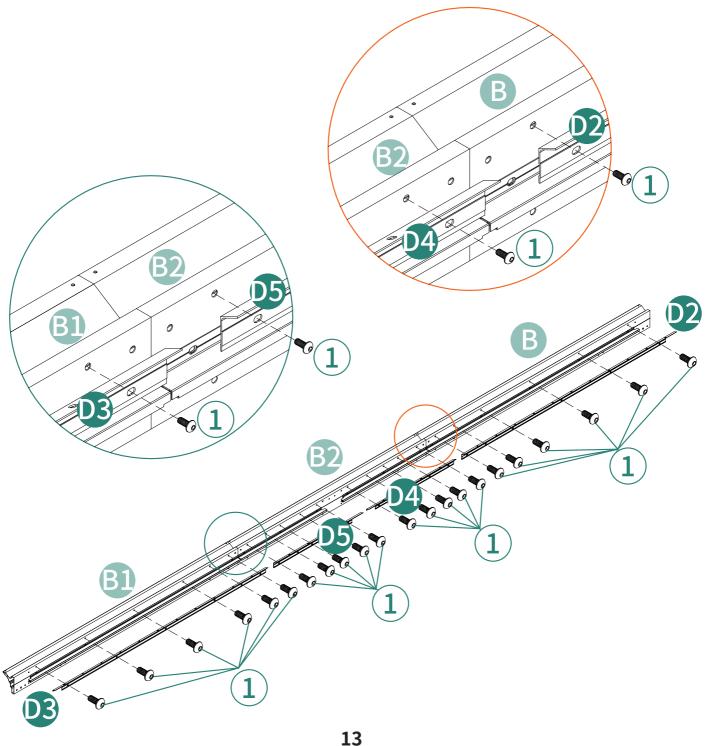


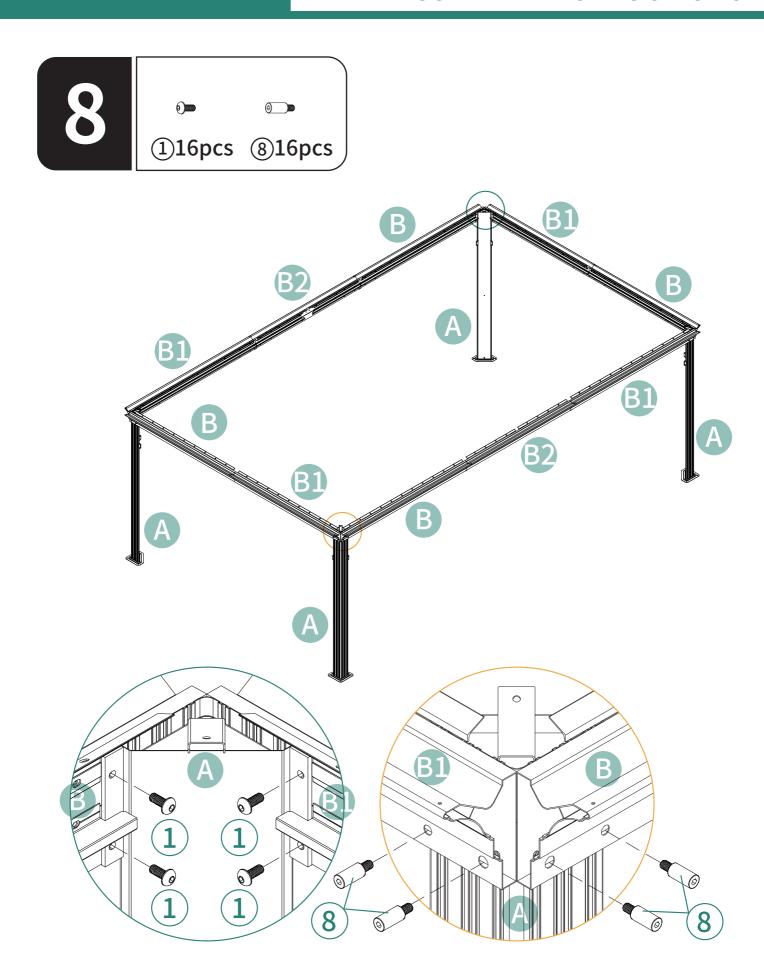

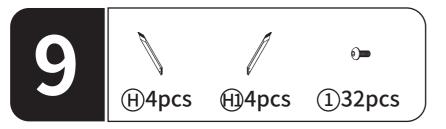

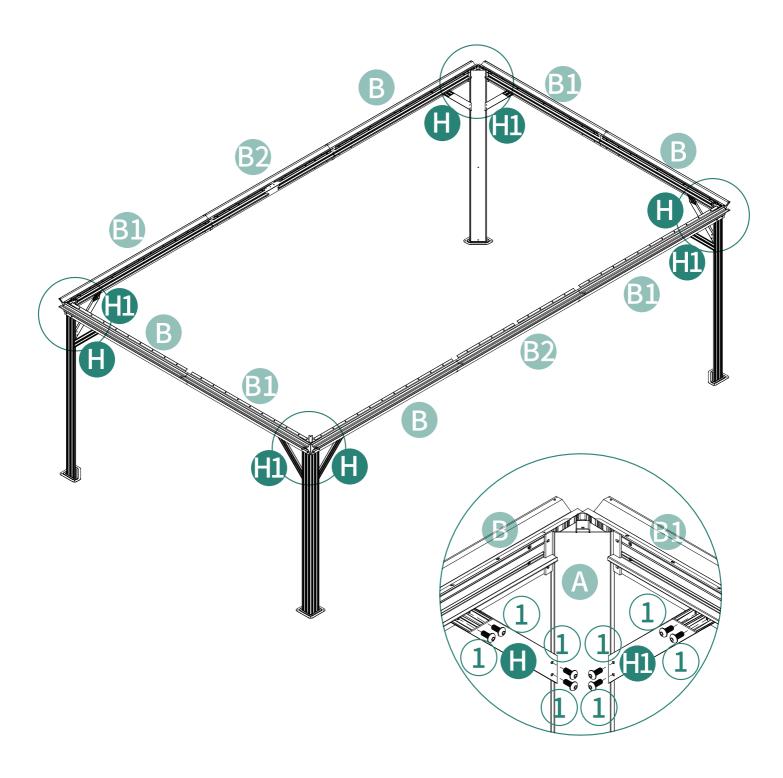


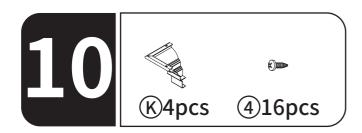


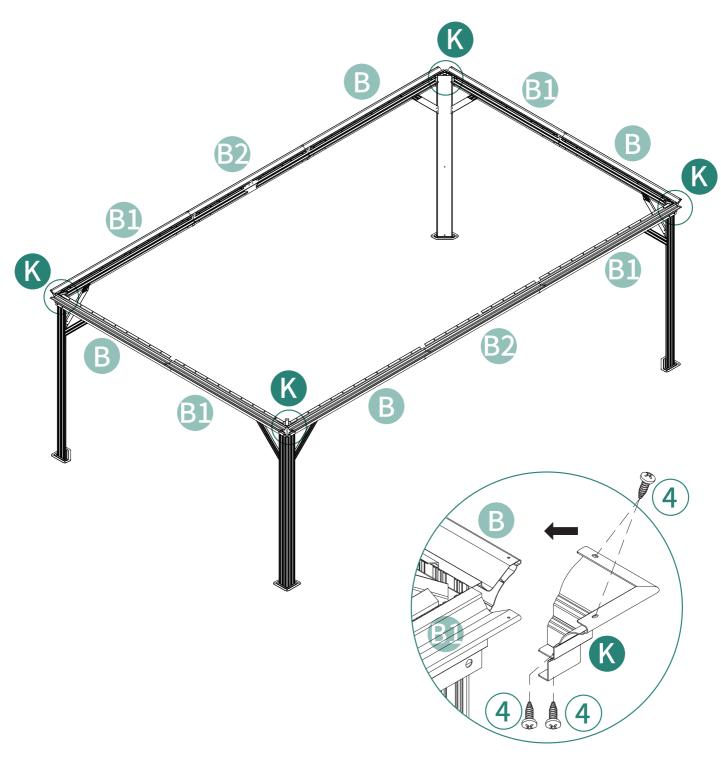





When sliding 8 x hook U onto each rail of parts B &B1&B2, they should face inward. The same for sliding 7 x hook U on rails of parts B and B1.

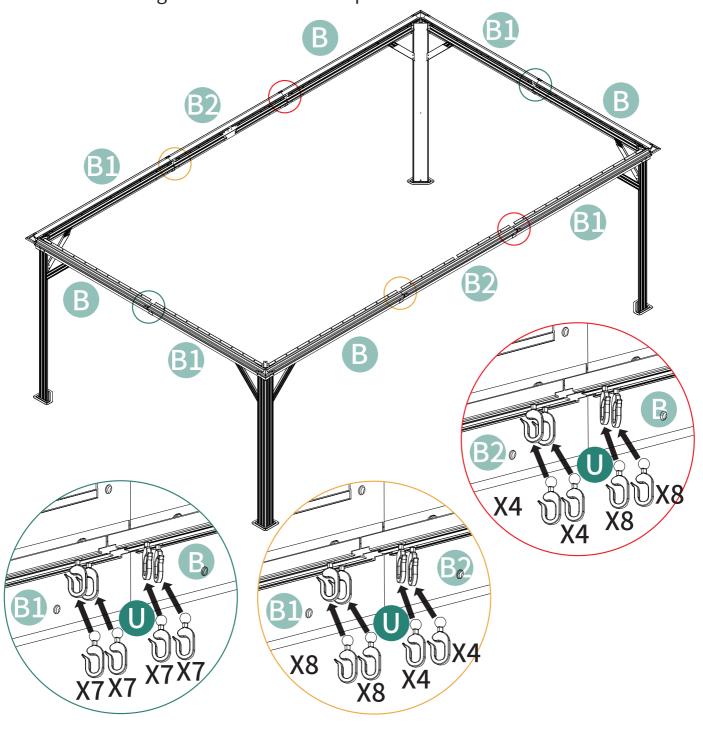


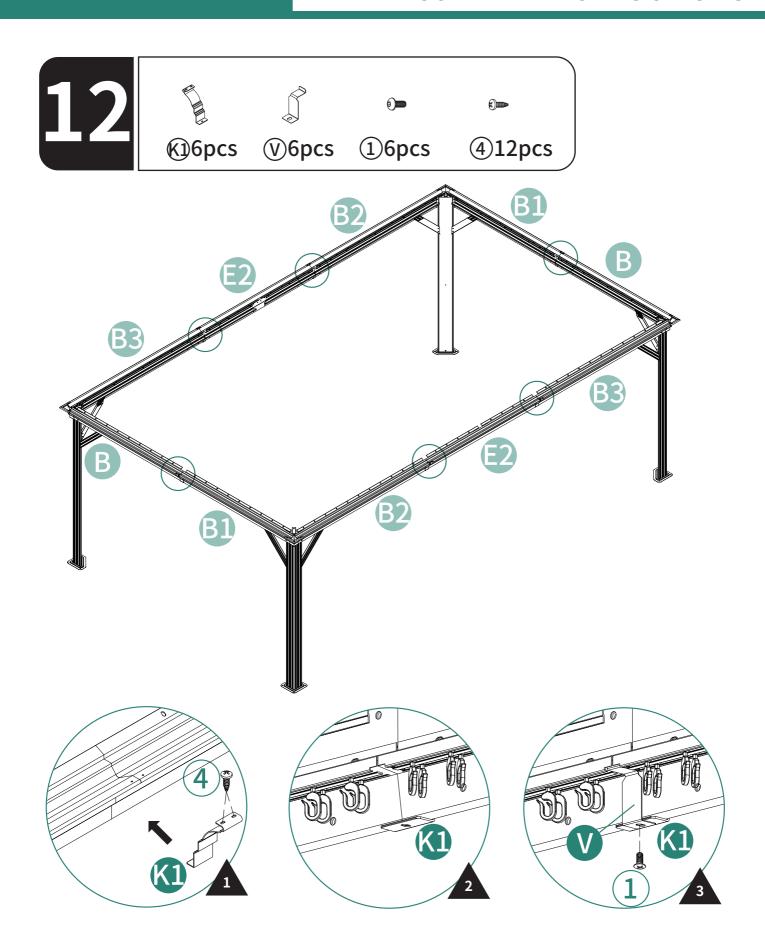





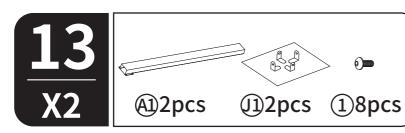


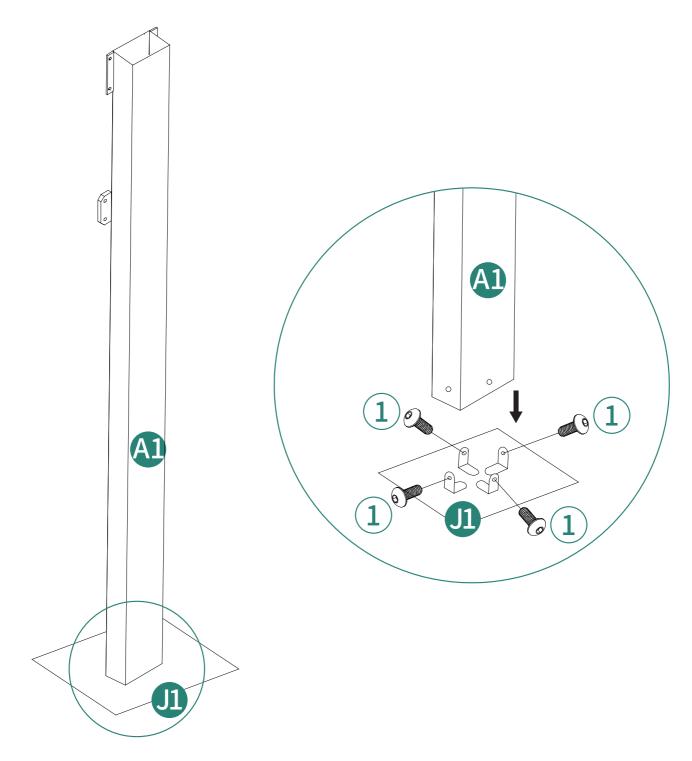


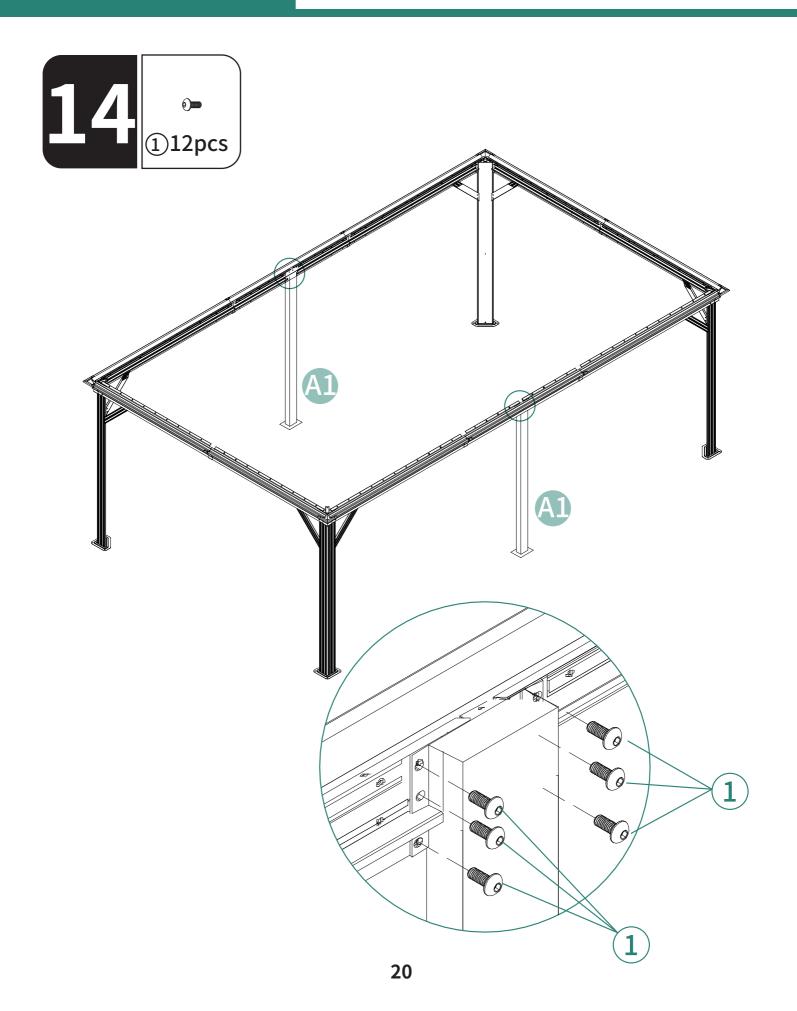


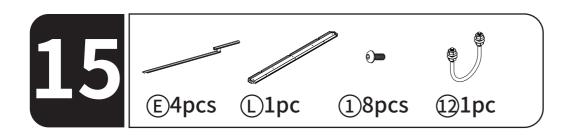


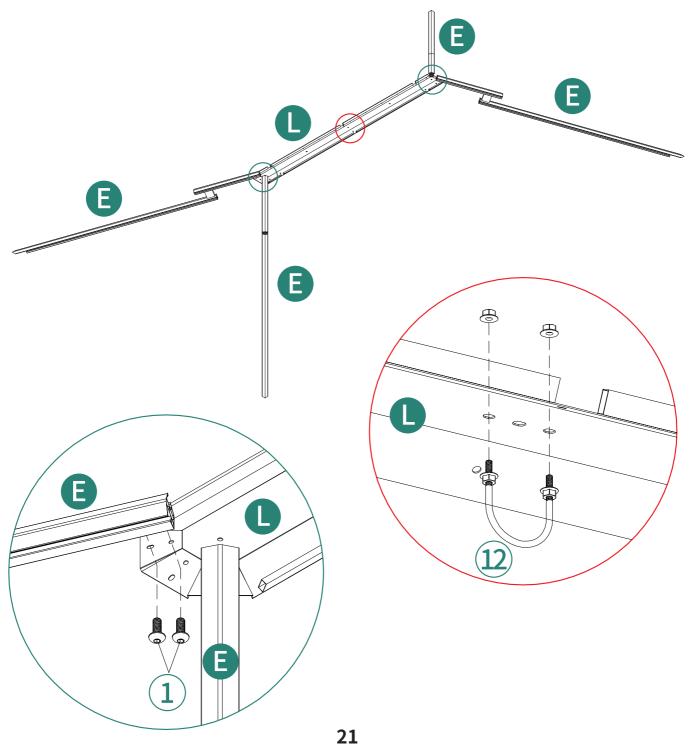


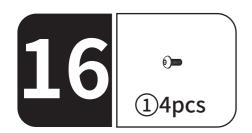


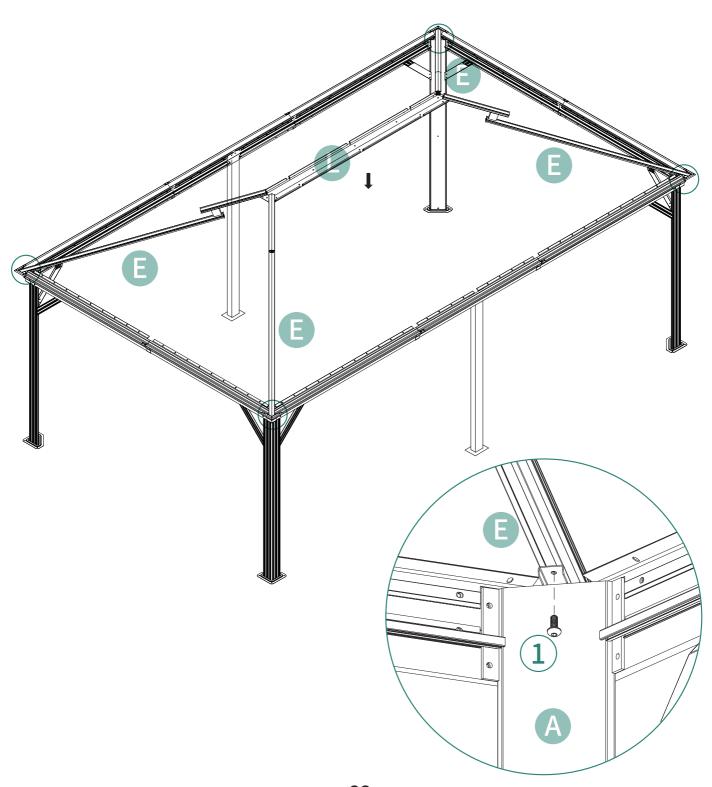


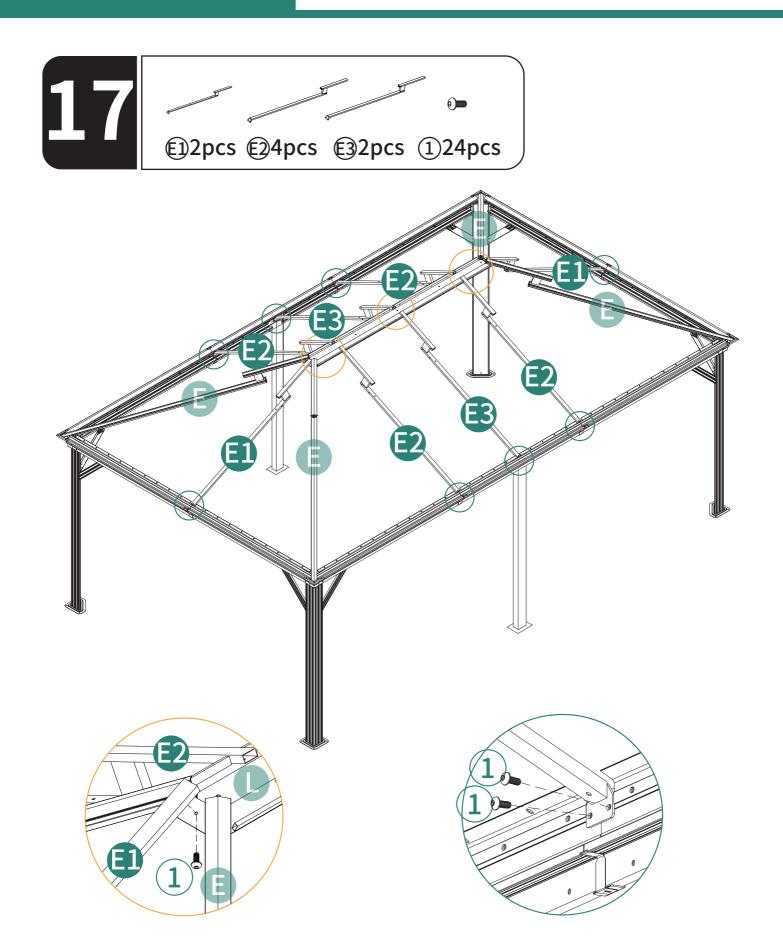


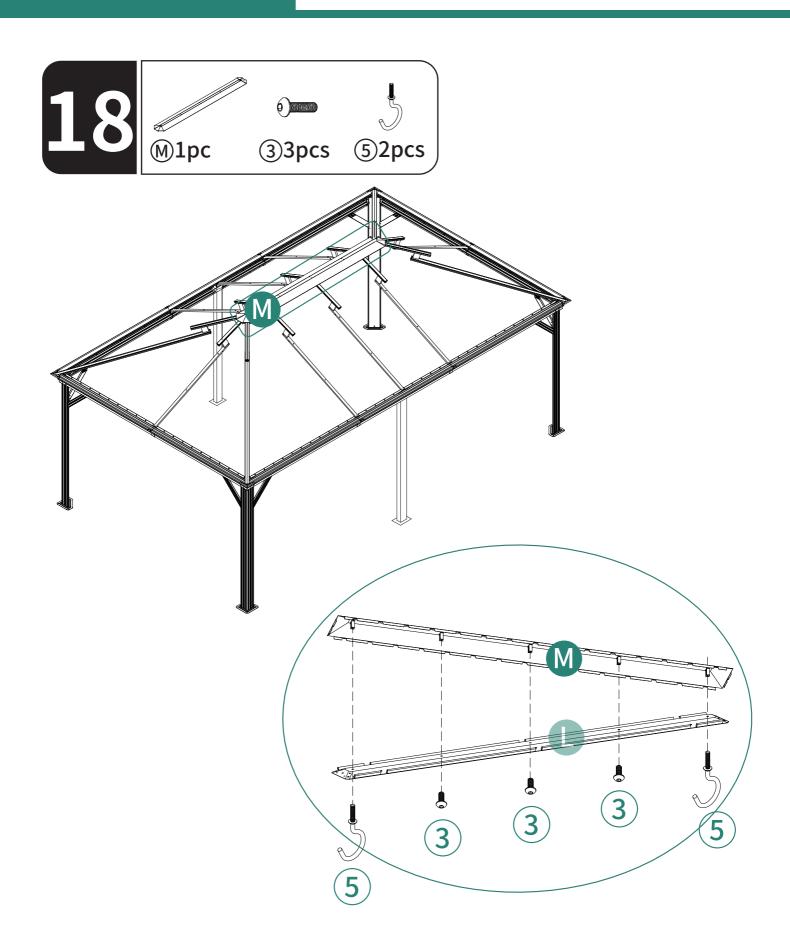


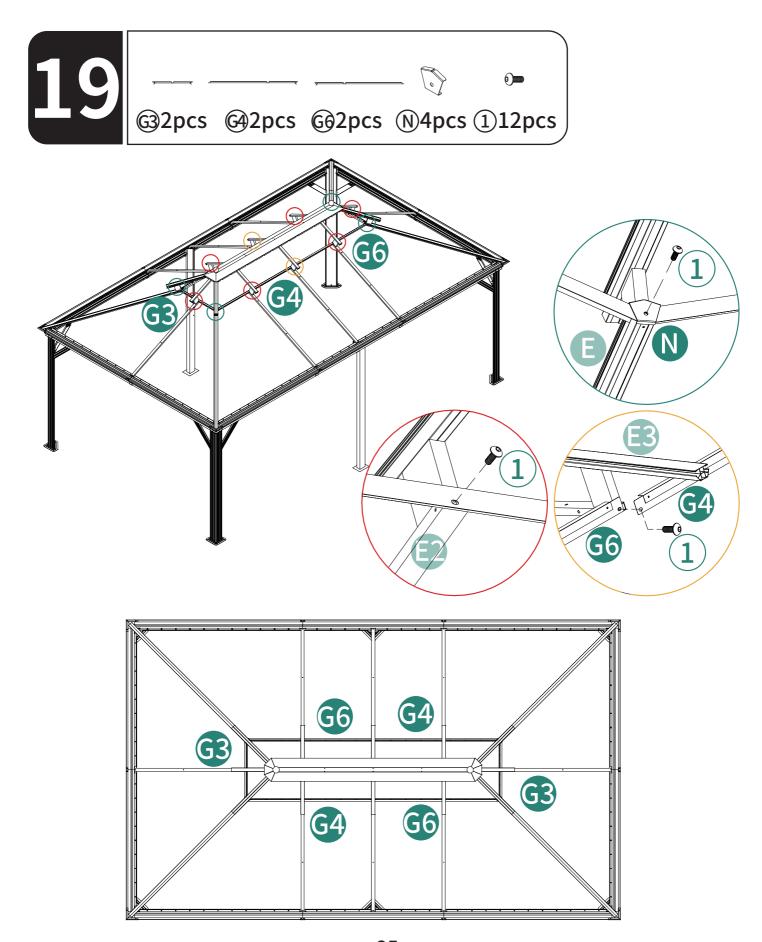


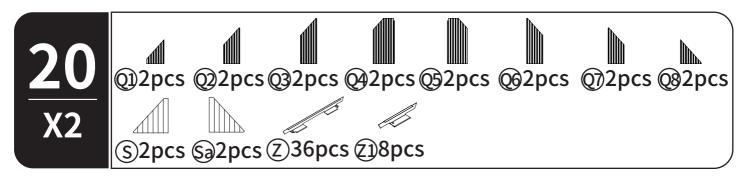


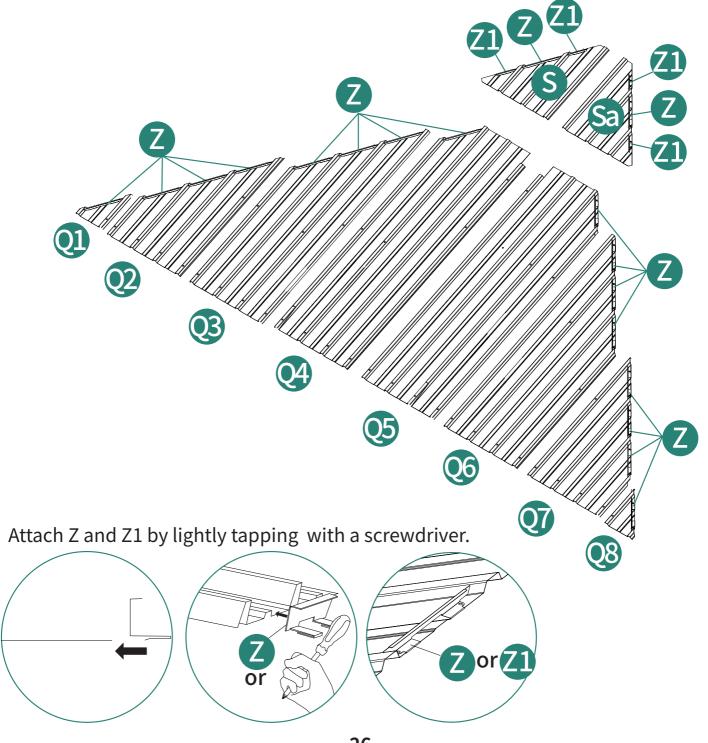

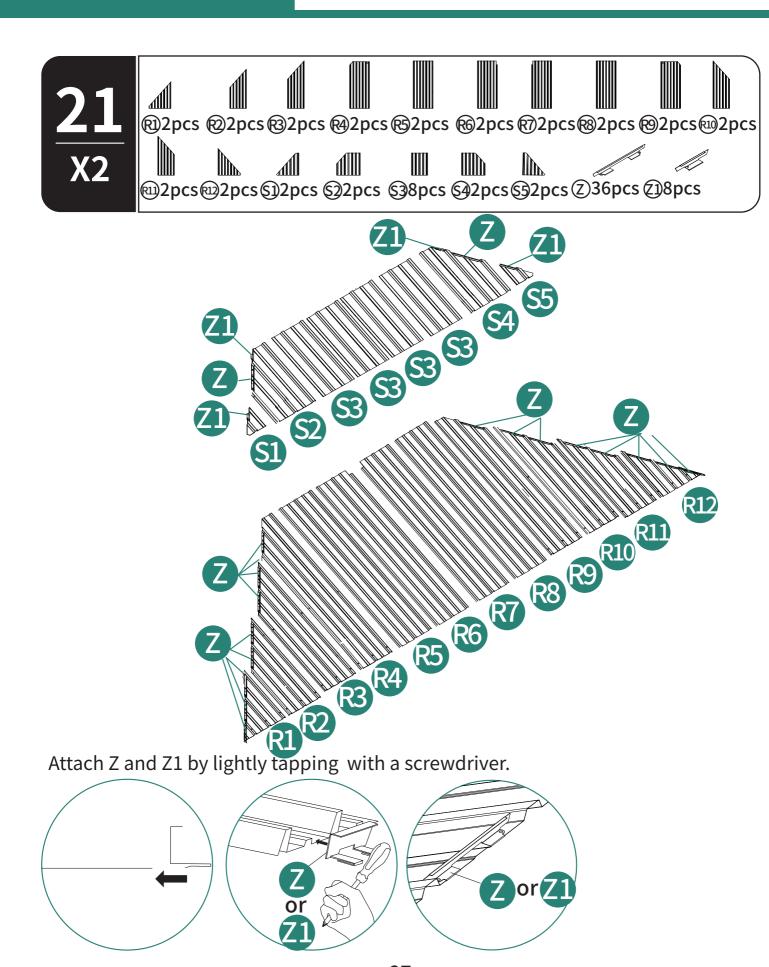


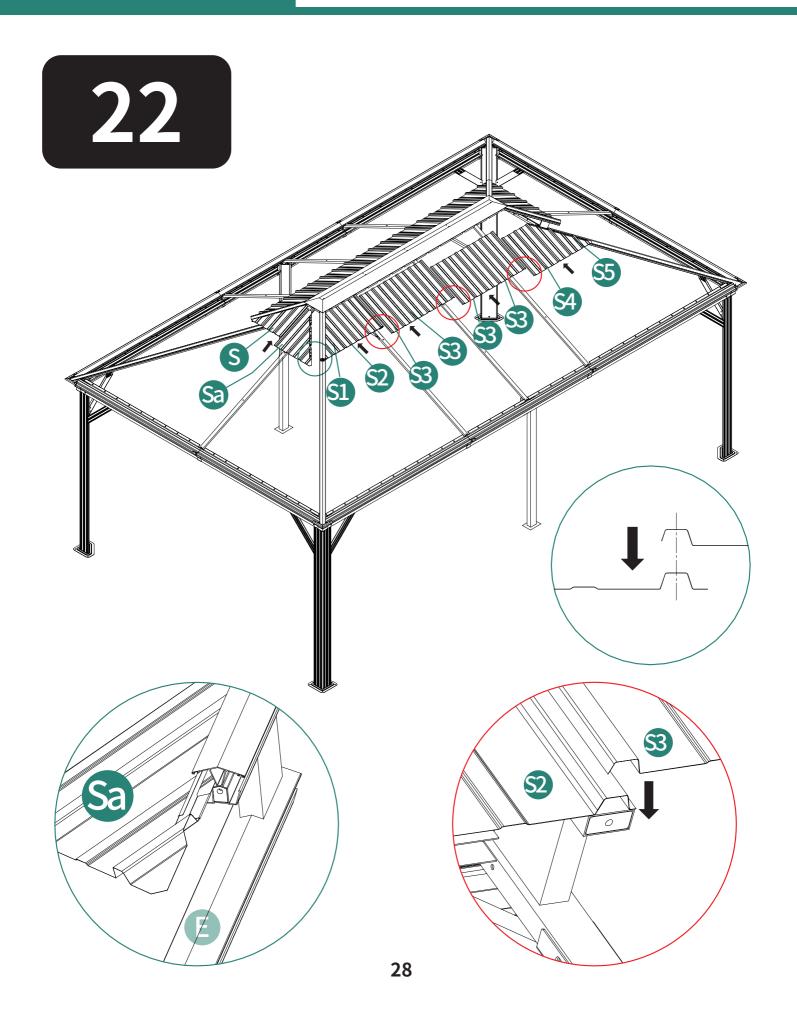


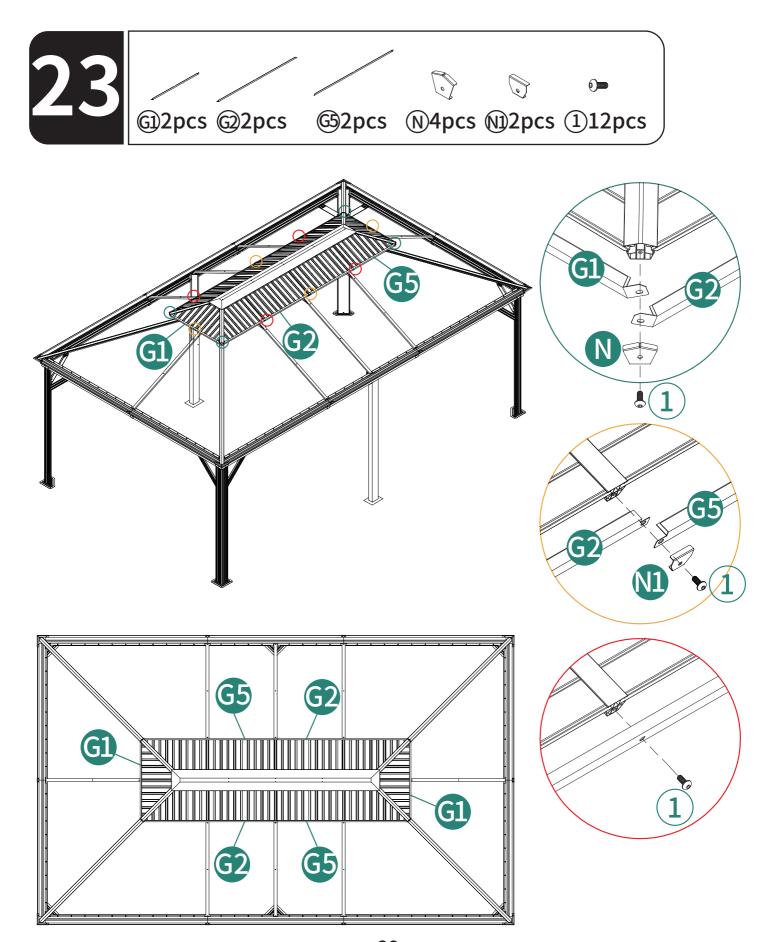


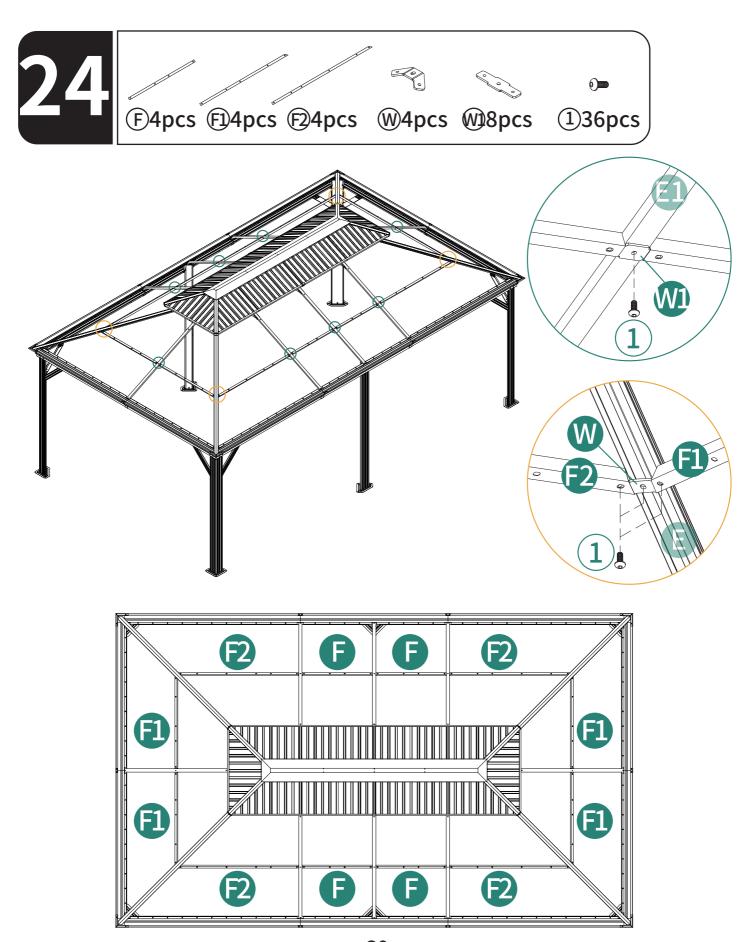





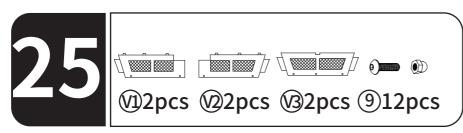


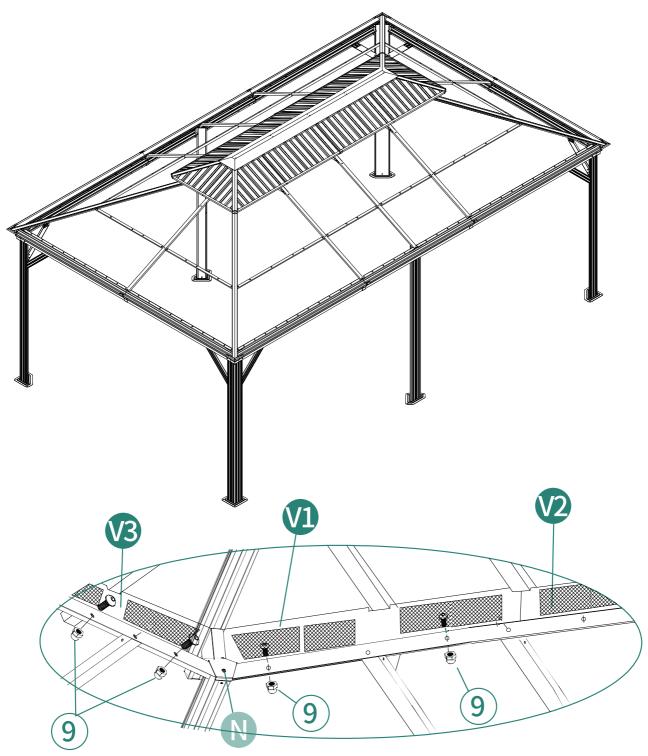


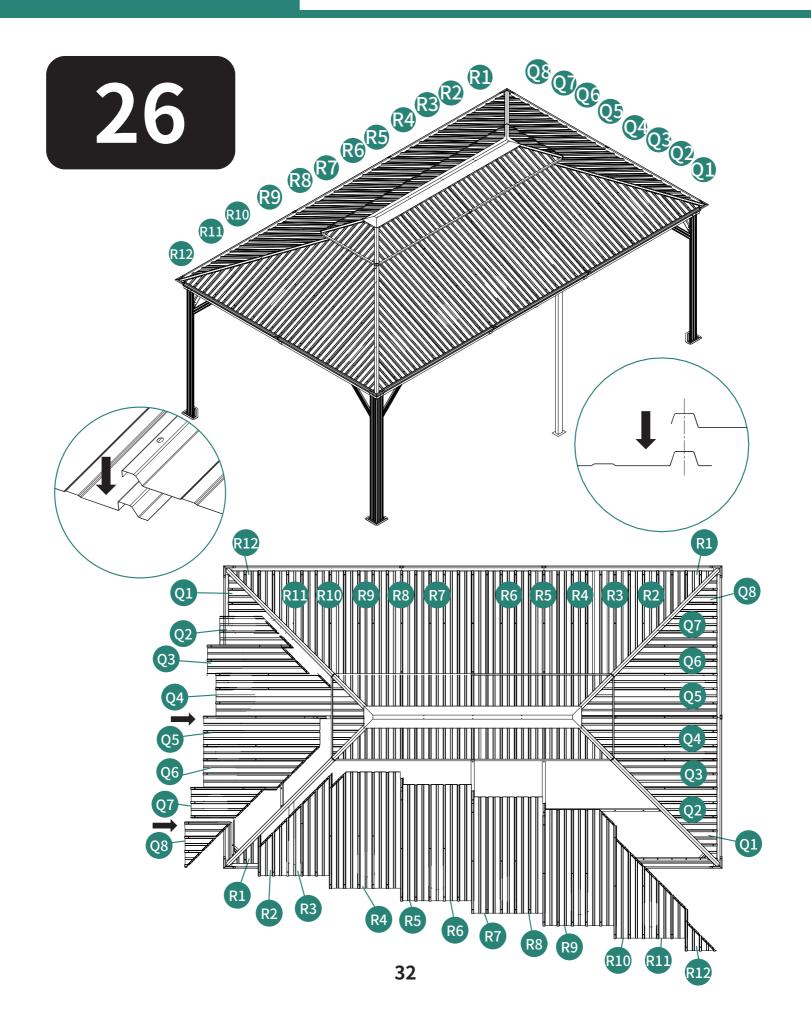


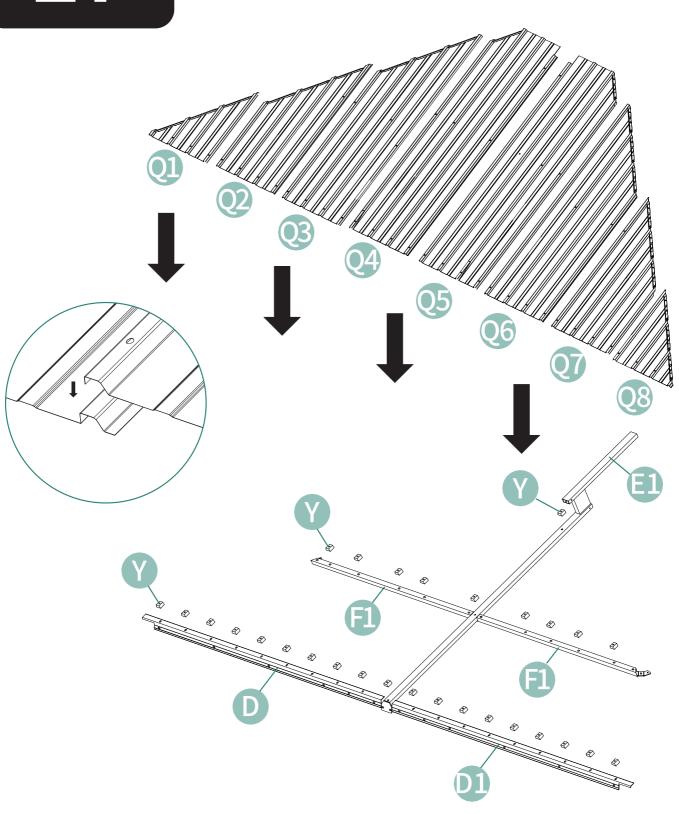


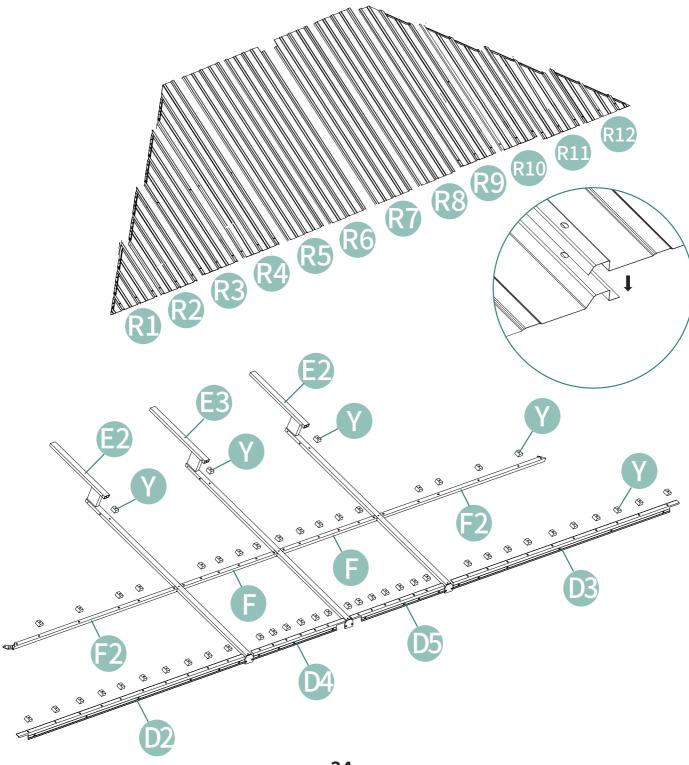

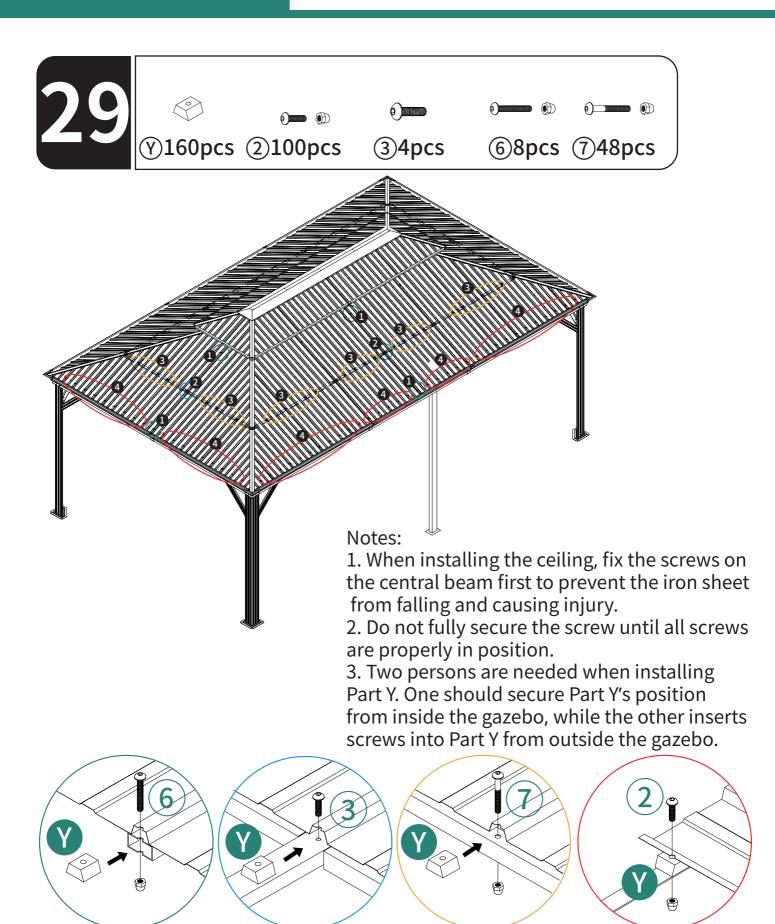


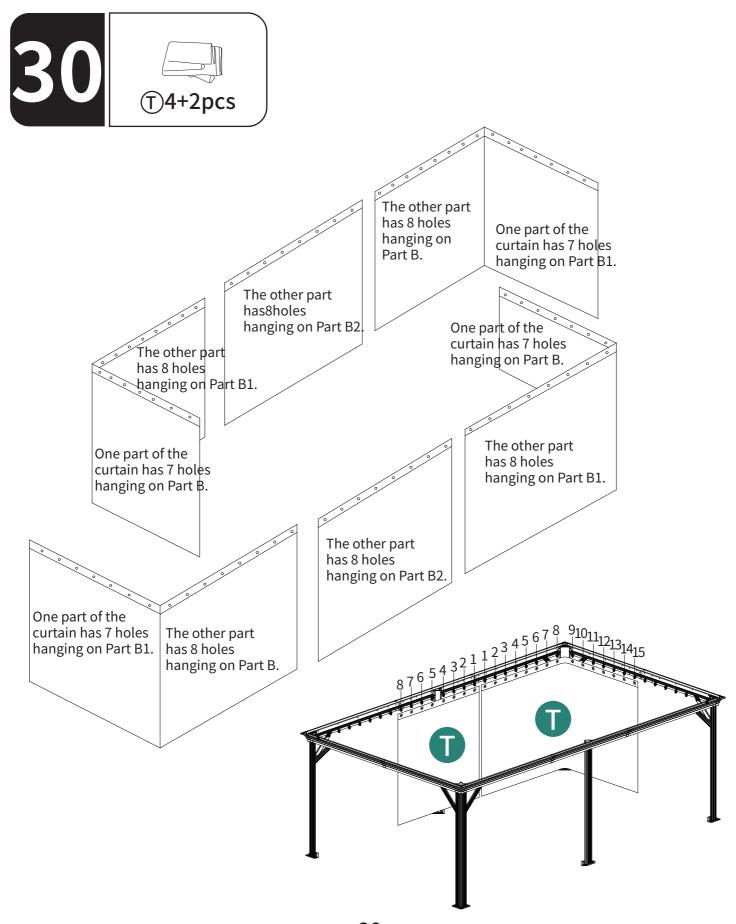

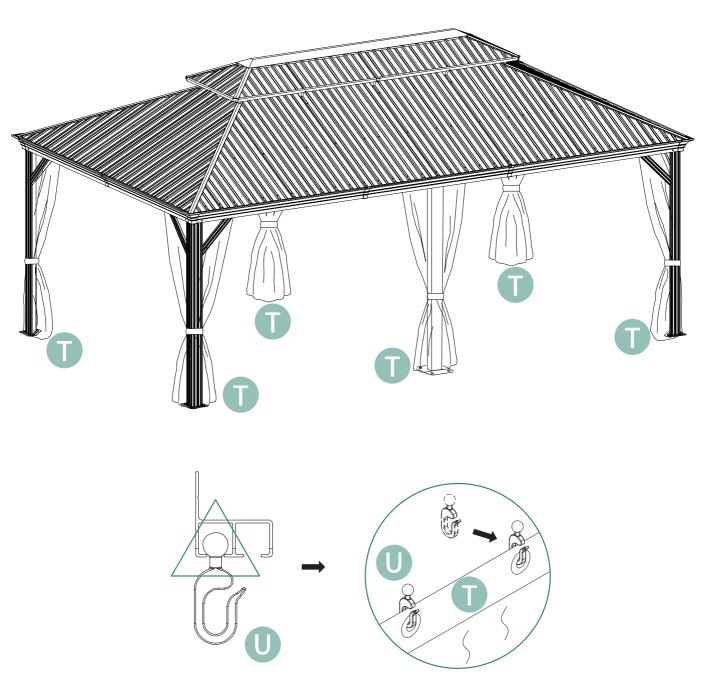

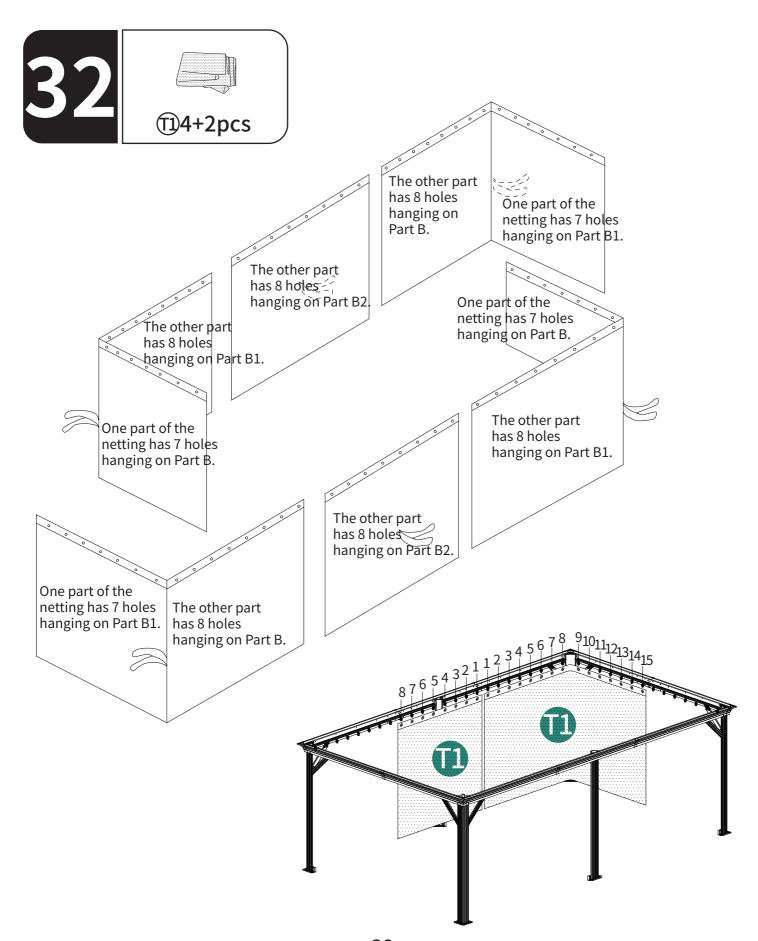


33

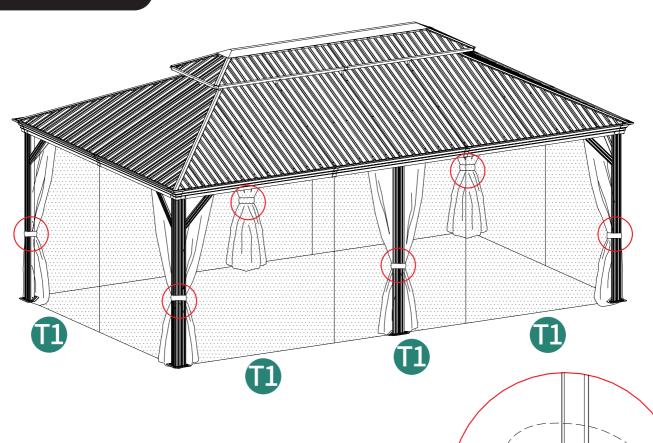

Note:


Attach 1 to 2 to secure parts T1 and T (curtains) together.

Attach 1 to 3 to secure the back curtain (T). Attach 1 to 3 to secure the front netting (T1).

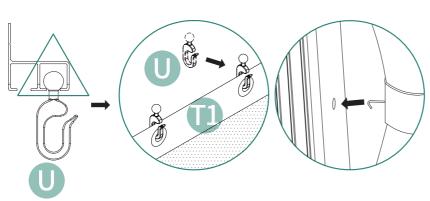


Pay attention to the sidewall netting's installation position.

Hang the hook attached to the netting on Part A&A1.

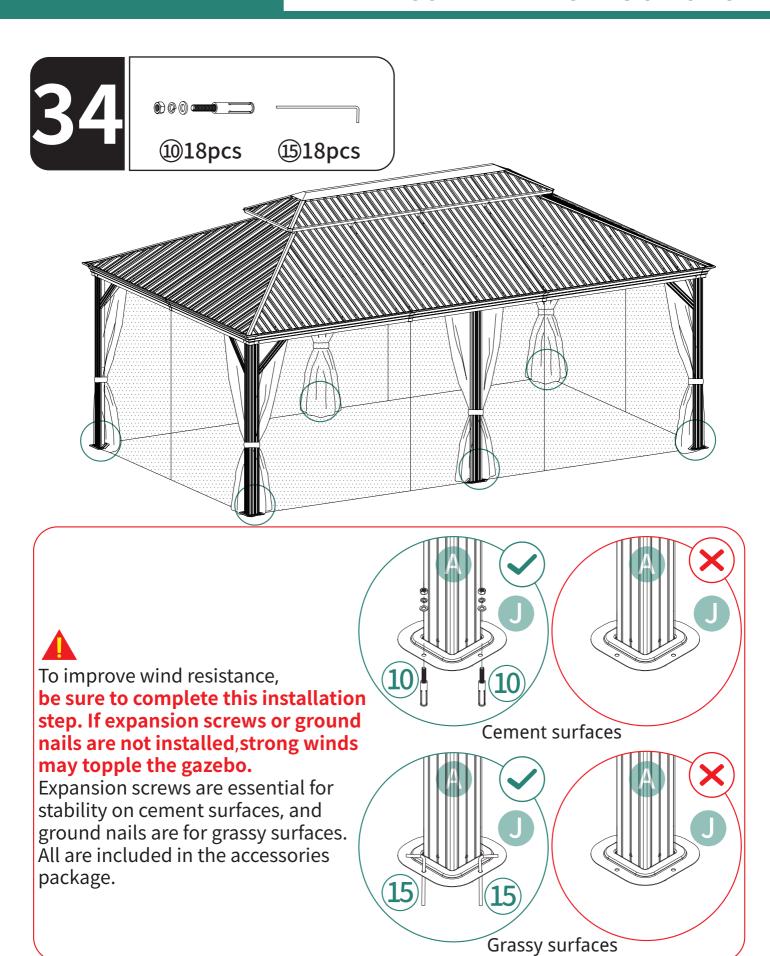

35

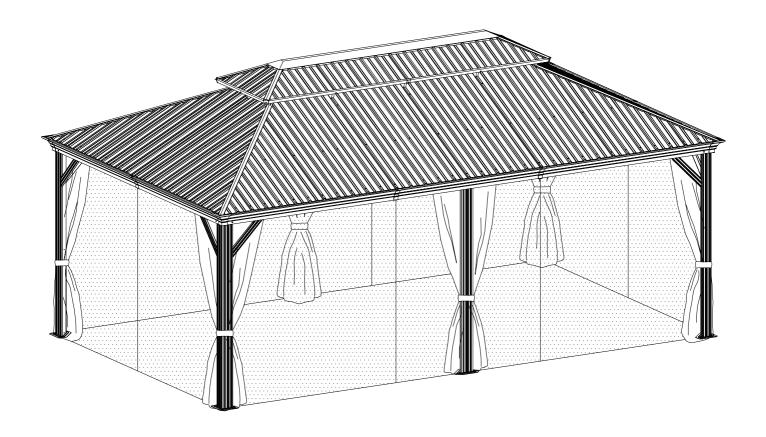

Installation Completed



Pure & Easy

CONTACT US:

If you have any questions about the installation of YITAHOME products, just contact us at +1 (888) 717-8084 from Mon-Fri 8:00 AM-4:30 PM PST / Sat. 8:00 AM-12:00 PM PST or e-mail us at after-sale.cs@hotmail.com

Alternative method to contact us (amazon.com orders only)

1.Log into your Amazon account

2.Go to "Your Orders" and find the purchase

3.Click on "Contact Seller"