




## VivaSpring Compact Shower Filter Installation

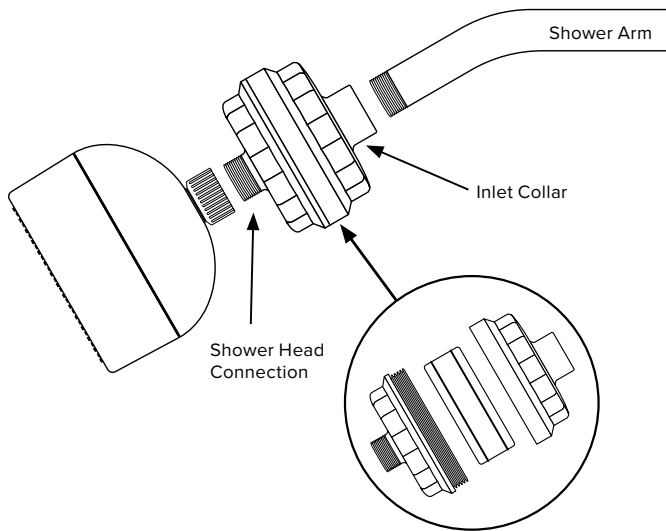

### Installation

1. Remove your existing shower head from the shower arm (pipe) by turning it counterclockwise.
2. Clean away any debris that may be on the threaded portion of the shower arm. Wrap the included plumber's tape tightly around the shower arm threads 2 or 3 times to prevent leaking.
3. Unscrew the protective caps from both ends of the CSF and discard properly.
4. Screw the CSF onto the shower arm (pipe) clockwise until tight. Use an adjustable wrench to tighten the connection if needed.
5. Wrap the included plumber's tape tightly around the threads on the CSF's shower head connection 2 or 3 times. Re-install your shower head by turning it clockwise, by hand, until tight. Use an adjustable wrench to tighten the connection if needed.
6. Turn water on and check for leaks (see the Troubleshooting section in the event of a leak). Flush the FF-30 Filter Cartridge by running the shower for 2 minutes, or until the water runs clear.

**CAUTION:** Risk of Personal Injury! If the water temperature is set too high, scalding will occur. The water temperature should never be set above 120°F (49°C). Do not use this Brondell low-flow product with a shower valve that allows the water temperature to become too hot.

### Parts Included

- Compact Shower Filter (CSF)
- FF-30 Filter Cartridge
- Plumber's Tape
- Rubber Washer

### Tools Needed

- Adjustable Wrench
- Rag or Small Towel
- Rubber Gloves (optional for better grip)

### Before You Begin

When installing the VivaSpring Compact Shower Filter (CSF) or changing the FF-30 Filter Cartridge for the first time, rubber gloves are recommended for a better grip on the housing.

While installing or re-installing the CSF, we recommended wrapping a rag or small towel around the inlet collar before you tighten with a wrench to avoid scratching the finish.