



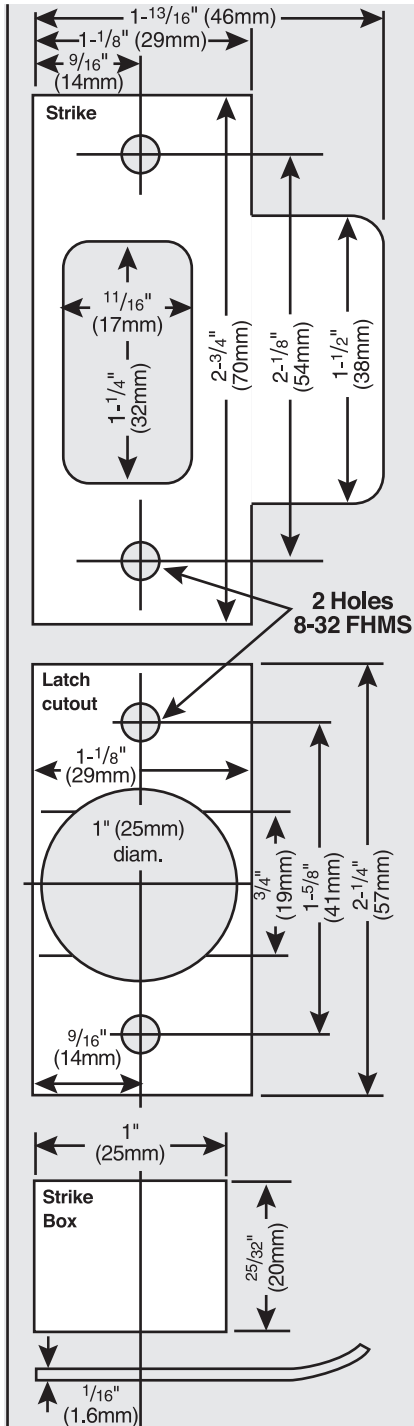


Template B (with passage set) right-hand

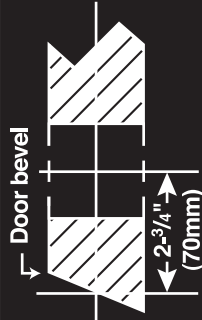

CAUTION
Apply template and drill from outside, but compensate for door bevel if any.

Mark center of door thickness.

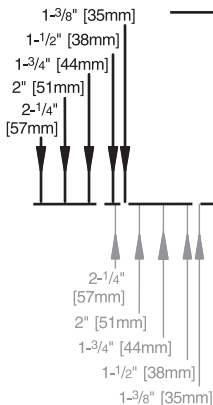


Cross bore 1" (25mm) diam. latch hole


For 2-3/4" (70mm): This flap folds over the edge of the door.
Ensure the fold is exactly on the line.

For 2-3/8" (60mm): This flap folds over the edge of the door.
Ensure the fold is exactly on the line.

CAUTION: Mark accurately. Bore straight.

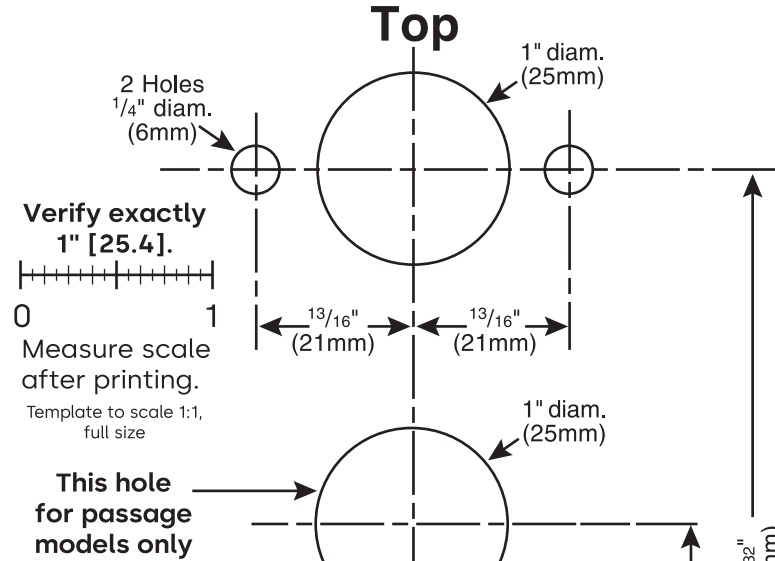

Bottom

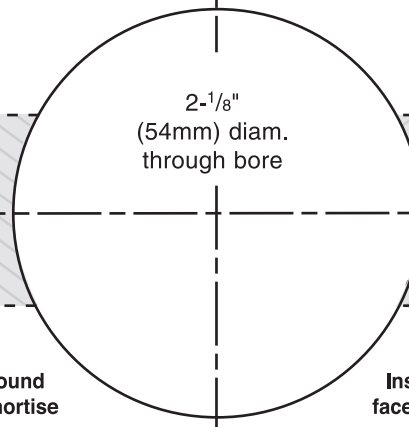

Insert latch, mark around face plate of latch, mortise to depth required.


For 2-3/4" (70mm): This flap folds over the edge of the door.
Ensure the fold is exactly on the line.

For 2-3/8" (60mm): This flap folds over the edge of the door.
Ensure the fold is exactly on the line.

Template B (with passage set) left-hand

NOTE: Lock will accommodate doors 1-3/8" (35mm) to 2-1/4" (57mm) thick. Suitable reinforcement shall be provided by the hollow metal door manufacturer to prevent collapsing of door. When door silencers are to be installed, proper allowances must be made for strike location.

Mark center of door thickness.

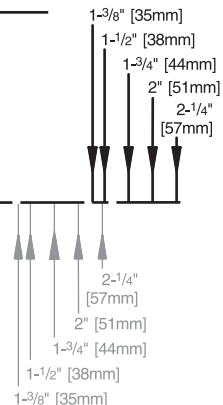

Cross bore 1" (25mm) diam. latch hole