

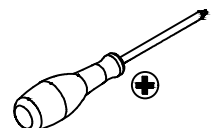
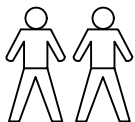
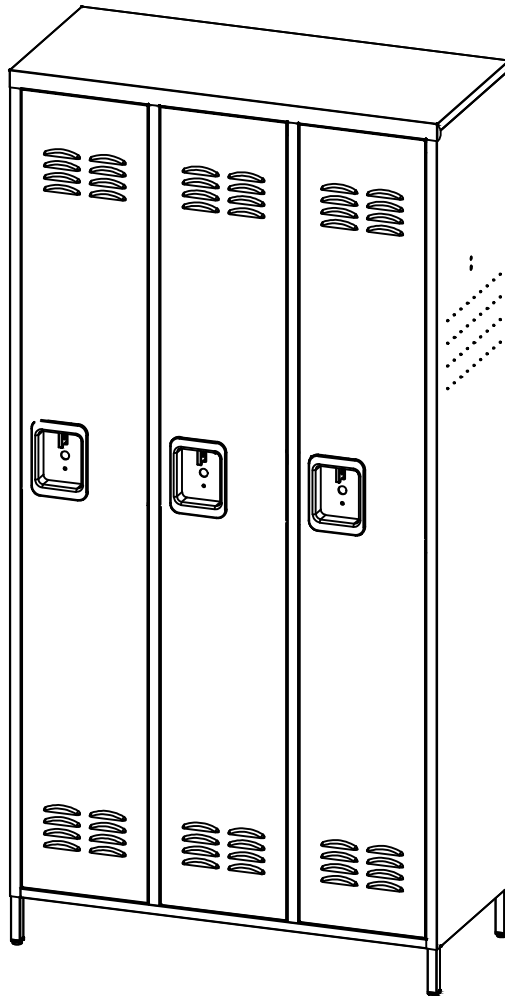
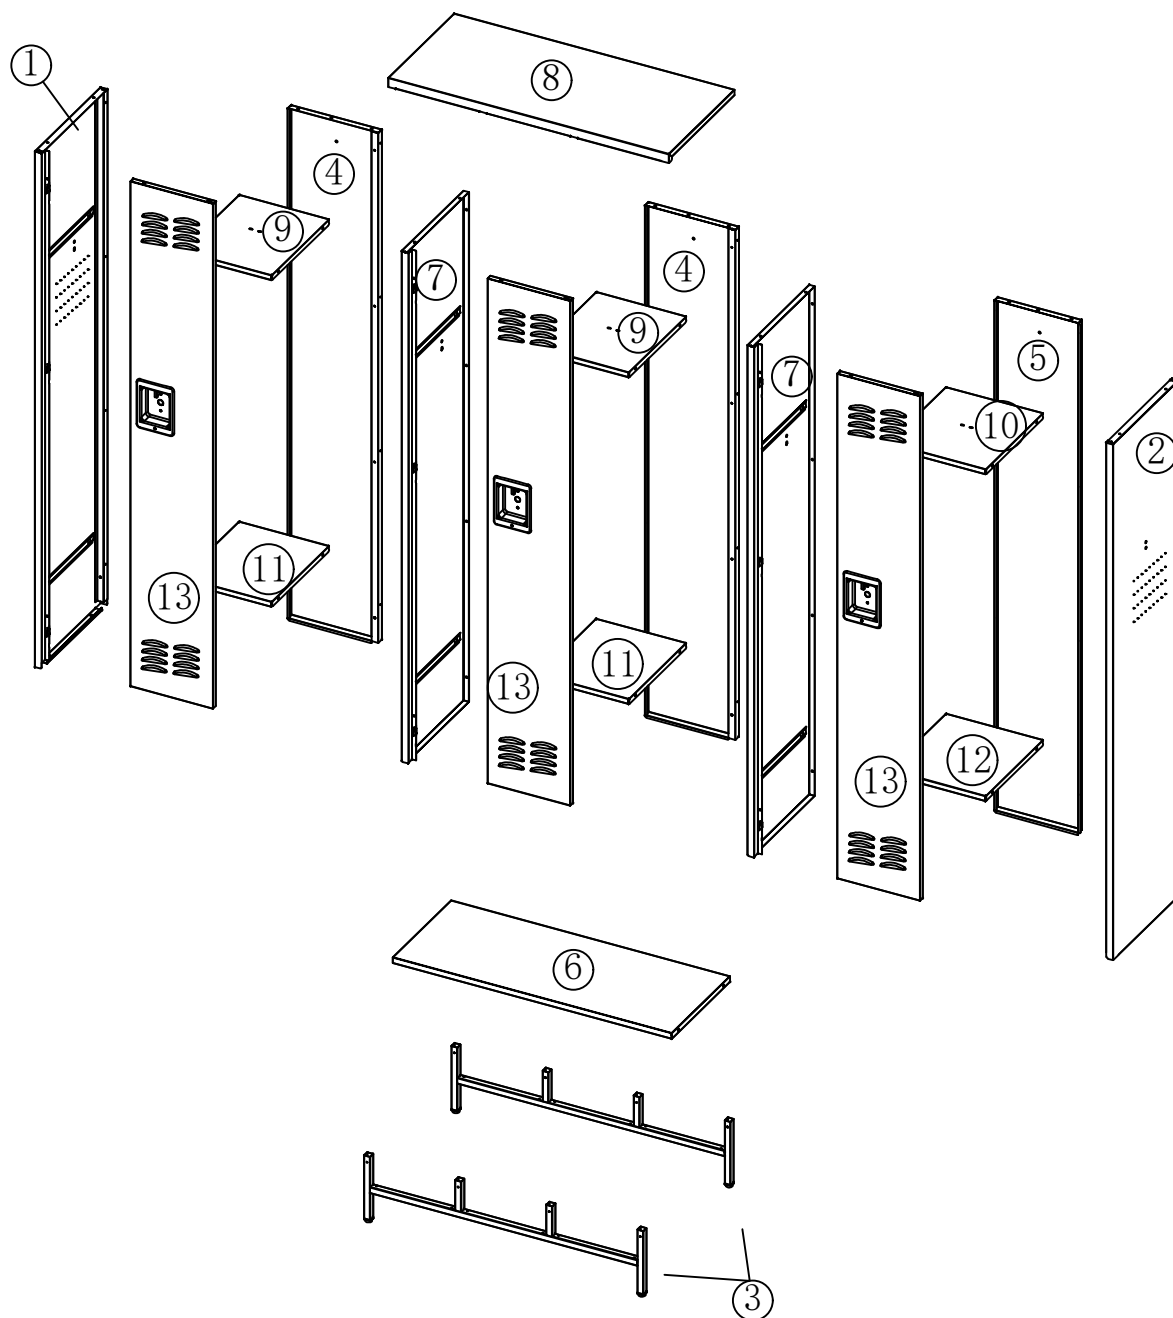








Metal Storage Locker Instructions

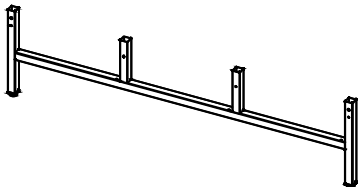

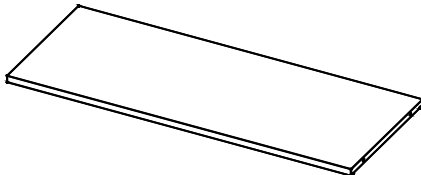


Accessories

1-Left Panel	1PC	2-Right Panel	1PC
			
3-Cross Leg	2PCS	4-Left Back Panel	2PCS
			
5-Right Back Panel	1PC	6-Bottom Panel	1PC
			

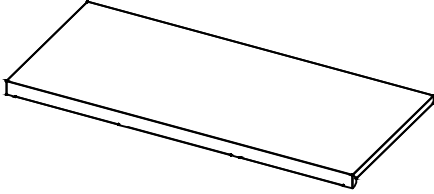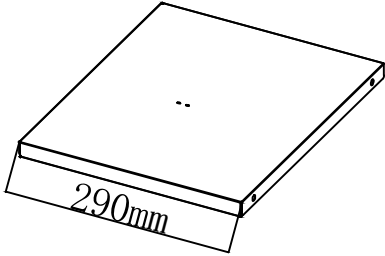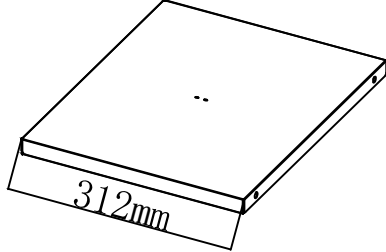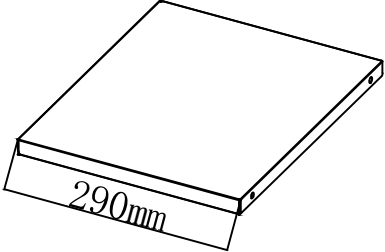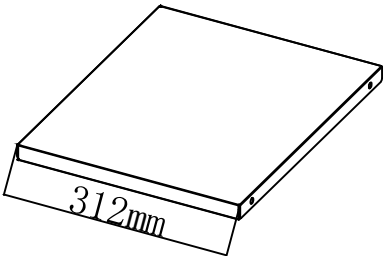7-Middle Side Pante	2PCS	8-Top Panel	1PC
			
9-Left Shelf 9	2PCS	10-Right Shelf 10	1PC
			
11-Left Shelf 11	2PCS	12-Right Shelf 12	1PC
			

13-Door

3PCS

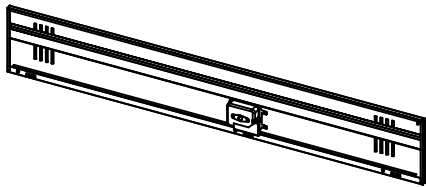

CAUTION

An assistant is required.

A * 41



M5*12MM

B * 14



M5

C * 6



D * 3



E * 2



M8 M5*30MM M5

F * 6



G * 3



H * 3



J * 4



Spare




If there is any problem, please feel free to contact our customer service team and we are always here to assist with you!


If there is any slight dent or damage, you can try to fix it by pliers or hammers.

Installation Steps


Step 1: Prepare two Part 3 (Pay attention to the direction)

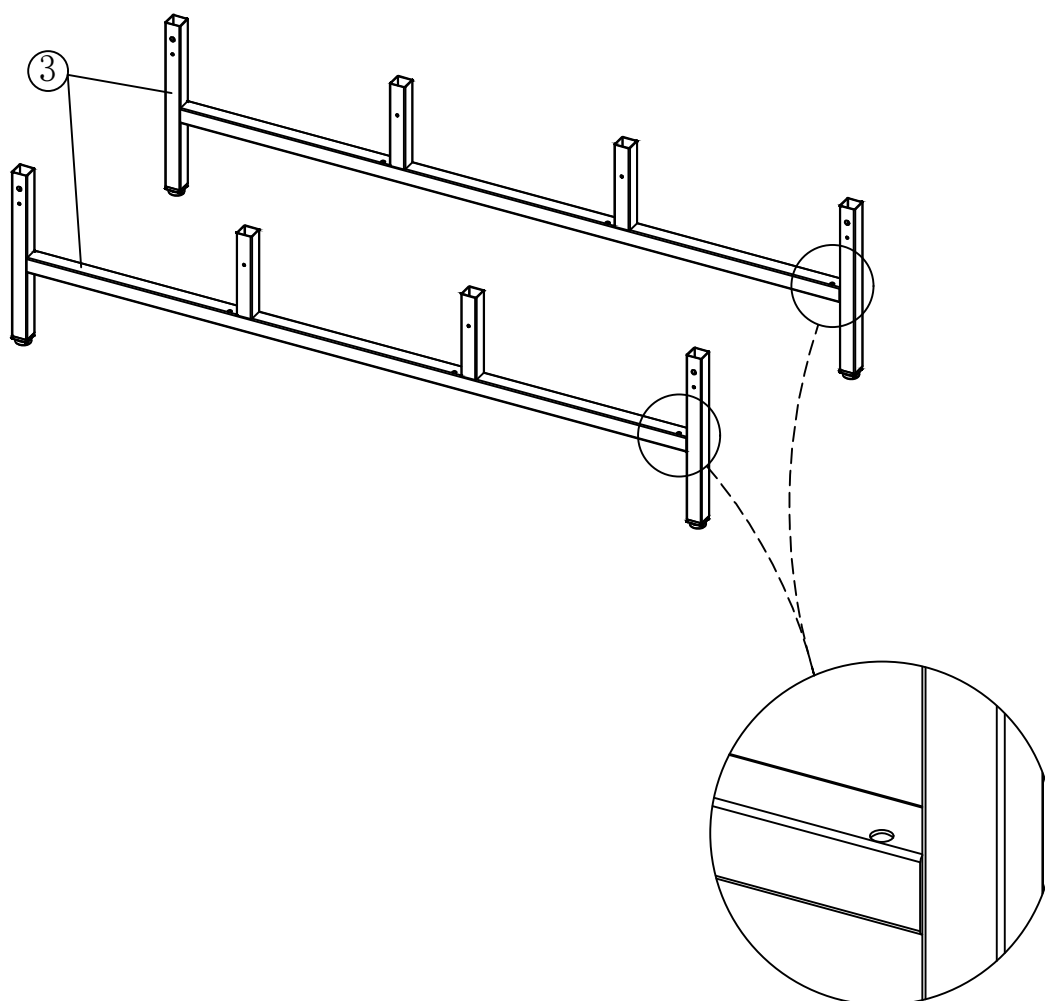



Step 2: Insert Part 1 into Part 3

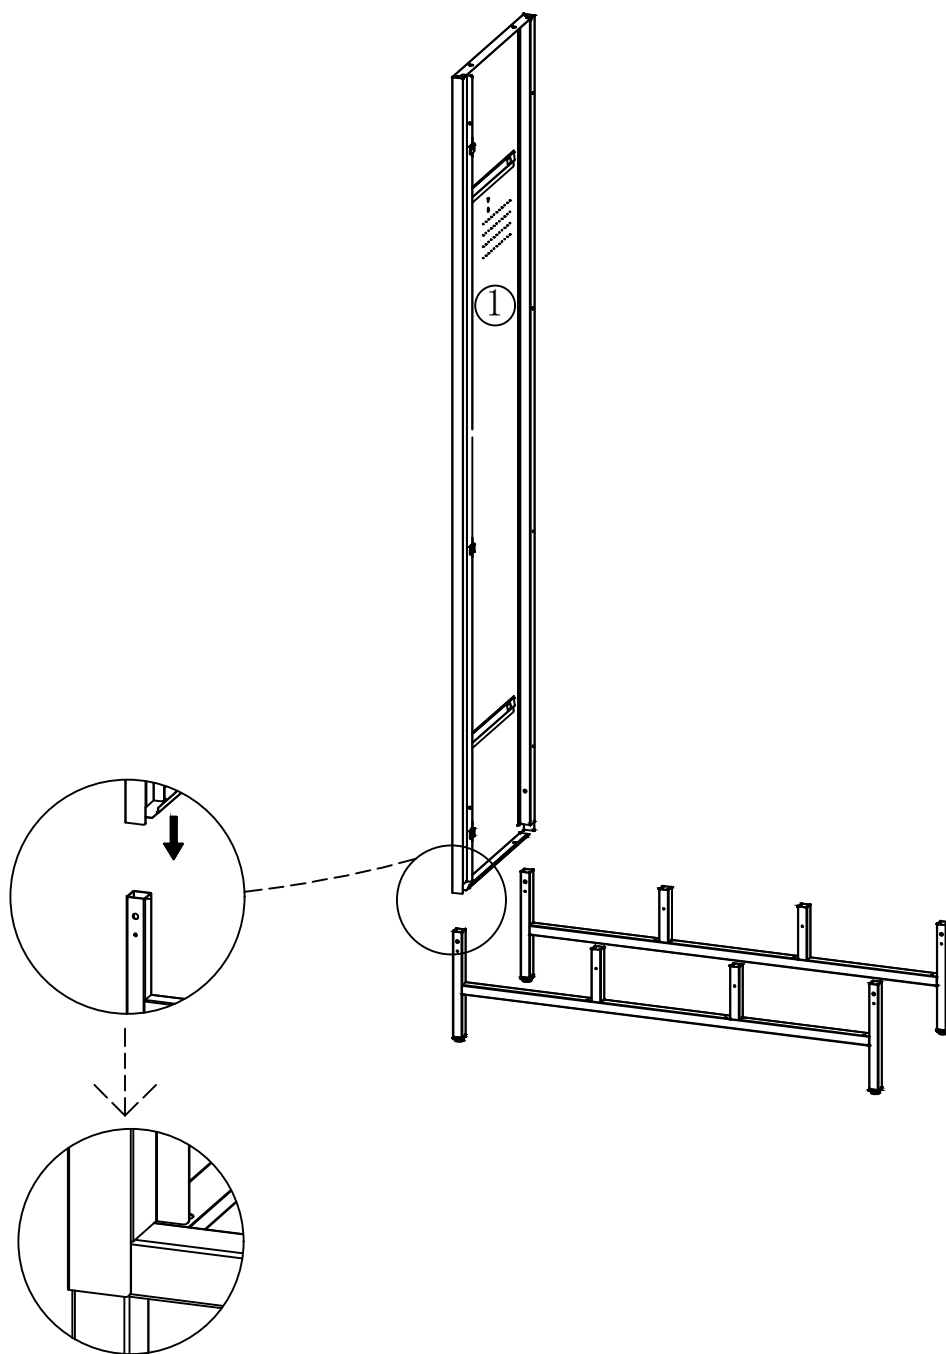



Step 3: Insert Part 2 into Part 3

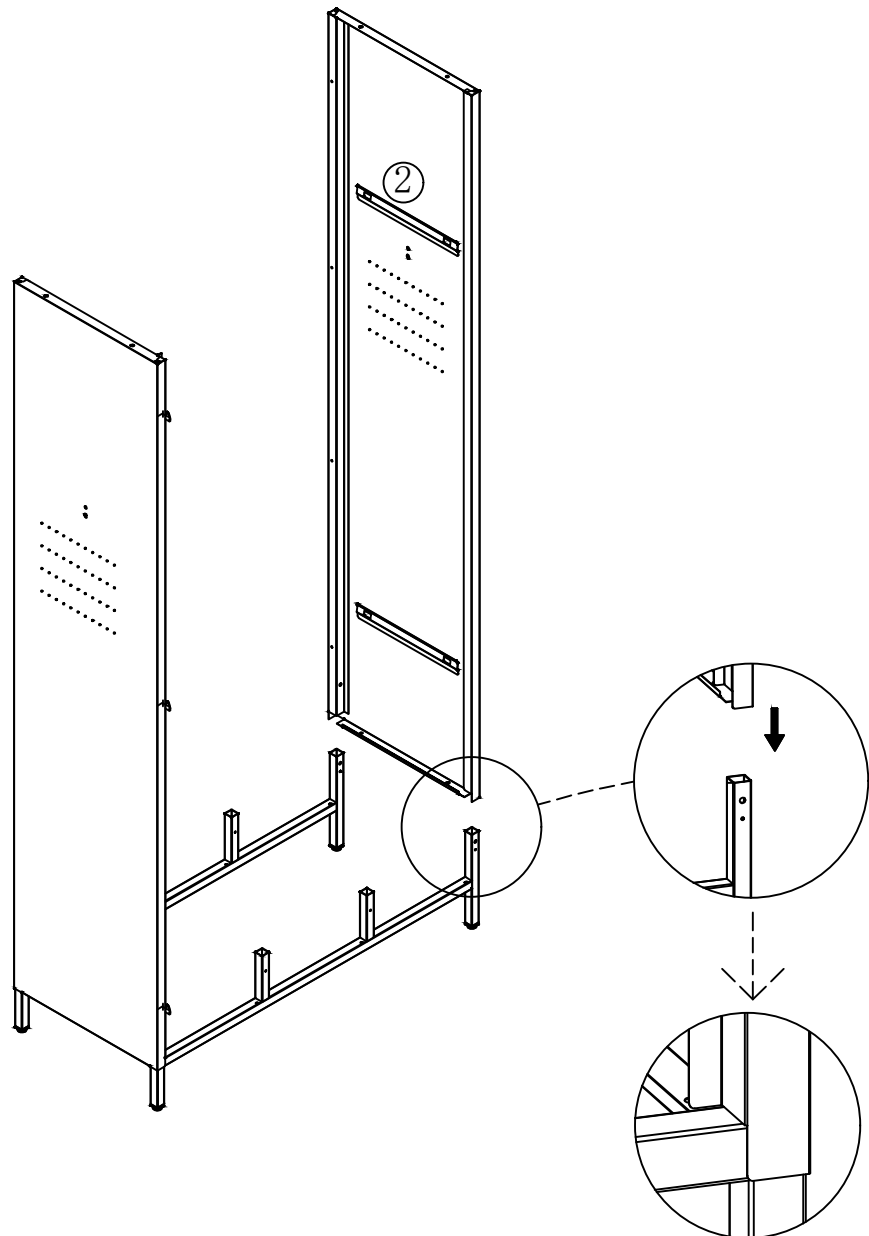


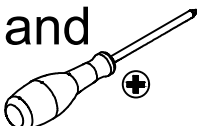
A*4	Step 4: Connect Part 1, Part 2 and Part 3 with Part A	
 M5*12MM		

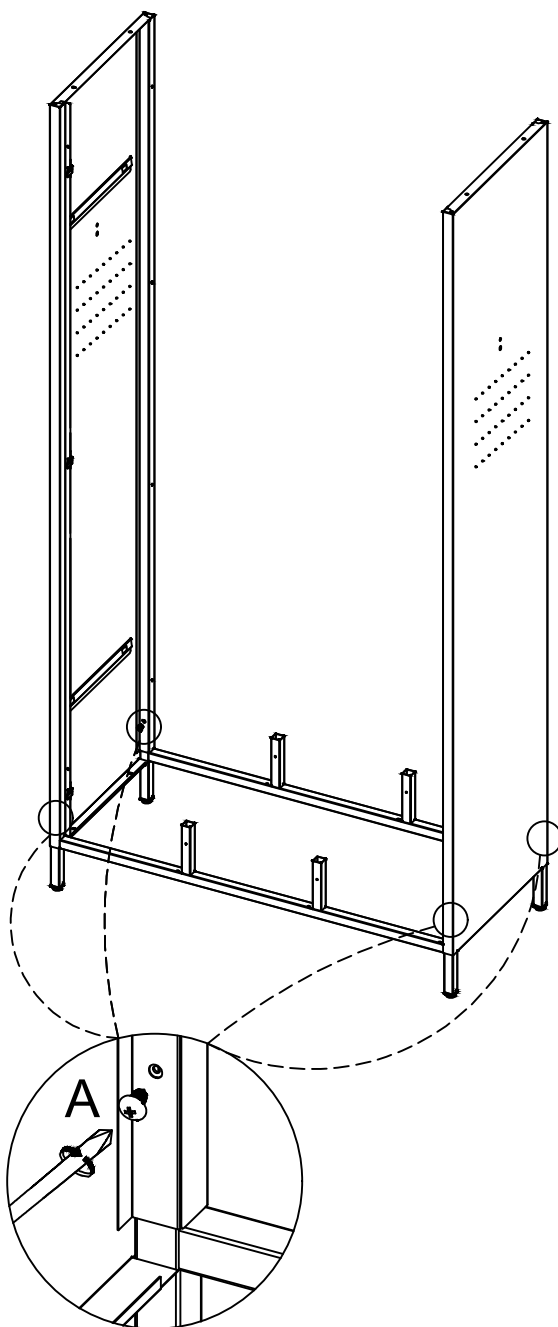


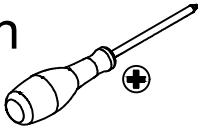
A*4	Step 5: Install Part 4 with Part A	
 M5*12mm		

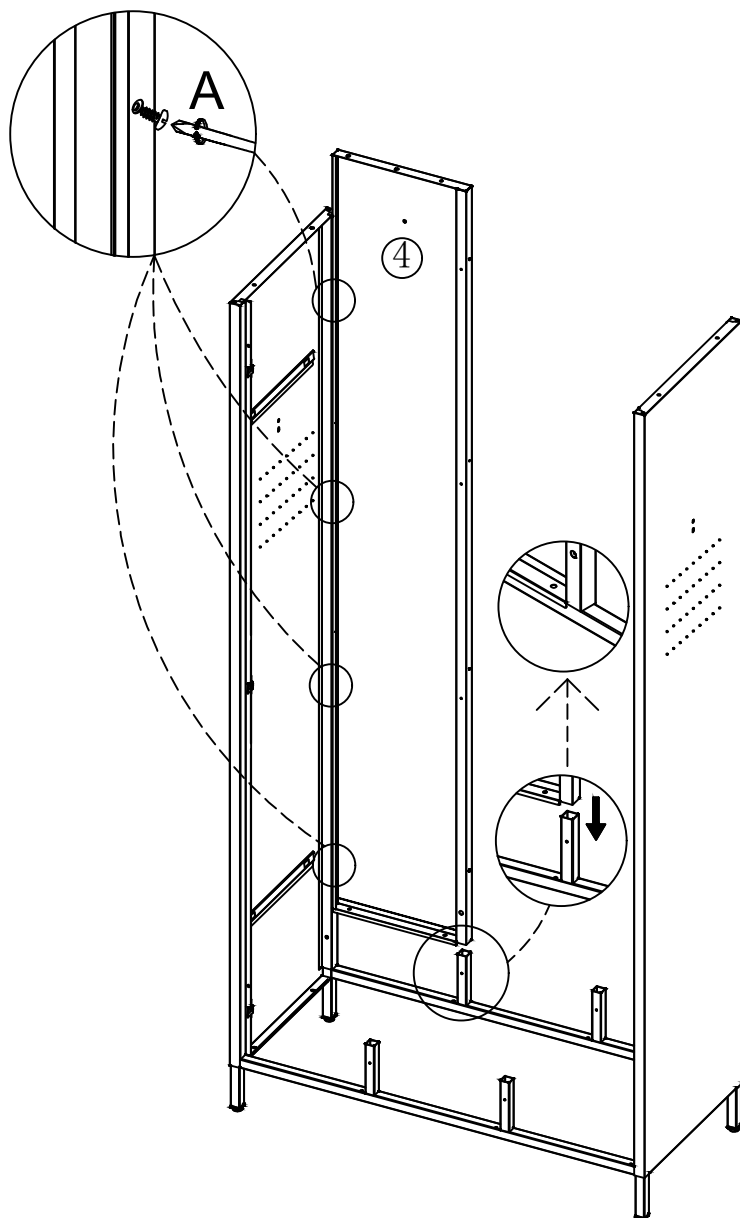

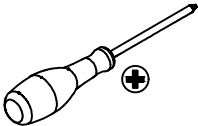
A*4	Step 6: Install another Part 4 with Part A	
 M5*12MM		

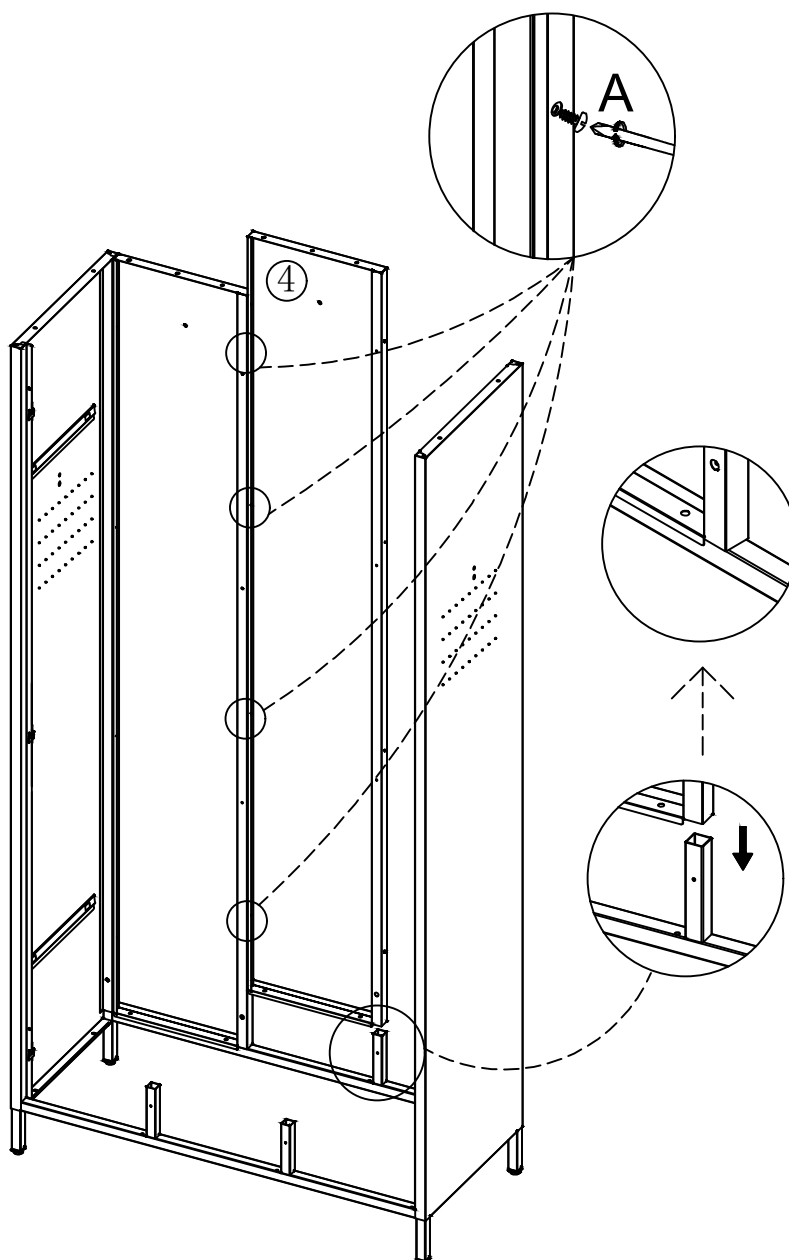

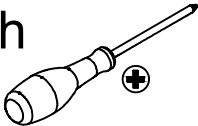A*8	Step 7: Install Part 5 with Part A	
 M5*12MM		

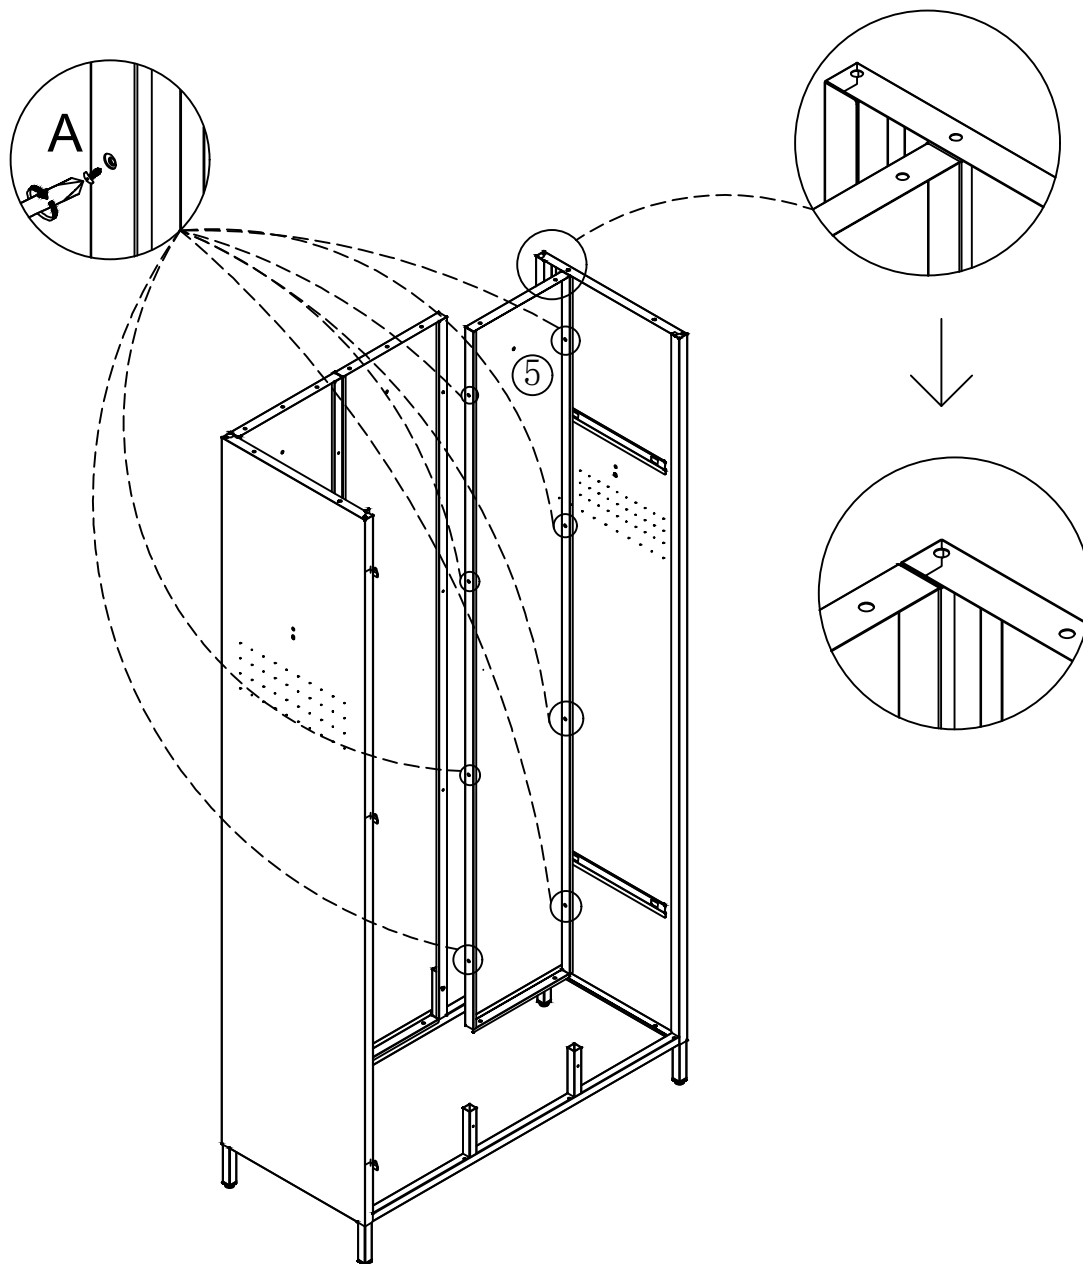



Step 8: Put Part 6 on Part 3

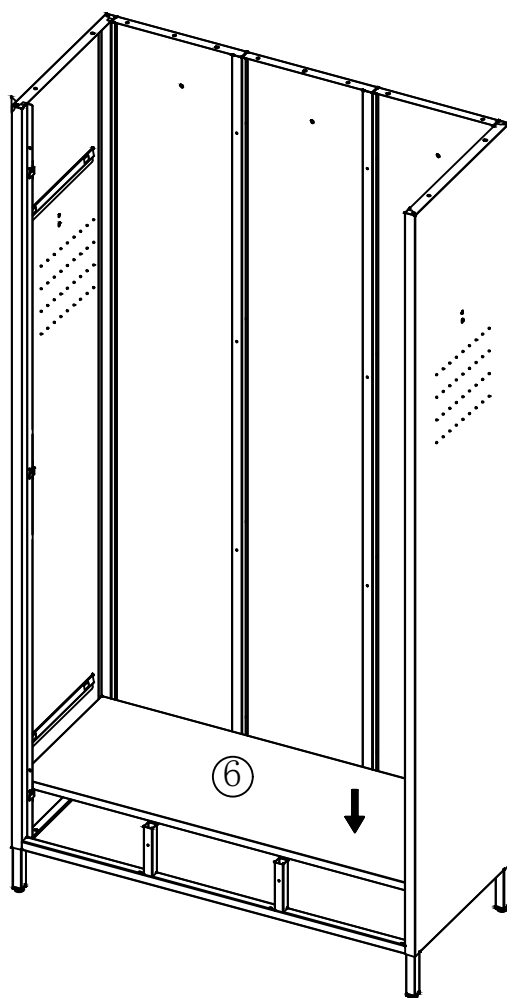


A*10

M5*12MM


Step 9: Install Part 7 with Part A

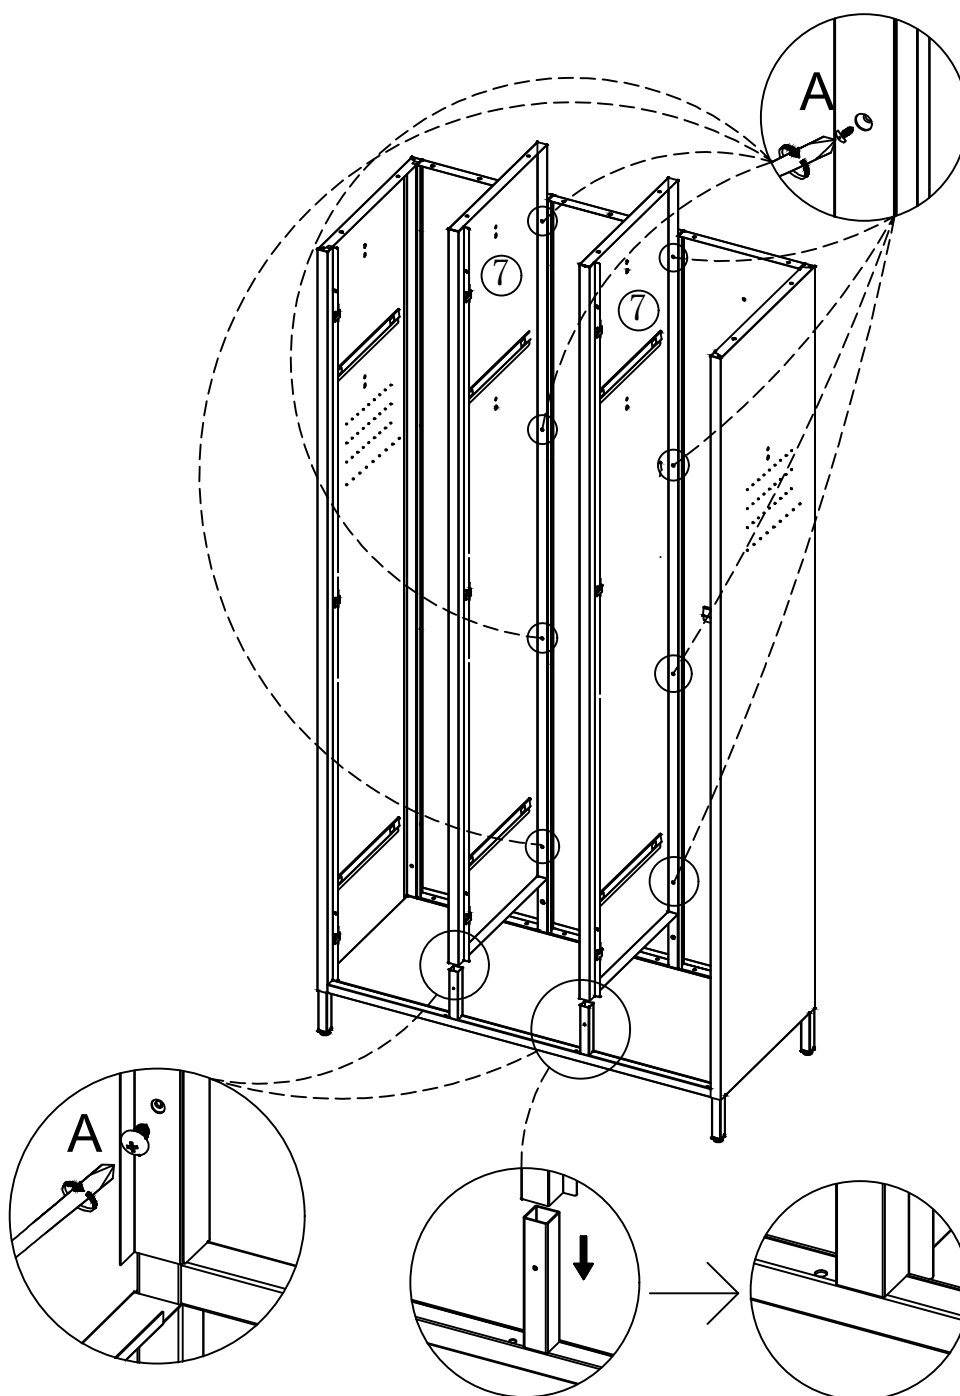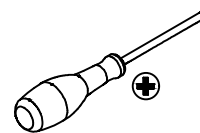



B*8	C*6	Step 10: Install Part C with Part B
		

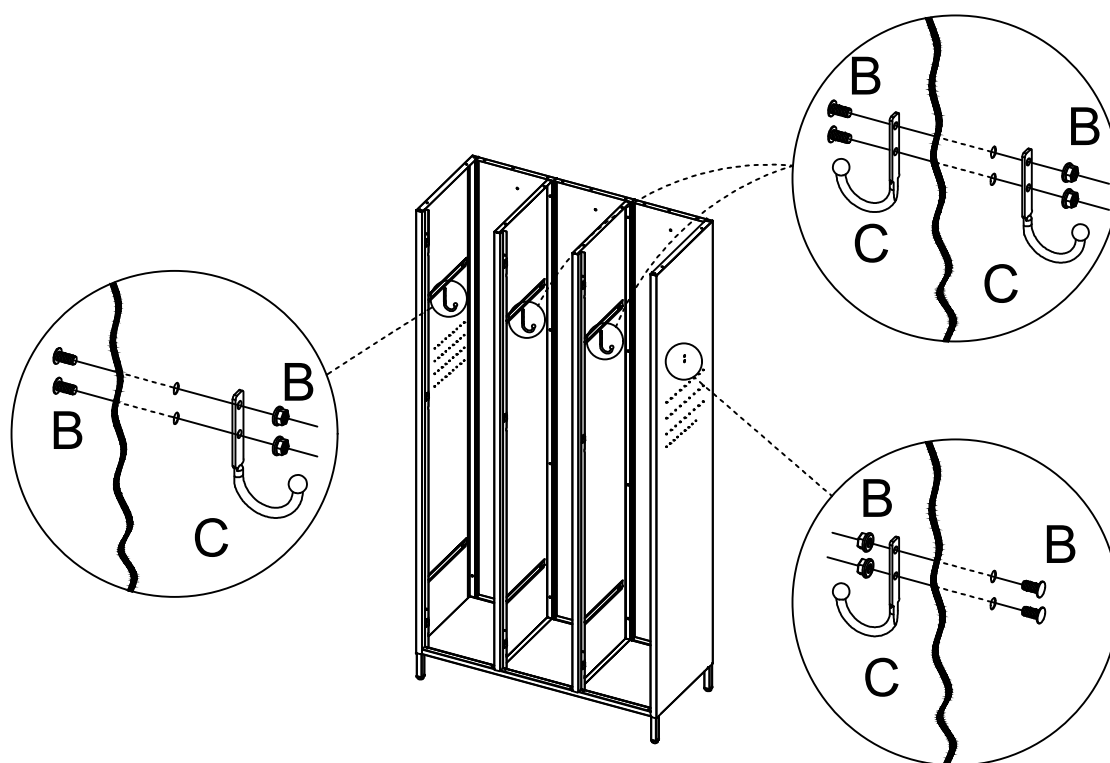

Step 11: Install Part 8

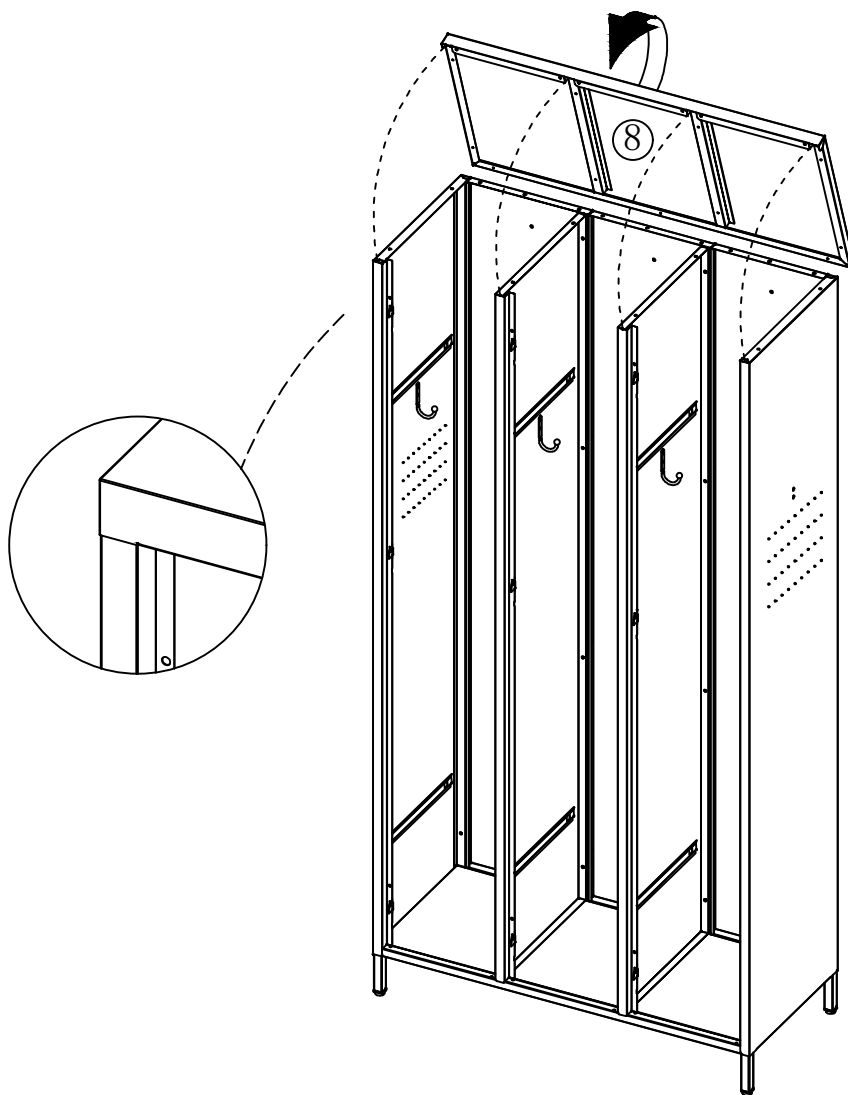

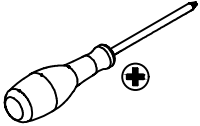
A*11	Step 12: Install Part 8 with Part A	
 M5*12MM		

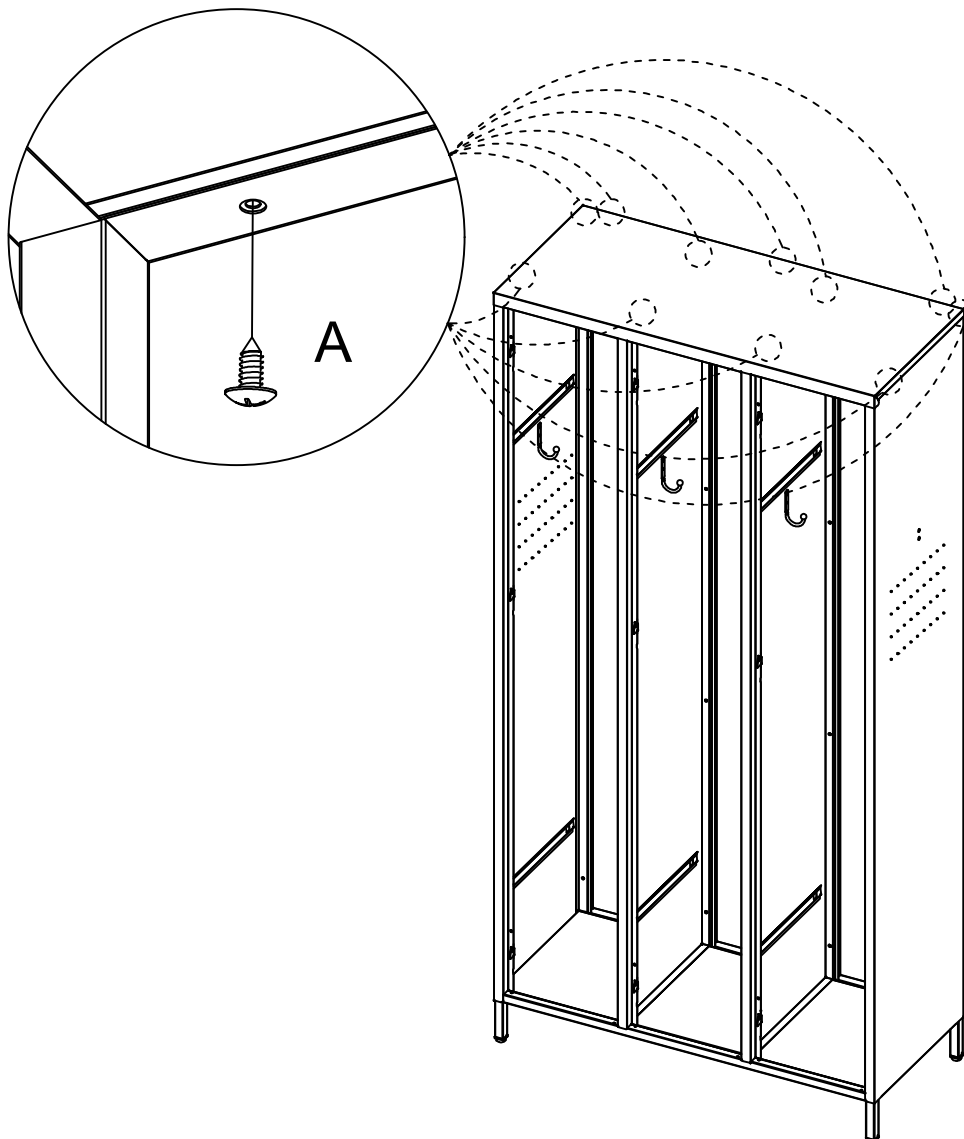


Step 13:	E*2			
	 M8	 M5*30MM	 M5	




This step can help you
fix the cabinet on the
wall.

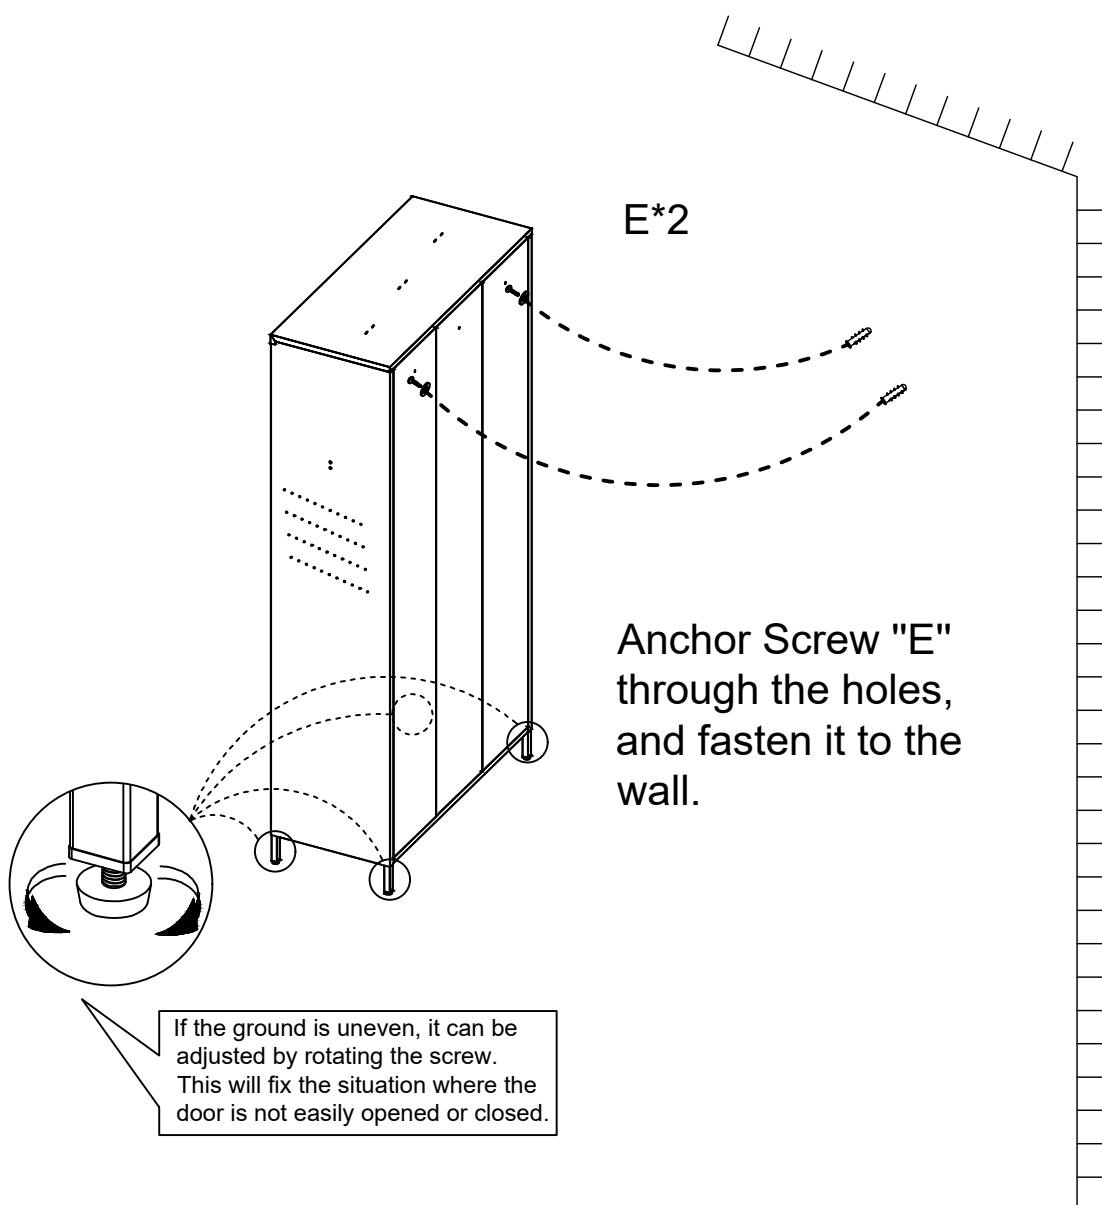


Step 14: Install Part 9 and 11

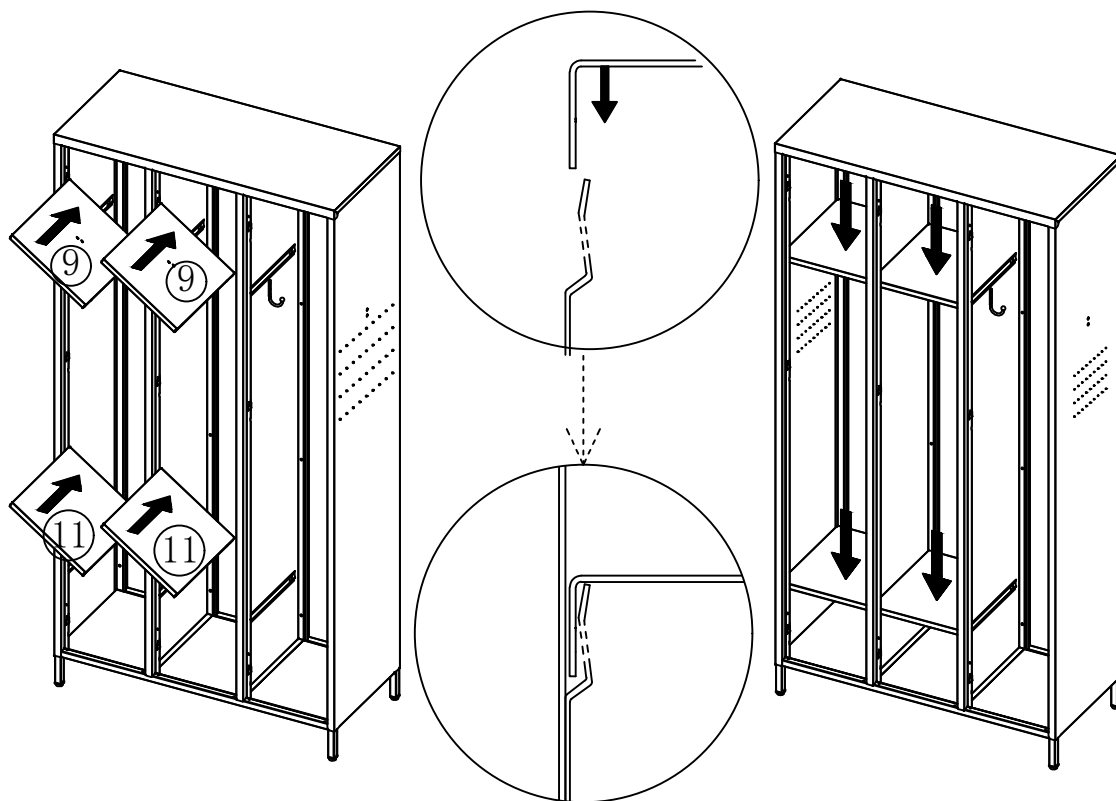

Step 15: Install Part 10 and 12

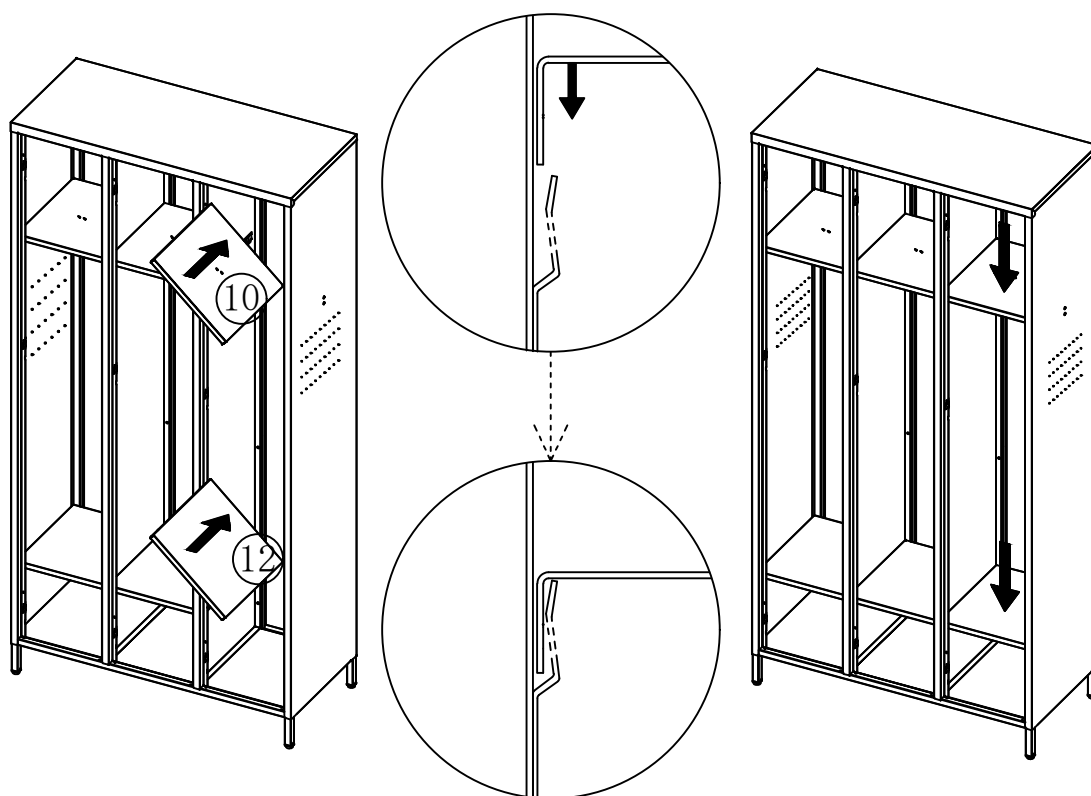


B*6	D*3	Step 16: Install Part D on Part 9 and Part 10 with Part B
		

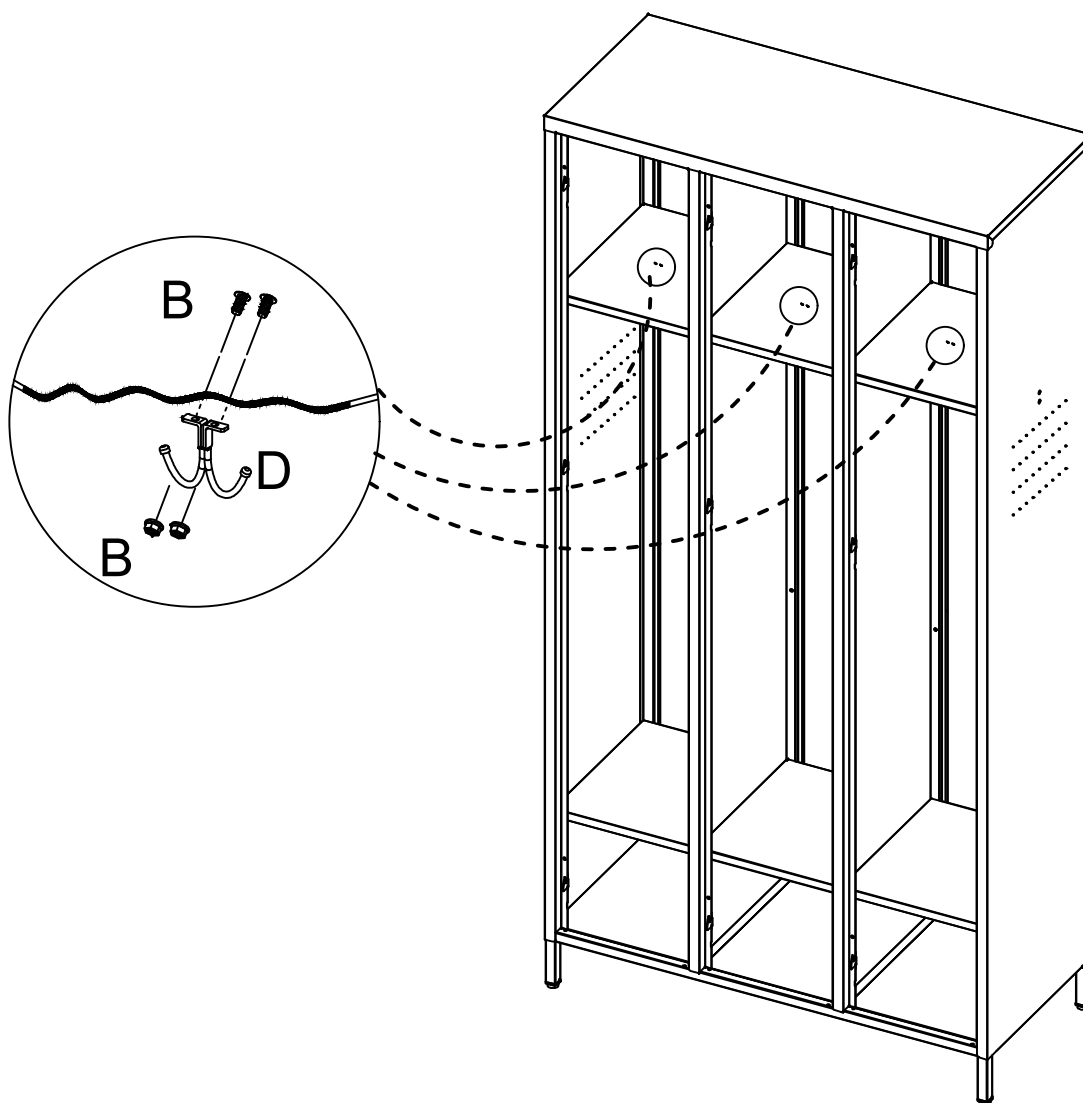


F*6




Step 17: Install Part F

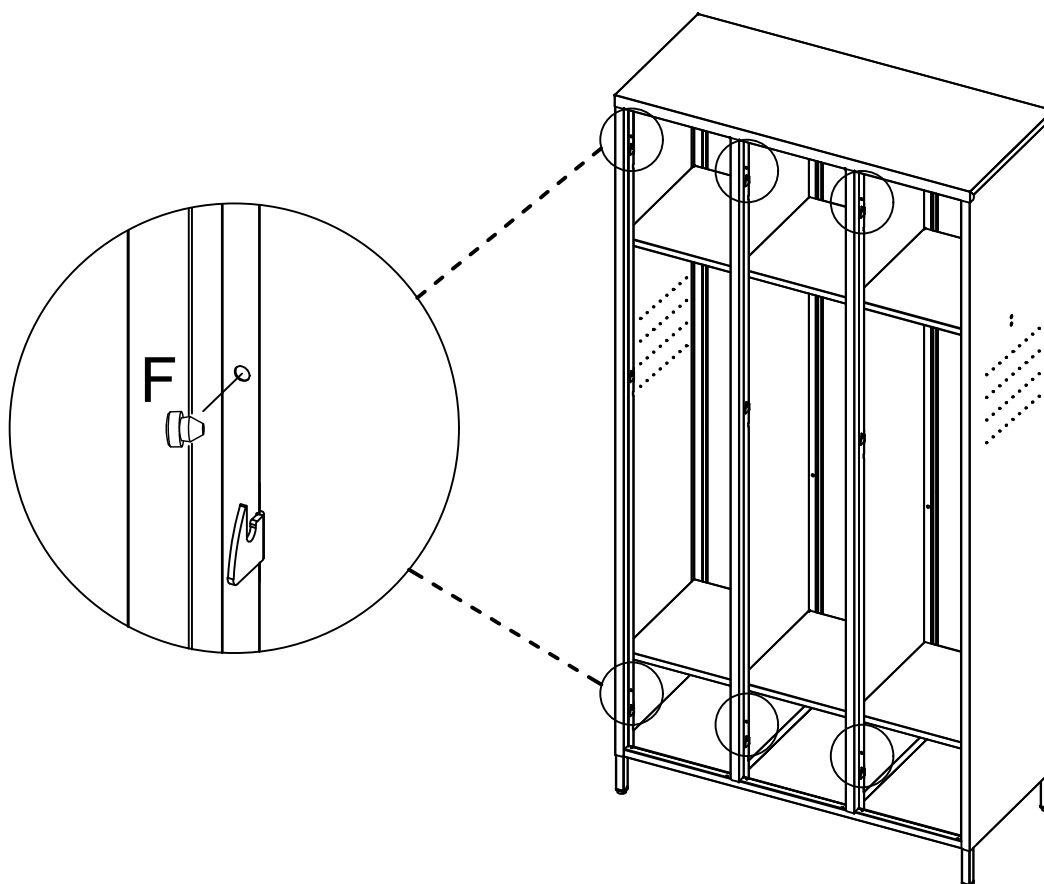


G*3	H*3	Step 18: Install the doors (Part 13)
		

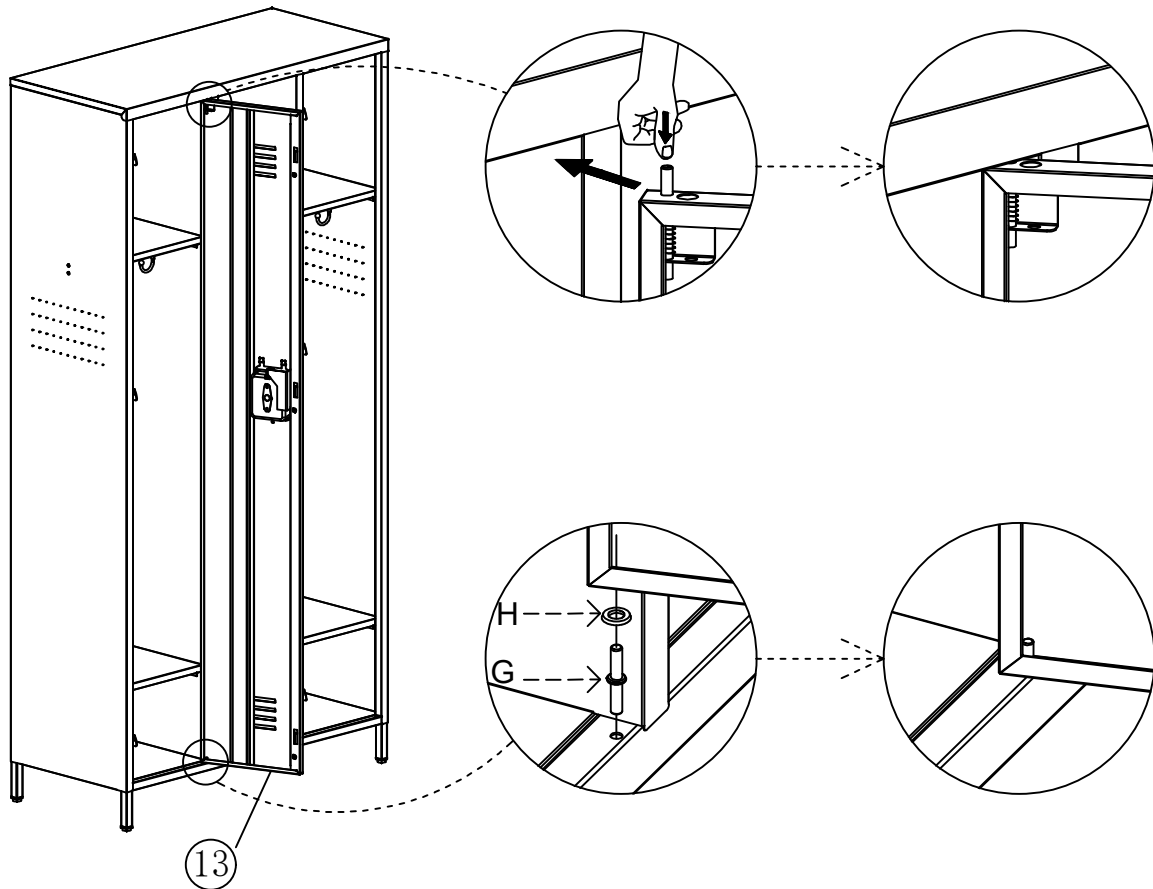

J*4	Step 19: Install hooks Part J
	

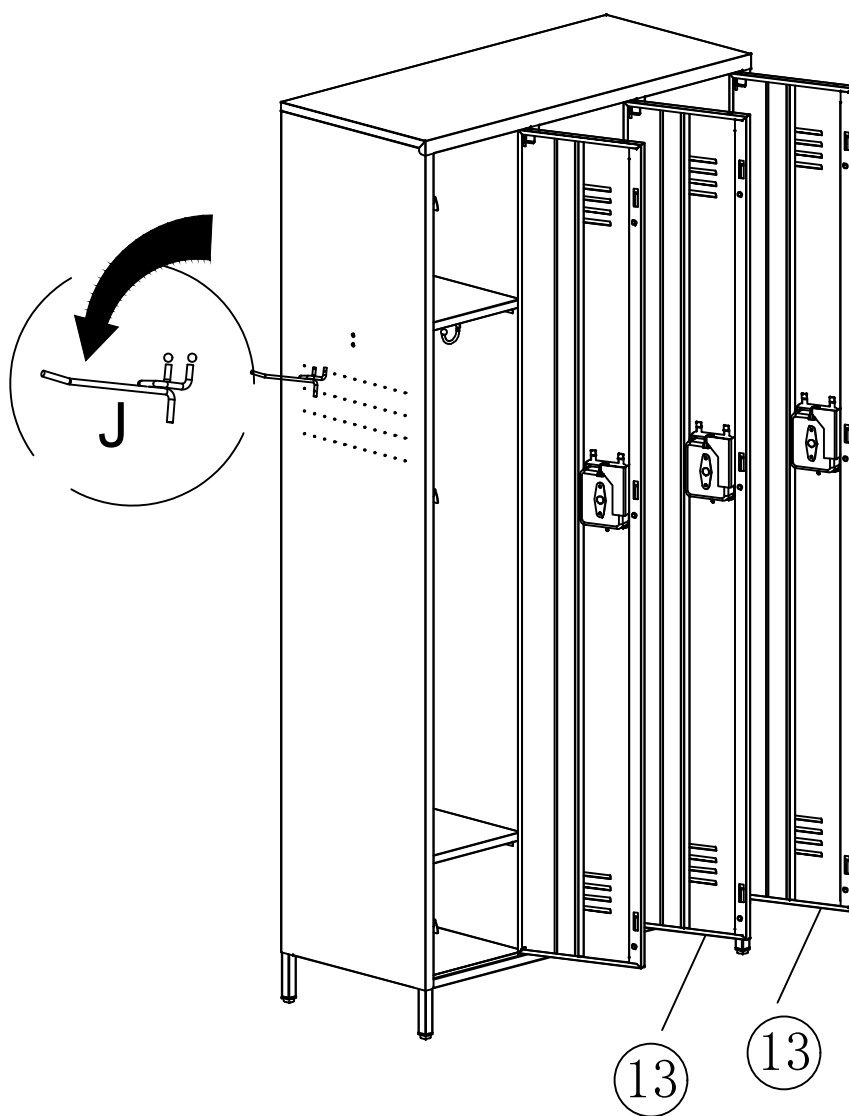

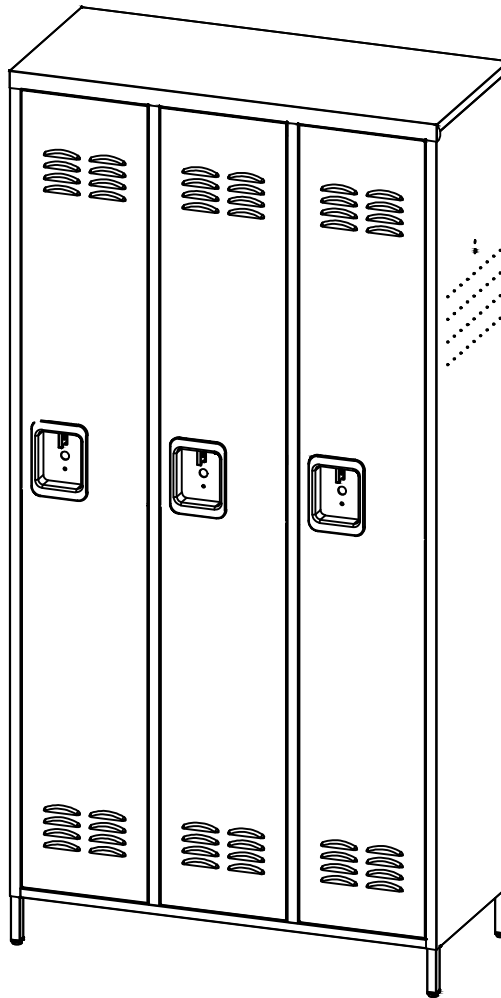

Installation Guide Video

