



MAKE A DIFFERENCE






Hard Top Removal Tool






MMR.10060

BXG.1060-S

(1) Contents:

Qty	Part Name	Size(mm)	Qty	Part Name	Size(mm)
1	Hard Top Removal Tool Assembly		I1	Hex Socket Head Cap Screws	M8*20
G	brake wheel X2		×	Flat Washer×2	M8
G	free wheel X2		16	Nylon Insert Lock nut	M8
Z1×2	casing	6.2"	I2	Hex Socket Head Cap Screws	M6*50
Z2×2	casing	16"	×	Flat Washer×2	M6
Z3×2	casing	19"	2	Nylon Insert Lock nut	M6
H1	Hex Socket Head Cap Screws	M6*40	J1	Rubber base	M6*120
×	Flat Washer×2	M6	×	Flat Washer×2	M6
4	Nylon Insert Lock nut	M6	2	thumb screw	M6
H2	Socket Head Cap Screws	M8*80		Hex Nuts	M6
×	Split Lock Washer×2	M8	J2	Rubber base	M8*100
8	Flat Washer×2	M8	×	Flat Washer×2	M6
	Nylon Insert Lock nut	M8	4	Hex Nuts×2	M6
J3×2	thumb screw	M8*20	K2	Hex Socket Head Cap Screws	M8*45
J4×4	Hex Socket Head Cap Screws	M8*130	×	Split Lock Washer×2	M8
K1	Adjustable travel stop		1	Flat Washer×2	M8
×	Hex Bolt	M6*12		Nylon Insert Lock nut	M8
1	Flat Washer×2	M6	K3×1	Spring	1.5*12*50
	Hex Nuts	M6			

Support Platform			
5		B	
Z1		3	
4			

Base			
Z2		Z3	
2		1	
		G	

Screw Pack 1




















H1     X4

H2       X8

I1     X16

I2     X2
















Screw Pack 3


J1						X2
J2						X4
J3						X2
J4						X4
J5						X4
J6						X1
J7						X1
J8						X1
J9						X1
J10						X1

NOTES:

Subject to the number of accessories received.

Screw Pack 4

K1							X1
K2							X1
K3							X1
K4							X4
K5							X2

K7		X1
----	--	----

(2) Tools required:

- 10mm & 13mm & 14mm Wrench;
- 5mm & 6mm Hex Bit Socket;

(3) Installation time:

About 3-4 hours, 3-4 people may be needed. Installation time may differ according to your mechanical skill level.

(PLEASE VERIFY ALL PARTS ARE PRESENT AND READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION!)


To view the electronic version (MMR.10060 & BXG.1060-S), please scan the QR code.




(4) Installation instruction:

The main part, please see the following steps for detailed steps.

Support Platform

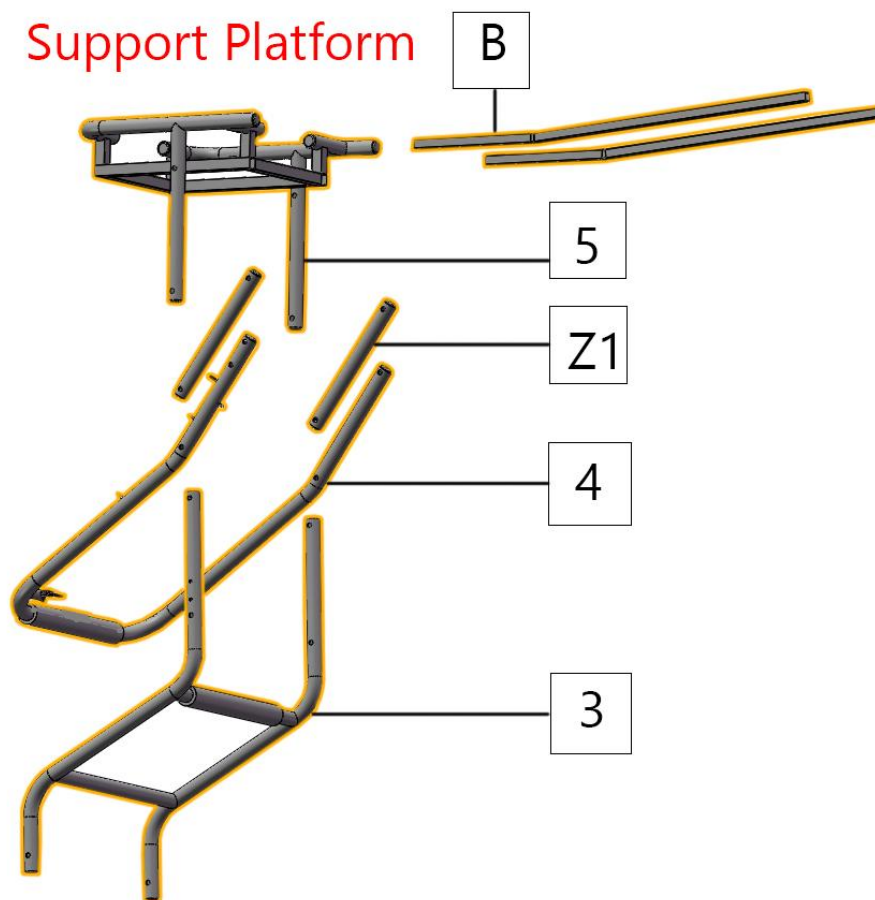


Base

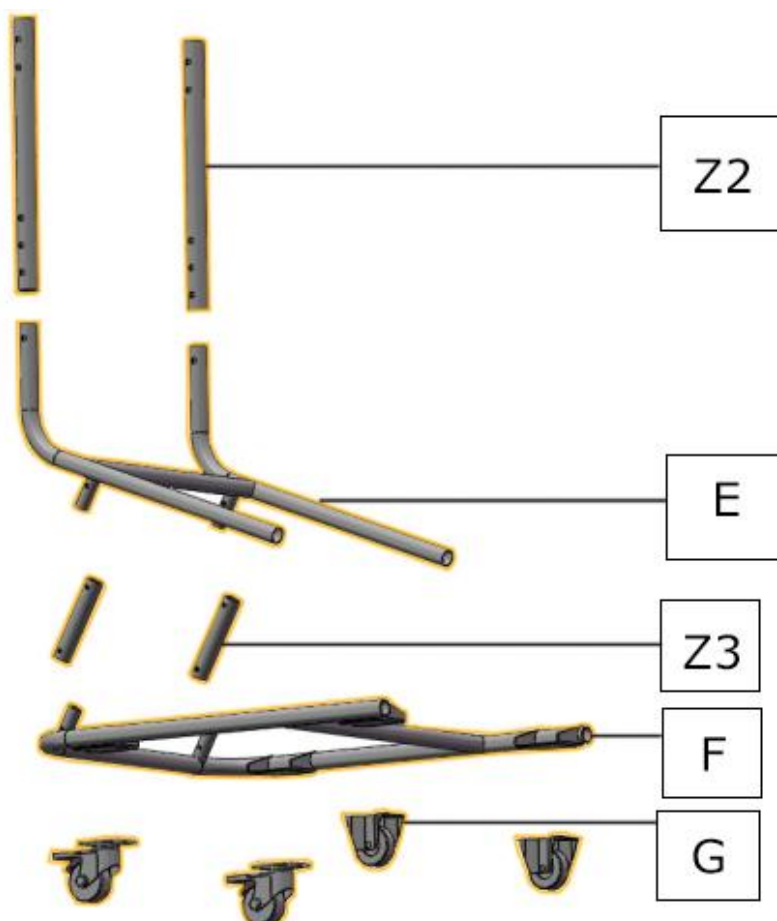

Base Installation:

Step 1: Install the wheels (Part "G") on the Part "F" (number 1). **Free wheels is installed in the front, brake wheels is installed in the rear.** Install the Part "Z3" into the Part "F" (number 1).

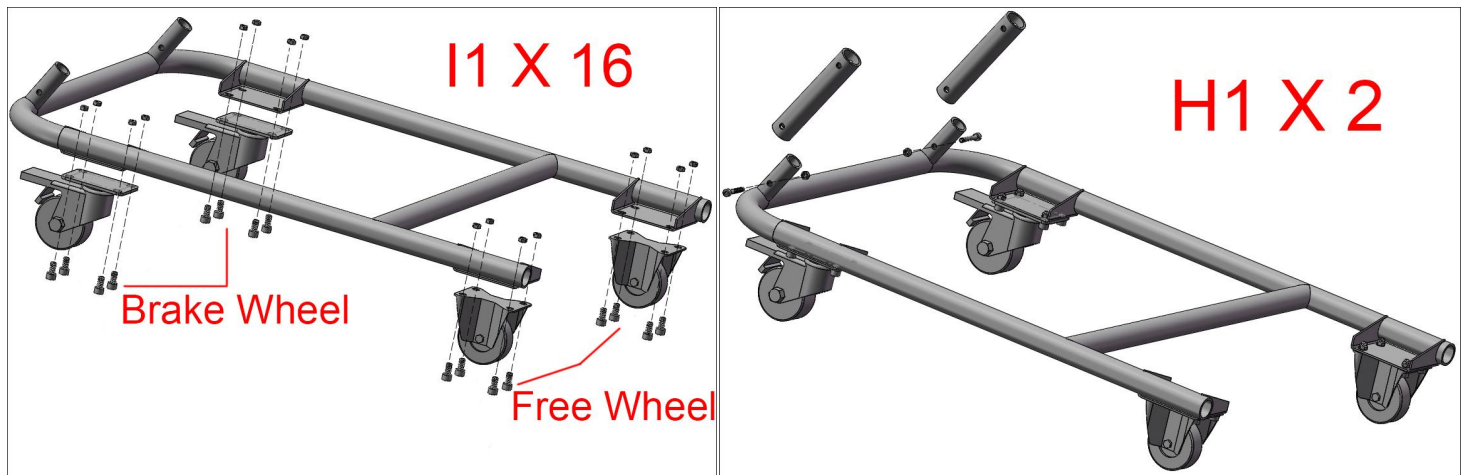

Step 2: Install the Part "E" (number 2). Clamp the Part "K5" at the connection.



Step 3: Sleeve into round tube (Part "Z2), There are multiple holes on the top and bottom of the tube for you to choose, and the height of the product assembled with different holes is different.



Support Platform Installation:


Step 4: Install the Part "D" (number 3) into the Part "Z2". Assemble the Part "C" (number 4) & the Part "D" (number 3).



Step 5: Install two round pipes (Part "Z1") into the Part "D" (number 3). Next, connect the support body (number 5) to the round tube.




Step 6: Adjust the height of the support platform to the minimum. Install the Part "J2" & Part "K4" into the Part "A" (number 5). **Notes: If your vehicle is TJ, Replace the screws in the Part "J2" with the Part "J4".**

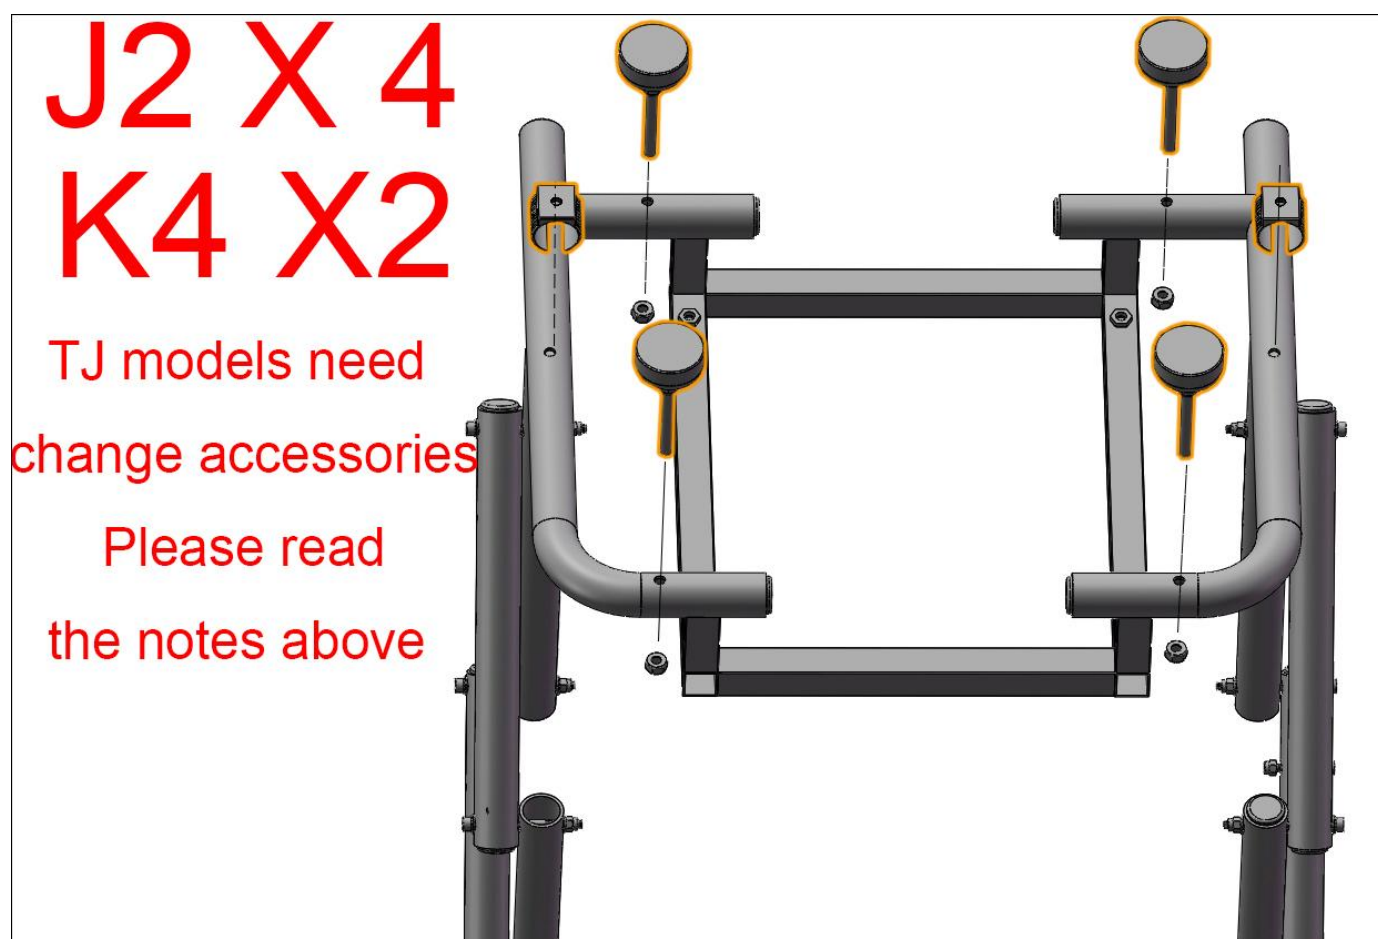


Step 7: Install critical brakes-Part "K7" (in screw pack4).


① Install the brake disc in the two holes above the side with the handbrake with the Part "I2" (in screw pack2).

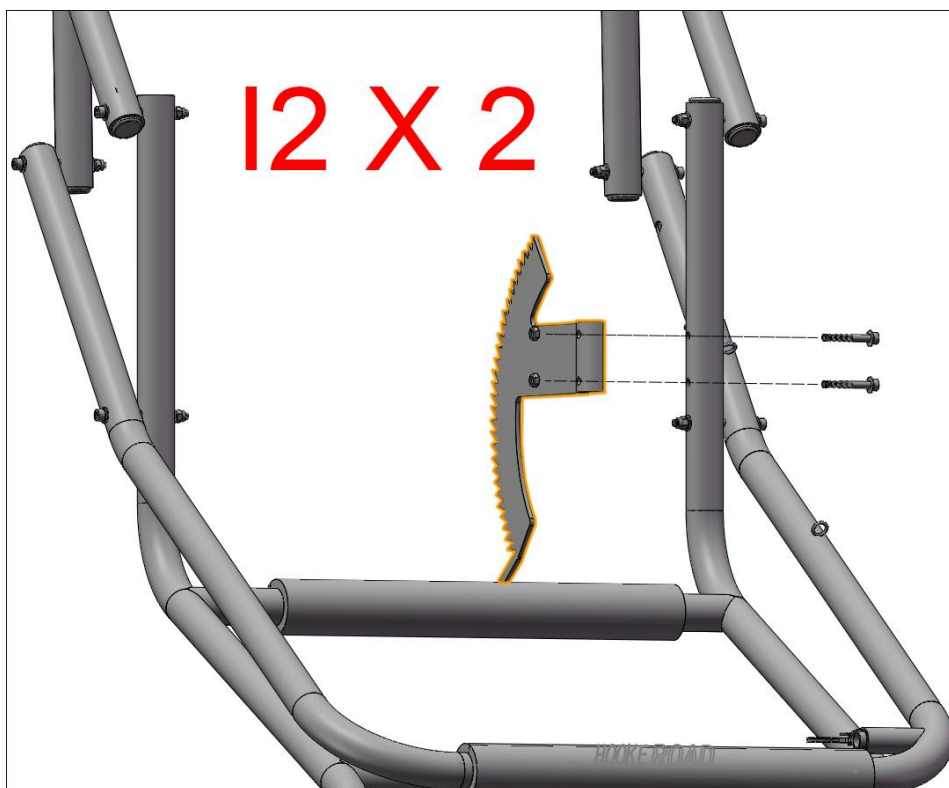

② Install the adjustable travel stop (Part "K1" in screw pack 4) in the second hole on the side with the handbrake.

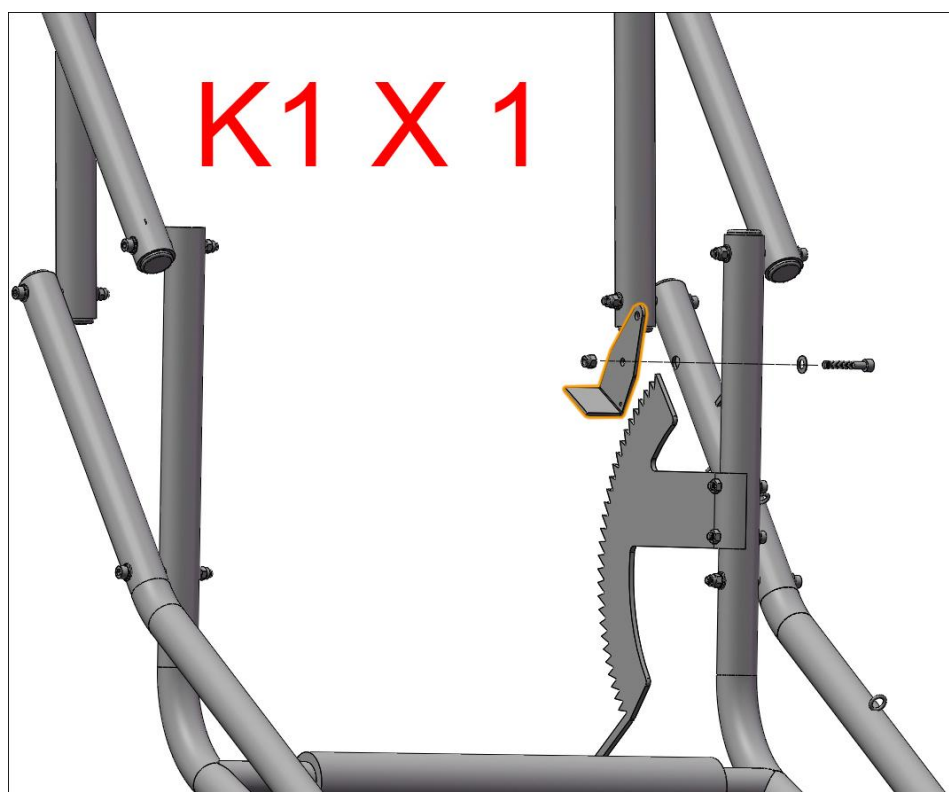


③ First install the spring in the adjustable travel stop and ring, remove the screw on the adjustable travel stop and insert it into the brake rope, restore and tighten the screw to lock the brake rope.

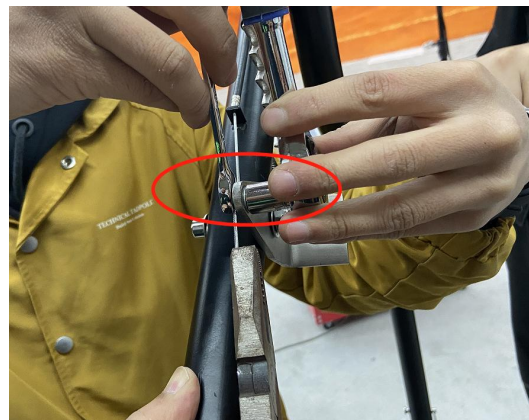

Note: Clamp the wire rope with a pliers and string in the screw, screw in the screw, clamp the wire rope and adjust the screw to the proper position


Step 8:

Install the Part "J1", Part "J3" & the Part "B" (in screw pack 3).

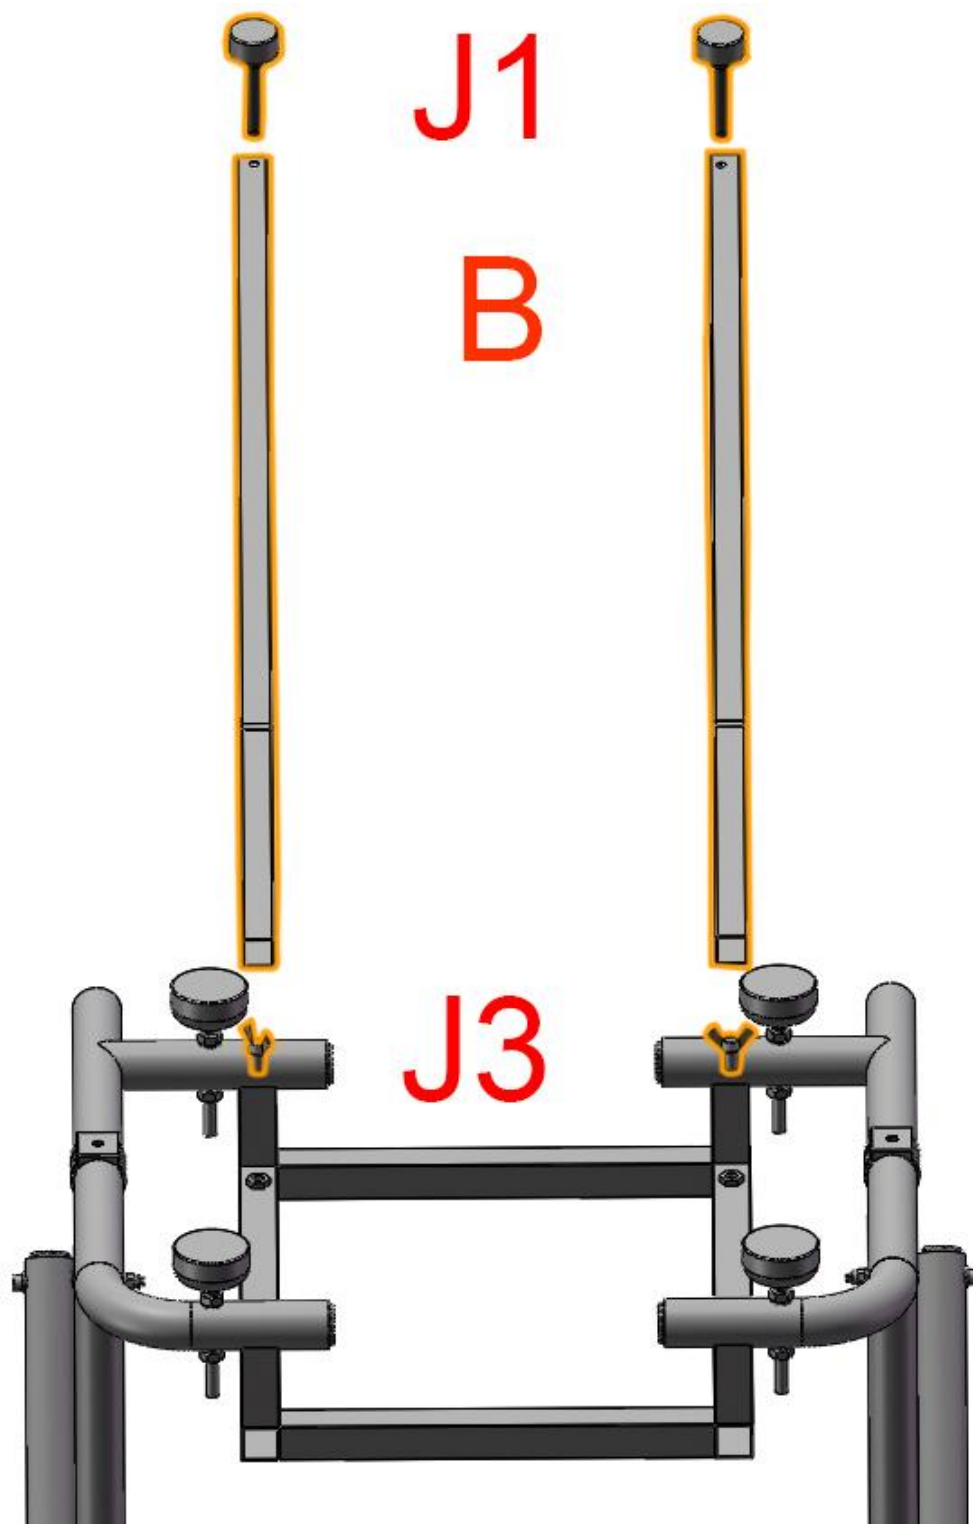

Instructions for use:

1. When preparing to disassemble, adjust the height of the front support device to be higher than the rear.

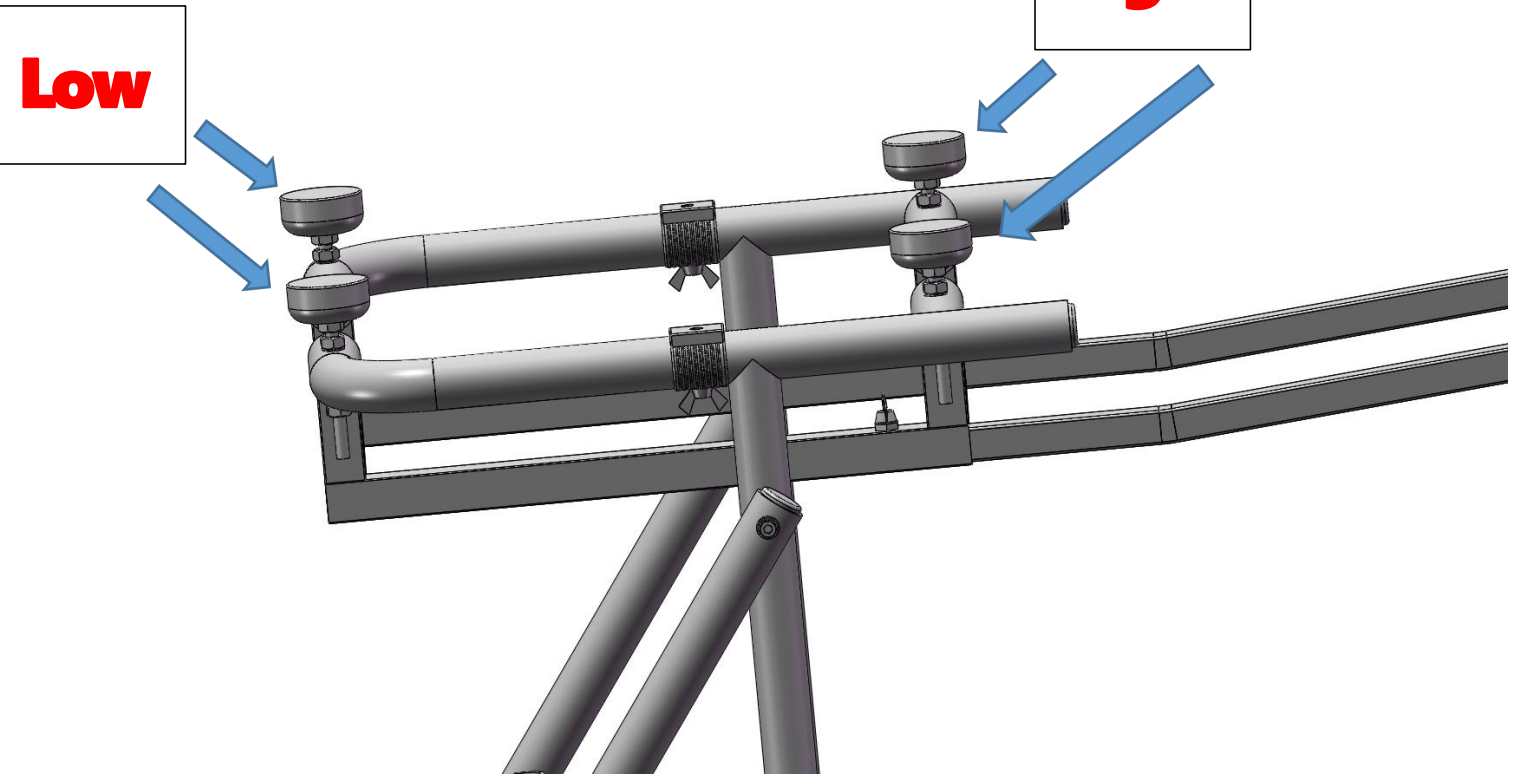

2. After the roof is stuck, install the front supports (Part "F") The front of the first roof should be significantly higher than the rear, and the recommended distance is about 4 inches, as shown in the figure below. At this time, the roof has a certain height so that it will not bump the vehicle body.



3. When adjusting the height up and down, please support the armrest firmly and then adjust the height slowly. This method is the safest to use.



4. We recommend that the two support devices in front of you support the two large boards in front of the hardtop, and the four support devices in the back support the edge of a small board on one side. As the picture shown.



Step 9:

The installation is complete. We hope you enjoy a wonderful off-road life with this quality Hooke Road product!



Attention:

1.The product parts in this instruction may differ slightly from the actual product contents but generally does not affect the installation of the product.

2.Please feel free to contact your distributor if you have any kind of question about your purchase.

Google Hooke Road to find your parts.

Feel Free To Share Your Vehicle [@HookeRoad4x4](https://www.instagram.com/HookeRoad4x4)
With The Hashtag #hookeroad If You'd Like

