

PRODUCT INSTALLATION STEPS

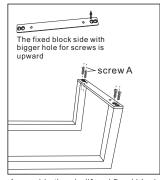

with screw A, then tighten the screws with a screwdriver.


Note: The fixed block with bigger hole for screws should be upward when assembling (as above picture), thus the screws could be completely screwed into the holes and make sure the fiexed block be flat on the surface.

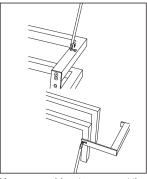


screws on the bottom side, install the tissue holder on the side, and then screw the screws on




Place the product horizontally on the wall and mark the drilling position with a marker.

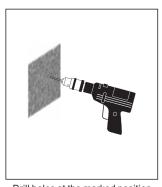


Drill holes at the marked position with a drill.

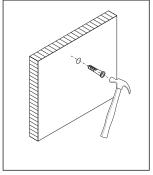

Hammer the Rubber plug completely into the drilled hole to ensure that the wall is flat.

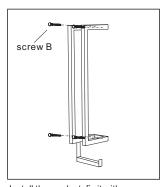

Install the product, fix it with screw B, tighten screw B with a screwdriver, and finally install the screw decorative

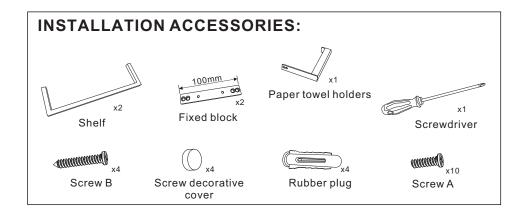

User Manual

Toilet paper holder

